



Yamaha 3AMH 2002

Parts Manual

www.floodmarine.co.uk

+44 2882 246 539


Authorised Yamaha Dealers



Contents

CONTROL	3
COWLING . FUEL	7
CYLINDER. CRANKCASE	10
ELECTRICAL	13
GENERATOR	14
INTAKE	16
LOWER CASING. DRIVE	20
REPAIR KIT	25
STARTER	28
UPPER CASING . BRACKET	30


Control

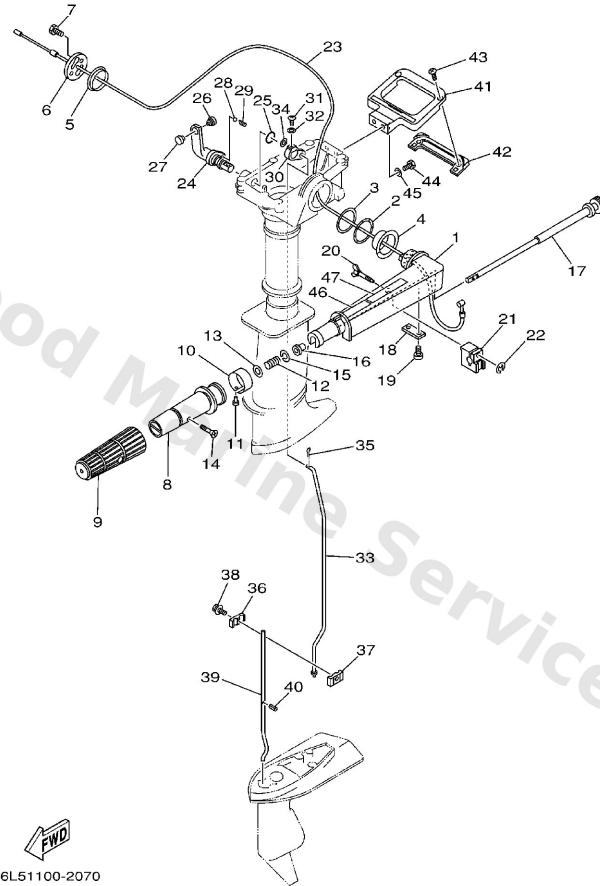

B6

Ref	Part	
1	6G1-42111-11-4D Handle, steering	Buy now
2	90206-36M21 Washer, wave(63v)	Buy now
3	90202-36M55 Washer, plate(63v)	Buy now
4	90386-34M97 Bush(63v)	Buy now
5	90386-33M96 Bush(63v)	Buy now
6	6G1-42131-01 Cover, handle steering	Buy now
7	97095-06020 Bolt(7u8)	Buy now
8	664-42119-00 Grip, steering handle	Buy now
9	6G1-42177-00 Rubber, handle	Buy now
10	6L5-42137-20 Indicator, throttle	Buy now
11	90269-02M09 Rivet(615)	Buy now
12	90501-23215 Spring (655)	Buy now
13	92903-10600 Washer, plate	Buy now
14	90149-05M13 Screw, countersunk	Buy now
15	90209-08M17 Washer(615)	Buy now


Control

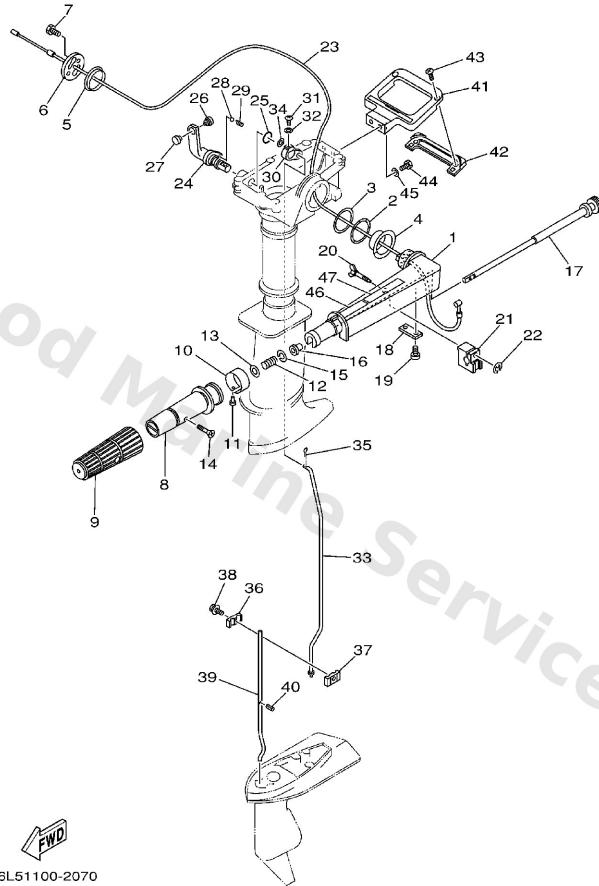

B6

Ref	Part	
16	90386-08032 Bushing (650)	Buy now
17	6G1-42138-01 Lever, throttle	Buy now
18	6E0-42159-02 Stay	Buy now
19	97885-05012 Screw,pan head (646)	Buy now
20	6L5-42125-00 Bolt, friction adjusting	Buy now
21	6G1-42126-00 Piece, friction	Buy now
22	99080-03600 Circlip(6l5)	Buy now
23	6L5-26301-01 Throttle cable assembly	Buy now
24	6L5-44111-00 Handle, gear shift	Buy now
25	93210-12327 O-ring(3ld)	Buy now
26	6L5-44196-20 Indicator 3	Buy now
27	6L5-44197-20 Indicator 4	Buy now
28	93505-16024 Ball	Buy now
29	90501-12274 Spring 6554411600	Buy now
30	6L5-44121-00 Lever, shift rod	Buy now


Control

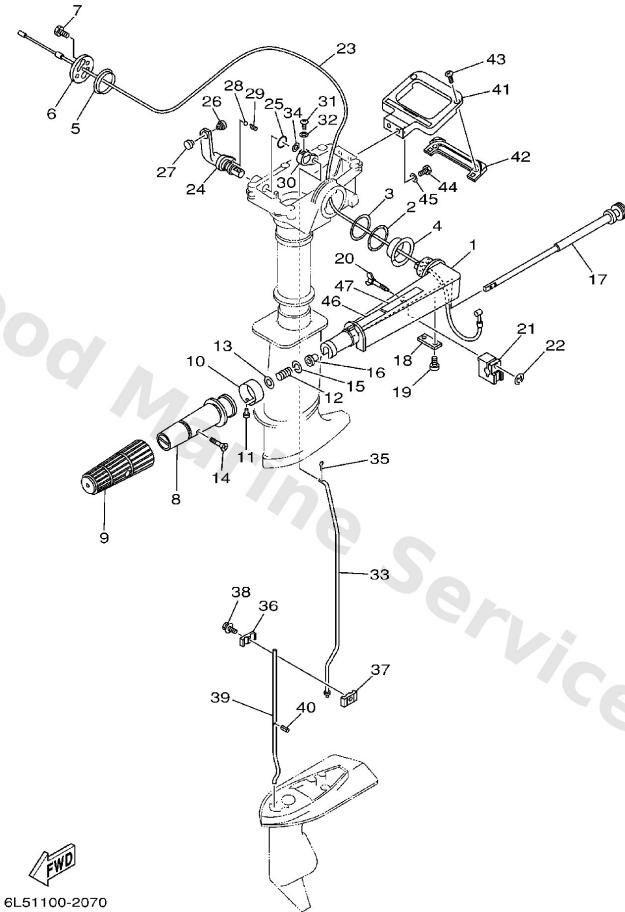

B6

Ref	Part	
31	97780-40520 Ybs83-420 screw,panh,tapping	Buy now
32	92990-04600 Washer, plain (646)	Buy now
33	6L5-44143-00 Rod, shift	Buy now
34	92990-05600 Washer, plain (646)	Buy now
35	91490-16010 Pin, cotter	Buy now
36	6E0-44145-00 Connector, shift rod 1	Buy now
37	6E0-44146-00 Connector, shift rod 2	Buy now
38	95895-06020 Bolt, flange(jk3)	Buy now
39	6L5-44144-00 Rod, shift S	Buy now
39	6L5-44144-10 Rod, shift L	Buy now
40	91609-25014 Pin, Spring	Buy now
41	6L5-42731-00-4D Carrying handle	Buy now
42	6L5-42735-20 Protector	Buy now
43	90161-04M02 Screw, tapping (676)	Buy now
45	92995-06600 Washer, plain (646)	Buy now

Control

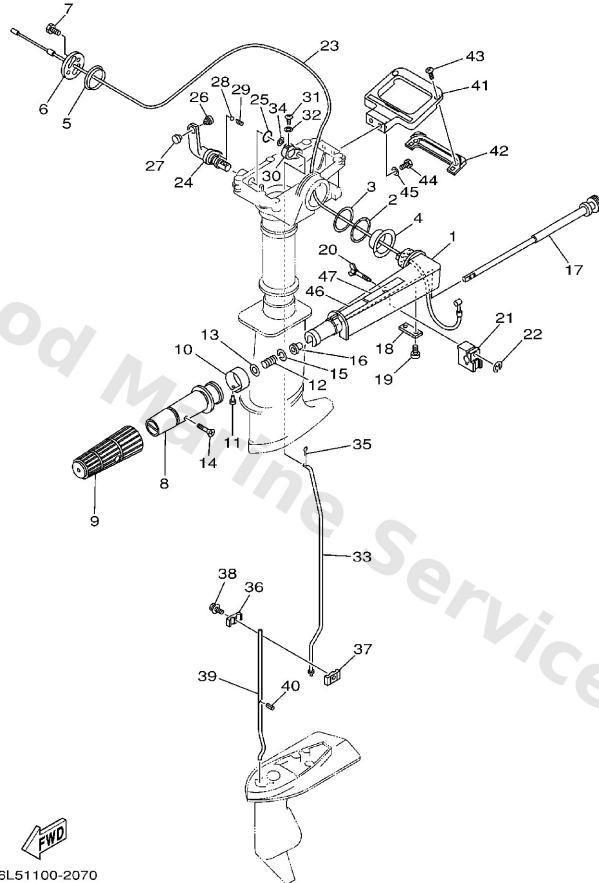


6L51100-2070

Ref	Part	
46	6A1-2415A-41 Label, caution	Buy now
47	6A1-2415A-51 Label Caution	Buy now

B6


Cowling . Fuel

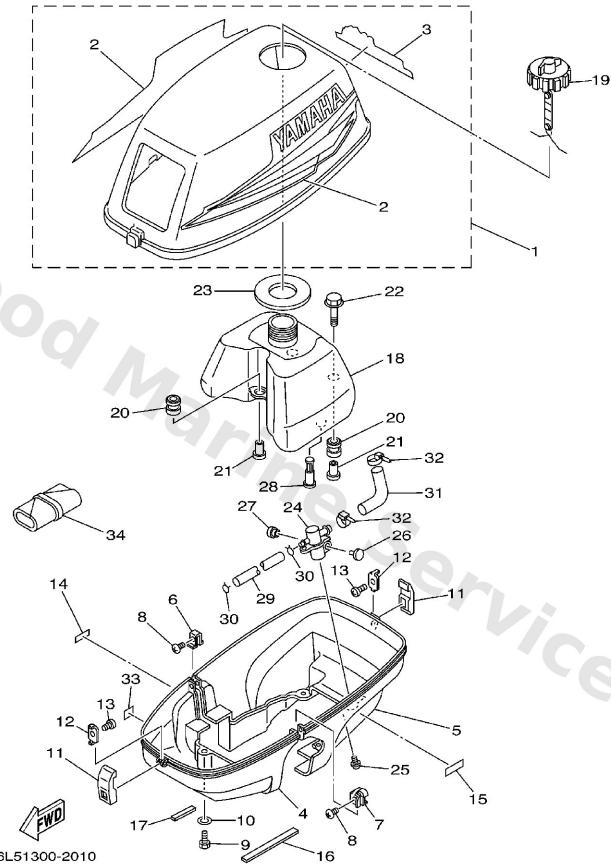

A4

Ref	Part	
1	6L5-42610-54-4D Top Cowling assembly	Buy now
2	6L5-W0070-13 Graphic Set	Buy now
3	6L5-42678-51 Graphic, Rear	Buy now
4	6L5-42711-11 Cowling, bottom	Buy now
5	6L5-42712-12 Cowling, bottom	Buy now
6	6L5-42774-00 Stay, apron 1	Buy now
7	6L5-42775-00 Stay, apron 2	Buy now
8	97880-05010 Screw, pan head(62x)	Buy now
9	97095-06016 Bolt, hexagon deep recess	Buy now
10	92995-06600 Washer, plain (646)	Buy now
11	6L5-42647-00 Holder, clamp band	Buy now
12	6L5-42823-00 Plate, stop	Buy now
13	90167-03M02 Screw, tapping(615)	Buy now
14	6L5-44191-00 Indicator, Shift	Buy now
15	6L5-24591-00 Emblem, Fuel Cock	Buy now


Cowling . Fuel

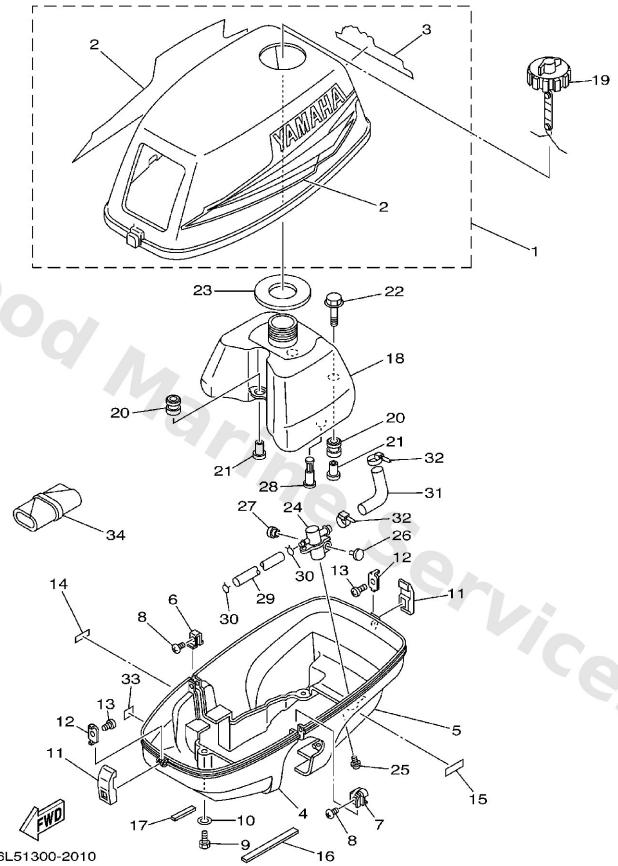

A4

Ref	Part	
16	6L5-42662-00 Damper	Buy now
17	6L5-42663-00 Damper	Buy now
18	6L5-24111-02 Tank, fuel	Buy now
19	6L5-24610-20 Cap assembly	Buy now
20	6A0-82317-00 Damper, ignition coil	Buy now
21	624-42542-00 Collar	Buy now
22	90119-06M65 Bolt, with washer	Buy now
23	6L5-24641-00 Gasket, cap 1	Buy now
24	6L5-24500-60 Fuel cock assembly 1	Buy now
25	90159-06M10 Screw, with washer(6l5)	Buy now
26	6L5-44196-20 Indicator 3	Buy now
27	6L5-44197-20 Indicator 4	Buy now
28	6L5-24251-00 Strainer 1	Buy now
29	6L5-24311-00 Pipe, fuel 2	Buy now
30	90467-08004 Clip, pipe 6162435600	Buy now


Cowling . Fuel

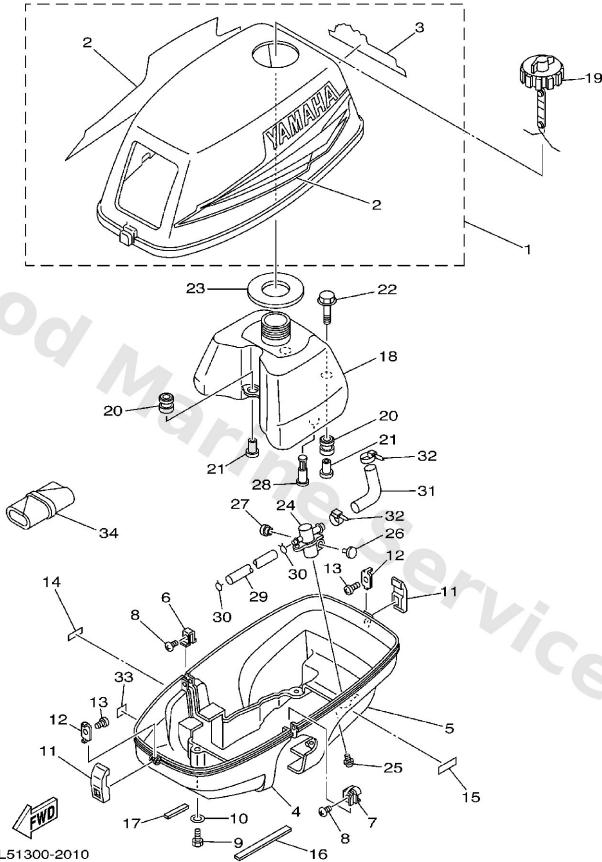

A4


Ref	Part	
31	6L5-24312-00 Pipe 2	Buy now
32	90465-13M11 Clamp (6e5)	Buy now
33	6A1-28176-00 Label Caution	Buy now
34	656-W2810-02 Tool kit	Buy now

Cylinder. Crankcase

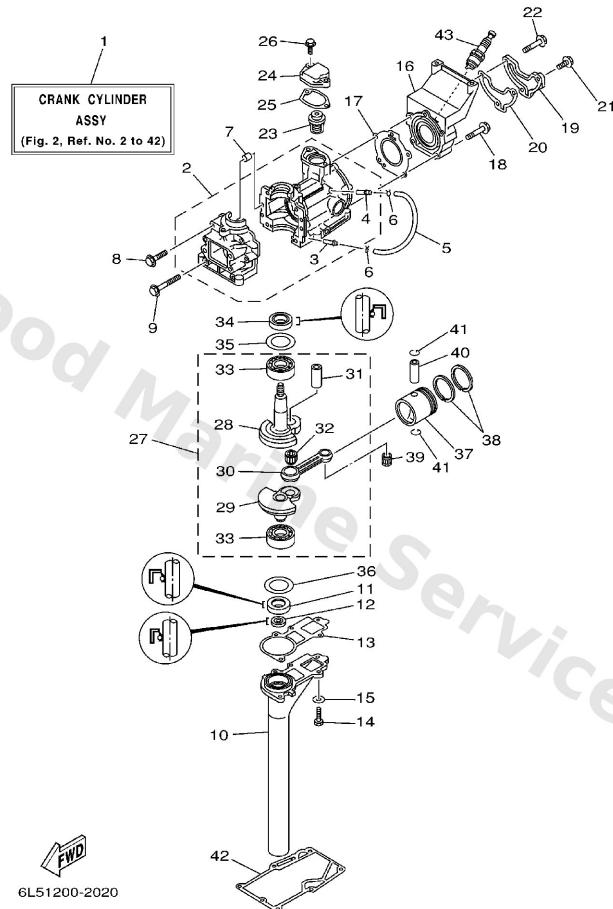

Ref	Part	
3	624-14485-00 Pipe, joint	Buy now
4	6E5-11372-00 Nipple, hose	Buy now
5	90445-07M29 Hose (l200)	Buy now
6	90467-06016 Clip (655)	Buy now
7	93606-12019 Pin, dowel (614)	Buy now
8	90105-06M16 Bolt (6e0)	Buy now
9	90105-06M40 Bolt, washer based(6l5)	Buy now
11	93101-20M29 Oil seal(6j1)	Buy now
12	93101-09M42 Oil seal(6l5)	Buy now
13	6L5-15369-A0 Gasket, oil seal housing	Buy now
14	97095-06020 Bolt(7u8)	Buy now
15	92995-06600 Washer, plain (646)	Buy now
17	6L5-11181-A2 Gasket, cylinder head 1	Buy now
18	90119-06047 Bolt, with washer	Buy now
20	6L5-11193-A1 Gasket, head cover	Buy now


Cylinder. Crankcase

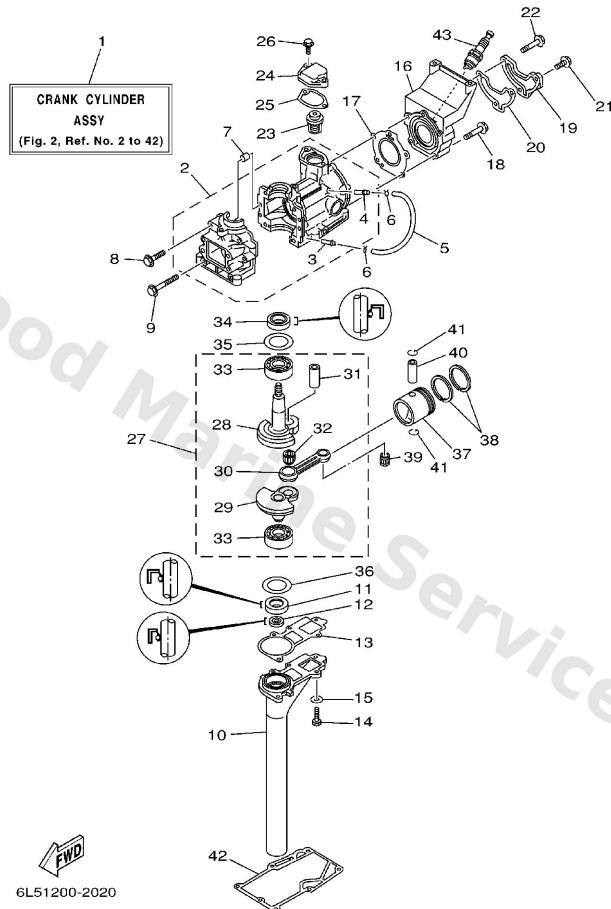

A6


Ref	Part	
21	90119-06MA2 Bolt, with washer	Buy now
22	90119-06027 Bolt, with washer	Buy now
23	6E5-12411-01 Thermostat	Buy now
25	6L5-12414-A1 Gasket, cover	Buy now
27	6L5-11400-00 Crankshaft assembly	Buy now
28	6L5-11412-00 Crank 1	Buy now
29	6L5-11422-00 Crank 2	Buy now
30	6L5-11651-00 Rod, connecting	Buy now
31	6L5-11681-00 Pin, crank 1	Buy now
32	93310-416N7 Brg,needle	Buy now
33	93306-204U0 Bearing(6e0)	Buy now
34	93102-20M06 Oil seal(6j1)	Buy now
35	90201-32M00 Washer, plate(6l5)	Buy now
36	90201-32M01 Washer, plate(6l5)	Buy now
37	6L5-11631-00-96 Piston (std)	Buy now

Cylinder. Crankcase

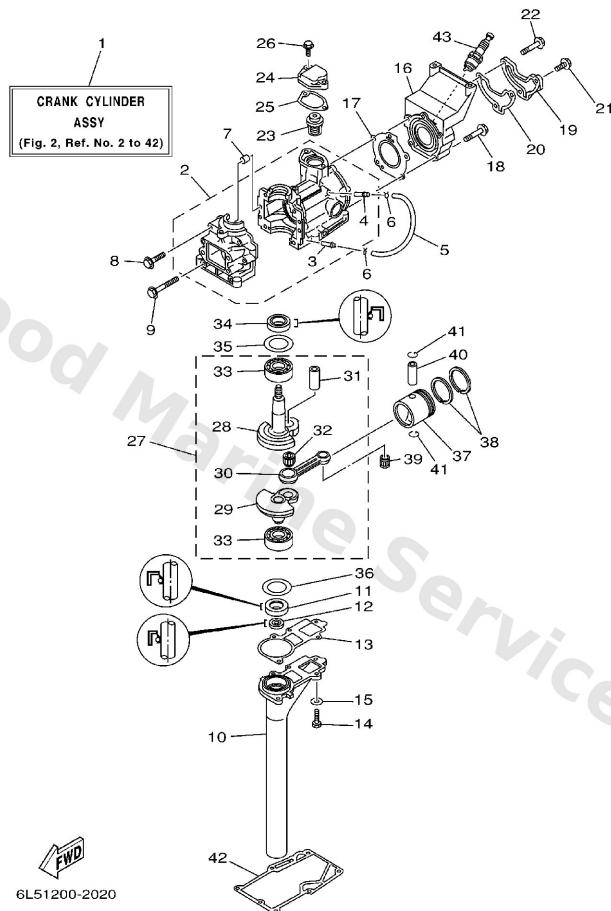

Ref	Part	
37	6L5-11635-00 Piston (0.25mm o/s) AP	Buy now
37	6L5-11636-00 Piston (0.50mm o/s) AP	Buy now
38	6L5-11610-00 Piston ring set (std)	Buy now
38	6L5-11610-10 Piston ring set (0.25mm o/s) AP	Buy now
38	6L5-11610-20 Piston ring set (0.50mm o/s) AP	Buy now
39	93310-112U0 Bearing, cylindrical(6l5)	Buy now
40	6L5-11633-00 Pin, piston	Buy now
41	93450-13022 Circlip 132116340000	Buy now
42	6L5-45113-A1 Gasket, upper casing	Buy now
43	94702-00274 Plug, spark (br6hs-10)	Buy now

A6

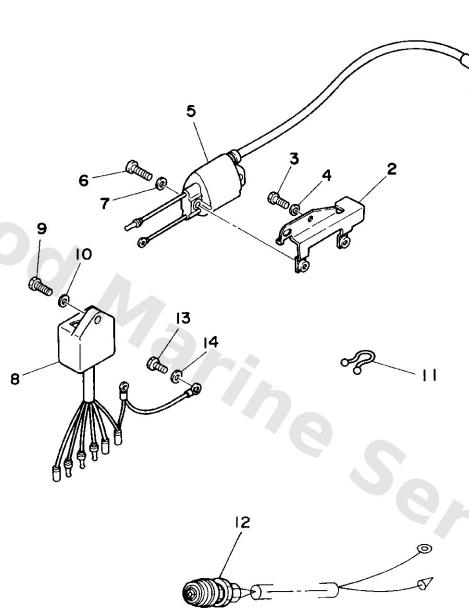



 6L51100-4060

Ref	Part	
1	6G1-82370-21 Plug cap assembly	Buy now
2	6L5-82316-00 Bracket, ignition coil	Buy now
3	97095-06016 Bolt, hexagon deep recess	Buy now
4	92995-06600 Washer, plain (646)	Buy now
5	6L5-85570-N0 Ignition coil assembly	Buy now
6	97880-06016 Screw pan head	Buy now
7	92990-06600 Washer, plain (646)	Buy now
8	6L5-85540-M0 C.d.i. unit assembly	Buy now
11	90465-18147 Clamp	Buy now
12	6L5-82550-00 Stop switch assembly	Buy now
13	97090-06012 Bolt(gh1)	Buy now

B5


Generator

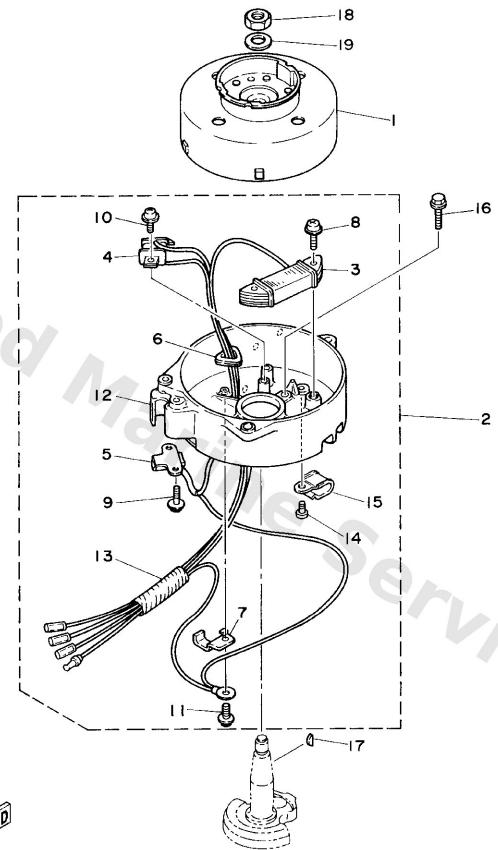

B4

Ref	Part	
1	6L5-85550-M0 Rotor assembly	Buy now
2	6L5-85560-M1 Base assembly	Buy now
3	6E0-85520-70 Charge coil ass'y	Buy now
4	6L5-85595-M0 Coil, pulser	Buy now
5	6L5-85592-M0 Pulser coil assembly	Buy now
6	6E0-81336-70 Grommet	Buy now
7	6E0-81328-70 Clamp	Buy now
8	90159-05038 Screw, With Washer	Buy now
9	90159-05037 Screw,w/washer	Buy now
10	90159-04036 Screw, pan head(6g8)	Buy now
11	90159-04035 Screw panhead (695)	Buy now
12	6L5-15771-01-94 Stay 1	Buy now
13	90446-10M01 Tube (6e5)	Buy now
14	97803-05008 Screw, pan head (7g3)	Buy now
15	90465-10M34 Clamp(6l5)	Buy now


Generator

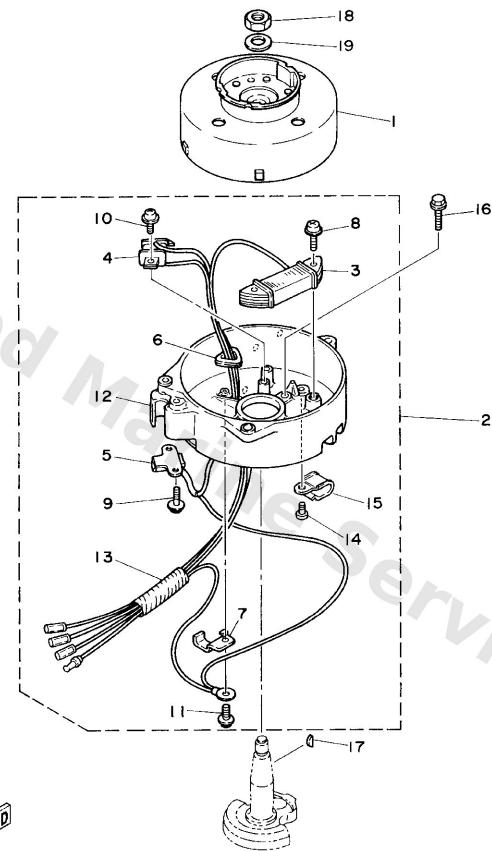

Ref	Part	
16	95895-06016 Bolt, flange deep recess	Buy now
17	90280-04M06 Key, woodruff(6a1)	Buy now
18	90170-10113 Nut, crank shaft (650)	Buy now
19	90201-10126 Washer, plate (26h)	Buy now

B4

Intake

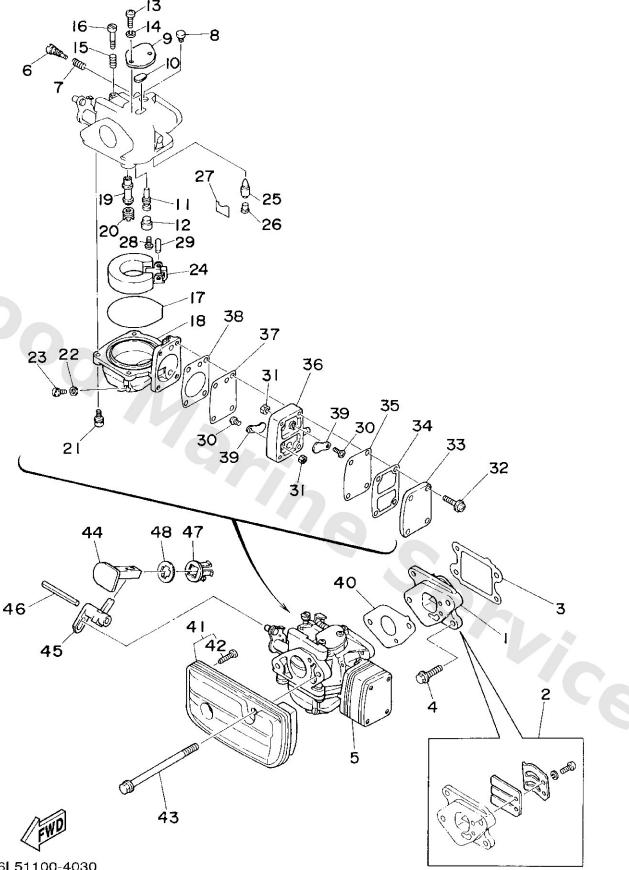


6L51100-4030

B1

Ref	Part	
1	6L5-13610-02 Reed valve assembly	Buy now
2	6L5-W0004-02 Reed set	Buy now
3	6L5-13621-A2 Gasket, valve seat	Buy now
4	95895-06016 Bolt, flange deep recess	Buy now
5	6L5-14301-03 Carburetor assembly 1	Buy now
6	679-14923-00 Screw, pilot	Buy now
7	679-14555-00 Spring	Buy now
8	6G1-14966-00 Cap	Buy now
9	6G1-14527-00 Plate	Buy now
10	6G1-14126-00 Packing	Buy now
11	6L5-14948-03 Jet (#40)	Buy now
12	676-14966-00 Rubber cap	Buy now
13	97880-04010 Screw, pan head (e56)	Buy now
14	92990-04100 Ybs67-4 washer, spring	Buy now
15	90501-10326 Spring coil(663)(carb)	Buy now


Intake

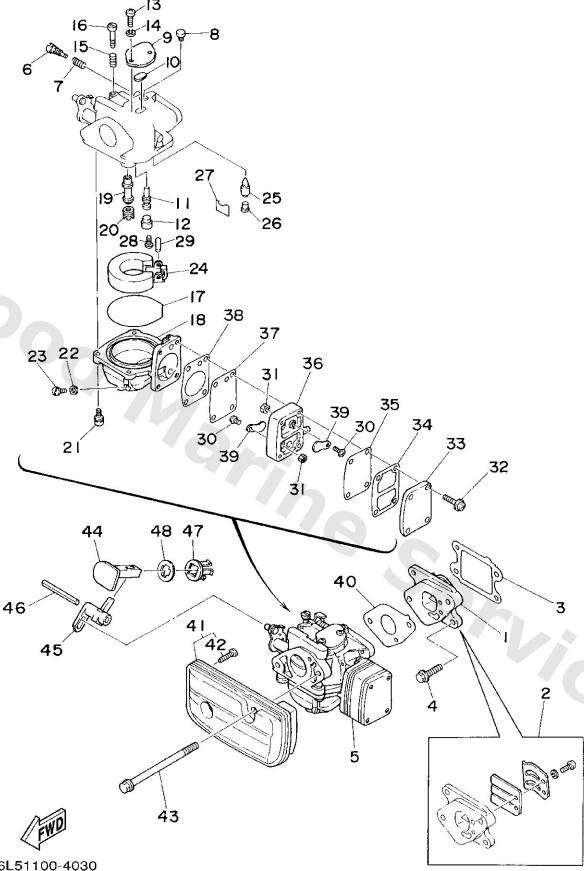

B1

Ref	Part	
16	63V-14523-00 Screw, stop	Buy now
17	6G1-14984-00 Gasket, float chamber	Buy now
18	6G1-14980-01 Body, float chamber	Buy now
19	6L5-14947-01 Jet, needle	Buy now
20	676-14943-14 Jet, main (#68)	Buy now
21	97980-04114 Screw, pan head(ga5)	Buy now
22	6G1-14398-00 Washer	Buy now
23	6G1-14992-00 Screw, drain	Buy now
24	6G1-14985-00 Float comp.	Buy now
25	6G1-14546-00 Valve, needle	Buy now
26	676-14186-00 Pin, valve	Buy now
27	663-14159-00 Clip	Buy now
28	98580-04008 Screw, pan head (713)	Buy now
29	688-14548-00 Pin, arm	Buy now
30	98580-03006 Screw, pan head(78g)	Buy now

Intake

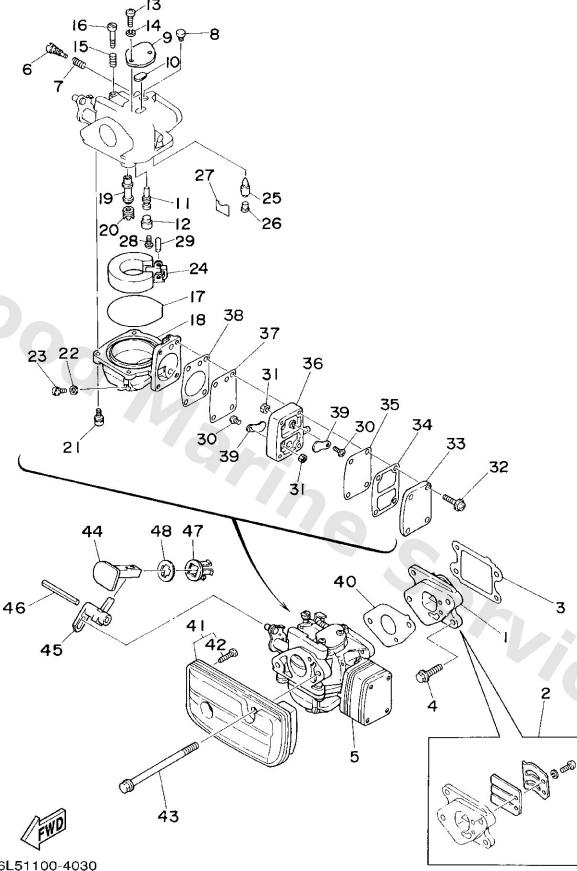


6L51100-4030

B1

Ref	Part	
31	95380-03600 Nut (6g8)	Buy now
32	97980-04125 Screw, with washer	Buy now
33	6G1-24452-00 Cover, pump	Buy now
34	6G1-24432-00 Packing	Buy now
35	6G1-24471-00 Diaphragm	Buy now
36	6G1-24412-01 Body 1	Buy now
37	6G1-24411-00 Diaphragm	Buy now
38	6G1-24431-01 Gasket, fuel pump 1	Buy now
39	6L5-24421-00 Valve, check	Buy now
40	6L5-14198-A1 Gasket	Buy now
41	6L5-14440-00 Silencer assembly, intake	Buy now
42	97780-40716 Screw, tapping(6l5)	Buy now
43	95895-06095 Bolt, flange deep recess	Buy now
44	6L5-41271-20 Knob, choke	Buy now
45	6L5-41252-00 Lever, choke 1	Buy now

Intake

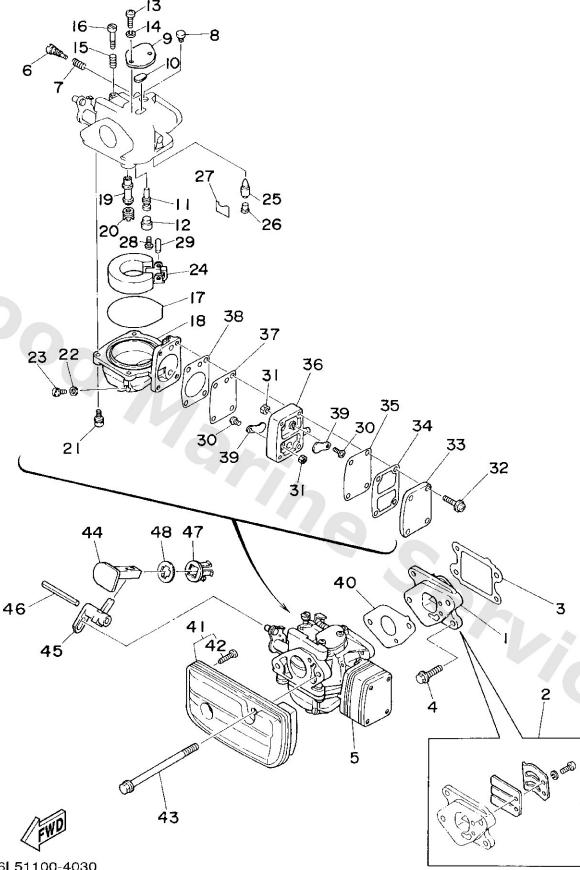


6L51100-4030

B1

Ref	Part	
46	<u>91690-40048</u> Pin, spring (689)	<u>Buy now</u>
47	<u>689-41273-00</u> Grommet	<u>Buy now</u>
48	<u>6J8-41274-00</u> Grommet 2	<u>Buy now</u>


Lower Casing. Drive

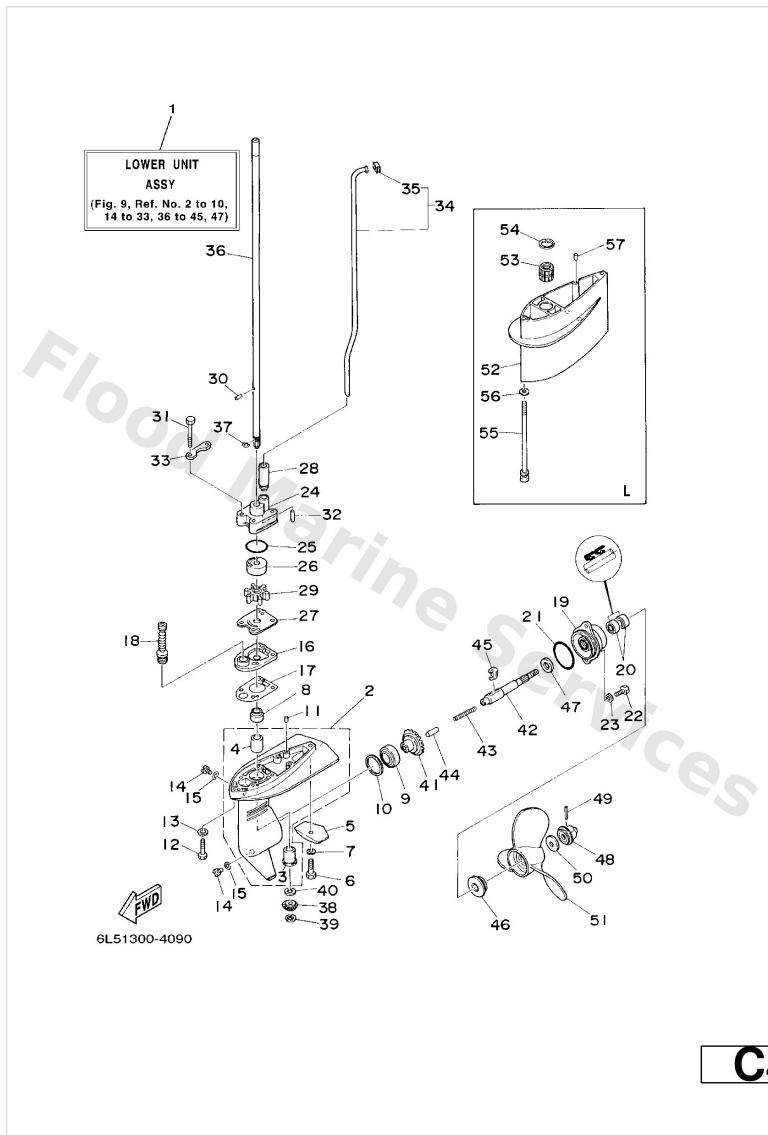

C4

Ref	Part	
1	6L5-45300-01-4D Lower unit assembly S	Buy now
1	6L5-45300-11-4D Lower Unit assembly L	Buy now
2	6L5-45311-00-4D Casing, lower	Buy now
3	6L5-45317-09 Bushing, d/shaft 2 90381-09m08	Buy now
4	6L5-45316-09 Bushing, d/shaft 1 90380-09m23	Buy now
5	6L5-45251-03 Anode	Buy now
6	90101-06M18 Bolt(6l5) L	Buy now
6	95895-06030 Bolt, flange deep recess S	Buy now
7	92990-06300 Washer, tooth	Buy now
8	93103-09M41 Oil seal	Buy now
9	93316-003U0 Bearing, cylindrical(6l5)	Buy now
10	6L5-45567-00 Shim UN	Buy now
57	93604-12M07 Pin, dowel (688) L	Buy now
12	97095-06030 Bolt(jf7)	Buy now
13	92995-06600 Washer, plain (646)	Buy now


Lower Casing. Drive

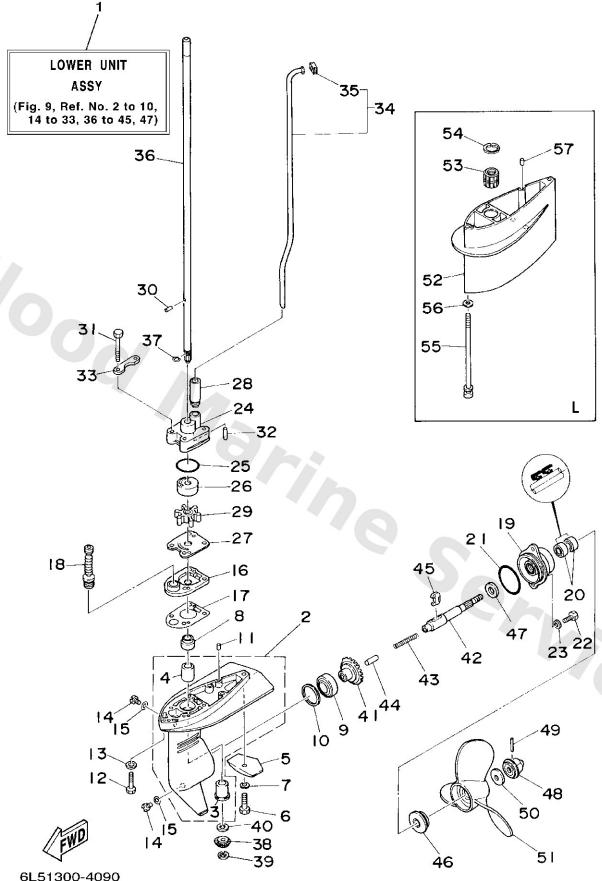

C4


Ref	Part	
14	90340-08002 Plug, straight screw	Buy now
15	90430-08020 Gasket	Buy now
16	6L5-45321-00-5B Plate	Buy now
17	6L5-45315-A0 Packing, lower casing	Buy now
18	6L2-44147-00 Boot, shift rod	Buy now
19	6L5-45361-00-4D Cap, lower casing	Buy now
20	93101-13M12 Oil seal	Buy now
21	93210-48214 O-ring	Buy now
22	97095-06016 Bolt, hexagon deep recess	Buy now
24	6L5-44311-00 Housing, water pump	Buy now
25	93210-33M85 O-ring(6L5)	Buy now
26	6L5-44322-00 Insert, cartridge	Buy now
27	6L5-44323-00 Outer plate, cartridge	Buy now
28	6E0-44366-00 Damper, water seal 2	Buy now
29	6L5-44352-00 Impeller	Buy now

Lower Casing. Drive

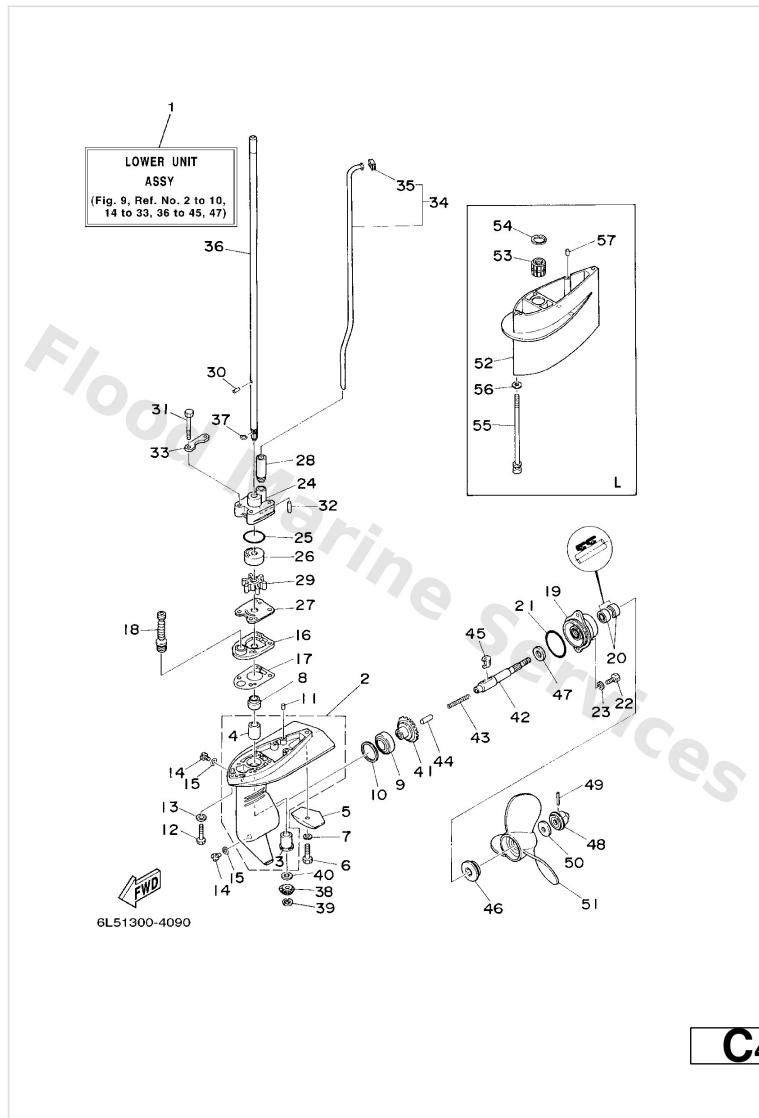


Ref	Part	
30	93604-07M13 Pin, dowel(6l5)	Buy now
31	97095-06040 Bolt (682)	Buy now
32	93604-18080 Pin. dowel. (647)	Buy now
33	6L5-44328-00 Plate	Buy now
34	6L5-44360-01 Water tube assembly <i>S</i>	Buy now
34	6L5-44360-11 Water Tube assembly <i>L</i>	Buy now
35	646-44365-00 Damper, water seal 1	Buy now
36	6L5-45511-00 Shaft, drive <i>S</i>	Buy now
36	6L5-45511-10 Shaft, Drive <i>L</i>	Buy now
37	90467-07M12 Clip(6l5)	Buy now
38	6L5-45551-00 Pinion	Buy now
39	99001-06600 Circlip(53l)	Buy now
40	6L5-45533-00-20 Shim (T)2.0Mm) <i>UR</i>	Buy now
40	6L5-45533-00-21 Shim (t:2.1mm) <i>UR</i>	Buy now
40	6L5-45533-00-22 Shim (t:2.2mm) <i>UR</i>	Buy now

Lower Casing. Drive

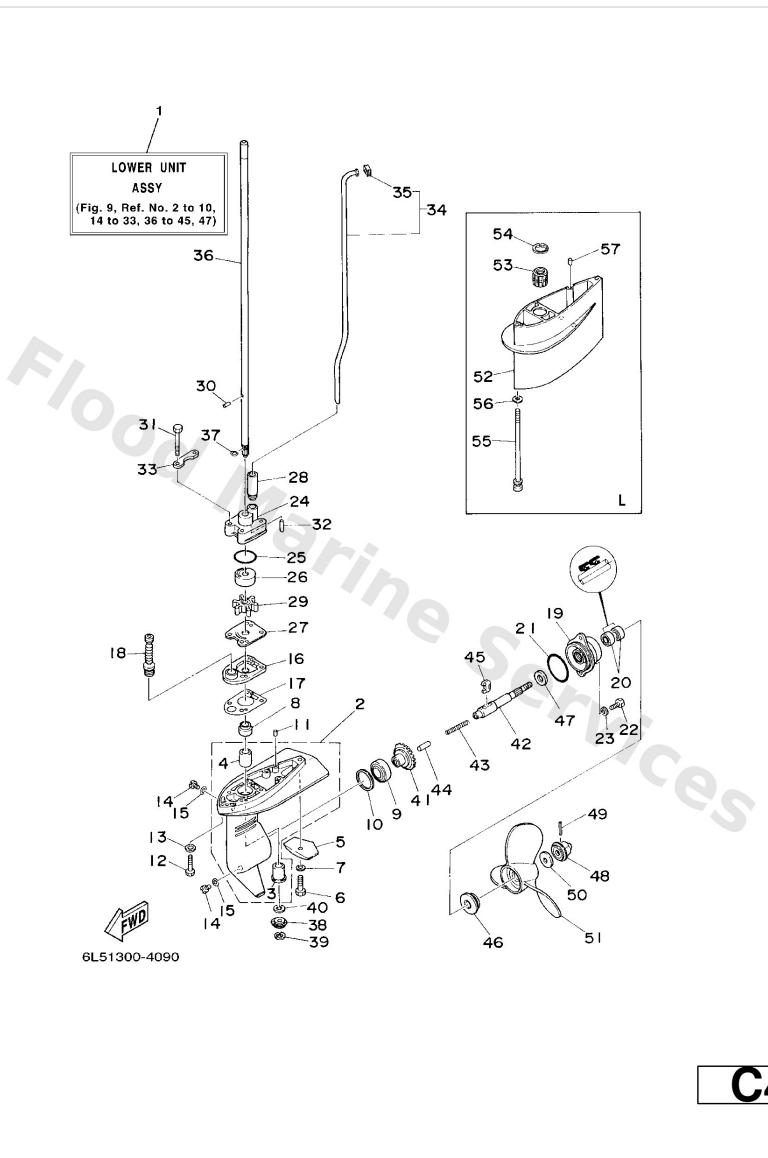

Ref	Part	
40	6L5-45533-00-23 Shim (t:2.3mm) UR	Buy now
41	6L5-45560-00 Gear	Buy now
42	6L5-45611-00 Shaft, propeller	Buy now
43	90501-10064 Spring, compression 6164563600	Buy now
44	6L5-45635-00 Plunger, shift	Buy now
45	6L5-45631-00 Clutch, dog	Buy now
46	6L5-45987-01 Spacer 1	Buy now
47	90201-13198 Washer 6474556600	Buy now
48	6L5-45616-00 Nut, propeller	Buy now
49	91490-25030 Pin, cotter(6l5)	Buy now
50	90201-08M54 Washer, plate (6e5)	Buy now
51	6L5-45943-00-EL Propeller (3x7-1/4 x6 -bs) UR	Buy now
51	6L5-45945-00-EL Propeller (3x7-1/4"x7-1/4"-bs) UR	Buy now
51	6L5-45947-00-EL Propeller (3x7-1/4"x8-1/4"-bs) UR	Buy now
51	6L5-45949-00-EL Propeller (3x7-1/4 x5 -bs) UR	Buy now


Lower Casing. Drive

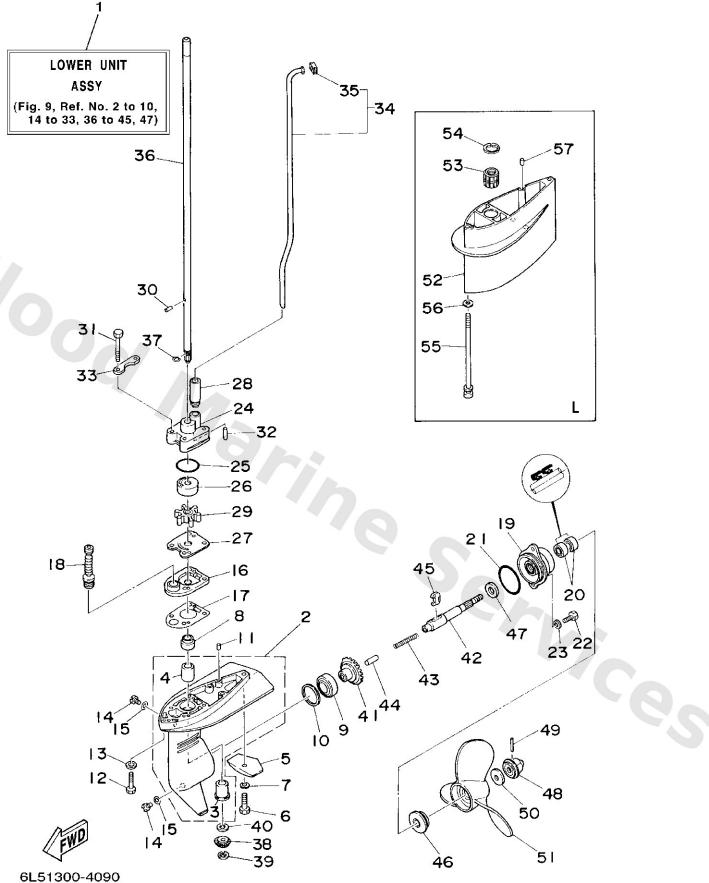

Ref	Part	
51	6L5-45952-00-EL Propeller (3x7-1/4"x5-1/2"-bs) UR	Buy now
52	6L5-45211-00-4D Extension L	Buy now
53	6L5-45318-00 Bushing, drive shaft L	Buy now
54	93420-22M03 Cir clip (6e0) L	Buy now
56	92990-06600 Washer, plain (646) L	Buy now

C4


Repair Kit

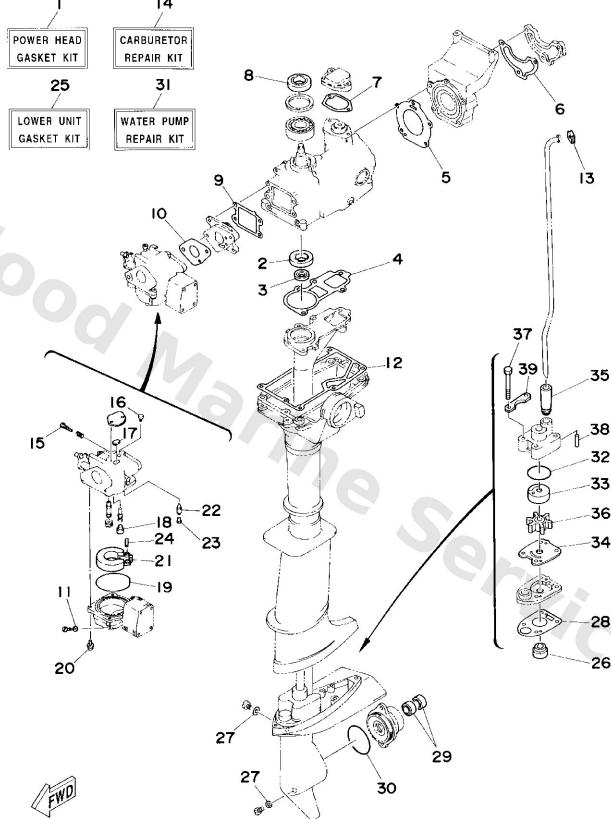

C7

Ref	Part	
1	6L5-W0001-A1 Power head gasket kit	Buy now
2	93101-20M29 Oil seal(6j1)	Buy now
3	93101-09M42 Oil seal(6l5)	Buy now
4	6L5-15369-A0 Gasket, oil seal housing	Buy now
5	6L5-11181-A2 Gasket, cylinder head 1	Buy now
6	6L5-11193-A1 Gasket, head cover	Buy now
7	6L5-12414-A1 Gasket, cover	Buy now
8	93102-20M06 Oil seal(6j1)	Buy now
9	6L5-13621-A2 Gasket, valve seat	Buy now
10	6L5-14198-A1 Gasket	Buy now
11	6G1-14398-00 Washer	Buy now
12	6L5-45113-A1 Gasket, upper casing	Buy now
13	646-44365-00 Damper, water seal 1	Buy now
14	6G1-W0093-00 Carburetor repair kit	Buy now
15	679-14923-00 Screw, pilot	Buy now


Repair Kit

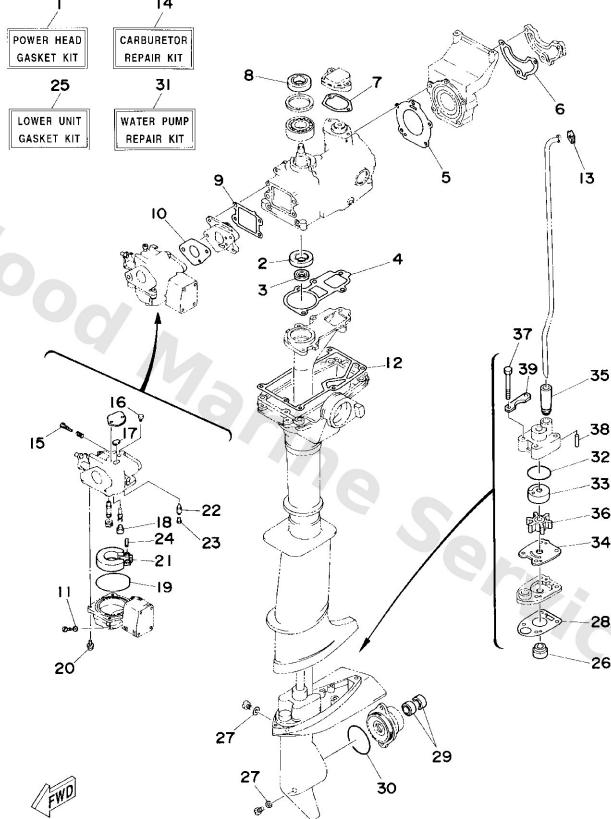

C7

Ref	Part	
16	6G1-14966-00 Cap	Buy now
17	6G1-14126-00 Packing	Buy now
18	676-14966-00 Rubber cap	Buy now
19	6G1-14984-00 Gasket, float chamber	Buy now
20	97980-04114 Screw, pan head(ga5)	Buy now
21	6G1-14985-00 Float comp.	Buy now
22	6G1-14546-00 Valve, needle	Buy now
23	676-14186-00 Pin, valve	Buy now
24	688-14548-00 Pin, arm	Buy now
25	6L5-W0001-21 10 –	Buy now
26	93103-09M41 Oil seal	Buy now
27	90430-08020 Gasket	Buy now
28	6L5-45315-A0 Packing, lower casing	Buy now
29	93101-13M12 Oil seal	Buy now
30	93210-48214 O-ring	Buy now


Repair Kit

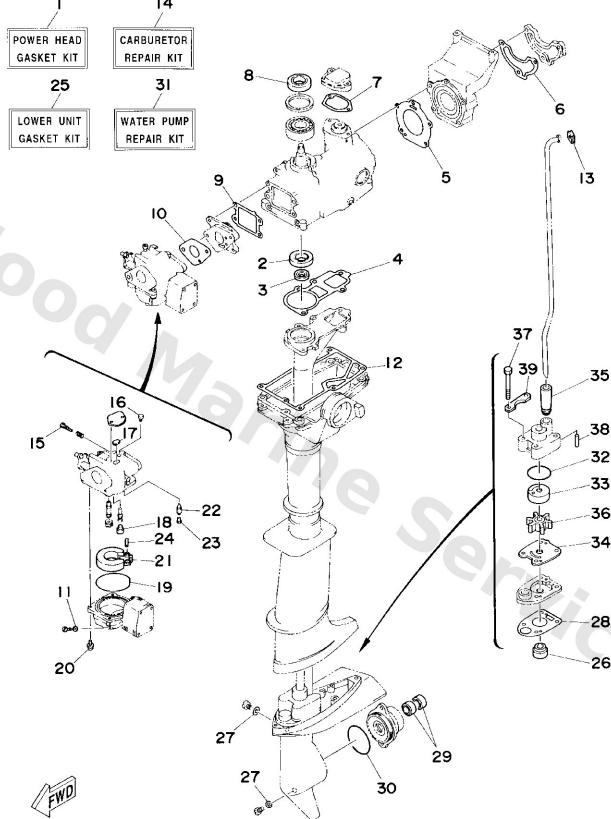

Ref	Part	
31	6L5-W0078-00 Water pump repair kit	Buy now
32	93210-33M85 O-ring(615)	Buy now
33	6L5-44322-00 Insert, cartridge	Buy now
34	6L5-44323-00 Outer plate, cartridge	Buy now
35	6E0-44366-00 Damper, water seal 2	Buy now
36	6L5-44352-00 Impeller	Buy now
37	97095-06040 Bolt (682)	Buy now
38	93604-18080 Pin. dowel. (647)	Buy now
39	6L5-44328-00 Plate	Buy now

C7

Starter

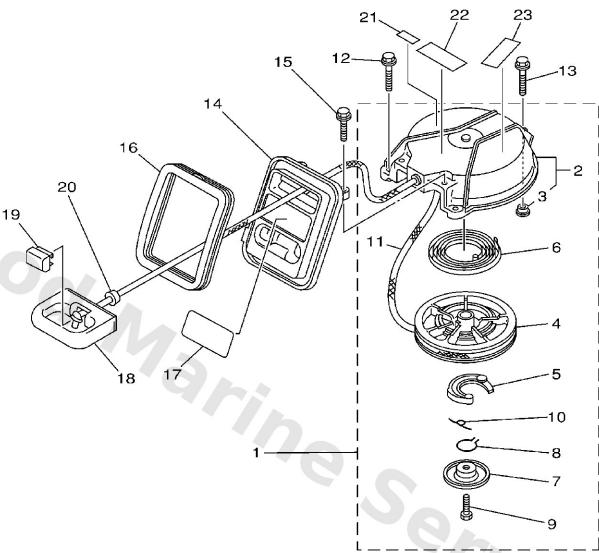


 6L51100-2040

B3

Ref	Part	
1	6L5-15710-00 Starter assembly	Buy now
2	6L5-15711-00 Case, starter	Buy now
3	90387-06M70 Collar (6h5)	Buy now
4	6L5-15714-00 Drum, sheave	Buy now
5	6L5-15741-00 Pawl, drive	Buy now
6	6L5-15713-00 Spring, starter	Buy now
7	6L5-15716-00 Plate, drive	Buy now
8	6A1-15705-00 Spring, drive pawl	Buy now
9	97313-06012 Bolt(gh1)	Buy now
10	6A1-15767-00 Spring, return	Buy now
11	* item_description	Buy now
12	95895-06020 Bolt, flange(jk3)	Buy now
13	95895-06035 Bolt, flange(4nx)	Buy now
14	6L5-15758-00-98 Guide, rope	Buy now
15	95895-06016 Bolt, flange deep recess	Buy now

Starter

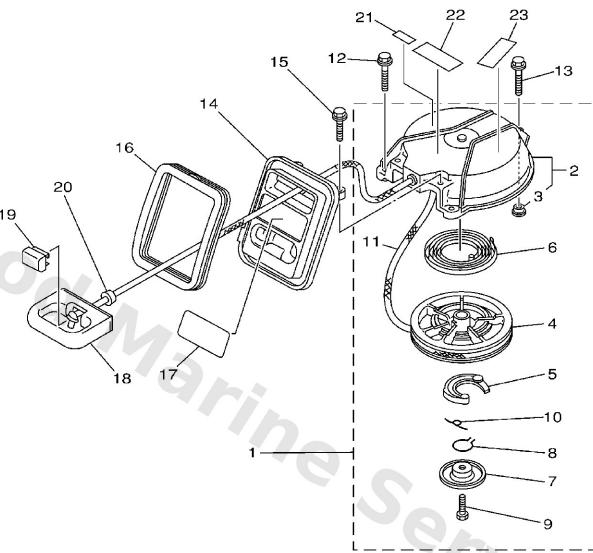


6L51100-2040

Ref	Part	
16	6L5-15761-00 Seal, rubber 1	Buy now
17	6L5-42677-10 Graphic, front	Buy now
18	6L5-15755-00 Handle, starter	Buy now
19	6L5-15779-20 Cover	Buy now
20	6L5-15789-00 Damper	Buy now
21	6H8-42791-10 Mark 1	Buy now
22	6A1-83625-41 Mark 5	Buy now
23	6A1-83625-51 Mark 5	Buy now

B3


Upper Casing . Bracket

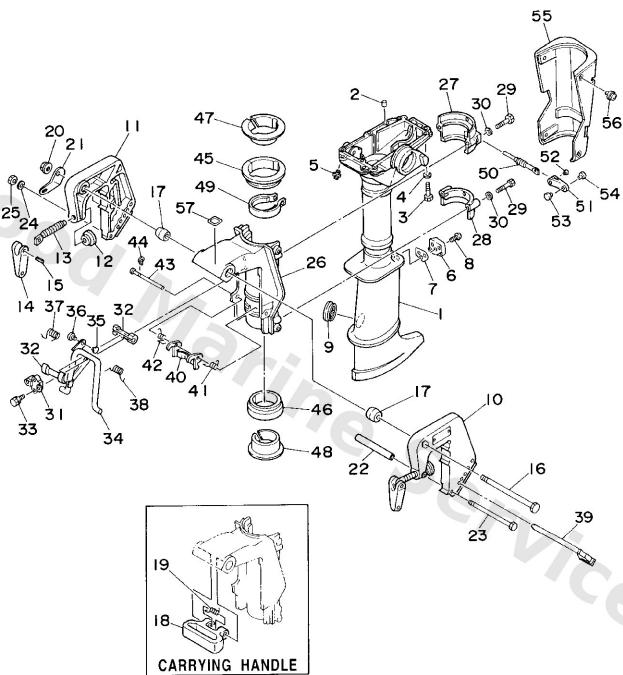

C1

Ref	Part	
1	6L5-45111-02-4D Casing, upper	Buy now
2	93604-12M07 Pin, dowel (688)	Buy now
3	97095-06030 Bolt(jf7)	Buy now
4	92995-06600 Washer, plain (646)	Buy now
5	93700-06M03 Nipple, grease(6a1)	Buy now
6	6L5-45152-00 Cover, upper casing 2	Buy now
7	6L5-45115-A0 Gasket,upper casing 3	Buy now
8	90149-05M08 Ybs53-525 screw,flat head	Buy now
9	647-45151-01 Cover, upper casing	Buy now
10	6L5-43111-01-4D Bracket Clamp 1	Buy now
11	6L5-43112-00-4D Bracket Clamp 2	Buy now
12	620-43114-00 Pad, transom clamp	Buy now
13	6E0-43116-01 Screw, transom clamp	Buy now
14	6E0-43118-01 Handle, transom clamp	Buy now
15	90243-04M01 Pin(6a1)	Buy now


Upper Casing . Bracket

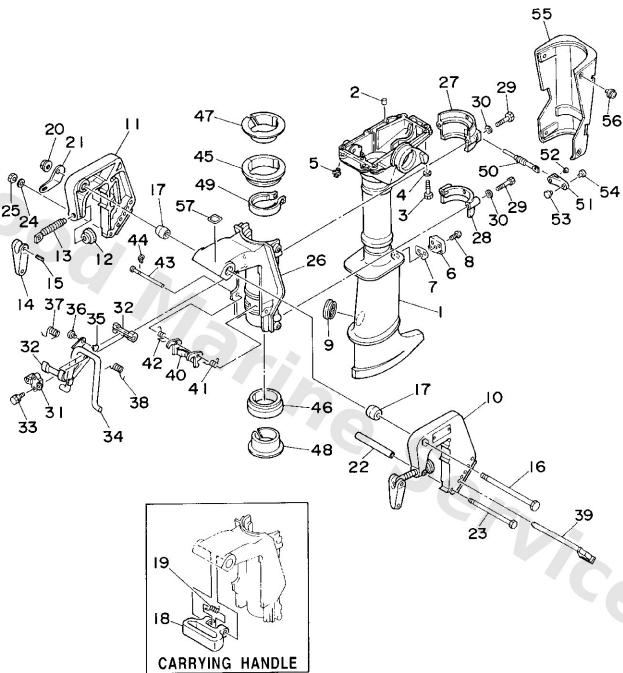

C1

Ref	Part	
16	90101-08M10 Bolt(6l5)	Buy now
17	6G1-43136-00 Piece, friction	Buy now
18	6L5-42121-00 Bracket	Buy now
19	90508-16M30 Spring, torsion(6l5)	Buy now
20	90185-08057 Nut, nylon (6j8)	Buy now
21	6A1-43113-01 Plate, clamp bracket	Buy now
22	90387-06M11 Collar	Buy now
23	90101-06335 Bolt, hexagon (624)	Buy now
24	92990-06600 Washer, plain (646)	Buy now
25	95380-06600 Nut(661)	Buy now
26	6L5-43311-01-4D Bracket, swivel 1	Buy now
27	6L5-44511-00-4D Cover, upper mount	Buy now
28	6L5-44553-00-4D Cover, lower mount	Buy now
29	97095-06035 Bolt(j52)	Buy now
31	6E0-43313-00-4D Bracket, swivel 3	Buy now


Upper Casing . Bracket

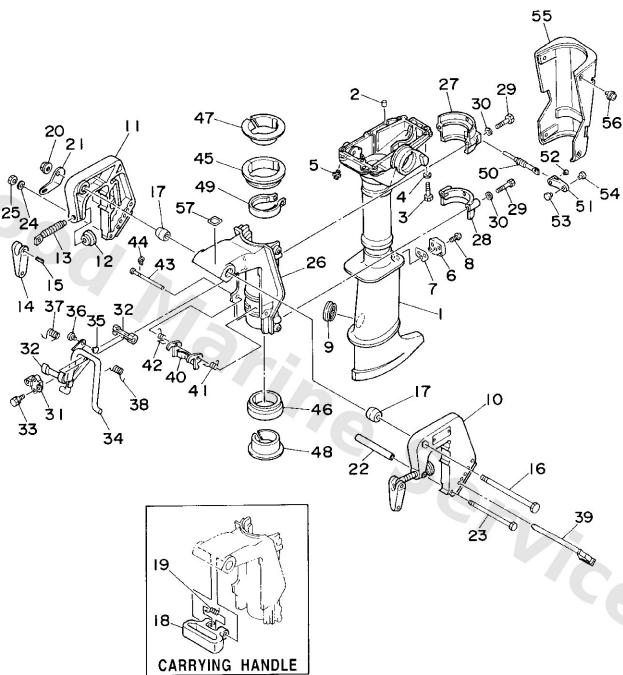

C1

Ref	Part	
32	620-43189-00 Bushing	Buy now
33	95895-06020 Bolt, flange(jk3)	Buy now
34	6L5-43181-00 Lever, tilt stop 1	Buy now
35	6L5-44196-20 Indicator 3	Buy now
36	6L5-44197-20 Indicator 4	Buy now
37	90508-16020 Spring 6474319800	Buy now
38	90508-16021 Spring 6474318800	Buy now
39	6L5-43160-00 Tilt rod assembly	Buy now
40	6L5-43614-00 Plate, tilt lock	Buy now
41	90508-08M26 Spring, torsion(6l5)	Buy now
42	90508-08M27 Spring, torsion(6l5)	Buy now
43	6L5-43659-00 Shaft, reverse lock	Buy now
44	99080-05600 Circlip(22k)	Buy now
45	6L5-42537-00 Bushing, pivot shaft	Buy now
46	6L5-42538-00 Bushing, pivot shaft	Buy now

Upper Casing . Bracket

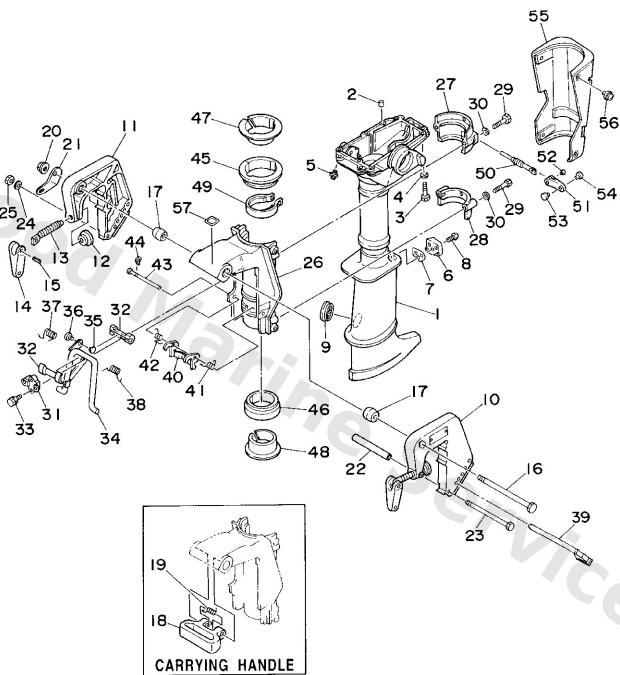

6L51110-2080

C1

Ref	Part	
47	6L5-42539-00 Bushing, pivot shaft	Buy now
48	6L5-42549-00 Bushing, pivot shaft	Buy now
49	6E0-42528-03 Plate, friction	Buy now
50	6L5-42529-01 Screw, friction piece	Buy now
51	6L5-42561-00 Knob, steering lock	Buy now
52	90266-04M05 Rivet(6l5)	Buy now
55	6L5-43318-11 Cover	Buy now
56	90159-06M10 Screw, with washer(6l5)	Buy now
57	6A1-42792-01 Mark (100:1)	Buy now

Disclaimer

This document is provided for convenience only. It is **not** an official Yamaha publication and is **not supplied, endorsed, or approved** by Yamaha Motor Co., Ltd.

Reasonable efforts are made to keep information accurate; however diagrams, part references, supersessions, descriptions, and applicability may contain errors or omissions. Specifications and part availability may change without notice.

You are responsible for confirming the correct parts for your engine (including model code, year, serial range, and any superseded part numbers) before ordering or fitting.