



# Yamaha DBW REMOTE CONTROL 2007

## Parts Manual

[www.floodmarine.co.uk](http://www.floodmarine.co.uk)

+44 2882 246 539

 
Authorised Yamaha Dealers



# Contents

|                                            |    |
|--------------------------------------------|----|
| <b>DBW REMOTE CONTROL 1 (SINGLE)</b> ..... | 3  |
| <b>DBW REMOTE CONTROL 2 (TWIN)</b> .....   | 8  |
| <b>DBW REMOTE CONTROL 3 (TRIPLE)</b> ..... | 14 |
| <b>ELECTRICAL DBW REMOTE CONTROL</b> ..... | 20 |
| <b>ELECTRICAL WIRE HARNESS</b> .....       | 21 |
| <b>LAYOUT CHART 1 (SINGLE)</b> .....       | 22 |
| <b>LAYOUT CHART 2 (TWIN)</b> .....         | 23 |
| <b>LAYOUT CHART 3 (TRIPLE)</b> .....       | 24 |
| <b>SWITCH &amp; PANEL 1 (SINGLE)</b> ..... | 25 |
| <b>SWITCH &amp; PANEL 2 (SINGLE)</b> ..... | 26 |
| <b>SWITCH &amp; PANEL 3 (TWIN)</b> .....   | 27 |
| <b>SWITCH &amp; PANEL 4 (TWIN)</b> .....   | 28 |
| <b>SWITCH &amp; PANEL 5 (TRIPLE)</b> ..... | 29 |
| <b>SWITCH &amp; PANEL 6 (TRIPLE)</b> ..... | 30 |


# Dbw Remote Control 1 (Single)

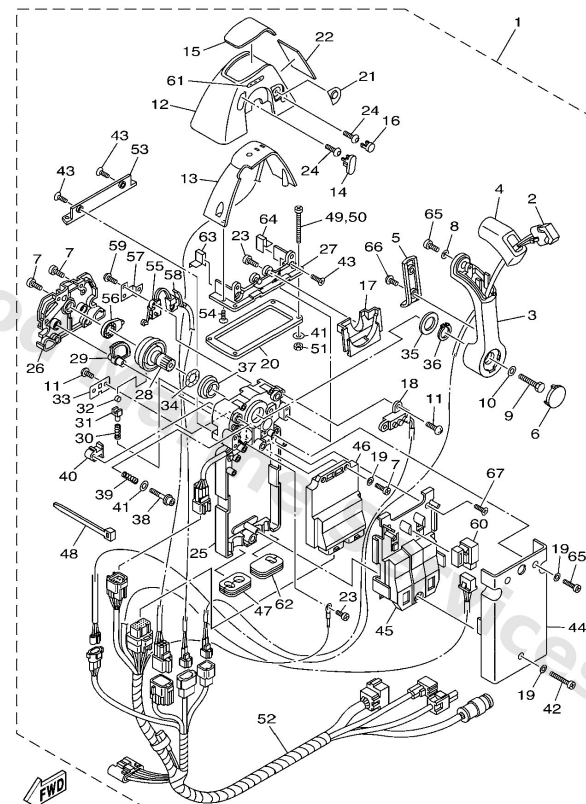

6X61100-G040

| Ref | Part                                                                  |                         |
|-----|-----------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6X64820500</a><br>Ctrl Sgl Std<br>NOT FOR SALE            | <a href="#">Buy now</a> |
| 1   | <a href="#">6X64820510</a><br>Remote Control assembly<br>NOT FOR SALE | <a href="#">Buy now</a> |
| 1   | <a href="#">6X64820520</a><br>Remote Control assembly<br>NOT FOR SALE | <a href="#">Buy now</a> |
| 2   | <a href="#">6X68256300</a><br>Trim & tilt switch assembly             | <a href="#">Buy now</a> |
| 3   | <a href="#">6X64822100</a><br>Lever, control                          | <a href="#">Buy now</a> |
| 4   | <a href="#">6X64822200</a><br>Grip, control lever                     | <a href="#">Buy now</a> |
| 5   | <a href="#">6X64822400</a><br>Cover, control lever                    | <a href="#">Buy now</a> |
| 6   | <a href="#">6X64822410</a><br>Cover, control lever                    | <a href="#">Buy now</a> |
| 7   | <a href="#">9858005014</a><br>Screw, pan head(3yl)                    | <a href="#">Buy now</a> |
| 8   | <a href="#">9299005300</a><br>Washer, tooth                           | <a href="#">Buy now</a> |
| 9   | <a href="#">6X64817100</a><br>Bolt                                    | <a href="#">Buy now</a> |
| 10  | <a href="#">9299008600</a><br>Washer, plain (663)                     | <a href="#">Buy now</a> |
| 11  | <a href="#">EL84812700</a><br>Screw 1                                 | <a href="#">Buy now</a> |
| 12  | <a href="#">6X64811900</a><br>Cover                                   | <a href="#">Buy now</a> |
| 13  | <a href="#">6X68430100</a><br>Pilot light assembly 1                  | <a href="#">Buy now</a> |


## Dbw Remote Control 1 (Single)

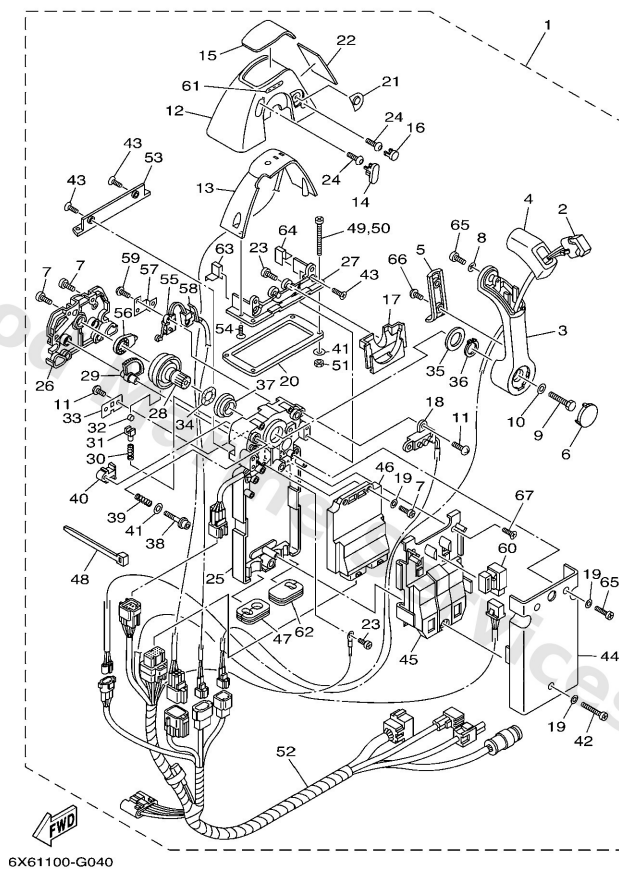 

6X61100-G040

| Ref | Part                                                  |                         |
|-----|-------------------------------------------------------|-------------------------|
| 14  | <a href="#">6X64816700</a><br>Plug                    | <a href="#">Buy now</a> |
| 15  | <a href="#">6X64821500</a><br>Graphic                 | <a href="#">Buy now</a> |
| 16  | <a href="#">6X64816750</a><br>Plug                    | <a href="#">Buy now</a> |
| 17  | <a href="#">6X64821900</a><br>Cover, lead             | <a href="#">Buy now</a> |
| 18  | <a href="#">6X68259E00</a><br>Switch assembly         | <a href="#">Buy now</a> |
| 19  | <a href="#">9299005200</a><br>Ybs66-5 washer, plain   | <a href="#">Buy now</a> |
| 20  | <a href="#">6X64817600</a><br>Grommet                 | <a href="#">Buy now</a> |
| 21  | <a href="#">6X64822500</a><br>Cover                   | <a href="#">Buy now</a> |
| 22  | <a href="#">6X64821600</a><br>Graphic                 | <a href="#">Buy now</a> |
| 23  | <a href="#">9858004010</a><br>Screw, pan head (e56)   | <a href="#">Buy now</a> |
| 24  | <a href="#">92D8005016</a><br>Bolt, socket head       | <a href="#">Buy now</a> |
| 25  | <a href="#">6X6481A001</a><br>Remo-Con. Case assembly | <a href="#">Buy now</a> |
| 26  | <a href="#">6X64821200</a><br>Back plate 1            | <a href="#">Buy now</a> |
| 27  | <a href="#">6X64814410</a><br>Plate, stopper 2        | <a href="#">Buy now</a> |
| 28  | <a href="#">6X64824201</a><br>Shaft, drive            | <a href="#">Buy now</a> |


## Dbw Remote Control 1 (Single)

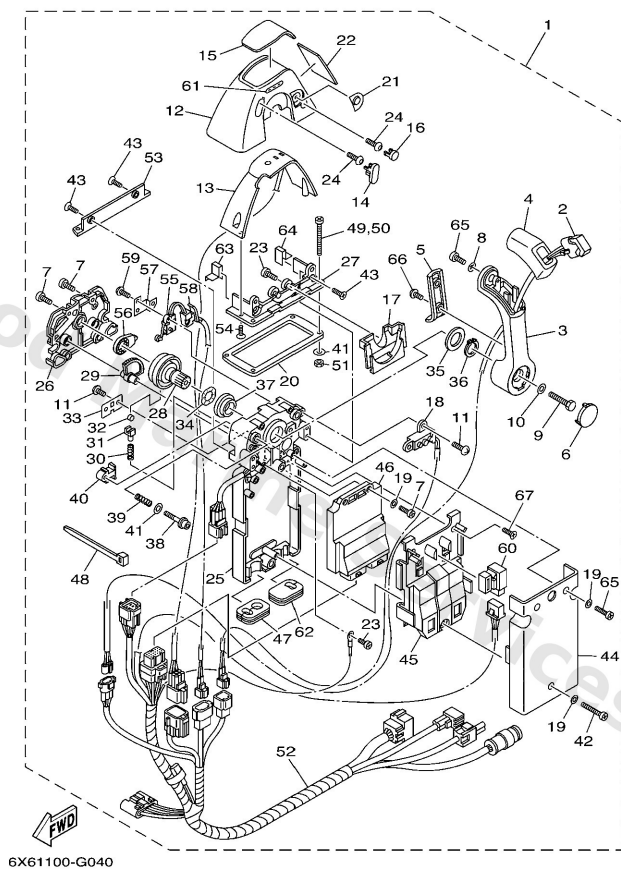 

6X61100-G040


| Ref | Part                                             |                         |
|-----|--------------------------------------------------|-------------------------|
| 29  | <a href="#">6X64823300</a><br>Gear 2             | <a href="#">Buy now</a> |
| 30  | <a href="#">6X64823800</a><br>Spring, detent     | <a href="#">Buy now</a> |
| 31  | <a href="#">6X64823700</a><br>Adaptor            | <a href="#">Buy now</a> |
| 32  | <a href="#">6X64823600</a><br>Roller, detent     | <a href="#">Buy now</a> |
| 33  | <a href="#">6X64818900</a><br>Retainer           | <a href="#">Buy now</a> |
| 34  | <a href="#">7034819800</a><br>Washer, wave 3     | <a href="#">Buy now</a> |
| 35  | <a href="#">6X64819300</a><br>Washer 3           | <a href="#">Buy now</a> |
| 36  | <a href="#">6X64811800</a><br>Clip, shift lever  | <a href="#">Buy now</a> |
| 37  | <a href="#">6X64823400</a><br>Bushing 1          | <a href="#">Buy now</a> |
| 38  | <a href="#">6X64826700</a><br>Bolt set           | <a href="#">Buy now</a> |
| 39  | <a href="#">6X64815800</a><br>Spring 1           | <a href="#">Buy now</a> |
| 40  | <a href="#">6X64826400</a><br>Friction, throttle | <a href="#">Buy now</a> |
| 41  | <a href="#">7044828700</a><br>Washer 1           | <a href="#">Buy now</a> |
| 42  | <a href="#">6X68114500</a><br>Screw 1            | <a href="#">Buy now</a> |
| 43  | <a href="#">9878005014</a><br>Screw 3            | <a href="#">Buy now</a> |

# Dbw Remote Control 1 (Single)

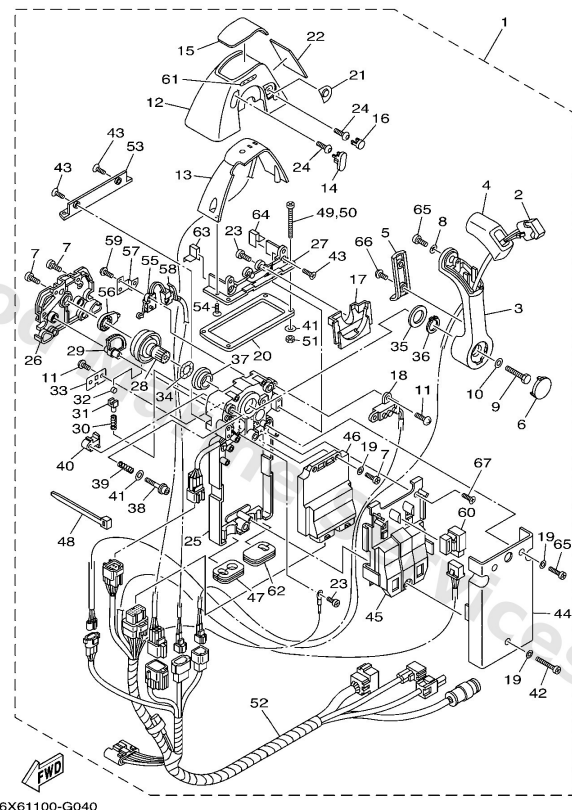 


| Ref | Part                                                                |                         |
|-----|---------------------------------------------------------------------|-------------------------|
| 44  | <a href="#">6X64821300</a><br>Back plate 2                          | <a href="#">Buy now</a> |
| 45  | <a href="#">6X64822800</a><br>Holder, switch                        | <a href="#">Buy now</a> |
| 46  | <a href="#">6X68559000</a><br>Control unit assembly<br>STATION      | <a href="#">Buy now</a> |
| 46  | <a href="#">6X68559010</a><br>Control unit assembly<br>STATION      | <a href="#">Buy now</a> |
| 47  | <a href="#">6X64817500</a><br>Boot<br>STATION                       | <a href="#">Buy now</a> |
| 48  | <a href="#">7038259100</a><br>Band<br>STATION                       | <a href="#">Buy now</a> |
| 49  | <a href="#">9778050145</a><br>Screw, pan head tapping               | <a href="#">Buy now</a> |
| 50  | <a href="#">9858005060</a><br>Screw, panhead                        | <a href="#">Buy now</a> |
| 51  | <a href="#">9538005600</a><br>Nut, hexagon (663)                    | <a href="#">Buy now</a> |
| 52  | <a href="#">6X68259000</a><br>Wire harness assembly<br>STATION      | <a href="#">Buy now</a> |
| 52  | <a href="#">6X68259020</a><br>Wire Harness assembly<br>STATION MAIN | <a href="#">Buy now</a> |
| 52  | <a href="#">6X68259050</a><br>Wire Harness assembly<br>STATION SUB  | <a href="#">Buy now</a> |
| 53  | <a href="#">6X64814400</a><br>Plate, stopper 2                      | <a href="#">Buy now</a> |
| 54  | <a href="#">6X64812900</a><br>Screw 3                               | <a href="#">Buy now</a> |
| 55  | <a href="#">6X68254000</a><br>Neutral switch assembly               | <a href="#">Buy now</a> |

## Dbw Remote Control 1 (Single)

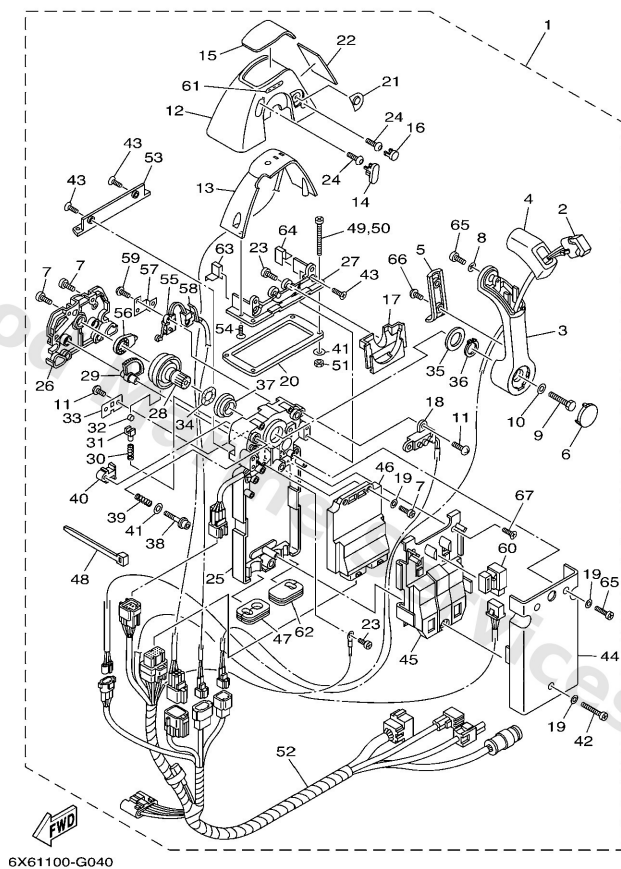 


| Ref | Part                                               |                         |
|-----|----------------------------------------------------|-------------------------|
| 56  | <a href="#">6X64824100</a><br>Arm, drive           | <a href="#">Buy now</a> |
| 57  | <a href="#">6X64824501</a><br>Plate, lock          | <a href="#">Buy now</a> |
| 58  | <a href="#">6X68254500</a><br>Grommet              | <a href="#">Buy now</a> |
| 59  | <a href="#">6X68252V00</a><br>Screw, special       | <a href="#">Buy now</a> |
| 60  | <a href="#">7048195010</a><br>Relay assembly       | <a href="#">Buy now</a> |
| 61  | <a href="#">6X64419100</a><br>Indicator, shift     | <a href="#">Buy now</a> |
| 62  | <a href="#">6X64817510</a><br>Boot<br>STATION ONLY | <a href="#">Buy now</a> |
| 63  | <a href="#">6X64817650</a><br>Grommet              | <a href="#">Buy now</a> |
| 64  | <a href="#">6X64817660</a><br>Grommet              | <a href="#">Buy now</a> |
| 65  | <a href="#">6X64812700</a><br>Screw 1              | <a href="#">Buy now</a> |
| 66  | <a href="#">6X64812800</a><br>Screw 2              | <a href="#">Buy now</a> |
| 67  | <a href="#">6X68114600</a><br>Screw 2              | <a href="#">Buy now</a> |

## Dbw Remote Control 2 (Twin)

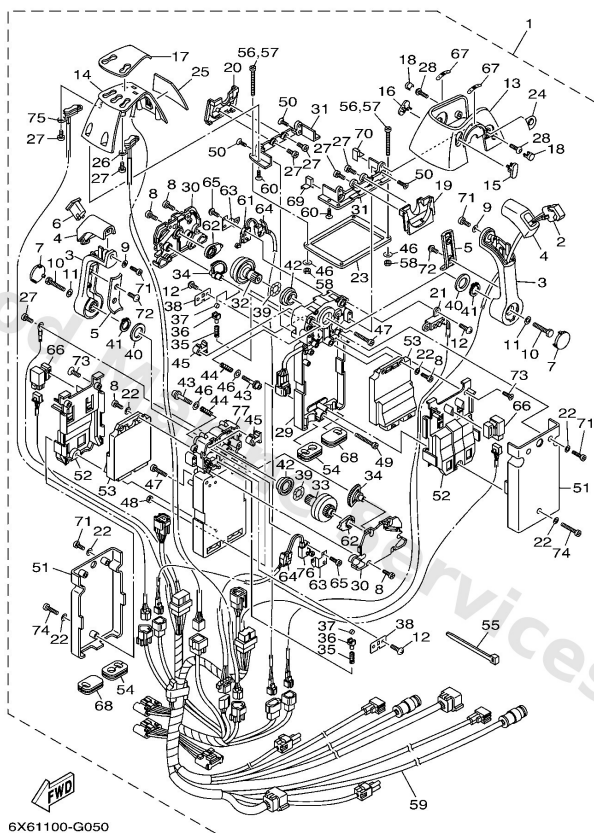 


| Ref | Part                                                                  |                         |
|-----|-----------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6X64820700</a><br>Remote Control assembly<br>NOT FOR SALE | <a href="#">Buy now</a> |
| 1   | <a href="#">6X64820710</a><br>Remote Control assembly<br>NOT FOR SALE | <a href="#">Buy now</a> |
| 1   | <a href="#">6X64820720</a><br>Remote control assembly<br>NOT FOR SALE | <a href="#">Buy now</a> |
| 2   | <a href="#">6X68256300</a><br>Trim & tilt switch assembly             | <a href="#">Buy now</a> |
| 3   | <a href="#">6X64822100</a><br>Lever, control                          | <a href="#">Buy now</a> |
| 4   | <a href="#">6X64822200</a><br>Grip, control lever                     | <a href="#">Buy now</a> |
| 5   | <a href="#">6X64822400</a><br>Cover, control lever                    | <a href="#">Buy now</a> |
| 6   | <a href="#">6X64822210</a><br>Grip, control lever                     | <a href="#">Buy now</a> |
| 7   | <a href="#">6X64822410</a><br>Cover, control lever                    | <a href="#">Buy now</a> |
| 8   | <a href="#">9858005014</a><br>Screw, pan head(3yl)                    | <a href="#">Buy now</a> |
| 9   | <a href="#">9299005300</a><br>Washer, tooth                           | <a href="#">Buy now</a> |
| 10  | <a href="#">6X64817100</a><br>Bolt                                    | <a href="#">Buy now</a> |
| 11  | <a href="#">9299008600</a><br>Washer, plain (663)                     | <a href="#">Buy now</a> |
| 12  | <a href="#">EL84812700</a><br>Screw 1                                 | <a href="#">Buy now</a> |
| 13  | <a href="#">6X64811910</a><br>Cover                                   | <a href="#">Buy now</a> |

## Dbw Remote Control 2 (Twin)

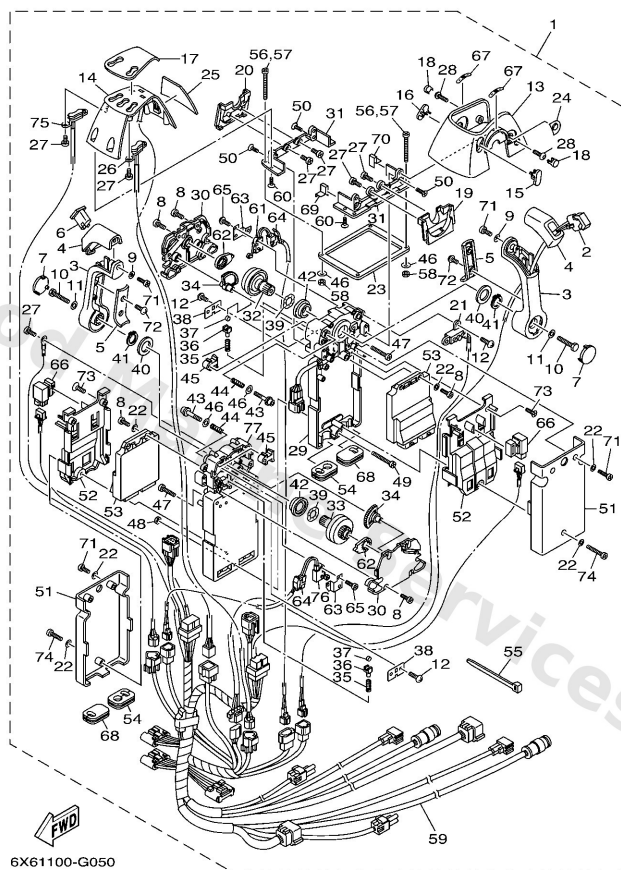 


| Ref | Part                                                      |                         |
|-----|-----------------------------------------------------------|-------------------------|
| 14  | <a href="#">6X68430110</a><br>Pilot light assembly 1      | <a href="#">Buy now</a> |
| 15  | <a href="#">6X64816710</a><br>Plug                        | <a href="#">Buy now</a> |
| 16  | <a href="#">6X64816720</a><br>Plug                        | <a href="#">Buy now</a> |
| 17  | <a href="#">6X64821510</a><br>Graphic                     | <a href="#">Buy now</a> |
| 18  | <a href="#">6X64816760</a><br>Plug                        | <a href="#">Buy now</a> |
| 19  | <a href="#">6X64821910</a><br>Cover, lead                 | <a href="#">Buy now</a> |
| 20  | <a href="#">6X64821920</a><br>Cover, lead                 | <a href="#">Buy now</a> |
| 21  | <a href="#">6X68259E00</a><br>Switch assembly             | <a href="#">Buy now</a> |
| 22  | <a href="#">9299005200</a><br>Ybs66-5 washer, plain       | <a href="#">Buy now</a> |
| 23  | <a href="#">6X64817610</a><br>Grommet                     | <a href="#">Buy now</a> |
| 24  | <a href="#">6X64822500</a><br>Cover                       | <a href="#">Buy now</a> |
| 25  | <a href="#">6X64821610</a><br>Graphic                     | <a href="#">Buy now</a> |
| 26  | <a href="#">6X68256310</a><br>Trim & tilt switch assembly | <a href="#">Buy now</a> |
| 27  | <a href="#">9858004010</a><br>Screw, pan head (e56)       | <a href="#">Buy now</a> |
| 28  | <a href="#">92D8005016</a><br>Bolt, socket head           | <a href="#">Buy now</a> |

## Dbw Remote Control 2 (Twin)

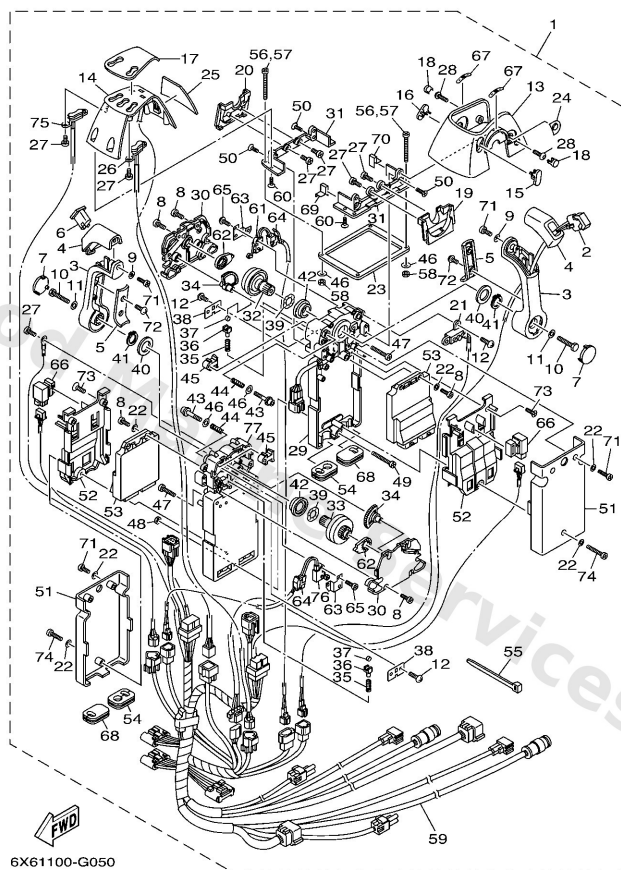 


| Ref | Part                                                  |                         |
|-----|-------------------------------------------------------|-------------------------|
| 29  | <a href="#">6X6481A001</a><br>Remo-Con. Case assembly | <a href="#">Buy now</a> |
| 30  | <a href="#">6X64821200</a><br>Back plate 1            | <a href="#">Buy now</a> |
| 31  | <a href="#">6X64814410</a><br>Plate, stopper 2        | <a href="#">Buy now</a> |
| 32  | <a href="#">6X64824201</a><br>Shaft, drive            | <a href="#">Buy now</a> |
| 33  | <a href="#">6X64824211</a><br>Shaft, drive            | <a href="#">Buy now</a> |
| 34  | <a href="#">6X64823300</a><br>Gear 2                  | <a href="#">Buy now</a> |
| 35  | <a href="#">6X64823800</a><br>Spring, detent          | <a href="#">Buy now</a> |
| 36  | <a href="#">6X64823700</a><br>Adaptor                 | <a href="#">Buy now</a> |
| 37  | <a href="#">6X64823600</a><br>Roller, detent          | <a href="#">Buy now</a> |
| 38  | <a href="#">6X64818900</a><br>Retainer                | <a href="#">Buy now</a> |
| 39  | <a href="#">7034819800</a><br>Washer, wave 3          | <a href="#">Buy now</a> |
| 40  | <a href="#">6X64819300</a><br>Washer 3                | <a href="#">Buy now</a> |
| 41  | <a href="#">6X64811800</a><br>Clip, shift lever       | <a href="#">Buy now</a> |
| 42  | <a href="#">6X64823400</a><br>Bushing 1               | <a href="#">Buy now</a> |
| 43  | <a href="#">6X64826700</a><br>Bolt set                | <a href="#">Buy now</a> |

## Dbw Remote Control 2 (Twin)

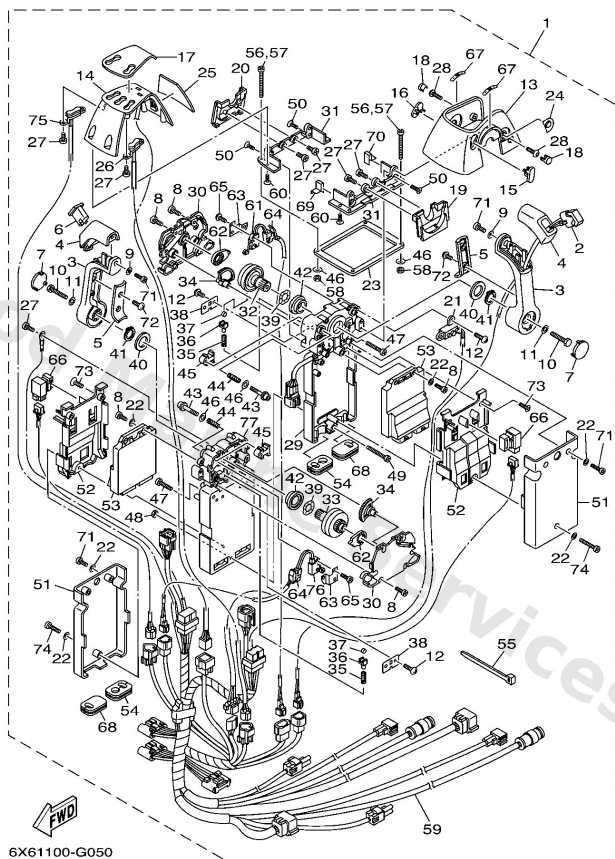 


| Ref | Part                                                           |                         |
|-----|----------------------------------------------------------------|-------------------------|
| 44  | <a href="#">6X64815800</a><br>Spring 1                         | <a href="#">Buy now</a> |
| 45  | <a href="#">6X64826400</a><br>Friction, throttle               | <a href="#">Buy now</a> |
| 46  | <a href="#">7044828700</a><br>Washer 1                         | <a href="#">Buy now</a> |
| 47  | <a href="#">9858005025</a><br>Screw, panhead (a93)             | <a href="#">Buy now</a> |
| 48  | <a href="#">7044815600</a><br>Nut 1                            | <a href="#">Buy now</a> |
| 49  | <a href="#">7044828300</a><br>Screw, panhead (eg9)             | <a href="#">Buy now</a> |
| 50  | <a href="#">9878005014</a><br>Screw 3                          | <a href="#">Buy now</a> |
| 51  | <a href="#">6X64821300</a><br>Back plate 2                     | <a href="#">Buy now</a> |
| 52  | <a href="#">6X64822800</a><br>Holder, switch                   | <a href="#">Buy now</a> |
| 53  | <a href="#">6X68559000</a><br>Control unit assembly<br>STATION | <a href="#">Buy now</a> |
| 53  | <a href="#">6X68559010</a><br>Control unit assembly<br>STATION | <a href="#">Buy now</a> |
| 54  | <a href="#">6X64817500</a><br>Boot<br>STATION                  | <a href="#">Buy now</a> |
| 55  | <a href="#">7038259100</a><br>Band<br>STATION                  | <a href="#">Buy now</a> |
| 56  | <a href="#">9778050145</a><br>Screw, pan head tapping          | <a href="#">Buy now</a> |
| 57  | <a href="#">9858005060</a><br>Screw, panhead                   | <a href="#">Buy now</a> |

## Dbw Remote Control 2 (Twin)

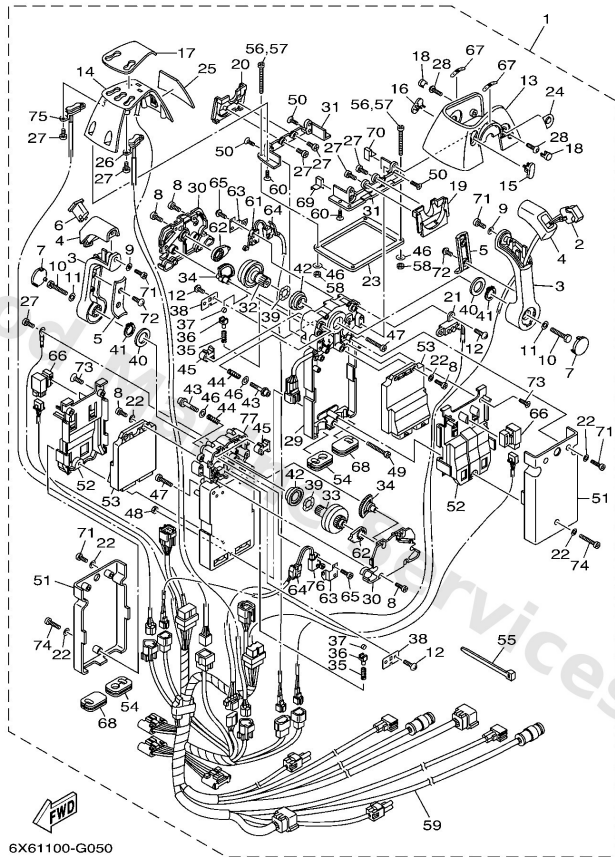 


| Ref | Part                                                                |                         |
|-----|---------------------------------------------------------------------|-------------------------|
| 58  | <a href="#">9538005600</a><br>Nut, hexagon (663)                    | <a href="#">Buy now</a> |
| 59  | <a href="#">6X68259010</a><br>Wire Harness assembly<br>STATION      | <a href="#">Buy now</a> |
| 59  | <a href="#">6X68259030</a><br>Wire Harness assembly<br>STATION MAIN | <a href="#">Buy now</a> |
| 59  | <a href="#">6X68259060</a><br>-<br>STATION SUB                      | <a href="#">Buy now</a> |
| 60  | <a href="#">6X64812900</a><br>Screw 3                               | <a href="#">Buy now</a> |
| 61  | <a href="#">6X68254000</a><br>Neutral switch assembly               | <a href="#">Buy now</a> |
| 62  | <a href="#">6X64824100</a><br>Arm, drive                            | <a href="#">Buy now</a> |
| 63  | <a href="#">6X64824501</a><br>Plate, lock                           | <a href="#">Buy now</a> |
| 64  | <a href="#">6X68254500</a><br>Grommet                               | <a href="#">Buy now</a> |
| 65  | <a href="#">6X68252V00</a><br>Screw, special                        | <a href="#">Buy now</a> |
| 66  | <a href="#">7048195010</a><br>Relay assembly                        | <a href="#">Buy now</a> |
| 67  | <a href="#">6X64419100</a><br>Indicator, shift                      | <a href="#">Buy now</a> |
| 68  | <a href="#">6X64817510</a><br>Boot<br>STATION ONLY                  | <a href="#">Buy now</a> |
| 69  | <a href="#">6X64817650</a><br>Grommet                               | <a href="#">Buy now</a> |
| 70  | <a href="#">6X64817660</a><br>Grommet                               | <a href="#">Buy now</a> |

## Dbw Remote Control 2 (Twin)

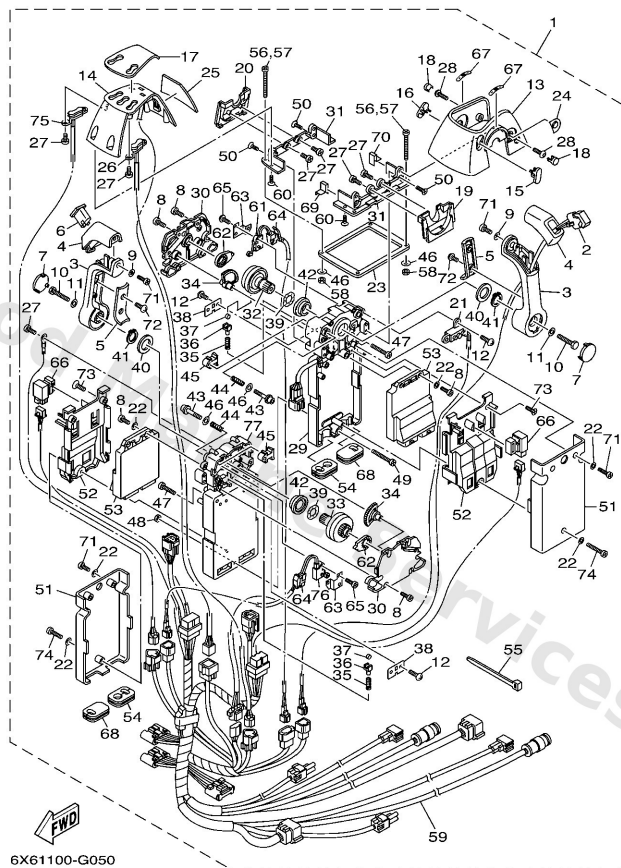 


| Ref | Part                                                      |                         |
|-----|-----------------------------------------------------------|-------------------------|
| 71  | <a href="#">6X64812700</a><br>Screw 1                     | <a href="#">Buy now</a> |
| 72  | <a href="#">6X64812800</a><br>Screw 2                     | <a href="#">Buy now</a> |
| 73  | <a href="#">6X68114600</a><br>Screw 2                     | <a href="#">Buy now</a> |
| 74  | <a href="#">6X68114500</a><br>Screw 1                     | <a href="#">Buy now</a> |
| 75  | <a href="#">6X68256320</a><br>Trim & tilt switch assembly | <a href="#">Buy now</a> |
| 76  | <a href="#">6X68254010</a><br>Neutral switch assembly     | <a href="#">Buy now</a> |
| 77  | <a href="#">6X6481A021</a><br>Remo-Con. Case assembly     | <a href="#">Buy now</a> |

## Dbw Remote Control 3 (Triple)

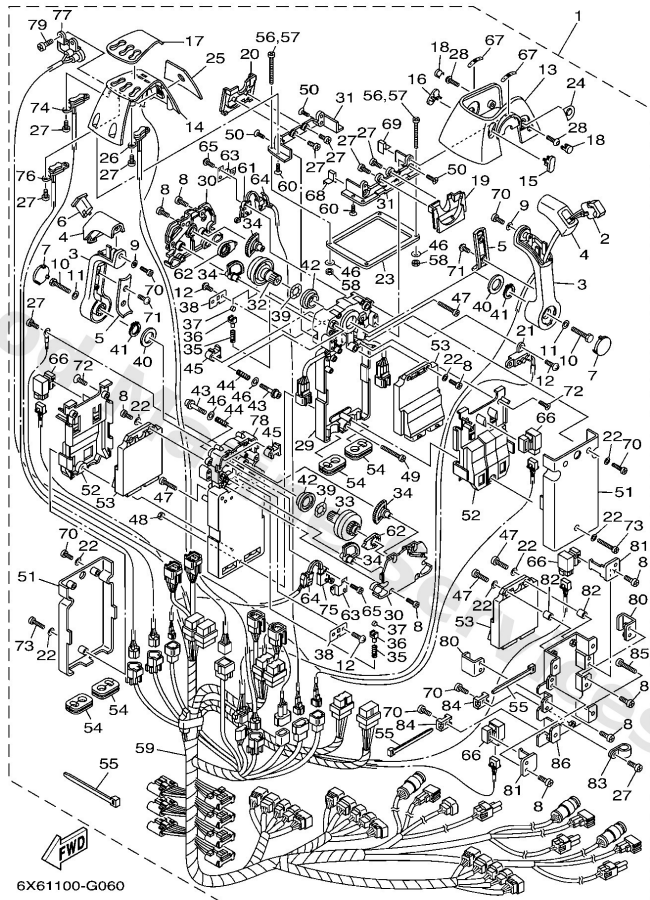 


| Ref | Part                                                      |                         |
|-----|-----------------------------------------------------------|-------------------------|
| 1   | <a href="#">6X64820820</a><br>-<br>NOT FOR SALE           | <a href="#">Buy now</a> |
| 1   | <a href="#">6X64820830</a><br>-<br>NOT FOR SALE           | <a href="#">Buy now</a> |
| 2   | <a href="#">6X68256300</a><br>Trim & tilt switch assembly | <a href="#">Buy now</a> |
| 3   | <a href="#">6X64822100</a><br>Lever, control              | <a href="#">Buy now</a> |
| 4   | <a href="#">6X64822200</a><br>Grip, control lever         | <a href="#">Buy now</a> |
| 5   | <a href="#">6X64822400</a><br>Cover, control lever        | <a href="#">Buy now</a> |
| 6   | <a href="#">6X64822210</a><br>Grip, control lever         | <a href="#">Buy now</a> |
| 7   | <a href="#">6X64822410</a><br>Cover, control lever        | <a href="#">Buy now</a> |
| 8   | <a href="#">9858005014</a><br>Screw, pan head(3yl)        | <a href="#">Buy now</a> |
| 9   | <a href="#">9299005300</a><br>Washer, tooth               | <a href="#">Buy now</a> |
| 10  | <a href="#">6X64817100</a><br>Bolt                        | <a href="#">Buy now</a> |
| 11  | <a href="#">9299008600</a><br>Washer, plain (663)         | <a href="#">Buy now</a> |
| 12  | <a href="#">EL84812700</a><br>Screw 1                     | <a href="#">Buy now</a> |
| 13  | <a href="#">6X64811910</a><br>Cover                       | <a href="#">Buy now</a> |
| 14  | <a href="#">6X68430120</a><br>Pilot light assembly 1      | <a href="#">Buy now</a> |

## Dbw Remote Control 3 (Triple)

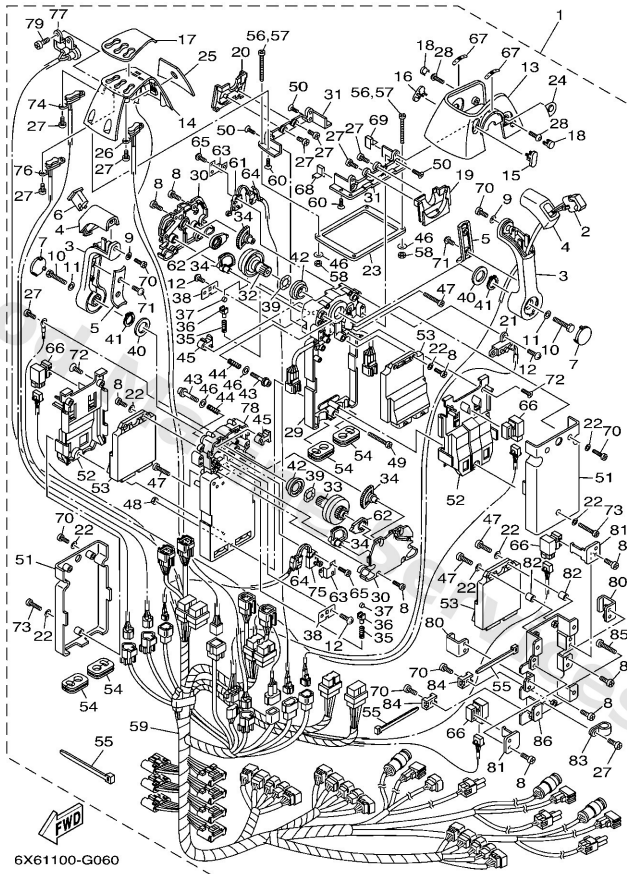 


| Ref | Part                                                      |                         |
|-----|-----------------------------------------------------------|-------------------------|
| 15  | <a href="#">6X64816710</a><br>Plug                        | <a href="#">Buy now</a> |
| 16  | <a href="#">6X64816720</a><br>Plug                        | <a href="#">Buy now</a> |
| 17  | <a href="#">6X64821520</a><br>Graphic                     | <a href="#">Buy now</a> |
| 18  | <a href="#">6X64816760</a><br>Plug                        | <a href="#">Buy now</a> |
| 19  | <a href="#">6X64821910</a><br>Cover, lead                 | <a href="#">Buy now</a> |
| 20  | <a href="#">6X64821920</a><br>Cover, lead                 | <a href="#">Buy now</a> |
| 21  | <a href="#">6X68259E00</a><br>Switch assembly             | <a href="#">Buy now</a> |
| 22  | <a href="#">9299005200</a><br>Ybs66-5 washer, plain       | <a href="#">Buy now</a> |
| 23  | <a href="#">6X64817610</a><br>Grommet                     | <a href="#">Buy now</a> |
| 24  | <a href="#">6X64822500</a><br>Cover                       | <a href="#">Buy now</a> |
| 25  | <a href="#">6X64821620</a><br>Graphic                     | <a href="#">Buy now</a> |
| 26  | <a href="#">6X68256310</a><br>Trim & tilt switch assembly | <a href="#">Buy now</a> |
| 27  | <a href="#">9858004010</a><br>Screw, pan head (e56)       | <a href="#">Buy now</a> |
| 28  | <a href="#">92D8005016</a><br>Bolt, socket head           | <a href="#">Buy now</a> |
| 29  | <a href="#">6X6481A011</a><br>Remo-Con. Case assembly     | <a href="#">Buy now</a> |

## Dbw Remote Control 3 (Triple)

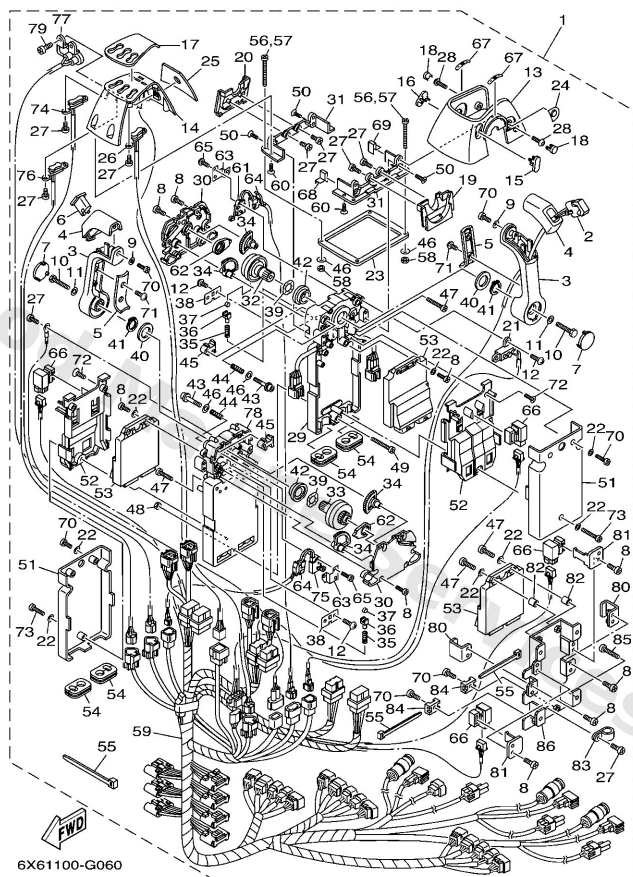 


| Ref | Part                                            |                         |
|-----|-------------------------------------------------|-------------------------|
| 30  | <a href="#">6X64821200</a><br>Back plate 1      | <a href="#">Buy now</a> |
| 31  | <a href="#">6X64814410</a><br>Plate, stopper 2  | <a href="#">Buy now</a> |
| 32  | <a href="#">6X64824201</a><br>Shaft, drive      | <a href="#">Buy now</a> |
| 33  | <a href="#">6X64824211</a><br>Shaft, drive      | <a href="#">Buy now</a> |
| 34  | <a href="#">6X64823300</a><br>Gear 2            | <a href="#">Buy now</a> |
| 35  | <a href="#">6X64823800</a><br>Spring, detent    | <a href="#">Buy now</a> |
| 36  | <a href="#">6X64823700</a><br>Adaptor           | <a href="#">Buy now</a> |
| 37  | <a href="#">6X64823600</a><br>Roller, detent    | <a href="#">Buy now</a> |
| 38  | <a href="#">6X64818900</a><br>Retainer          | <a href="#">Buy now</a> |
| 39  | <a href="#">7034819800</a><br>Washer, wave 3    | <a href="#">Buy now</a> |
| 40  | <a href="#">6X64819300</a><br>Washer 3          | <a href="#">Buy now</a> |
| 41  | <a href="#">6X64811800</a><br>Clip, shift lever | <a href="#">Buy now</a> |
| 42  | <a href="#">6X64823400</a><br>Bushing 1         | <a href="#">Buy now</a> |
| 43  | <a href="#">6X64826700</a><br>Bolt set          | <a href="#">Buy now</a> |
| 44  | <a href="#">6X64815800</a><br>Spring 1          | <a href="#">Buy now</a> |

## Dbw Remote Control 3 (Triple)

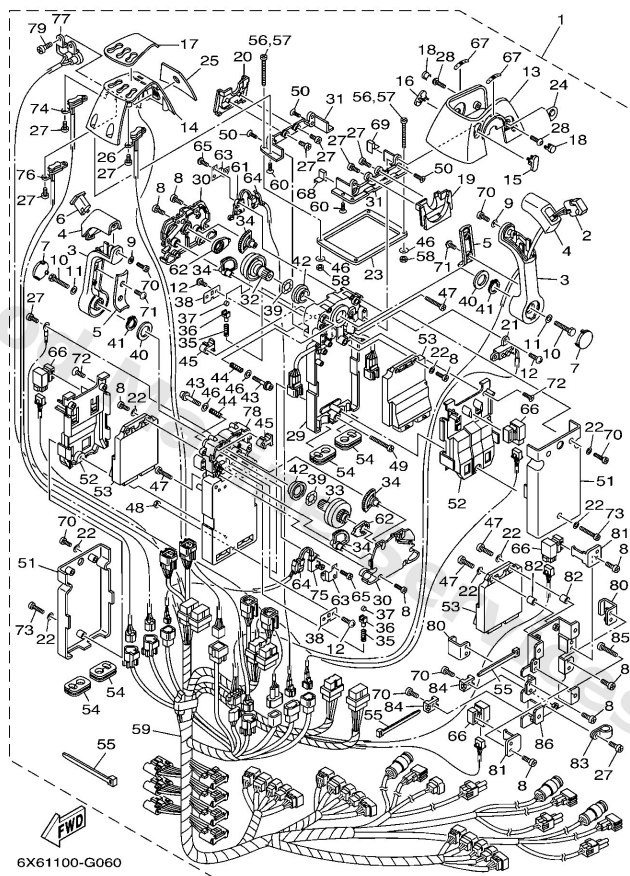 


| Ref | Part                                                  |                         |
|-----|-------------------------------------------------------|-------------------------|
| 45  | <a href="#">6X64826400</a><br>Friction, throttle      | <a href="#">Buy now</a> |
| 46  | <a href="#">7044828700</a><br>Washer 1                | <a href="#">Buy now</a> |
| 47  | <a href="#">9858005025</a><br>Screw, panhead (a93)    | <a href="#">Buy now</a> |
| 48  | <a href="#">7044815600</a><br>Nut 1                   | <a href="#">Buy now</a> |
| 49  | <a href="#">7044828300</a><br>Screw, panhead (eg9)    | <a href="#">Buy now</a> |
| 50  | <a href="#">9878005014</a><br>Screw 3                 | <a href="#">Buy now</a> |
| 51  | <a href="#">6X64821300</a><br>Back plate 2            | <a href="#">Buy now</a> |
| 52  | <a href="#">6X64822800</a><br>Holder, switch          | <a href="#">Buy now</a> |
| 53  | <a href="#">6X68559000</a><br>Control unit assembly   | <a href="#">Buy now</a> |
| 54  | <a href="#">6X64817500</a><br>Boot                    | <a href="#">Buy now</a> |
| 55  | <a href="#">7038259100</a><br>Band                    | <a href="#">Buy now</a> |
| 56  | <a href="#">9778050145</a><br>Screw, pan head tapping | <a href="#">Buy now</a> |
| 57  | <a href="#">9858005060</a><br>Screw, panhead          | <a href="#">Buy now</a> |
| 58  | <a href="#">9538005600</a><br>Nut, hexagon (663)      | <a href="#">Buy now</a> |
| 59  | <a href="#">6X68259080</a><br>-<br>STATION MAIN       | <a href="#">Buy now</a> |

## Dbw Remote Control 3 (Triple)

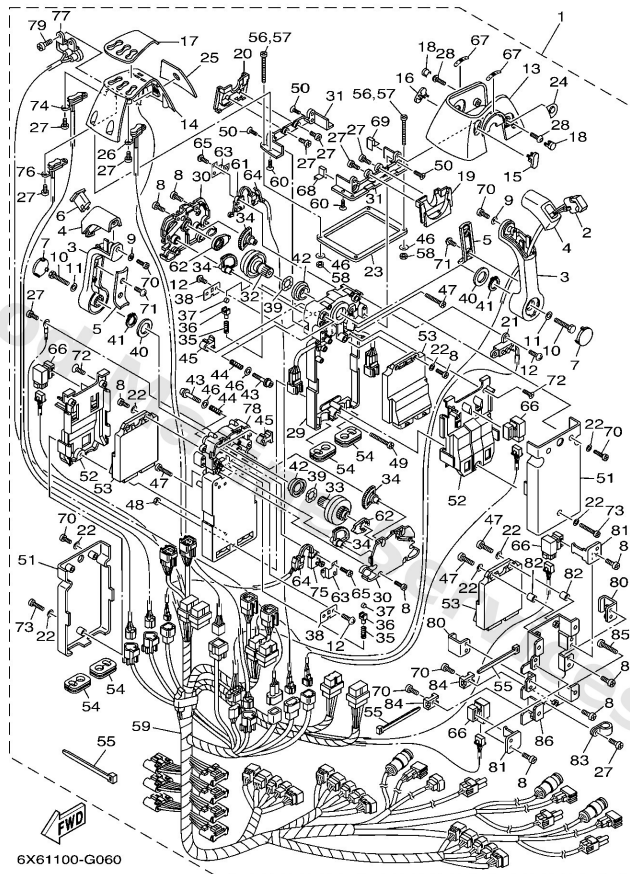 



| Ref | Part                                                  |                         |
|-----|-------------------------------------------------------|-------------------------|
| 59  | <a href="#">6X68259090</a><br>-<br>STATION SUB        | <a href="#">Buy now</a> |
| 60  | <a href="#">6X64812900</a><br>Screw 3                 | <a href="#">Buy now</a> |
| 61  | <a href="#">6X68254000</a><br>Neutral switch assembly | <a href="#">Buy now</a> |
| 62  | <a href="#">6X64824100</a><br>Arm, drive              | <a href="#">Buy now</a> |
| 63  | <a href="#">6X64824501</a><br>Plate, lock             | <a href="#">Buy now</a> |
| 64  | <a href="#">6X68254500</a><br>Grommet                 | <a href="#">Buy now</a> |
| 65  | <a href="#">6X68252V00</a><br>Screw, special          | <a href="#">Buy now</a> |
| 66  | <a href="#">7048195010</a><br>Relay assembly          | <a href="#">Buy now</a> |
| 67  | <a href="#">6X64419100</a><br>Indicator, shift        | <a href="#">Buy now</a> |
| 68  | <a href="#">6X64817650</a><br>Grommet                 | <a href="#">Buy now</a> |
| 69  | <a href="#">6X64817660</a><br>Grommet                 | <a href="#">Buy now</a> |
| 70  | <a href="#">6X64812700</a><br>Screw 1                 | <a href="#">Buy now</a> |
| 71  | <a href="#">6X64812800</a><br>Screw 2                 | <a href="#">Buy now</a> |
| 72  | <a href="#">6X68114600</a><br>Screw 2                 | <a href="#">Buy now</a> |
| 73  | <a href="#">6X68114500</a><br>Screw 1                 | <a href="#">Buy now</a> |

## Dbw Remote Control 3 (Triple)

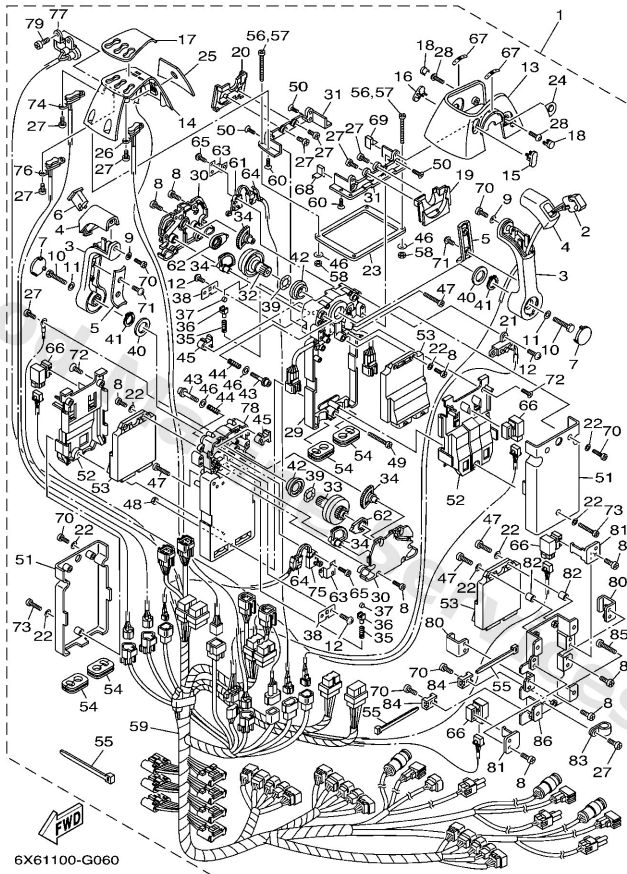 


| Ref | Part                                                      |                         |
|-----|-----------------------------------------------------------|-------------------------|
| 74  | <a href="#">6X68256320</a><br>Trim & tilt switch assembly | <a href="#">Buy now</a> |
| 75  | <a href="#">6X68254010</a><br>Neutral switch assembly     | <a href="#">Buy now</a> |
| 76  | <a href="#">6X68256330</a><br>Trim & tilt switch assembly | <a href="#">Buy now</a> |
| 77  | <a href="#">6X68259F00</a><br>Switch assembly             | <a href="#">Buy now</a> |
| 78  | <a href="#">6X6481A031</a><br>Remo-Con. Case assembly     | <a href="#">Buy now</a> |
| 79  | <a href="#">9878005010</a><br>Screw, flat head (716)      | <a href="#">Buy now</a> |
| 80  | <a href="#">6X68555700</a><br>Holder                      | <a href="#">Buy now</a> |
| 81  | <a href="#">6X68259100</a><br>Band                        | <a href="#">Buy now</a> |
| 82  | <a href="#">6X68252S00</a><br>Spacer, 1                   | <a href="#">Buy now</a> |
| 83  | <a href="#">6X68258400</a><br>Clamp                       | <a href="#">Buy now</a> |
| 84  | <a href="#">6X68258100</a><br>Stay, cord clamp            | <a href="#">Buy now</a> |
| 85  | <a href="#">6X04812800</a><br>Screw 2                     | <a href="#">Buy now</a> |
| 86  | <a href="#">6X64821110</a><br>Housing,1                   | <a href="#">Buy now</a> |

# Electrical Dbw Remote Control

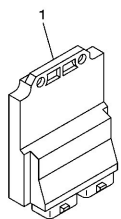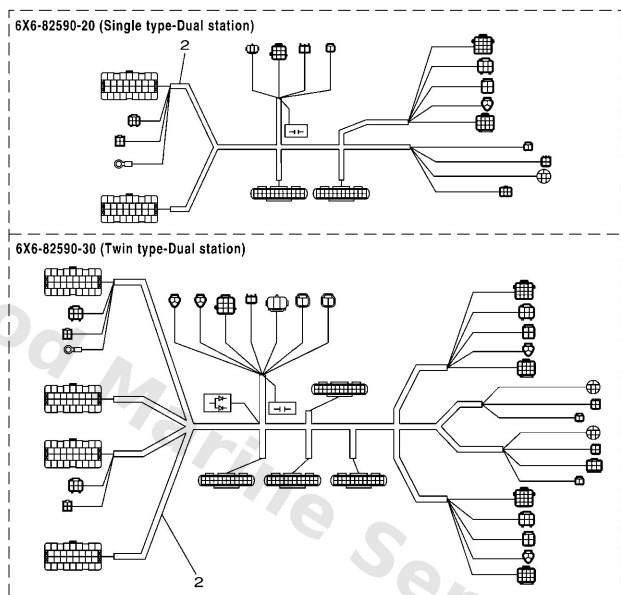  


6X61100-G070

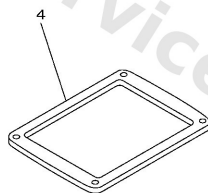 

(Twin type-Dual station)


| Ref | Part                                                                     |                         |
|-----|--------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6X68559000</a><br>Control unit assembly<br>TWIN, 2 STATION   | <a href="#">Buy now</a> |
| 2   | <a href="#">6X68259020</a><br>Wire Harness assembly<br>SINGLE, 2 STATION | <a href="#">Buy now</a> |
| 2   | <a href="#">6X68259030</a><br>Wire Harness assembly<br>TWIN, 2 STATION   | <a href="#">Buy now</a> |
| 3   | <a href="#">7038259100</a><br>Band<br>TWIN, 2 STATION                    | <a href="#">Buy now</a> |
| 4   | <a href="#">6X64817610</a><br>Grommet<br>TWIN, 2 STATION                 | <a href="#">Buy now</a> |

# Electrical Wire Harness

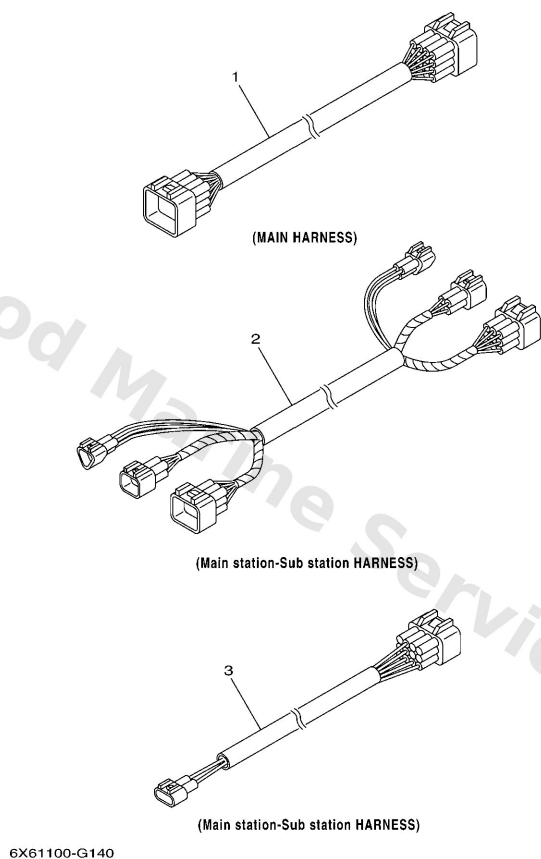 


| Ref | Part                                                                          |                         |
|-----|-------------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6X68258A00</a><br>Extension, wire harness(6.1m)<br>UR             | <a href="#">Buy now</a> |
| 1   | <a href="#">6X68258A10</a><br>16p dbw main harness 7m-23ft<br>UR              | <a href="#">Buy now</a> |
| 1   | <a href="#">6X68258A20</a><br>16p dbw main harness 8m-26ft<br>UR              | <a href="#">Buy now</a> |
| 1   | <a href="#">6X68258A30</a><br>16p dbw main harness 10m-32ft<br>UR             | <a href="#">Buy now</a> |
| 1   | <a href="#">6X68258A40</a><br>16p dbw main harness 12m-38ft<br>UR             | <a href="#">Buy now</a> |
| 2   | <a href="#">6X68258AA0</a><br>Extension, Wire Harness (5M)<br>UR 2 STATION    | <a href="#">Buy now</a> |
| 2   | <a href="#">6X68258AC0</a><br>Extension, Wire Harness (8M)<br>UR 2 STATION    | <a href="#">Buy now</a> |
| 2   | <a href="#">6X68258AE0</a><br>Extension, Wire Harness (12.2M)<br>UR 2 STATION | <a href="#">Buy now</a> |
| 3   | <a href="#">6X68258AB0</a><br>#xtension, wire harness<br>UR 2 STATION         | <a href="#">Buy now</a> |
| 3   | <a href="#">6X68258AD0</a><br>Extension, wire harness<br>UR 2 STATION         | <a href="#">Buy now</a> |
| 3   | <a href="#">6X68258AF0</a><br>Extension, wire harness<br>UR 2 STATION         | <a href="#">Buy now</a> |

# Layout Chart 1 (Single)

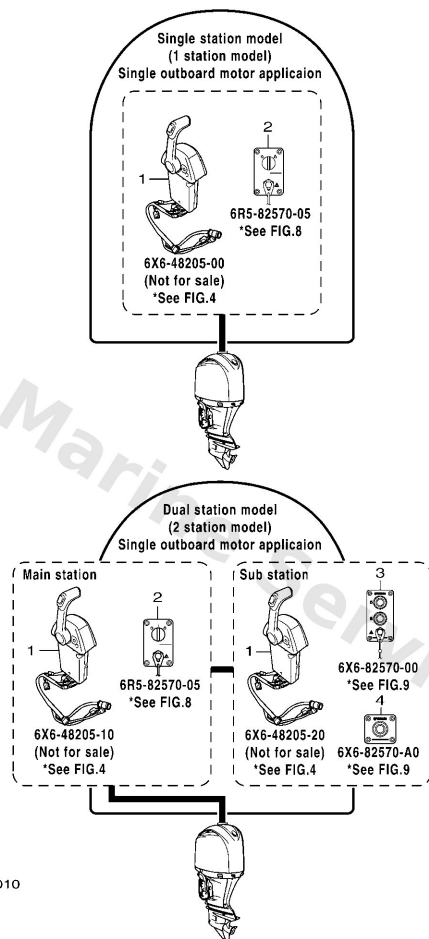 


| Ref | Part                                                                        |                         |
|-----|-----------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6X64820500</a><br>Ctrl Sgl Std<br>NOT FOR SALE                  | <a href="#">Buy now</a> |
| 1   | <a href="#">6X64820510</a><br>Remote Control assembly<br>NOT FOR SALE       | <a href="#">Buy now</a> |
| 1   | <a href="#">6X64820520</a><br>Remote Control assembly<br>NOT FOR SALE       | <a href="#">Buy now</a> |
| 2   | <a href="#">6R58257005</a><br>Panel switch assembly<br>& 2 STATION MAIN     | <a href="#">Buy now</a> |
| 3   | <a href="#">6X68257000</a><br>Panel Switch assembly (Single)<br>STATION SUB | <a href="#">Buy now</a> |
| 4   | <a href="#">6X682570A0</a><br>Panel Switch assembly<br>STATION SUB          | <a href="#">Buy now</a> |

## Layout Chart 2 (Twin)

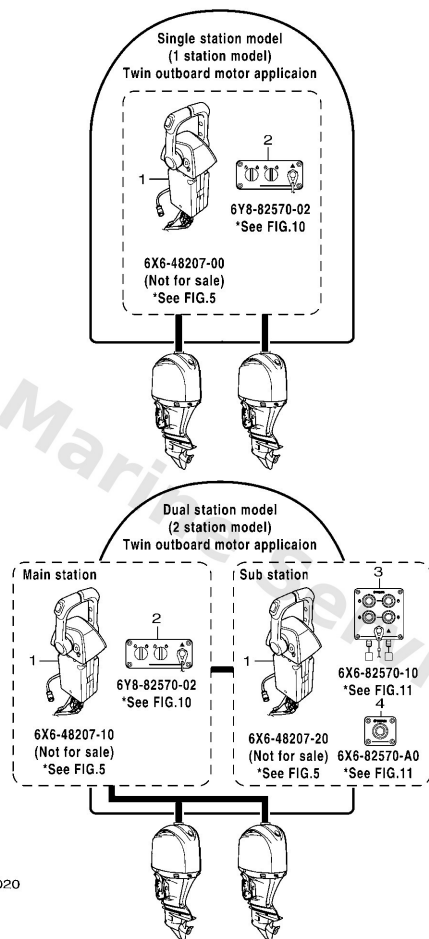 

| Ref | Part                                                                      |                         |
|-----|---------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6X64820700</a><br>Remote Control assembly<br>NOT FOR SALE     | <a href="#">Buy now</a> |
| 1   | <a href="#">6X64820710</a><br>Remote Control assembly<br>NOT FOR SALE     | <a href="#">Buy now</a> |
| 1   | <a href="#">6X64820720</a><br>Remote control assembly<br>NOT FOR SALE     | <a href="#">Buy now</a> |
| 2   | <a href="#">6Y88257002</a><br>Panel switch assembly<br>& 2 STATION MAIN   | <a href="#">Buy now</a> |
| 3   | <a href="#">6X68257010</a><br>Panel Switch assembly (Twin)<br>STATION SUB | <a href="#">Buy now</a> |
| 4   | <a href="#">6X682570A0</a><br>Panel Switch assembly<br>STATION SUB        | <a href="#">Buy now</a> |

 
Layout Chart 3 (Triple)

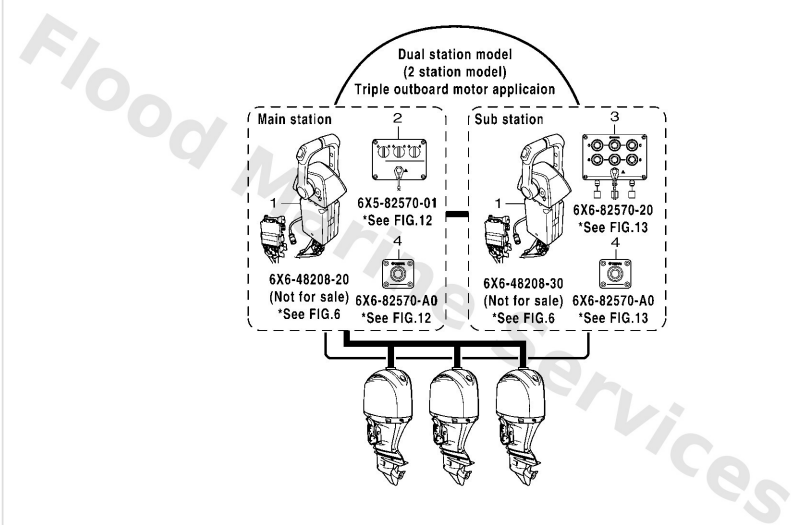

6X61100-G030

| Ref | Part                                                                        |                         |
|-----|-----------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6X64820820</a><br>-<br>NOT FOR SALE                             | <a href="#">Buy now</a> |
| 1   | <a href="#">6X64820830</a><br>-<br>NOT FOR SALE                             | <a href="#">Buy now</a> |
| 2   | <a href="#">6X58257001</a><br>Panel switch assembly<br>STATION MAIN         | <a href="#">Buy now</a> |
| 3   | <a href="#">6X68257020</a><br>Panel Switch assembly (Triple)<br>STATION SUB | <a href="#">Buy now</a> |
| 4   | <a href="#">6X682570A0</a><br>Panel Switch assembly                         | <a href="#">Buy now</a> |


## Switch & Panel 1 (Single)

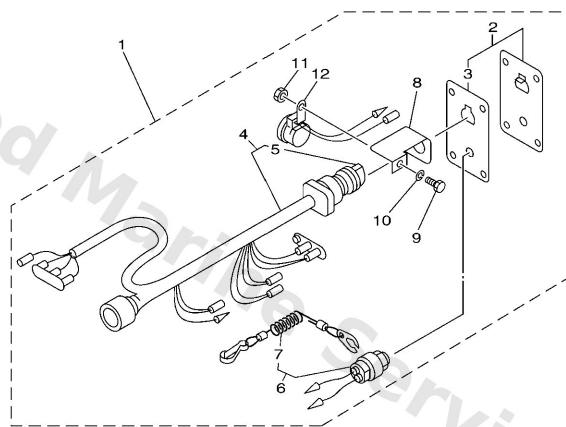 

  
6X61100-G080

| Ref | Part                                                                    |                         |
|-----|-------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6R58257005</a><br>Panel switch assembly<br>& 2 STATION MAIN | <a href="#">Buy now</a> |
| 2   | <a href="#">7048257102</a><br>Panel, switch                             | <a href="#">Buy now</a> |
| 3   | <a href="#">6R58258801</a><br>Plate                                     | <a href="#">Buy now</a> |
| 4   | <a href="#">6R58251002</a><br>Main switch assembly                      | <a href="#">Buy now</a> |
| 5   | <a href="#">6768257700</a><br>Cap, key                                  | <a href="#">Buy now</a> |
| 6   | <a href="#">6888257501</a><br>Engine stop switch assembly               | <a href="#">Buy now</a> |
| 7   | <a href="#">6828255600</a><br>Lanyard, stop switch                      | <a href="#">Buy now</a> |
| 8   | <a href="#">64D8258100</a><br>Stay, cord clamp                          | <a href="#">Buy now</a> |
| 9   | <a href="#">9730305012</a><br>Bolt, hexagon                             | <a href="#">Buy now</a> |
| 10  | <a href="#">9290305100</a><br>Ybs67-5 washer, spring                    | <a href="#">Buy now</a> |
| 11  | <a href="#">9530305700</a><br>Nut (656)                                 | <a href="#">Buy now</a> |
| 12  | <a href="#">6R58338300</a><br>Buzzer                                    | <a href="#">Buy now</a> |


## Switch & Panel 2 (Single)

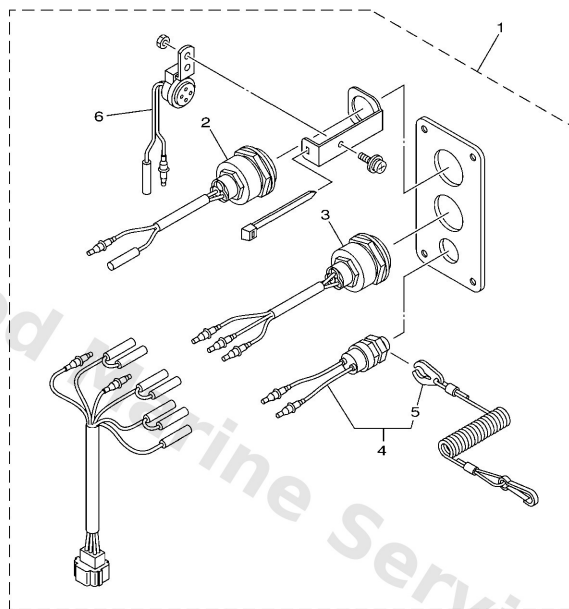 

 6X61100-G090

| Ref | Part                                                                        |                         |
|-----|-----------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6X68257000</a><br>Panel Switch assembly (Single)<br>STATION SUB | <a href="#">Buy now</a> |
| 2   | <a href="#">6X18187000</a><br>Starting switch assembly (black)              | <a href="#">Buy now</a> |
| 3   | <a href="#">6X18255000</a><br>Engine stop switch assembly                   | <a href="#">Buy now</a> |
| 4   | <a href="#">6888257501</a><br>Engine stop switch assembly                   | <a href="#">Buy now</a> |
| 5   | <a href="#">6828255600</a><br>Lanyard, stop switch                          | <a href="#">Buy now</a> |
| 6   | <a href="#">6R58338300</a><br>Buzzer                                        | <a href="#">Buy now</a> |
| 7   | <a href="#">6X682570A0</a><br>Panel Switch assembly<br>STATION SUB          | <a href="#">Buy now</a> |



## Switch & Panel 3 (Twin)

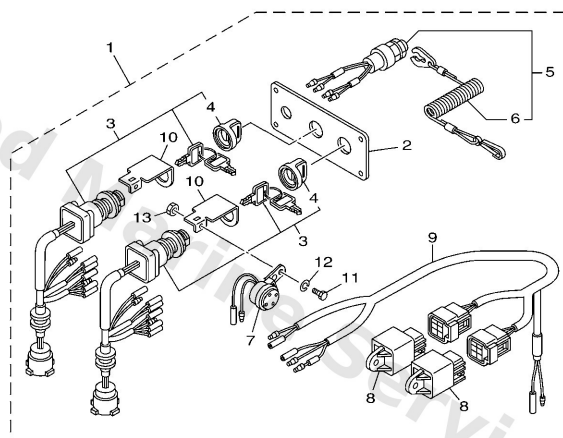 

  
6X61100-G100


| Ref | Part                                                                    |                         |
|-----|-------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6Y88257002</a><br>Panel switch assembly<br>& 2 STATION MAIN | <a href="#">Buy now</a> |
| 2   | <a href="#">6Y88257101</a><br>Plate, panel switch                       | <a href="#">Buy now</a> |
| 3   | <a href="#">6Y88251002</a><br>Main switch assembly                      | <a href="#">Buy now</a> |
| 4   | <a href="#">6768257700</a><br>Cap, key                                  | <a href="#">Buy now</a> |
| 5   | <a href="#">6K18257500</a><br>Engine stop switch assembly               | <a href="#">Buy now</a> |
| 6   | <a href="#">6828255600</a><br>Lanyard, stop switch                      | <a href="#">Buy now</a> |
| 7   | <a href="#">6R58338300</a><br>Buzzer                                    | <a href="#">Buy now</a> |
| 8   | <a href="#">68V8195000</a><br>Relay assembly                            | <a href="#">Buy now</a> |
| 9   | <a href="#">6Y88250700</a><br>Lead, ignition switch relay               | <a href="#">Buy now</a> |
| 10  | <a href="#">64D8258100</a><br>Stay, cord clamp                          | <a href="#">Buy now</a> |
| 11  | <a href="#">9730305012</a><br>Bolt, hexagon                             | <a href="#">Buy now</a> |
| 12  | <a href="#">9290305100</a><br>Ybs67-5 washer, spring                    | <a href="#">Buy now</a> |
| 13  | <a href="#">9530305700</a><br>Nut (656)                                 | <a href="#">Buy now</a> |

## Switch & Panel 4 (Twin)

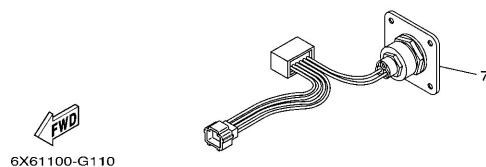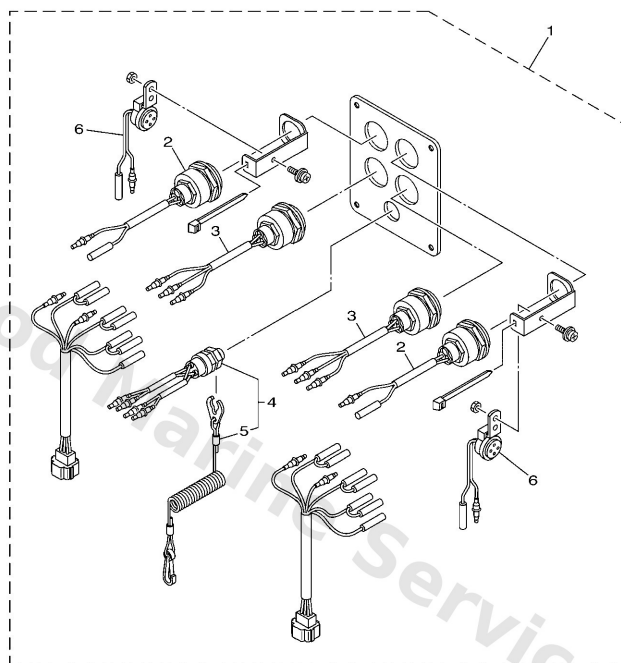  

| Ref | Part                                                                      |                         |
|-----|---------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6X68257010</a><br>Panel Switch assembly (Twin)<br>STATION SUB | <a href="#">Buy now</a> |
| 2   | <a href="#">6X18187000</a><br>Starting switch assembly (black)            | <a href="#">Buy now</a> |
| 3   | <a href="#">6X18255000</a><br>Engine stop switch assembly                 | <a href="#">Buy now</a> |
| 4   | <a href="#">6K18257500</a><br>Engine stop switch assembly                 | <a href="#">Buy now</a> |
| 5   | <a href="#">6828255600</a><br>Lanyard, stop switch                        | <a href="#">Buy now</a> |
| 6   | <a href="#">6R58338300</a><br>Buzzer                                      | <a href="#">Buy now</a> |
| 7   | <a href="#">6X682570A0</a><br>Panel Switch assembly<br>STATION SUB        | <a href="#">Buy now</a> |


## Switch & Panel 5 (Triple)

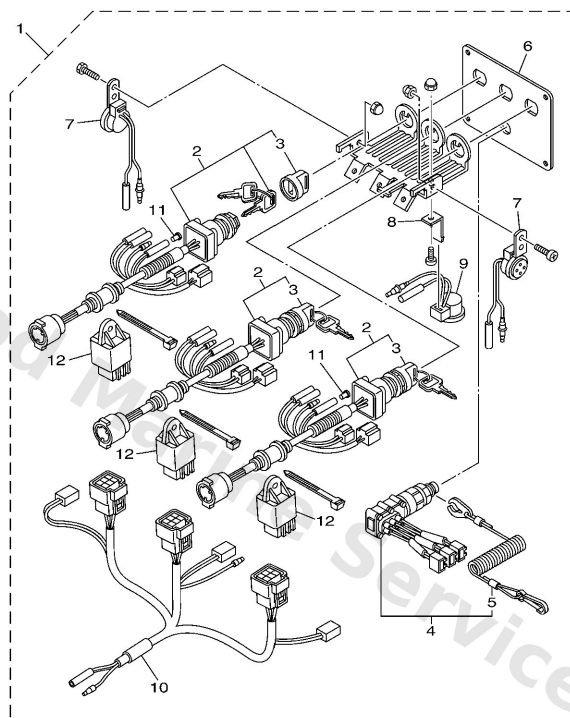 

6X61100-G120

| Ref | Part                                                                       |                         |
|-----|----------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6X58257001</a><br>Panel switch assembly<br><b>STATION MAIN</b> | <a href="#">Buy now</a> |
| 2   | <a href="#">6X58251001</a><br>Main switch assembly                         | <a href="#">Buy now</a> |
| 3   | <a href="#">6768257700</a><br>Cap, key                                     | <a href="#">Buy now</a> |
| 4   | <a href="#">6X58257500</a><br>Engine stop switch assembly                  | <a href="#">Buy now</a> |
| 5   | <a href="#">6828255600</a><br>Lanyard, stop switch                         | <a href="#">Buy now</a> |
| 6   | <a href="#">6X58257100</a><br>Panel, switch                                | <a href="#">Buy now</a> |
| 7   | <a href="#">6X58338300</a><br>Buzzer                                       | <a href="#">Buy now</a> |
| 8   | <a href="#">6X58258100</a><br>Stay, cord clamp                             | <a href="#">Buy now</a> |
| 9   | <a href="#">6X48338300</a><br>Buzzer                                       | <a href="#">Buy now</a> |
| 10  | <a href="#">6X58250700</a><br>Wire, lead                                   | <a href="#">Buy now</a> |
| 11  | <a href="#">7038211900</a><br>Cover, lead wire                             | <a href="#">Buy now</a> |
| 12  | <a href="#">68V8195000</a><br>Relay assembly                               | <a href="#">Buy now</a> |
| 13  | <a href="#">6X682570A0</a><br>Panel Switch assembly<br><b>STATION MAIN</b> | <a href="#">Buy now</a> |

## Switch & Panel 6 (Triple)

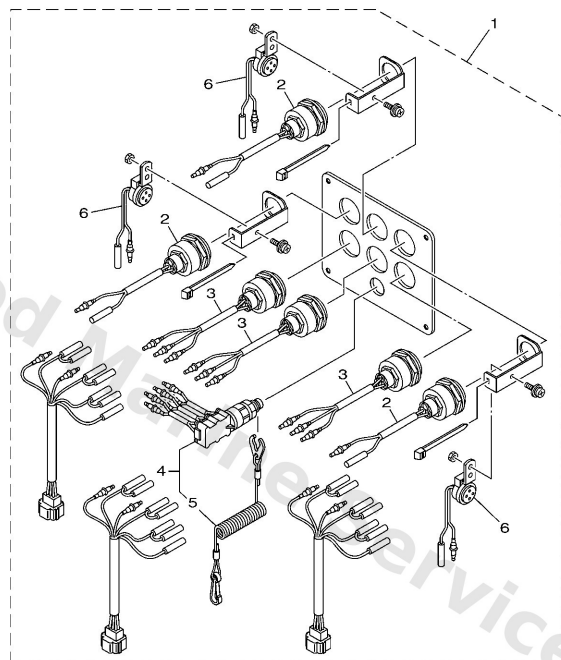 

 6X61100-G130

| Ref | Part                                                                        |                         |
|-----|-----------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6X68257020</a><br>Panel Switch assembly (Triple)<br>STATION SUB | <a href="#">Buy now</a> |
| 2   | <a href="#">6X18187000</a><br>Starting switch assembly (black)              | <a href="#">Buy now</a> |
| 3   | <a href="#">6X18255000</a><br>Engine stop switch assembly                   | <a href="#">Buy now</a> |
| 4   | <a href="#">6X68257500</a><br>Engine stop switch assembly                   | <a href="#">Buy now</a> |
| 5   | <a href="#">6828255600</a><br>Lanyard, stop switch                          | <a href="#">Buy now</a> |
| 6   | <a href="#">6R58338300</a><br>Buzzer                                        | <a href="#">Buy now</a> |
| 7   | <a href="#">6X682570A0</a><br>Panel Switch assembly<br>STATION SUB          | <a href="#">Buy now</a> |

# Disclaimer

This document is provided for convenience only. It is **not** an official Yamaha publication and is **not supplied, endorsed, or approved** by Yamaha Motor Co., Ltd.

Reasonable efforts are made to keep information accurate; however diagrams, part references, supersessions, descriptions, and applicability may contain errors or omissions. Specifications and part availability may change without notice.

You are responsible for confirming the correct parts for your engine (including model code, year, serial range, and any superseded part numbers) before ordering or fitting.