



Yamaha DRIVE BY WIRE - REMOTE CONTROL 2007

Parts Manual

www.floodmarine.co.uk

+44 2882 246 539

 
Authorised Yamaha Dealers



Contents

DBW REMOTE CONTROL 1 (SINGLE)	3
DBW REMOTE CONTROL 2 (TWIN)	8
DBW REMOTE CONTROL 3 (TRIPLE)	14
ELECTRICAL DBW REMOTE CONTROL	20
ELECTRICAL WIRE HARNESS	21
LAYOUT CHART 1 (SINGLE)	22
LAYOUT CHART 2 (TWIN)	23
LAYOUT CHART 3 (TRIPLE)	24
SWITCH & PANEL 1 (SINGLE)	25
SWITCH & PANEL 2 (SINGLE)	26
SWITCH & PANEL 3 (TWIN)	27
SWITCH & PANEL 4 (TWIN)	28
SWITCH & PANEL 5 (TRIPLE)	29
SWITCH & PANEL 6 (TRIPLE)	30


Dbw Remote Control 1 (Single)

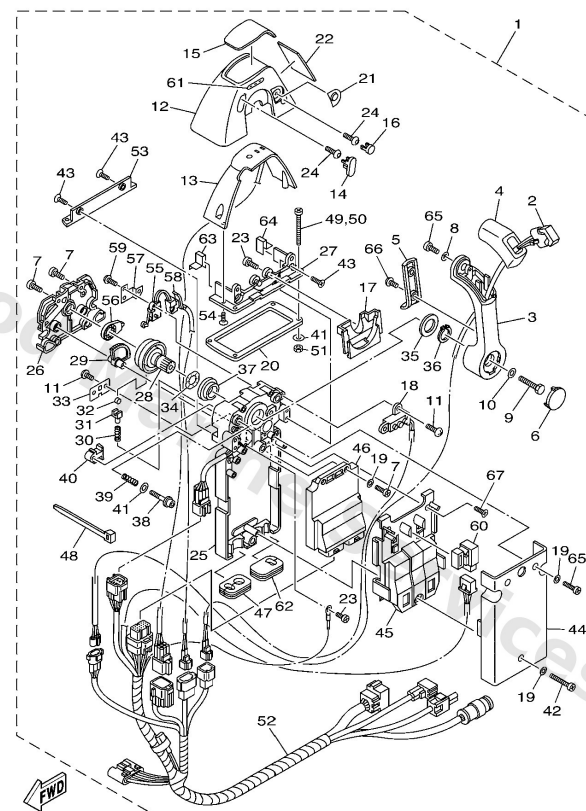

6X61100-G040

Ref	Part	
1	6X64820500 Ctrl Sgl Std NOT FOR SALE	Buy now
1	6X64820510 Remote Control assembly NOT FOR SALE	Buy now
1	6X64820520 Remote Control assembly NOT FOR SALE	Buy now
2	6X68256300 Trim & tilt switch assembly	Buy now
3	6X64822100 Lever, control	Buy now
4	6X64822200 Grip, control lever	Buy now
5	6X64822400 Cover, control lever	Buy now
6	6X64822410 Cover, control lever	Buy now
7	9858005014 Screw, pan head(3yl)	Buy now
8	9299005300 Washer, tooth	Buy now
9	6X64817100 Bolt	Buy now
10	9299008600 Washer, plain (663)	Buy now
11	EL84812700 Screw 1	Buy now
12	6X64811900 Cover	Buy now
13	6X68430100 Pilot light assembly 1	Buy now

 
Dbw Remote Control 1 (Single)

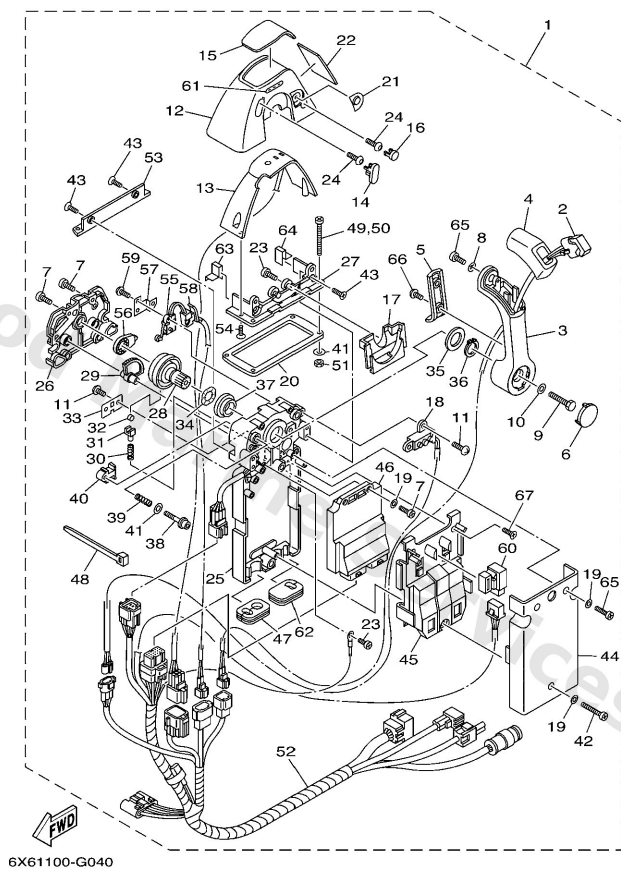

6X61100-G040

Ref	Part	
14	6X64816700 Plug	Buy now
15	6X64821500 Graphic	Buy now
16	6X64816750 Plug	Buy now
17	6X64821900 Cover, lead	Buy now
18	6X68259E00 Switch assembly	Buy now
19	9299005200 Ybs66-5 washer, plain	Buy now
20	6X64817600 Grommet	Buy now
21	6X64822500 Cover	Buy now
22	6X64821600 Graphic	Buy now
23	9858004010 Screw, pan head (e56)	Buy now
24	92D8005016 Bolt, socket head	Buy now
25	6X6481A001 Remo-Con. Case assembly	Buy now
26	6X64821200 Back plate 1	Buy now
27	6X64814410 Plate, stopper 2	Buy now
28	6X64824201 Shaft, drive	Buy now

 
Dbw Remote Control 1 (Single)

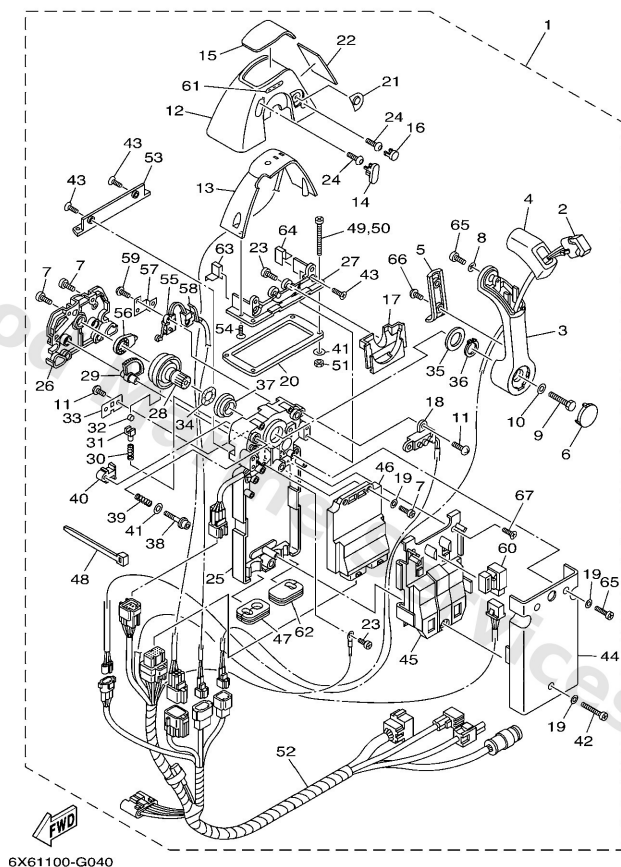

6X61100-G040


Ref	Part	
29	6X64823300 Gear 2	Buy now
30	6X64823800 Spring, detent	Buy now
31	6X64823700 Adaptor	Buy now
32	6X64823600 Roller, detent	Buy now
33	6X64818900 Retainer	Buy now
34	7034819800 Washer, wave 3	Buy now
35	6X64819300 Washer 3	Buy now
36	6X64811800 Clip, shift lever	Buy now
37	6X64823400 Bushing 1	Buy now
38	6X64826700 Bolt set	Buy now
39	6X64815800 Spring 1	Buy now
40	6X64826400 Friction, throttle	Buy now
41	7044828700 Washer 1	Buy now
42	6X68114500 Screw 1	Buy now
43	9878005014 Screw 3	Buy now

 Dbw Remote Control 1 (Single)

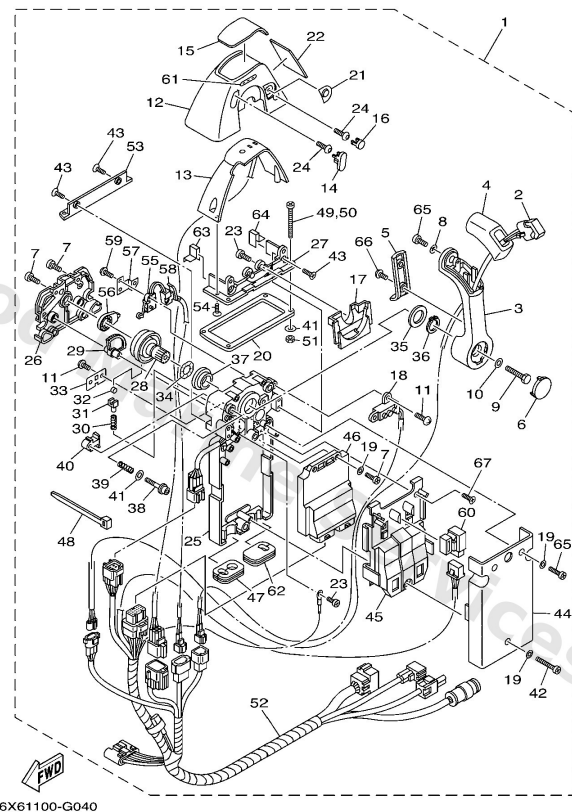


Ref	Part	
44	6X64821300 Back plate 2	Buy now
45	6X64822800 Holder, switch	Buy now
46	6X68559000 Control unit assembly STATION	Buy now
46	6X68559010 Control unit assembly STATION	Buy now
47	6X64817500 Boot STATION	Buy now
48	7038259100 Band STATION	Buy now
49	9778050145 Screw, pan head tapping	Buy now
50	9858005060 Screw, panhead	Buy now
51	9538005600 Nut, hexagon (663)	Buy now
52	6X68259000 Wire harness assembly STATION	Buy now
52	6X68259020 Wire Harness assembly STATION MAIN	Buy now
52	6X68259050 Wire Harness assembly STATION SUB	Buy now
53	6X64814400 Plate, stopper 2	Buy now
54	6X64812900 Screw 3	Buy now
55	6X68254000 Neutral switch assembly	Buy now

 Dbw Remote Control 1 (Single)

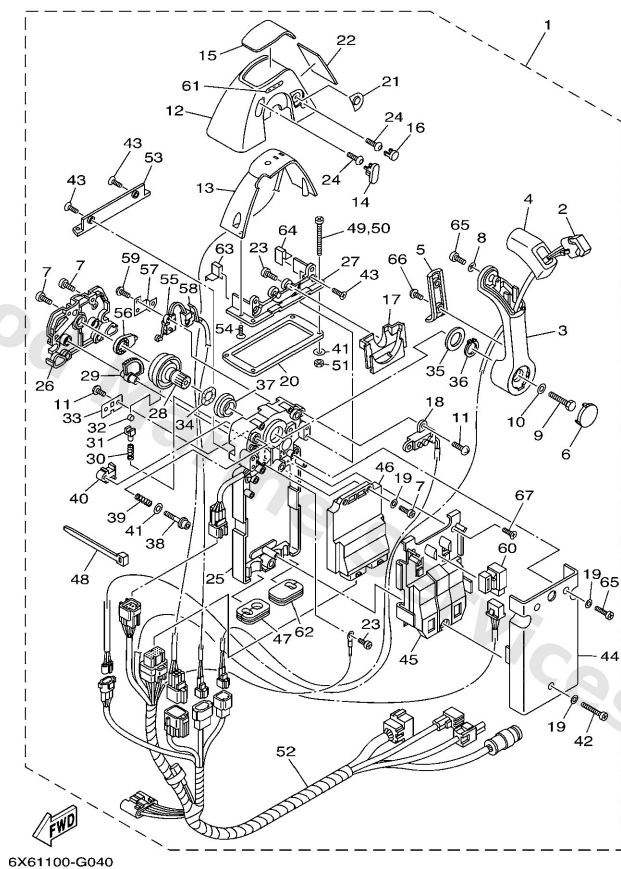


Ref	Part	
56	6X64824100 Arm, drive	Buy now
57	6X64824501 Plate, lock	Buy now
58	6X68254500 Grommet	Buy now
59	6X68252V00 Screw, special	Buy now
60	7048195010 Relay assembly	Buy now
61	6X64419100 Indicator, shift	Buy now
62	6X64817510 Boot STATION ONLY	Buy now
63	6X64817650 Grommet	Buy now
64	6X64817660 Grommet	Buy now
65	6X64812700 Screw 1	Buy now
66	6X64812800 Screw 2	Buy now
67	6X68114600 Screw 2	Buy now

 Dbw Remote Control 2 (Twin)

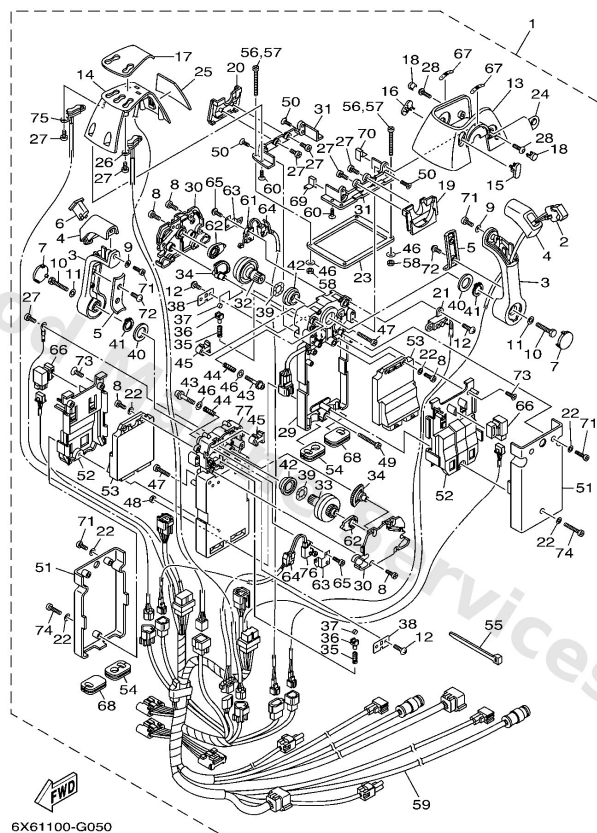


Ref	Part	
1	6X64820700 Remote Control assembly NOT FOR SALE	Buy now
1	6X64820710 Remote Control assembly NOT FOR SALE	Buy now
1	6X64820720 Remote control assembly NOT FOR SALE	Buy now
2	6X68256300 Trim & tilt switch assembly	Buy now
3	6X64822100 Lever, control	Buy now
4	6X64822200 Grip, control lever	Buy now
5	6X64822400 Cover, control lever	Buy now
6	6X64822210 Grip, control lever	Buy now
7	6X64822410 Cover, control lever	Buy now
8	9858005014 Screw, pan head(3yl)	Buy now
9	9299005300 Washer, tooth	Buy now
10	6X64817100 Bolt	Buy now
11	9299008600 Washer, plain (663)	Buy now
12	EL84812700 Screw 1	Buy now
13	6X64811910 Cover	Buy now

 Dbw Remote Control 2 (Twin)

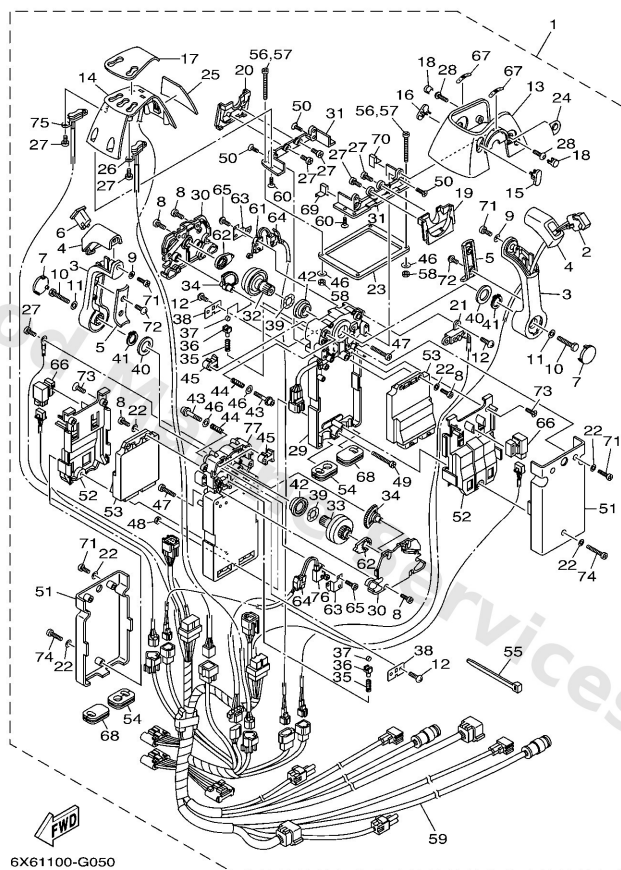


Ref	Part	
14	6X68430110 Pilot light assembly 1	Buy now
15	6X64816710 Plug	Buy now
16	6X64816720 Plug	Buy now
17	6X64821510 Graphic	Buy now
18	6X64816760 Plug	Buy now
19	6X64821910 Cover, lead	Buy now
20	6X64821920 Cover, lead	Buy now
21	6X68259E00 Switch assembly	Buy now
22	9299005200 Ybs66-5 washer, plain	Buy now
23	6X64817610 Grommet	Buy now
24	6X64822500 Cover	Buy now
25	6X64821610 Graphic	Buy now
26	6X68256310 Trim & tilt switch assembly	Buy now
27	9858004010 Screw, pan head (e56)	Buy now
28	92D8005016 Bolt, socket head	Buy now

 Dbw Remote Control 2 (Twin)

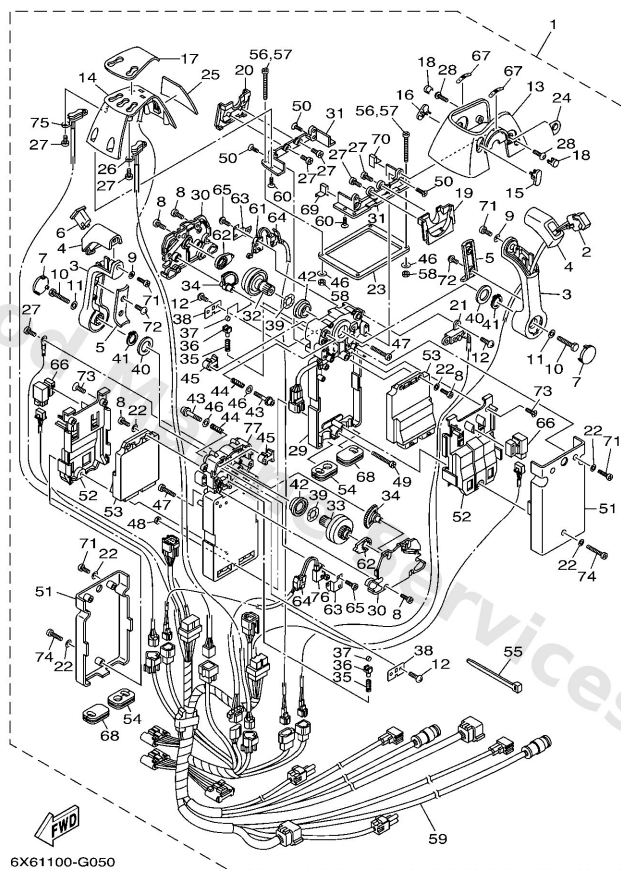


Ref	Part	
29	6X6481A001 Remo-Con. Case assembly	Buy now
30	6X64821200 Back plate 1	Buy now
31	6X64814410 Plate, stopper 2	Buy now
32	6X64824201 Shaft, drive	Buy now
33	6X64824211 Shaft, drive	Buy now
34	6X64823300 Gear 2	Buy now
35	6X64823800 Spring, detent	Buy now
36	6X64823700 Adaptor	Buy now
37	6X64823600 Roller, detent	Buy now
38	6X64818900 Retainer	Buy now
39	7034819800 Washer, wave 3	Buy now
40	6X64819300 Washer 3	Buy now
41	6X64811800 Clip, shift lever	Buy now
42	6X64823400 Bushing 1	Buy now
43	6X64826700 Bolt set	Buy now

 Dbw Remote Control 2 (Twin)

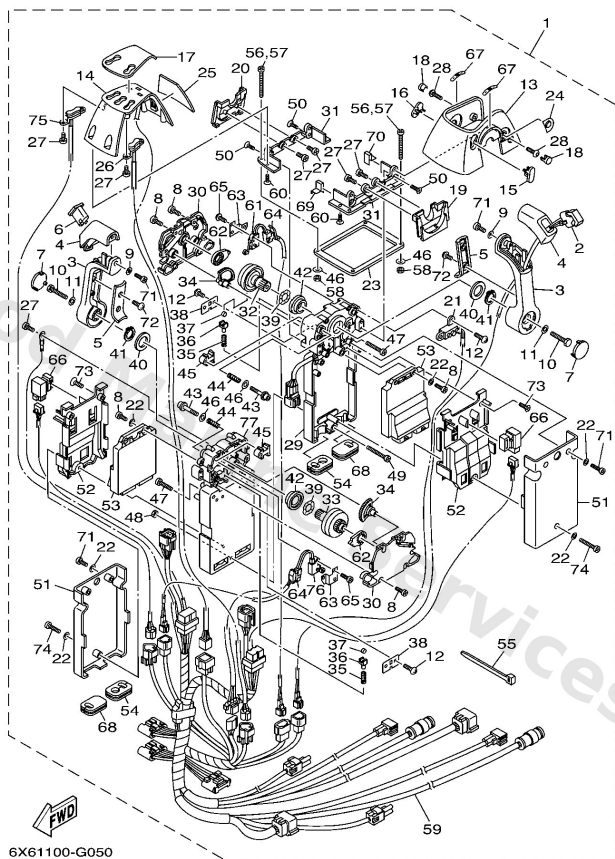


Ref	Part	
44	6X64815800 Spring 1	Buy now
45	6X64826400 Friction, throttle	Buy now
46	7044828700 Washer 1	Buy now
47	9858005025 Screw, panhead (a93)	Buy now
48	7044815600 Nut 1	Buy now
49	7044828300 Screw, panhead (eg9)	Buy now
50	9878005014 Screw 3	Buy now
51	6X64821300 Back plate 2	Buy now
52	6X64822800 Holder, switch	Buy now
53	6X68559000 Control unit assembly STATION	Buy now
53	6X68559010 Control unit assembly STATION	Buy now
54	6X64817500 Boot STATION	Buy now
55	7038259100 Band STATION	Buy now
56	9778050145 Screw, pan head tapping	Buy now
57	9858005060 Screw, panhead	Buy now

 Dbw Remote Control 2 (Twin)

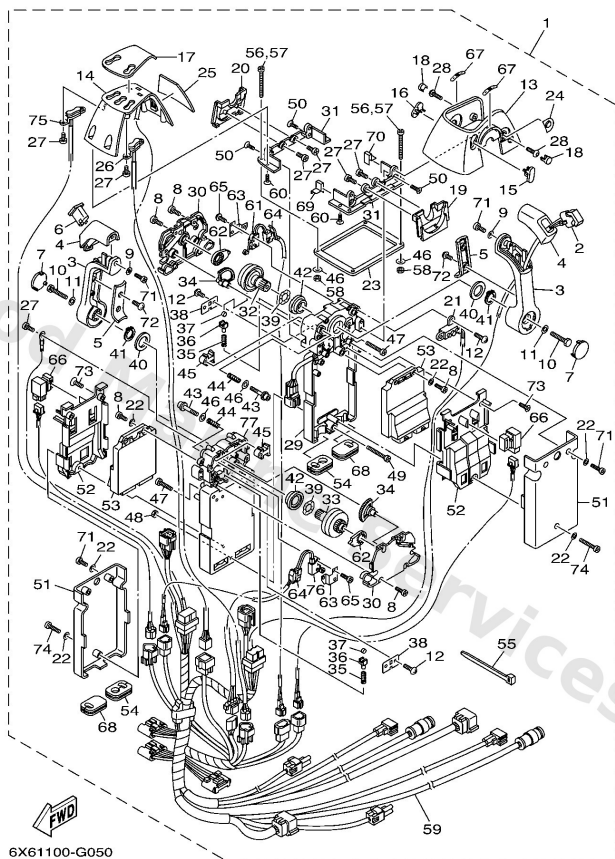


Ref	Part	
58	9538005600 Nut, hexagon (663)	Buy now
59	6X68259010 Wire Harness assembly STATION	Buy now
59	6X68259030 Wire Harness assembly STATION MAIN	Buy now
59	6X68259060 - STATION SUB	Buy now
60	6X64812900 Screw 3	Buy now
61	6X68254000 Neutral switch assembly	Buy now
62	6X64824100 Arm, drive	Buy now
63	6X64824501 Plate, lock	Buy now
64	6X68254500 Grommet	Buy now
65	6X68252V00 Screw, special	Buy now
66	7048195010 Relay assembly	Buy now
67	6X64419100 Indicator, shift	Buy now
68	6X64817510 Boot STATION ONLY	Buy now
69	6X64817650 Grommet	Buy now
70	6X64817660 Grommet	Buy now

 Dbw Remote Control 2 (Twin)

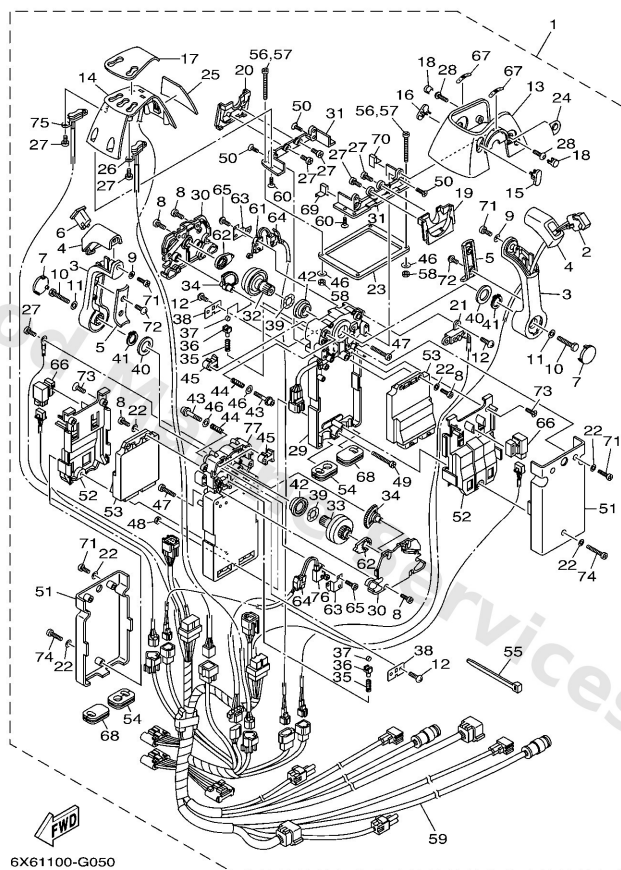


Ref	Part	
71	6X64812700 Screw 1	Buy now
72	6X64812800 Screw 2	Buy now
73	6X68114600 Screw 2	Buy now
74	6X68114500 Screw 1	Buy now
75	6X68256320 Trim & tilt switch assembly	Buy now
76	6X68254010 Neutral switch assembly	Buy now
77	6X6481A021 Remo-Con. Case assembly	Buy now

 Dbw Remote Control 3 (Triple)

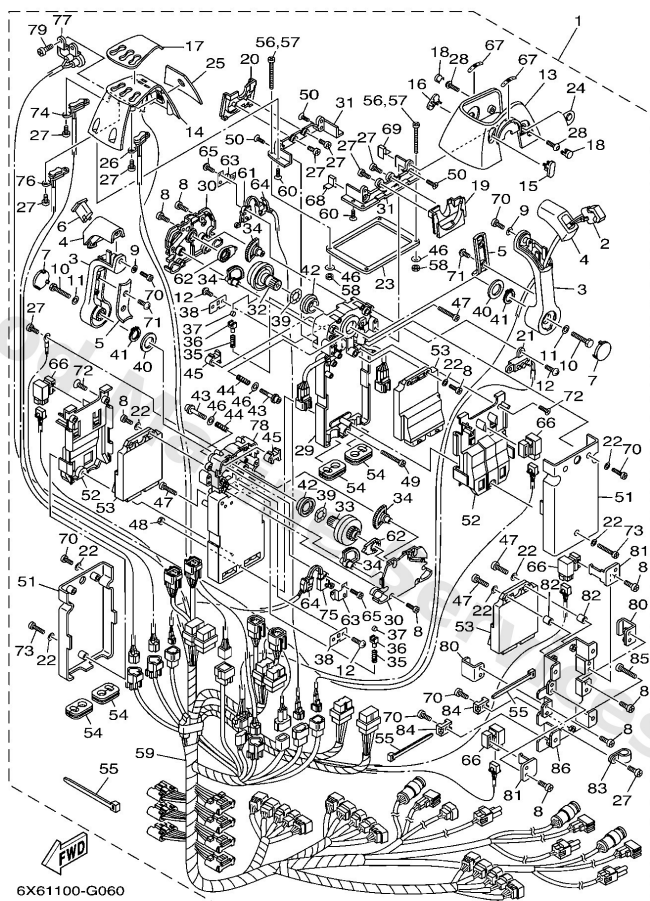


Ref	Part	
1	6X64820820 - NOT FOR SALE	Buy now
1	6X64820830 - NOT FOR SALE	Buy now
2	6X68256300 Trim & tilt switch assembly	Buy now
3	6X64822100 Lever, control	Buy now
4	6X64822200 Grip, control lever	Buy now
5	6X64822400 Cover, control lever	Buy now
6	6X64822210 Grip, control lever	Buy now
7	6X64822410 Cover, control lever	Buy now
8	9858005014 Screw, pan head(3yl)	Buy now
9	9299005300 Washer, tooth	Buy now
10	6X64817100 Bolt	Buy now
11	9299008600 Washer, plain (663)	Buy now
12	EL84812700 Screw 1	Buy now
13	6X64811910 Cover	Buy now
14	6X68430120 Pilot light assembly 1	Buy now

 Dbw Remote Control 3 (Triple)

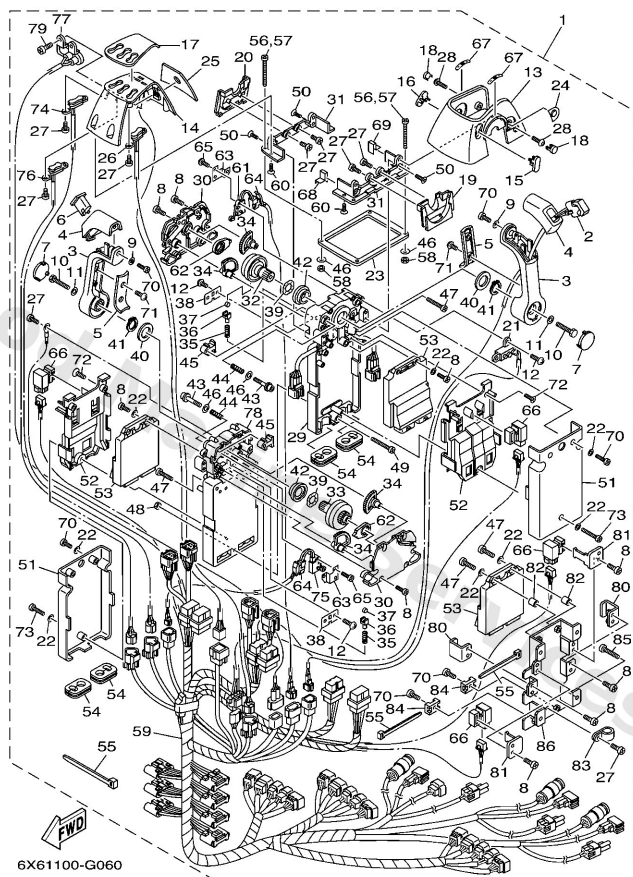


Ref	Part	
15	6X64816710 Plug	Buy now
16	6X64816720 Plug	Buy now
17	6X64821520 Graphic	Buy now
18	6X64816760 Plug	Buy now
19	6X64821910 Cover, lead	Buy now
20	6X64821920 Cover, lead	Buy now
21	6X68259E00 Switch assembly	Buy now
22	9299005200 Ybs66-5 washer, plain	Buy now
23	6X64817610 Grommet	Buy now
24	6X64822500 Cover	Buy now
25	6X64821620 Graphic	Buy now
26	6X68256310 Trim & tilt switch assembly	Buy now
27	9858004010 Screw, pan head (e56)	Buy now
28	92D8005016 Bolt, socket head	Buy now
29	6X6481A011 Remo-Con. Case assembly	Buy now

 Dbw Remote Control 3 (Triple)

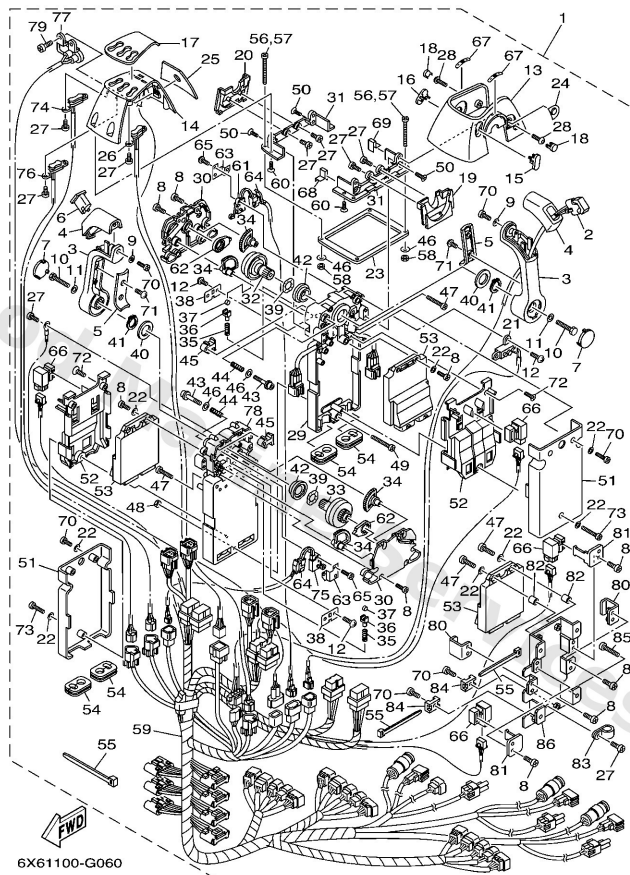


Ref	Part	
30	6X64821200 Back plate 1	Buy now
31	6X64814410 Plate, stopper 2	Buy now
32	6X64824201 Shaft, drive	Buy now
33	6X64824211 Shaft, drive	Buy now
34	6X64823300 Gear 2	Buy now
35	6X64823800 Spring, detent	Buy now
36	6X64823700 Adaptor	Buy now
37	6X64823600 Roller, detent	Buy now
38	6X64818900 Retainer	Buy now
39	7034819800 Washer, wave 3	Buy now
40	6X64819300 Washer 3	Buy now
41	6X64811800 Clip, shift lever	Buy now
42	6X64823400 Bushing 1	Buy now
43	6X64826700 Bolt set	Buy now
44	6X64815800 Spring 1	Buy now

 Dbw Remote Control 3 (Triple)

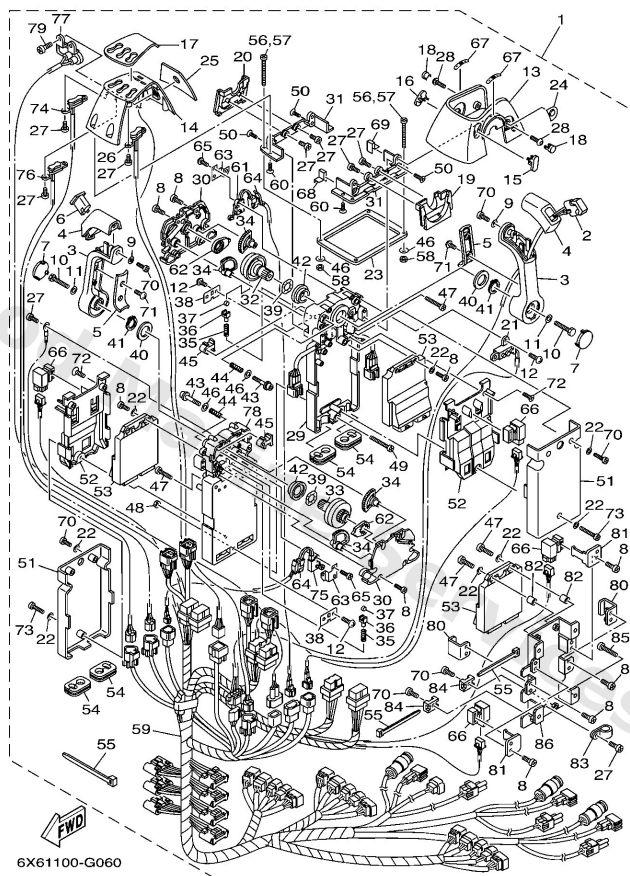


Ref	Part	
45	6X64826400 Friction, throttle	Buy now
46	7044828700 Washer 1	Buy now
47	9858005025 Screw, panhead (a93)	Buy now
48	7044815600 Nut 1	Buy now
49	7044828300 Screw, panhead (eg9)	Buy now
50	9878005014 Screw 3	Buy now
51	6X64821300 Back plate 2	Buy now
52	6X64822800 Holder, switch	Buy now
53	6X68559000 Control unit assembly	Buy now
54	6X64817500 Boot	Buy now
55	7038259100 Band	Buy now
56	9778050145 Screw, pan head tapping	Buy now
57	9858005060 Screw, panhead	Buy now
58	9538005600 Nut, hexagon (663)	Buy now
59	6X68259080 - STATION MAIN	Buy now

 Dbw Remote Control 3 (Triple)

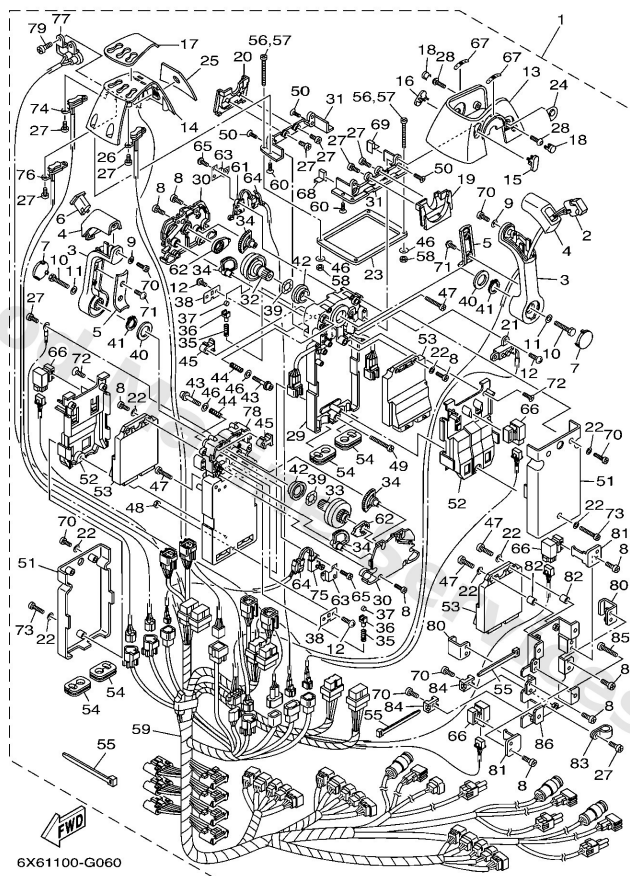



Ref	Part	
59	6X68259090 - STATION SUB	Buy now
60	6X64812900 Screw 3	Buy now
61	6X68254000 Neutral switch assembly	Buy now
62	6X64824100 Arm, drive	Buy now
63	6X64824501 Plate, lock	Buy now
64	6X68254500 Grommet	Buy now
65	6X68252V00 Screw, special	Buy now
66	7048195010 Relay assembly	Buy now
67	6X64419100 Indicator, shift	Buy now
68	6X64817650 Grommet	Buy now
69	6X64817660 Grommet	Buy now
70	6X64812700 Screw 1	Buy now
71	6X64812800 Screw 2	Buy now
72	6X68114600 Screw 2	Buy now
73	6X68114500 Screw 1	Buy now

 Dbw Remote Control 3 (Triple)

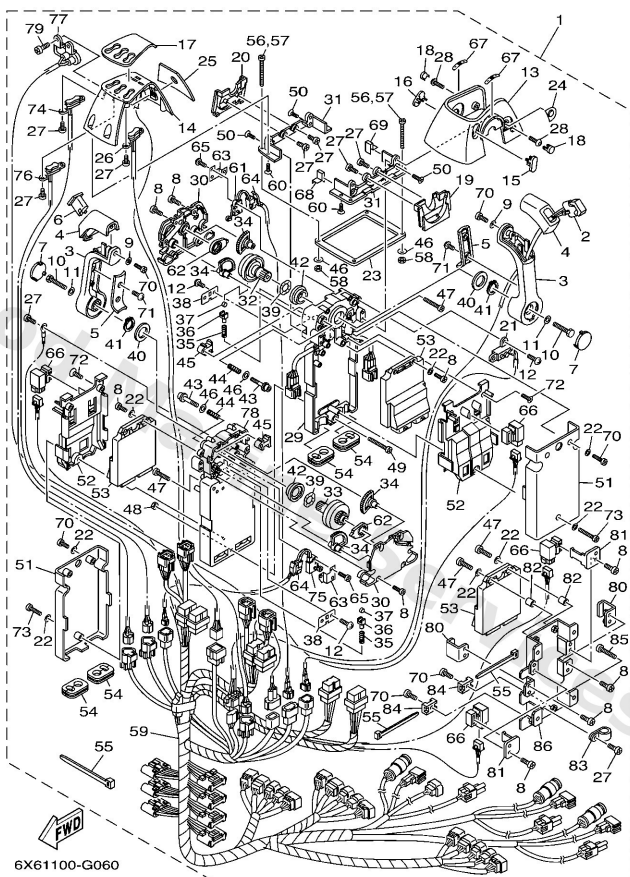


Ref	Part	
74	6X68256320 Trim & tilt switch assembly	Buy now
75	6X68254010 Neutral switch assembly	Buy now
76	6X68256330 Trim & tilt switch assembly	Buy now
77	6X68259F00 Switch assembly	Buy now
78	6X6481A031 Remo-Con. Case assembly	Buy now
79	9878005010 Screw, flat head (716)	Buy now
80	6X68555700 Holder	Buy now
81	6X68259100 Band	Buy now
82	6X68252S00 Spacer, 1	Buy now
83	6X68258400 Clamp	Buy now
84	6X68258100 Stay, cord clamp	Buy now
85	6X04812800 Screw 2	Buy now
86	6X64821110 Housing,1	Buy now

  Electrical Dbw Remote Control

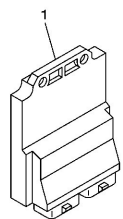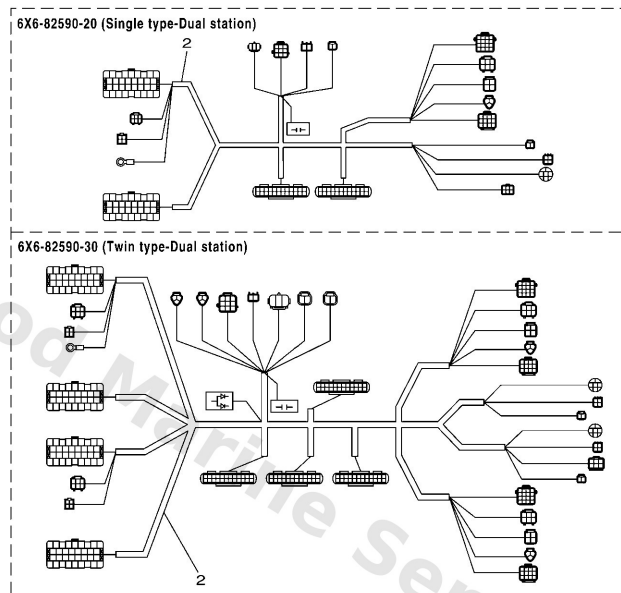


6X61100-G070

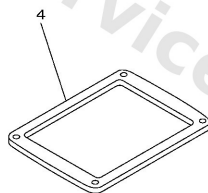 

(Twin type-Dual station)

Ref	Part	
1	6X68559000 Control unit assembly TWIN, 2 STATION	Buy now
2	6X68259020 Wire Harness assembly SINGLE, 2 STATION	Buy now
2	6X68259030 Wire Harness assembly TWIN, 2 STATION	Buy now
3	7038259100 Band TWIN, 2 STATION	Buy now
4	6X64817610 Grommet TWIN, 2 STATION	Buy now

 
Electrical Wire Harness

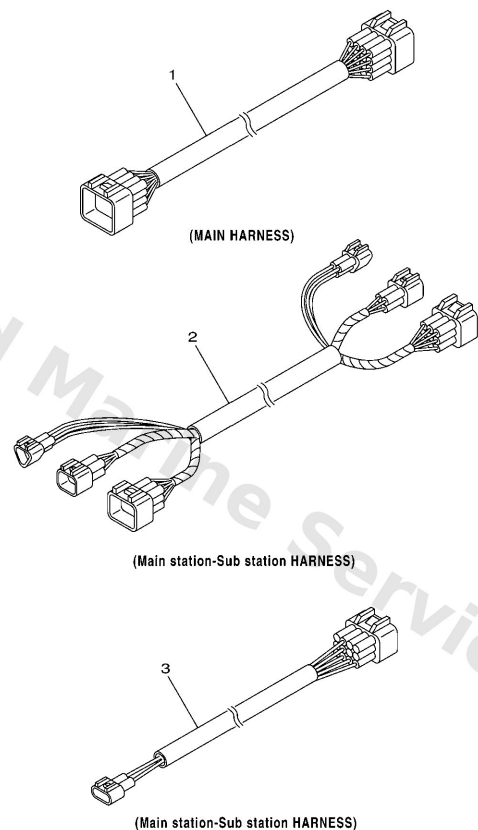

6X61100-G140


Ref	Part	
1	6X68258A00 Extension, wire harness(6.1m) UR	Buy now
1	6X68258A10 16p dbw main harness 7m-23ft UR	Buy now
1	6X68258A20 16p dbw main harness 8m-26ft UR	Buy now
1	6X68258A30 16p dbw main harness 10m-32ft UR	Buy now
1	6X68258A40 16p dbw main harness 12m-38ft UR	Buy now
2	6X68258AA0 Extension, Wire Harness (5M) UR 2 STATION	Buy now
2	6X68258AC0 Extension, Wire Harness (8M) UR 2 STATION	Buy now
2	6X68258AE0 Extension, Wire Harness (12.2M) UR 2 STATION	Buy now
3	6X68258AB0 #xtension, wire harness UR 2 STATION	Buy now
3	6X68258AD0 Extension, wire harness UR 2 STATION	Buy now
3	6X68258AF0 Extension, wire harness UR 2 STATION	Buy now

 Layout Chart 1 (Single)

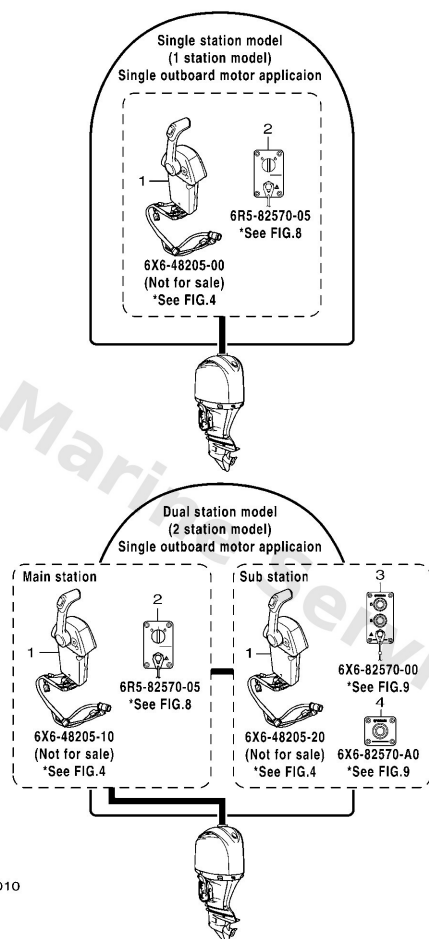


Ref	Part	
1	6X64820500 Ctrl Sgl Std NOT FOR SALE	Buy now
1	6X64820510 Remote Control assembly NOT FOR SALE	Buy now
1	6X64820520 Remote Control assembly NOT FOR SALE	Buy now
2	6R58257005 Panel switch assembly & 2 STATION MAIN	Buy now
3	6X68257000 Panel Switch assembly (Single) STATION SUB	Buy now
4	6X682570A0 Panel Switch assembly STATION SUB	Buy now

 Layout Chart 2 (Twin)

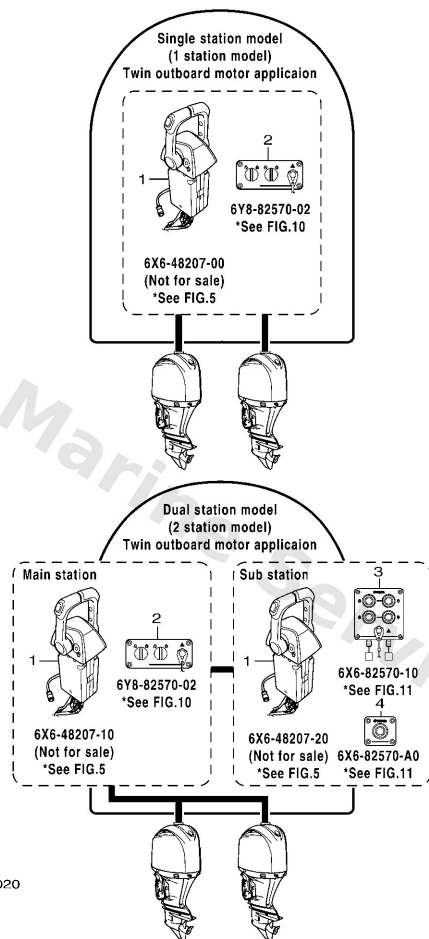

Ref	Part	
1	6X64820700 Remote Control assembly NOT FOR SALE	Buy now
1	6X64820710 Remote Control assembly NOT FOR SALE	Buy now
1	6X64820720 Remote control assembly NOT FOR SALE	Buy now
2	6Y88257002 Panel switch assembly & 2 STATION MAIN	Buy now
3	6X68257010 Panel Switch assembly (Twin) STATION SUB	Buy now
4	6X682570A0 Panel Switch assembly STATION SUB	Buy now

 
Layout Chart 3 (Triple)

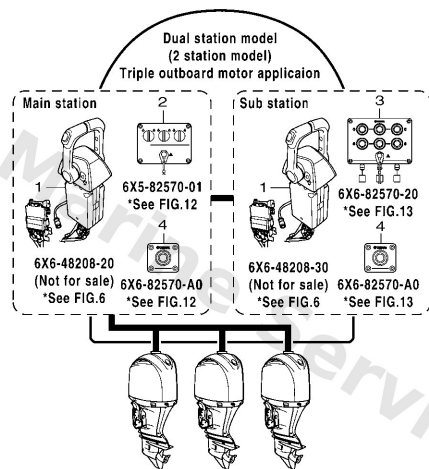

6X61100-G030

Ref	Part	
1	6X64820820 - NOT FOR SALE	Buy now
1	6X64820830 - NOT FOR SALE	Buy now
2	6X58257001 Panel switch assembly STATION MAIN	Buy now
3	6X68257020 Panel Switch assembly (Triple) STATION SUB	Buy now
4	6X682570A0 Panel Switch assembly	Buy now

 
Switch & Panel 1 (Single)

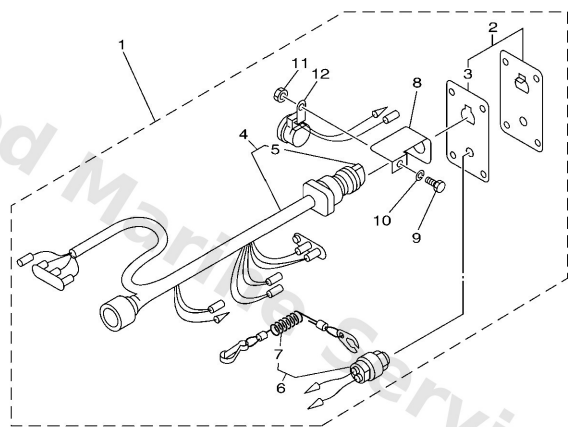


6X61100-G080

Ref	Part	
1	6R58257005 Panel switch assembly & 2 STATION MAIN	Buy now
2	7048257102 Panel, switch	Buy now
3	6R58258801 Plate	Buy now
4	6R58251002 Main switch assembly	Buy now
5	6768257700 Cap, key	Buy now
6	6888257501 Engine stop switch assembly	Buy now
7	6828255600 Lanyard, stop switch	Buy now
8	64D8258100 Stay, cord clamp	Buy now
9	9730305012 Bolt, hexagon	Buy now
10	9290305100 Ybs67-5 washer, spring	Buy now
11	9530305700 Nut (656)	Buy now
12	6R58338300 Buzzer	Buy now

 
Switch & Panel 2 (Single)

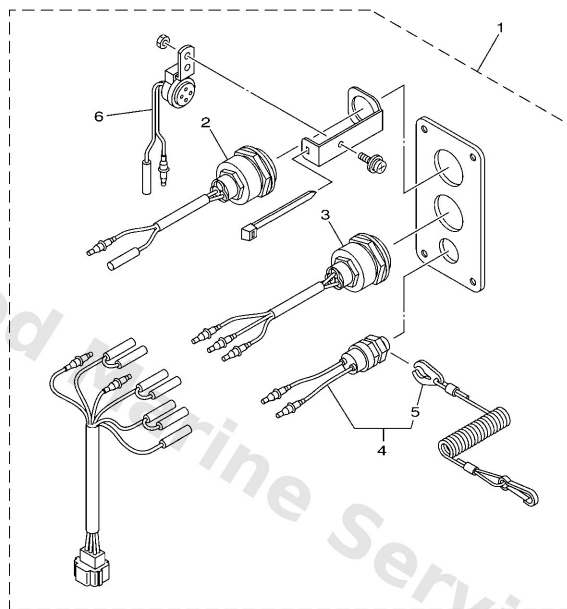

 6X61100-G090

Ref	Part	
1	6X68257000 Panel Switch assembly (Single) STATION SUB	Buy now
2	6X18187000 Starting switch assembly (black)	Buy now
3	6X18255000 Engine stop switch assembly	Buy now
4	6888257501 Engine stop switch assembly	Buy now
5	6828255600 Lanyard, stop switch	Buy now
6	6R58338300 Buzzer	Buy now
7	6X682570A0 Panel Switch assembly STATION SUB	Buy now

 
Switch & Panel 3 (Twin)

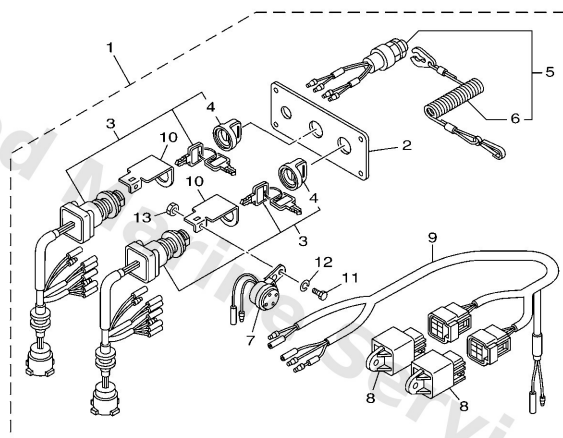


6X61100-G100

Ref	Part	
1	6Y88257002 Panel switch assembly & 2 STATION MAIN	Buy now
2	6Y88257101 Plate, panel switch	Buy now
3	6Y88251002 Main switch assembly	Buy now
4	6768257700 Cap, key	Buy now
5	6K18257500 Engine stop switch assembly	Buy now
6	6828255600 Lanyard, stop switch	Buy now
7	6R58338300 Buzzer	Buy now
8	68V8195000 Relay assembly	Buy now
9	6Y88250700 Lead, ignition switch relay	Buy now
10	64D8258100 Stay, cord clamp	Buy now
11	9730305012 Bolt, hexagon	Buy now
12	9290305100 Ybs67-5 washer, spring	Buy now
13	9530305700 Nut (656)	Buy now

 
Switch & Panel 4 (Twin)

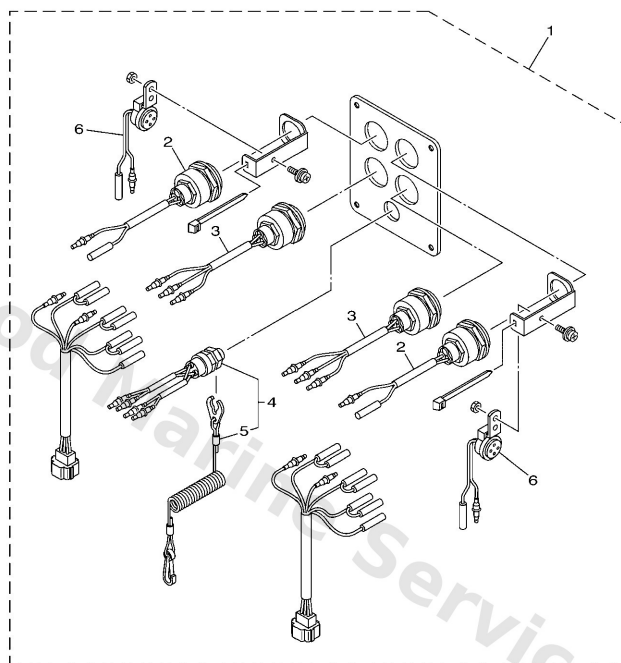


6X61100-G110

Ref	Part	
1	6X68257010 Panel Switch assembly (Twin) STATION SUB	Buy now
2	6X18187000 Starting switch assembly (black)	Buy now
3	6X18255000 Engine stop switch assembly	Buy now
4	6K18257500 Engine stop switch assembly	Buy now
5	6828255600 Lanyard, stop switch	Buy now
6	6R58338300 Buzzer	Buy now
7	6X682570A0 Panel Switch assembly STATION SUB	Buy now

 
Switch & Panel 5 (Triple)

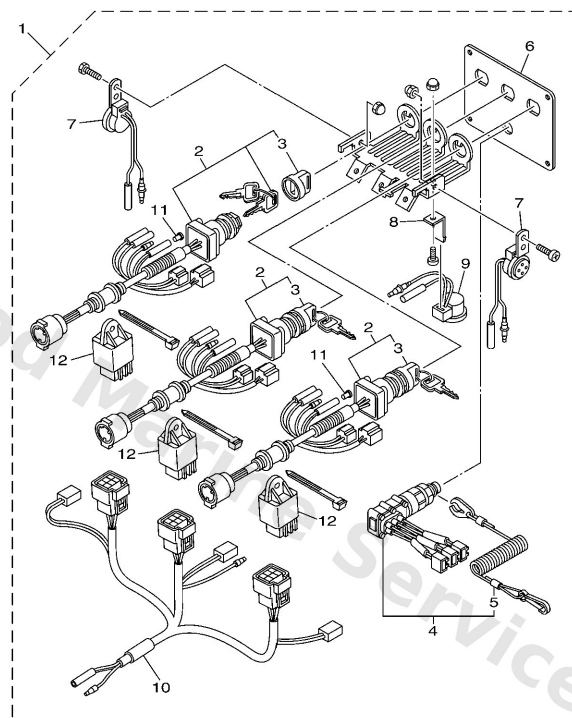

FWD
6X61100-G120

Ref	Part	
1	6X58257001 Panel switch assembly STATION MAIN	Buy now
2	6X58251001 Main switch assembly	Buy now
3	6768257700 Cap, key	Buy now
4	6X58257500 Engine stop switch assembly	Buy now
5	6828255600 Lanyard, stop switch	Buy now
6	6X58257100 Panel, switch	Buy now
7	6X58338300 Buzzer	Buy now
8	6X58258100 Stay, cord clamp	Buy now
9	6X48338300 Buzzer	Buy now
10	6X58250700 Wire, lead	Buy now
11	7038211900 Cover, lead wire	Buy now
12	68V8195000 Relay assembly	Buy now
13	6X682570A0 Panel Switch assembly STATION MAIN	Buy now

 Switch & Panel 6 (Triple)

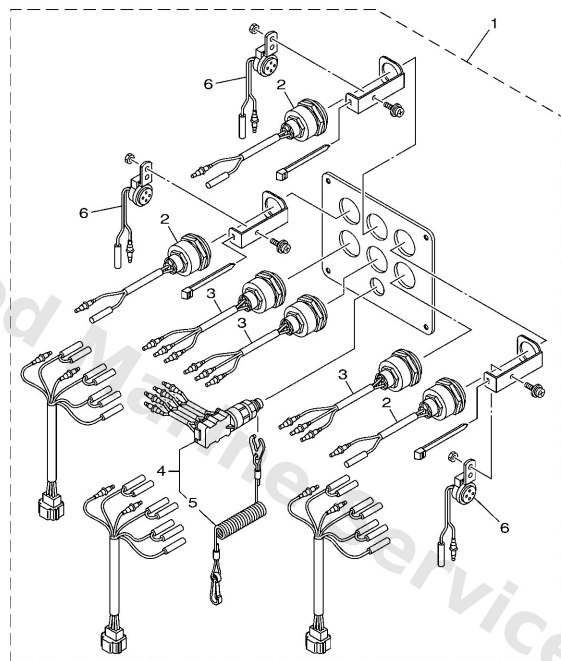


6X61100-G130

Ref	Part	
1	6X68257020 Panel Switch assembly (Triple) STATION SUB	Buy now
2	6X18187000 Starting switch assembly (black)	Buy now
3	6X18255000 Engine stop switch assembly	Buy now
4	6X68257500 Engine stop switch assembly	Buy now
5	6828255600 Lanyard, stop switch	Buy now
6	6R58338300 Buzzer	Buy now
7	6X682570A0 Panel Switch assembly STATION SUB	Buy now

Disclaimer

This document is provided for convenience only. It is **not** an official Yamaha publication and is **not supplied, endorsed, or approved** by Yamaha Motor Co., Ltd.

Reasonable efforts are made to keep information accurate; however diagrams, part references, supersessions, descriptions, and applicability may contain errors or omissions. Specifications and part availability may change without notice.

You are responsible for confirming the correct parts for your engine (including model code, year, serial range, and any superseded part numbers) before ordering or fitting.