



# Yamaha DUAL STATION SYSTEM 2001

## Parts Manual

[www.floodmarine.co.uk](http://www.floodmarine.co.uk)

+44 2882 246 539


Authorised Yamaha Dealers



# Contents


<b>DUAL STATION KIT (SINGLE)</b> .....	3
<b>DUAL STATION KIT (TWIN)</b> .....	5
<b>REMOTE CONTROL ASSY 3</b> .....	7
<b>REMOTE CONTROL ASSY 4</b> .....	12
<b>REMOTE CONTROL ASSY1 (ACTUATER)</b> .....	18
<b>REMOTE CONTROL ASSY2 (JUNCTION)</b> .....	22

# Dual Station Kit (Single)

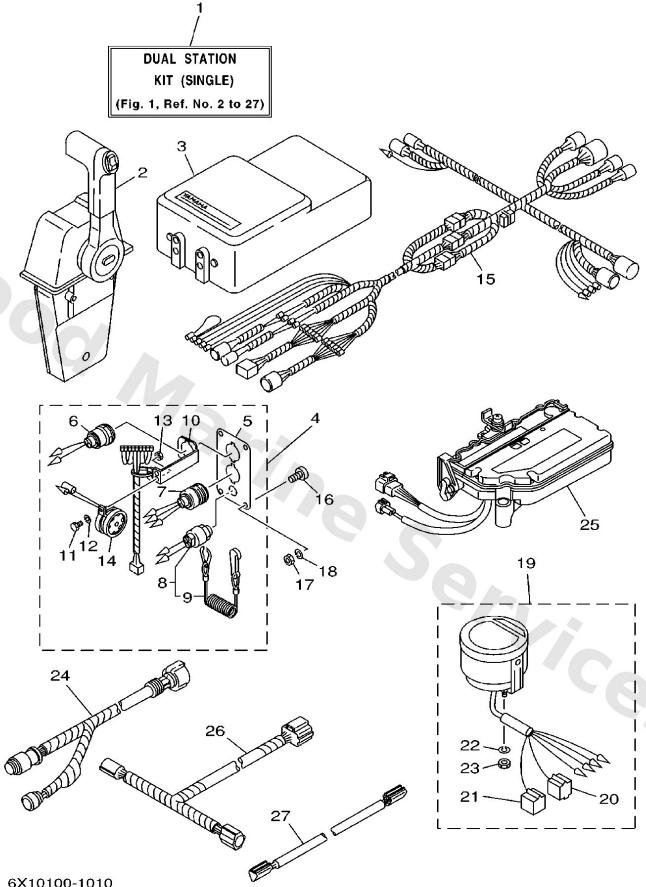


Ref	Part	
1	<a href="#">6X1W000606</a> -	<a href="#">Buy now</a>
2	<a href="#">7044820514</a> 704 single top mount (mec rc) SEE FIG.5	<a href="#">Buy now</a>
3	<a href="#">6X14820802</a> Junction Box (Dual Station) SEE FIG.4	<a href="#">Buy now</a>
4	<a href="#">6X18257000</a> Panel switch assembly	<a href="#">Buy now</a>
5	<a href="#">6X18257100</a> Panel, Switch	<a href="#">Buy now</a>
6	<a href="#">6X18187000</a> Starting switch assembly (black)	<a href="#">Buy now</a>
7	<a href="#">6X18255000</a> Engine stop switch assembly	<a href="#">Buy now</a>
8	<a href="#">6888257501</a> Engine stop switch assembly	<a href="#">Buy now</a>
9	<a href="#">6828255600</a> Lanyard, stop switch	<a href="#">Buy now</a>
10	<a href="#">6X18258100</a> Stay, cord clamp	<a href="#">Buy now</a>
11	<a href="#">9730305012</a> Bolt, hexagon	<a href="#">Buy now</a>
12	<a href="#">9290305100</a> Ybs67-5 washer, spring	<a href="#">Buy now</a>
13	<a href="#">9530305700</a> Nut (656)	<a href="#">Buy now</a>
14	<a href="#">6888338311</a> Buzzer	<a href="#">Buy now</a>
15	<a href="#">6X18258A20</a> Extension, Wire Harness	<a href="#">Buy now</a>

# Dual Station Kit (Single)

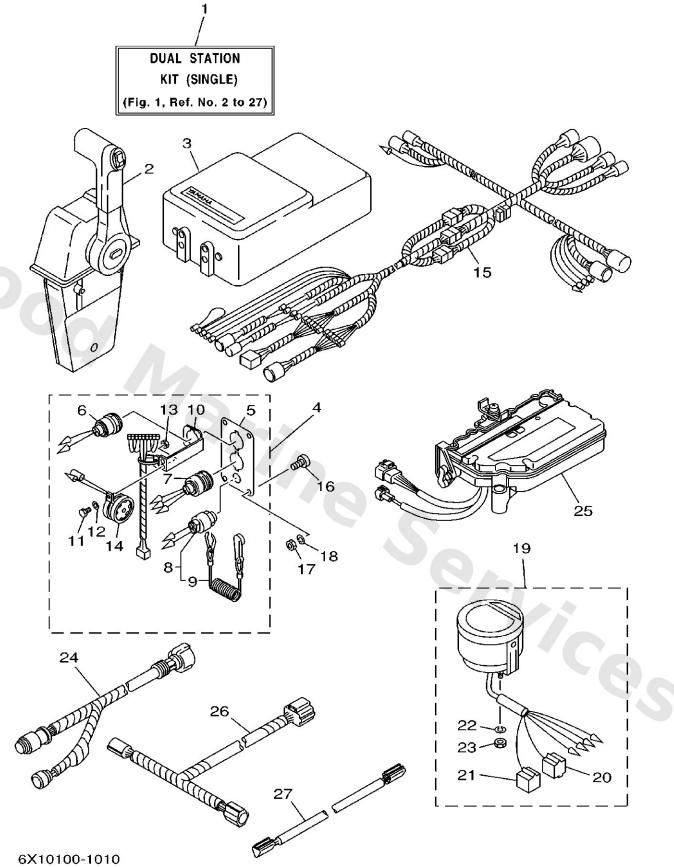


Ref	Part	
16	<a href="#">9014905M05</a> Screw(6k0)	<a href="#">Buy now</a>
17	<a href="#">9538005600</a> Nut, hexagon (663)	<a href="#">Buy now</a>
18	<a href="#">9299005100</a> Ybs67-5 washer, spring	<a href="#">Buy now</a>
19	<a href="#">6Y58350T80</a> Digital Tachometer assembly	<a href="#">Buy now</a>
20	<a href="#">9E45004433</a> Housing, connector (m-4-w) <b>M-4-W</b>	<a href="#">Buy now</a>
21	<a href="#">9E45004533</a> Housing, f-4-w(5pcs) <b>F-4-W</b>	<a href="#">Buy now</a>
22	<a href="#">9299004100</a> Ybs67-4 washer, spring	<a href="#">Buy now</a>
23	<a href="#">9538004600</a> Nut,hex	<a href="#">Buy now</a>
24	<a href="#">6K18258A40</a> Extension, wire harness	<a href="#">Buy now</a>
25	<a href="#">6X14820820</a> Actuator (Dual Station) <b>SEE FIG.3</b>	<a href="#">Buy now</a>
26	<a href="#">6X18355300</a> Wire, lead	<a href="#">Buy now</a>
27	<a href="#">6X18253100</a> Wire, lead	<a href="#">Buy now</a>

# Dual Station Kit (Twin)

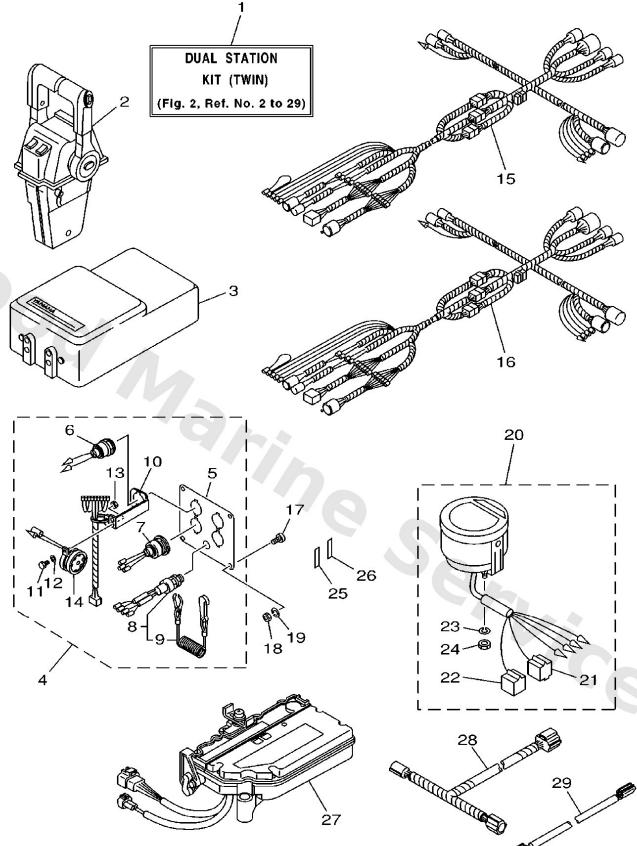

Ref	Part	
1	<a href="#">6X1W000616</a> -	<a href="#">Buy now</a>
2	<a href="#">7044820723</a> Remote Control assembly SEE FIG.6	<a href="#">Buy now</a>
3	<a href="#">6X14820802</a> Junction Box (Dual Station) SEE FIG.4	<a href="#">Buy now</a>
4	<a href="#">6X18257010</a> Panel switch assembly	<a href="#">Buy now</a>
5	<a href="#">6X18257110</a> Panel, Switch	<a href="#">Buy now</a>
6	<a href="#">6X18187000</a> Starting switch assembly (black)	<a href="#">Buy now</a>
7	<a href="#">6X18255000</a> Engine stop switch assembly	<a href="#">Buy now</a>
8	<a href="#">6K18257500</a> Engine stop switch assembly	<a href="#">Buy now</a>
9	<a href="#">6828255600</a> Lanyard, stop switch	<a href="#">Buy now</a>
10	<a href="#">6X18258100</a> Stay, cord clamp	<a href="#">Buy now</a>
11	<a href="#">9730305012</a> Bolt, hexagon	<a href="#">Buy now</a>
12	<a href="#">9290305100</a> Ybs67-5 washer, spring	<a href="#">Buy now</a>
13	<a href="#">9530305700</a> Nut (656)	<a href="#">Buy now</a>
14	<a href="#">6888338311</a> Buzzer	<a href="#">Buy now</a>
15	<a href="#">6X18258A20</a> Extension, Wire Harness	<a href="#">Buy now</a>


# Dual Station Kit (Twin)

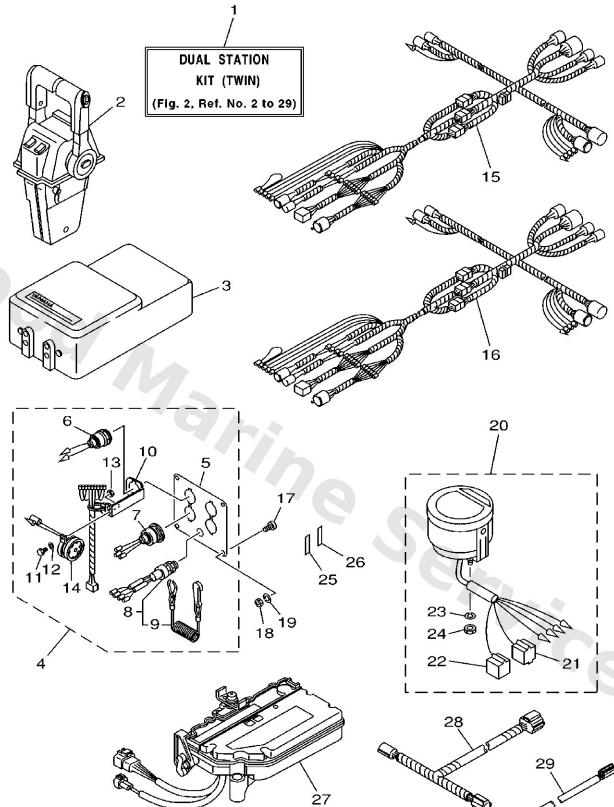

6X10100-1020

Ref	Part	
16	<a href="#">6X18258A30</a> Extension, Wire Harness	<a href="#">Buy now</a>
17	<a href="#">9014905M05</a> Screw(6k0)	<a href="#">Buy now</a>
18	<a href="#">9538005600</a> Nut, hexagon (663)	<a href="#">Buy now</a>
19	<a href="#">9299005100</a> Ybs67-5 washer, spring	<a href="#">Buy now</a>
20	<a href="#">6Y58350T80</a> Digital Tachometer assembly	<a href="#">Buy now</a>
21	<a href="#">9E45004433</a> Housing, connector (m-4-w) M-4-W	<a href="#">Buy now</a>
22	<a href="#">9E45004533</a> Housing, f-4-w(5pcs) F-4-W	<a href="#">Buy now</a>
23	<a href="#">9299004100</a> Ybs67-4 washer, spring	<a href="#">Buy now</a>
24	<a href="#">9538004600</a> Nut,hex	<a href="#">Buy now</a>
25	<a href="#">6X18362100</a> Mark 1 (s)	<a href="#">Buy now</a>
26	<a href="#">6X18362200</a> Mark, 2 (p)	<a href="#">Buy now</a>
27	<a href="#">6X14820820</a> Actuator (Dual Station) SEE FIG.3	<a href="#">Buy now</a>
28	<a href="#">6X18355300</a> Wire, lead	<a href="#">Buy now</a>
29	<a href="#">6X18253100</a> Wire, lead	<a href="#">Buy now</a>


# Remote Control Assy 3

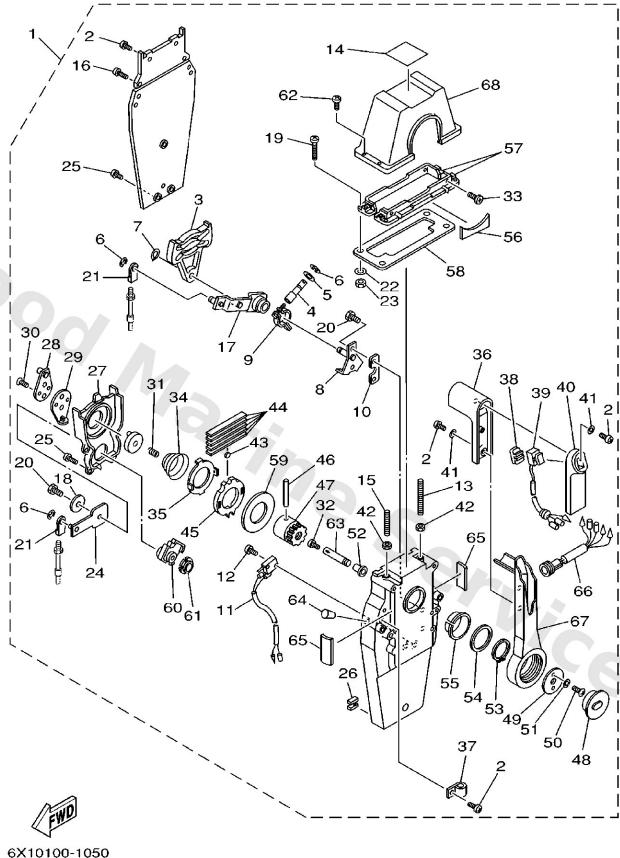

6X10100-1050

Ref	Part	
1	<a href="#">7044820514</a> 704 single top mount (mec rc) <b>WITH PT/T SW.</b>	<a href="#">Buy now</a>
2	<a href="#">9789005016</a> Screw, pan head(6b0)	<a href="#">Buy now</a>
3	<a href="#">EL84825100</a> Plate, cam	<a href="#">Buy now</a>
4	<a href="#">7044826500</a> Shaft, friction	<a href="#">Buy now</a>
5	<a href="#">7014824600</a> Spacer	<a href="#">Buy now</a>
6	<a href="#">9343006024</a> Circlip (701)	<a href="#">Buy now</a>
7	<a href="#">EL84825900</a> Circlip 1	<a href="#">Buy now</a>
8	<a href="#">7044826200</a> Shaft, throttle	<a href="#">Buy now</a>
9	<a href="#">7044826400</a> Friction, throttle	<a href="#">Buy now</a>
10	<a href="#">7044826600</a> Spacer 2	<a href="#">Buy now</a>
11	<a href="#">7048254000</a> Neutral switch assembly	<a href="#">Buy now</a>
12	<a href="#">6A54812910</a> Screw, pan head (n151)	<a href="#">Buy now</a>
13	<a href="#">EL84828100</a> Screw 1	<a href="#">Buy now</a>
14	<a href="#">7044821500</a> Graphic 1	<a href="#">Buy now</a>
15	<a href="#">7044828100</a> Screw1	<a href="#">Buy now</a>


# Remote Control Assy 3

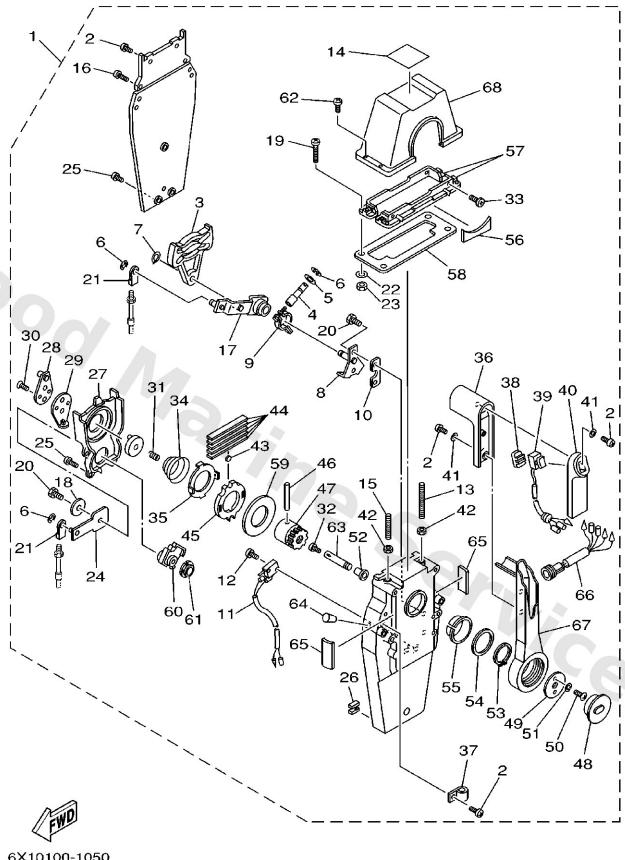

6X10100-1050

Ref	Part	
16	<a href="#">9789005025</a> Screw, panhead (a93)	<a href="#">Buy now</a>
17	<a href="#">7044826100</a> Arm, throttle	<a href="#">Buy now</a>
18	<a href="#">EL84819100</a> Washer 1	<a href="#">Buy now</a>
19	<a href="#">7044828300</a> Screw,panhead (eg9)	<a href="#">Buy now</a>
20	<a href="#">9738006018</a> Bolt (fj0)	<a href="#">Buy now</a>
21	<a href="#">7034834501</a> Cable end, remote control 2	<a href="#">Buy now</a>
22	<a href="#">7044828700</a> Washer 1	<a href="#">Buy now</a>
23	<a href="#">9538005600</a> Nut, hexagon (663)	<a href="#">Buy now</a>
24	<a href="#">EL84827100</a> Arm, shift	<a href="#">Buy now</a>
25	<a href="#">EL84812700</a> Screw 1	<a href="#">Buy now</a>
26	<a href="#">7034835800</a> Anchor, cable	<a href="#">Buy now</a>
27	<a href="#">EL84823100</a> Housing, gear	<a href="#">Buy now</a>
28	<a href="#">EL84824100</a> Arm, drive	<a href="#">Buy now</a>
29	<a href="#">EL84825400</a> Stopper Throttle Adjusting	<a href="#">Buy now</a>
30	<a href="#">9278006020</a> Screw flat head	<a href="#">Buy now</a>


# Remote Control Assy 3

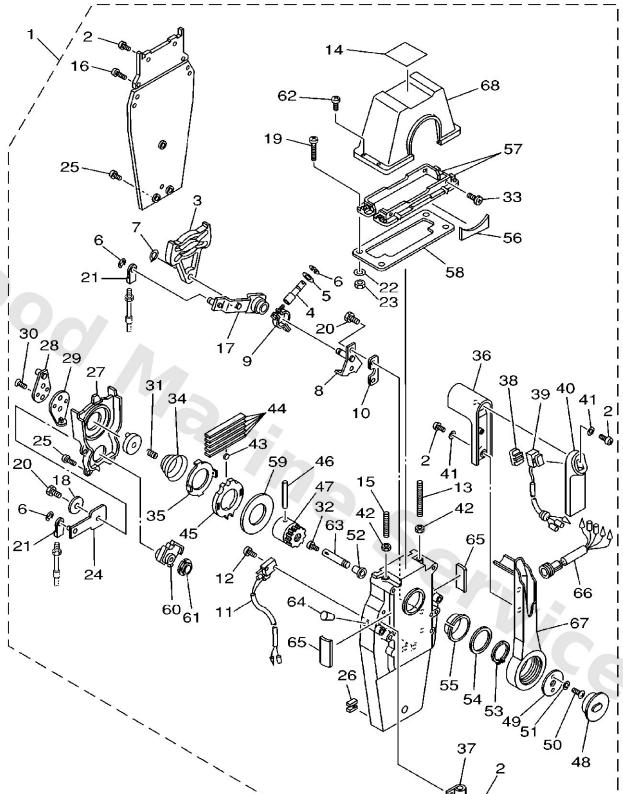

6X10100-1050

Ref	Part	
31	<a href="#">EL84815800</a> Spring 1	<a href="#">Buy now</a>
32	<a href="#">9858004006</a> Screw, pan head (7h3)	<a href="#">Buy now</a>
33	<a href="#">9878005018</a> Screw (704)	<a href="#">Buy now</a>
34	<a href="#">EL84824400</a> Spring, free accel.	<a href="#">Buy now</a>
35	<a href="#">EL84824500</a> Plate, lock	<a href="#">Buy now</a>
36	<a href="#">7044822200</a> Grip, control lever	<a href="#">Buy now</a>
37	<a href="#">7048259400</a> Clamp	<a href="#">Buy now</a>
38	<a href="#">7044822800</a> Holder, switch	<a href="#">Buy now</a>
39	<a href="#">7048256301</a> Trim & tilt switch assembly	<a href="#">Buy now</a>
40	<a href="#">7044822900</a> Grip, control lever 2	<a href="#">Buy now</a>
41	<a href="#">9299005300</a> Washer, tooth	<a href="#">Buy now</a>
42	<a href="#">9538006600</a> Nut(661)	<a href="#">Buy now</a>
43	<a href="#">7014824800</a> Roller, free accel	<a href="#">Buy now</a>
44	<a href="#">7034823800</a> Spring, detent	<a href="#">Buy now</a>
45	<a href="#">EL84823200</a> Gear 1	<a href="#">Buy now</a>


# Remote Control Assy 3

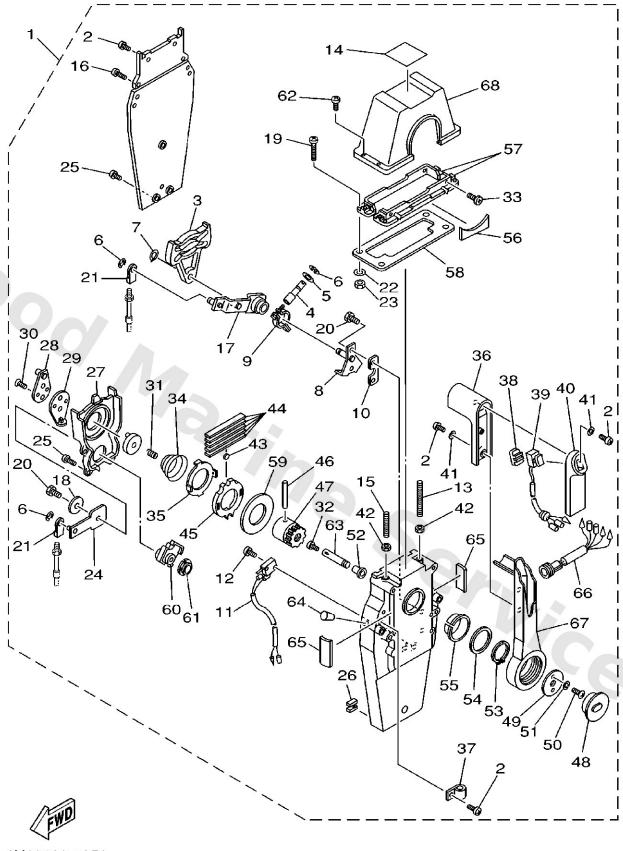

6X10100-1050

Ref	Part	
46	<a href="#">EL84816400</a> Pin 2	<a href="#">Buy now</a>
47	<a href="#">7044824200</a> Shaft, drive	<a href="#">Buy now</a>
48	<a href="#">7044822500</a> Cover	<a href="#">Buy now</a>
49	<a href="#">7044819200</a> Washer 2	<a href="#">Buy now</a>
50	<a href="#">9789006018</a> Screw, pan head(6e5)	<a href="#">Buy now</a>
51	<a href="#">9299006300</a> Washer, tooth	<a href="#">Buy now</a>
52	<a href="#">7024826300</a> Bushing 4	<a href="#">Buy now</a>
53	<a href="#">EL84827900</a> Circlip 2	<a href="#">Buy now</a>
54	<a href="#">7044819300</a> Washer 3	<a href="#">Buy now</a>
55	<a href="#">EL84823400</a> Bushing 1	<a href="#">Buy now</a>
56	<a href="#">7044821900</a> Cover, lead	<a href="#">Buy now</a>
57	<a href="#">7044814400</a> Plate, stopper 2	<a href="#">Buy now</a>
58	<a href="#">7044817600</a> Grommet	<a href="#">Buy now</a>
59	<a href="#">7034819200</a> Washer 2	<a href="#">Buy now</a>
60	<a href="#">EL84823300</a> Gear 2	<a href="#">Buy now</a>


# Remote Control Assy 3

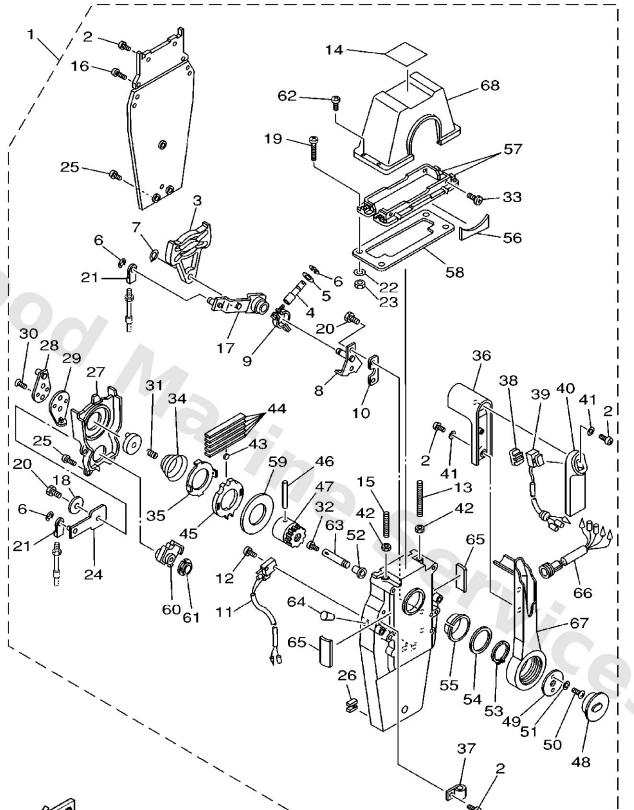

6X10100-1050


Ref	Part	
61	<a href="#">7024823500</a> Bushing	<a href="#">Buy now</a>
62	<a href="#">7044828200</a> Screw 2	<a href="#">Buy now</a>
63	<a href="#">EL84815310</a> Shaft, free accel.	<a href="#">Buy now</a>
64	<a href="#">7044816600</a> Plug	<a href="#">Buy now</a>
65	<a href="#">7044828400</a> Grommet	<a href="#">Buy now</a>
66	<a href="#">7048254110</a> Extension, wire lead	<a href="#">Buy now</a>
67	<a href="#">7044822100</a> Lever control	<a href="#">Buy now</a>
68	<a href="#">7044811900</a> Cover	<a href="#">Buy now</a>

# Remote Control Assy 4

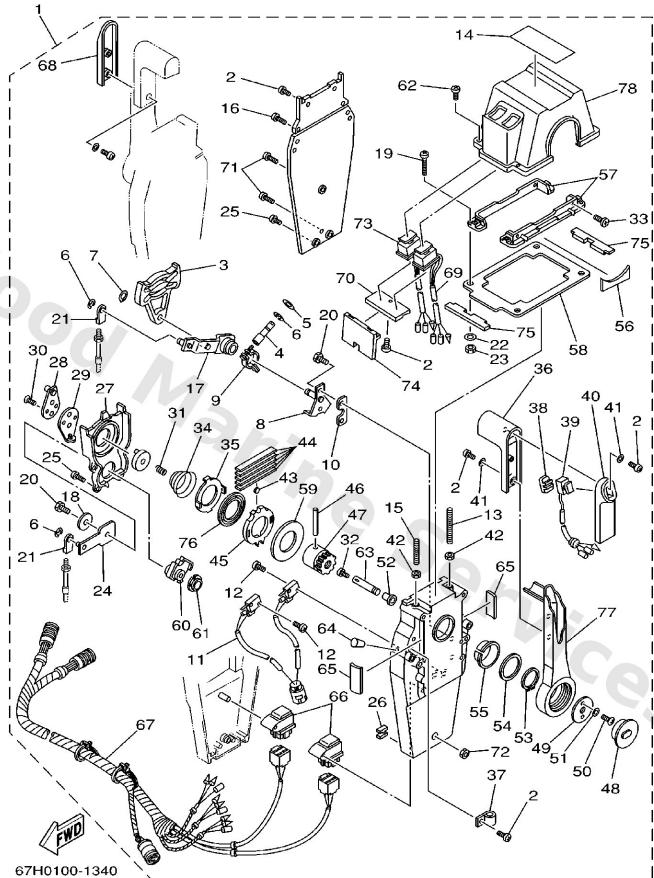


Ref	Part	
1	<a href="#">7044820723</a> Remote Control assembly WITH PT/T SW.	<a href="#">Buy now</a>
2	<a href="#">9789005016</a> Screw, pan head(6b0)	<a href="#">Buy now</a>
3	<a href="#">EL84825100</a> Plate, cam	<a href="#">Buy now</a>
4	<a href="#">7044826500</a> Shaft, friction	<a href="#">Buy now</a>
5	<a href="#">7014824600</a> Spacer	<a href="#">Buy now</a>
6	<a href="#">9343006024</a> Circlip (701)	<a href="#">Buy now</a>
7	<a href="#">EL84825900</a> Circlip 1	<a href="#">Buy now</a>
8	<a href="#">7044826200</a> Shaft, throttle	<a href="#">Buy now</a>
9	<a href="#">7044826400</a> Friction, throttle	<a href="#">Buy now</a>
10	<a href="#">7044826600</a> Spacer 2	<a href="#">Buy now</a>
11	<a href="#">7048254010</a> Neutral switch assembly	<a href="#">Buy now</a>
12	<a href="#">6A54812910</a> Screw, pan head (n151)	<a href="#">Buy now</a>
13	<a href="#">EL84828100</a> Screw 1	<a href="#">Buy now</a>
14	<a href="#">7044821510</a> Graphic 1	<a href="#">Buy now</a>
15	<a href="#">7044828100</a> Screw1	<a href="#">Buy now</a>

# Remote Control Assy 4

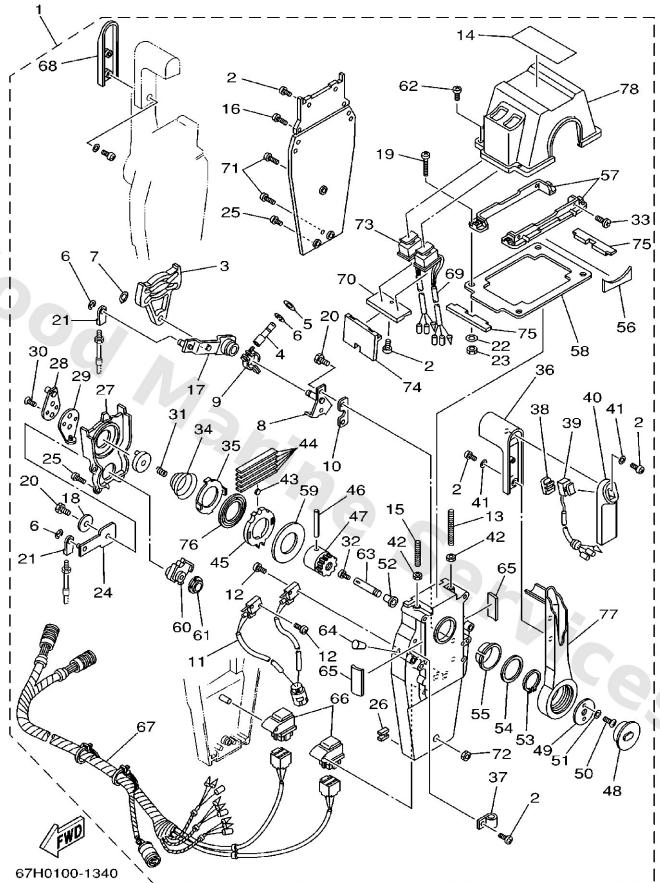


Ref	Part	
16	<a href="#">9789005025</a> Screw, panhead (a93)	<a href="#">Buy now</a>
17	<a href="#">7044826100</a> Arm, throttle	<a href="#">Buy now</a>
18	<a href="#">EL84819100</a> Washer 1	<a href="#">Buy now</a>
19	<a href="#">7044828300</a> Screw,panhead (eg9)	<a href="#">Buy now</a>
20	<a href="#">9738006018</a> Bolt (fj0)	<a href="#">Buy now</a>
21	<a href="#">7034834501</a> Cable end, remote control 2	<a href="#">Buy now</a>
22	<a href="#">7044828700</a> Washer 1	<a href="#">Buy now</a>
23	<a href="#">9538005600</a> Nut, hexagon (663)	<a href="#">Buy now</a>
24	<a href="#">EL84827100</a> Arm, shift	<a href="#">Buy now</a>
25	<a href="#">EL84812700</a> Screw 1	<a href="#">Buy now</a>
26	<a href="#">7034835800</a> Anchor, cable	<a href="#">Buy now</a>
27	<a href="#">EL84823100</a> Housing, gear	<a href="#">Buy now</a>
28	<a href="#">EL84824100</a> Arm, drive	<a href="#">Buy now</a>
29	<a href="#">EL84825400</a> Stopper Throttle Adjusting	<a href="#">Buy now</a>
30	<a href="#">9278006020</a> Screw flat head	<a href="#">Buy now</a>

# Remote Control Assy 4

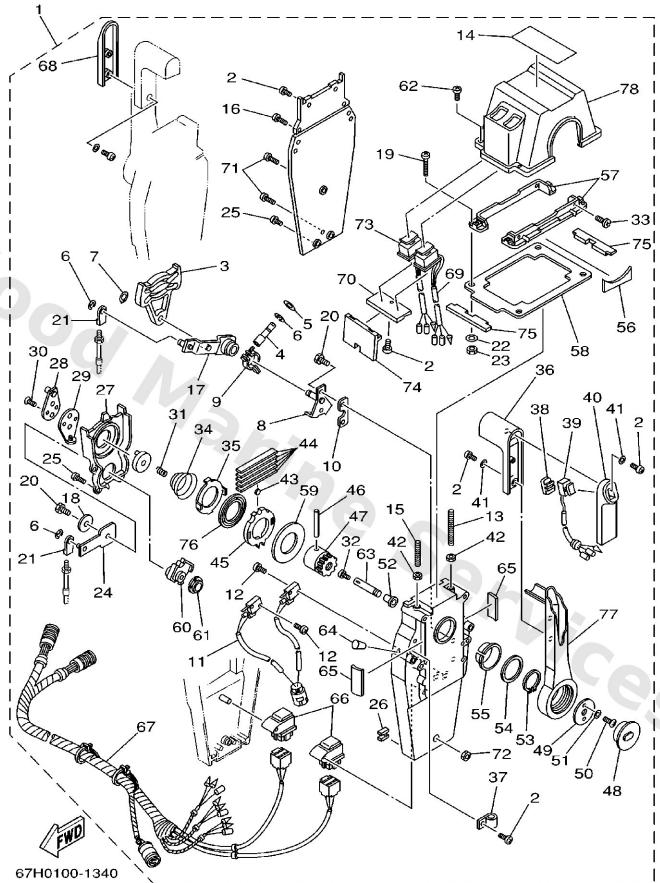


Ref	Part	
31	<a href="#">EL84815800</a> Spring 1	<a href="#">Buy now</a>
32	<a href="#">9858004006</a> Screw, pan head (7h3)	<a href="#">Buy now</a>
33	<a href="#">9878005018</a> Screw (704)	<a href="#">Buy now</a>
34	<a href="#">EL84824400</a> Spring, free accel.	<a href="#">Buy now</a>
35	<a href="#">EL84824500</a> Plate, lock	<a href="#">Buy now</a>
36	<a href="#">7044822200</a> Grip, control lever	<a href="#">Buy now</a>
37	<a href="#">7048259400</a> Clamp	<a href="#">Buy now</a>
38	<a href="#">7044822800</a> Holder, switch	<a href="#">Buy now</a>
39	<a href="#">7048256331</a> Trim & tilt switch assembly	<a href="#">Buy now</a>
40	<a href="#">7044822900</a> Grip, control lever 2	<a href="#">Buy now</a>
41	<a href="#">9299005300</a> Washer, tooth	<a href="#">Buy now</a>
42	<a href="#">9538006600</a> Nut(661)	<a href="#">Buy now</a>
43	<a href="#">7014824800</a> Roller, free accel	<a href="#">Buy now</a>
44	<a href="#">7034823800</a> Spring, detent	<a href="#">Buy now</a>
45	<a href="#">EL84823200</a> Gear 1	<a href="#">Buy now</a>

# Remote Control Assy 4

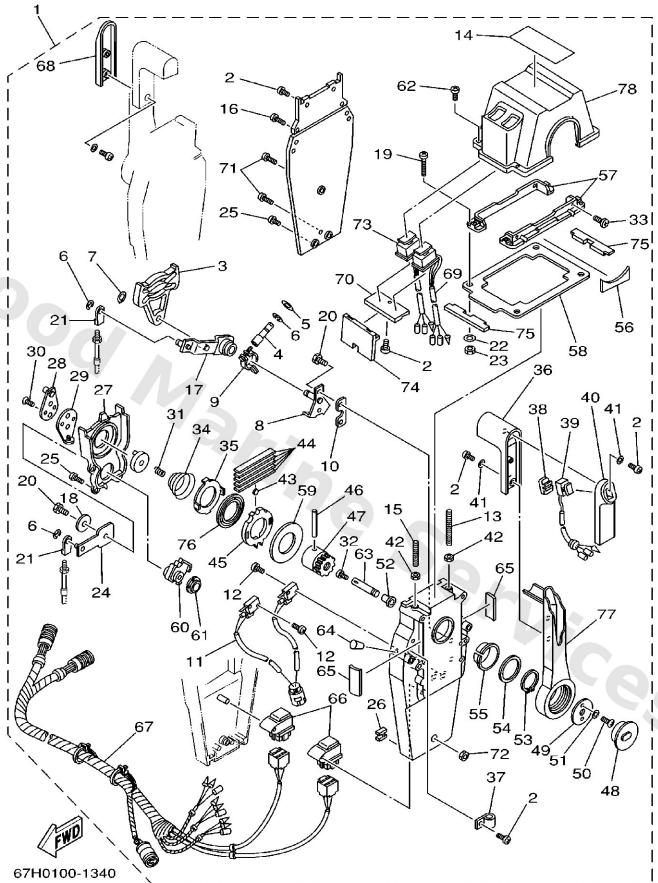


Ref	Part	
46	<a href="#">EL84816400</a> Pin 2	<a href="#">Buy now</a>
47	<a href="#">7044824200</a> Shaft, drive	<a href="#">Buy now</a>
48	<a href="#">7044822500</a> Cover	<a href="#">Buy now</a>
49	<a href="#">7044819200</a> Washer 2	<a href="#">Buy now</a>
50	<a href="#">9789006018</a> Screw, pan head(6e5)	<a href="#">Buy now</a>
51	<a href="#">9299006300</a> Washer, tooth	<a href="#">Buy now</a>
52	<a href="#">7024826300</a> Bushing 4	<a href="#">Buy now</a>
53	<a href="#">EL84827900</a> Circlip 2	<a href="#">Buy now</a>
54	<a href="#">7044819300</a> Washer 3	<a href="#">Buy now</a>
55	<a href="#">EL84823400</a> Bushing 1	<a href="#">Buy now</a>
56	<a href="#">7044821900</a> Cover, lead	<a href="#">Buy now</a>
57	<a href="#">7044814400</a> Plate, stopper 2	<a href="#">Buy now</a>
58	<a href="#">7044817610</a> Grommet	<a href="#">Buy now</a>
59	<a href="#">7034819200</a> Washer 2	<a href="#">Buy now</a>
60	<a href="#">EL84823300</a> Gear 2	<a href="#">Buy now</a>

# Remote Control Assy 4

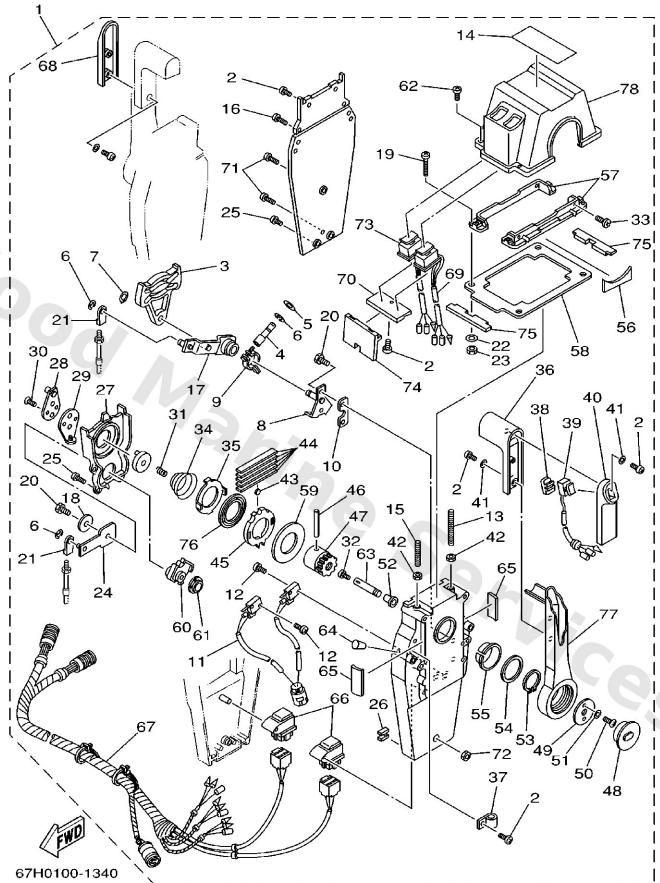


Ref	Part	
61	<a href="#">7034823500</a> Bushing	<a href="#">Buy now</a>
62	<a href="#">7044828200</a> Screw 2	<a href="#">Buy now</a>
63	<a href="#">EL84815310</a> Shaft, free accel.	<a href="#">Buy now</a>
64	<a href="#">7044816600</a> Plug	<a href="#">Buy now</a>
65	<a href="#">7044828400</a> Grommet	<a href="#">Buy now</a>
66	<a href="#">7048195000</a> Relay assembly	<a href="#">Buy now</a>
67	<a href="#">7048259010</a> Wireharness assembly	<a href="#">Buy now</a>
68	<a href="#">7044822910</a> Grip, control lever 2	<a href="#">Buy now</a>
69	<a href="#">70482563E0</a> Trim & tilt switch assembly	<a href="#">Buy now</a>
70	<a href="#">7044822810</a> Holder, switch	<a href="#">Buy now</a>
71	<a href="#">7044812800</a> Screw, pan head	<a href="#">Buy now</a>
72	<a href="#">7044815600</a> Nut 1	<a href="#">Buy now</a>
73	<a href="#">70482563F0</a> Trim & tilt switch assembly	<a href="#">Buy now</a>
74	<a href="#">7044828500</a> Grommet 2	<a href="#">Buy now</a>
75	<a href="#">7044828600</a> Grommet 3	<a href="#">Buy now</a>

## Remote Control Assy 4

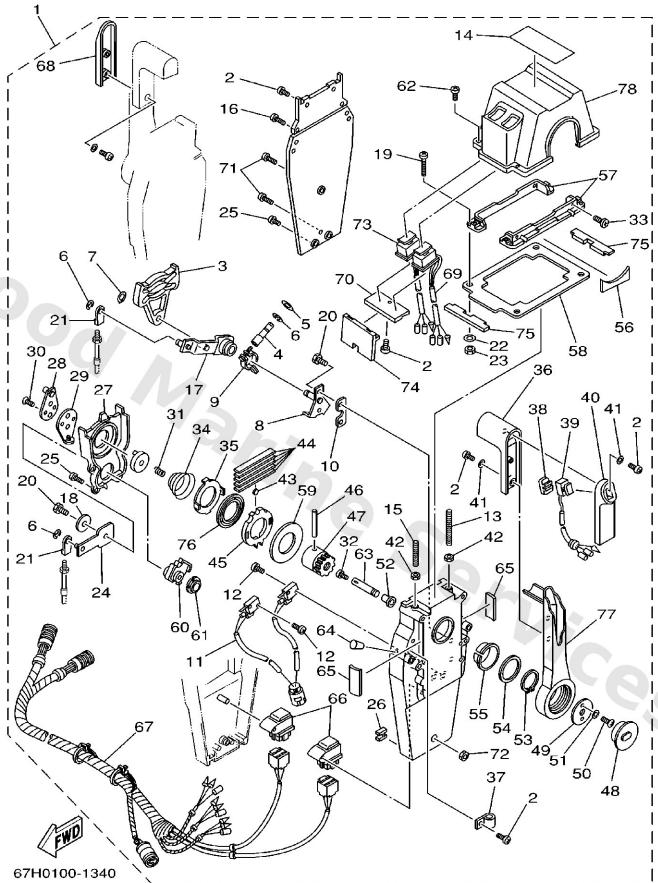


Ref	Part	
76	<a href="#">7044817800</a> Plate, shift	<a href="#">Buy now</a>
77	<a href="#">7044822100</a> Lever control	<a href="#">Buy now</a>
78	<a href="#">7044811920</a> Cover	<a href="#">Buy now</a>

# Remote Control Assy1 (Actuator)

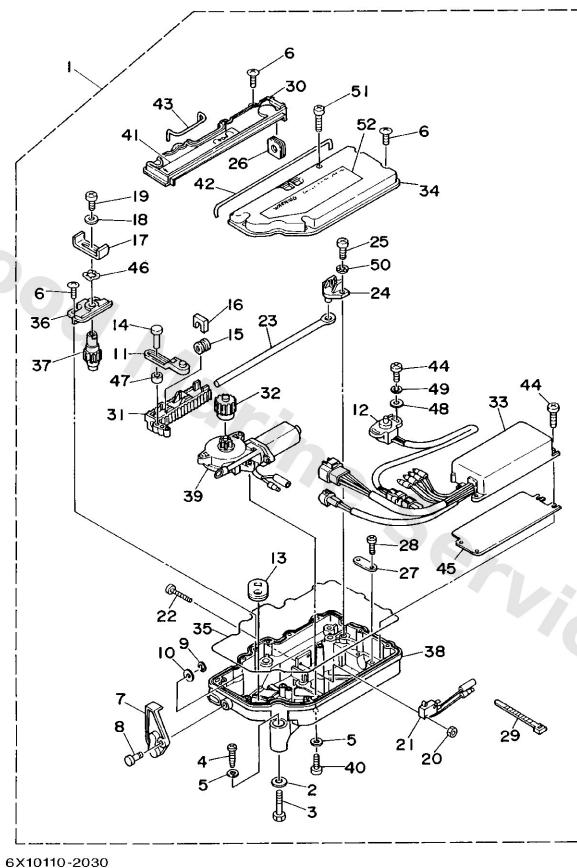

Ref	Part	
1	<a href="#">6X14820820</a> Actuator (Dual Station)	<a href="#">Buy now</a>
2	<a href="#">9299008600</a> Washer, plain (663)	<a href="#">Buy now</a>
3	<a href="#">6X14817100</a> -	<a href="#">Buy now</a>
4	<a href="#">6X04812800</a> Screw 2	<a href="#">Buy now</a>
5	<a href="#">7024828800</a> Washer, Plain	<a href="#">Buy now</a>
6	<a href="#">6X14812700</a> -	<a href="#">Buy now</a>
7	<a href="#">6X14813600</a> -	<a href="#">Buy now</a>
8	<a href="#">6X14817300</a> -	<a href="#">Buy now</a>
9	<a href="#">9343006024</a> Circlip (701)	<a href="#">Buy now</a>
10	<a href="#">7014824600</a> Spacer	<a href="#">Buy now</a>
11	<a href="#">6X11457300</a> -	<a href="#">Buy now</a>
12	<a href="#">6X28588510</a> Throttle sensor assembly	<a href="#">Buy now</a>
13	<a href="#">6X14828400</a> Grommet	<a href="#">Buy now</a>
14	<a href="#">6X14817400</a> -	<a href="#">Buy now</a>
15	<a href="#">6X14833300</a> Cable, end	<a href="#">Buy now</a>


# Remote Control Assy1 (Actuator)

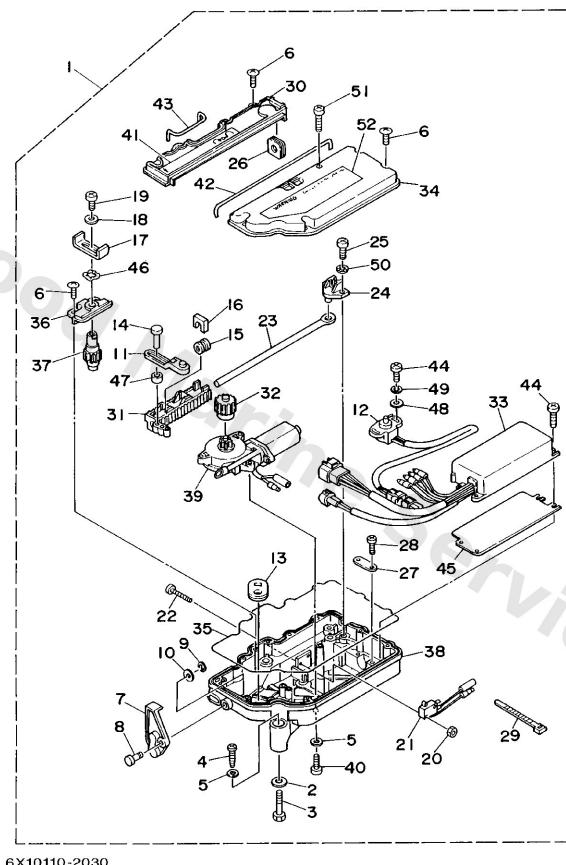

6X10110-2030


Ref	Part	
16	<a href="#">6X14835400</a> Set-plate, cable	<a href="#">Buy now</a>
17	<a href="#">6X14814800</a> -	<a href="#">Buy now</a>
18	<a href="#">7044828700</a> Washer 1	<a href="#">Buy now</a>
19	<a href="#">6X14828100</a> Screw (M5X0.8X12)	<a href="#">Buy now</a>
20	<a href="#">9538003600</a> Nut (6g8)	<a href="#">Buy now</a>
21	<a href="#">7038254000</a> Neutral switch assembly	<a href="#">Buy now</a>
22	<a href="#">6X14828200</a> Screw (M3X0.5X20)	<a href="#">Buy now</a>
23	<a href="#">6X14829400</a> Shaft 1	<a href="#">Buy now</a>
24	<a href="#">6X14817800</a> Plate, Shift	<a href="#">Buy now</a>
25	<a href="#">6X148282A0</a> Screw (M6X1.0X25)	<a href="#">Buy now</a>
26	<a href="#">6X14828500</a> Grommet 2	<a href="#">Buy now</a>
27	<a href="#">6X14814300</a> -	<a href="#">Buy now</a>
28	<a href="#">6X14828900</a> Screw (M5X10)	<a href="#">Buy now</a>
29	<a href="#">7038259100</a> Band	<a href="#">Buy now</a>
30	<a href="#">6X14822400</a> Cover, Control Lever	<a href="#">Buy now</a>

# Remote Control Assy1 (Actuator)

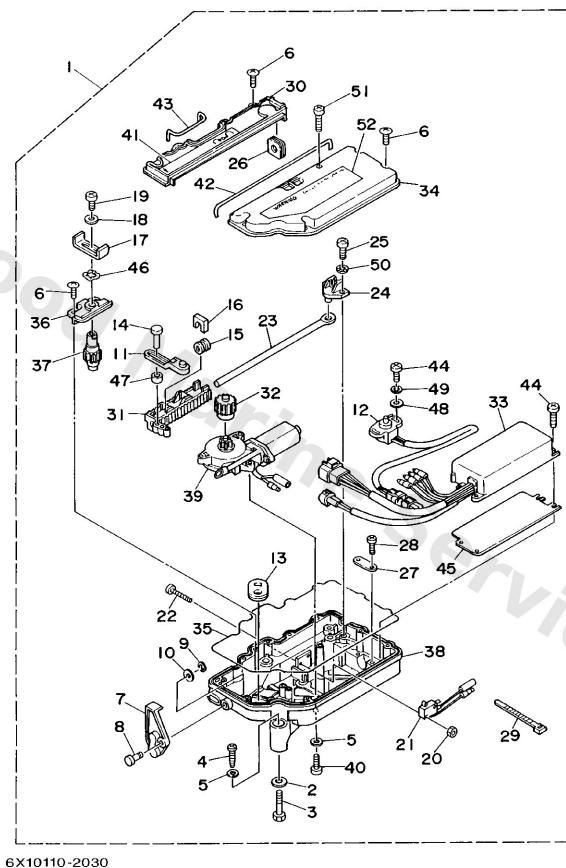


Ref	Part	
31	<a href="#">6X148232A0</a> Gear	<a href="#">Buy now</a>
32	<a href="#">6X148233A0</a> Gear 2	<a href="#">Buy now</a>
33	<a href="#">6X18559020</a> Control Unit assembly	<a href="#">Buy now</a>
34	<a href="#">6X148119A0</a> -	<a href="#">Buy now</a>
35	<a href="#">6X14835300</a> Bush, Rubber	<a href="#">Buy now</a>
36	<a href="#">6X14851700</a> Cap	<a href="#">Buy now</a>
37	<a href="#">6X14812200</a> -	<a href="#">Buy now</a>
38	<a href="#">6X148211A0</a> Housing,1	<a href="#">Buy now</a>
39	<a href="#">6X18621000</a> Motor assembly	<a href="#">Buy now</a>
40	<a href="#">6X148281A0</a> Screw (M6X1.0X35)	<a href="#">Buy now</a>
41	<a href="#">6X11448800</a> -	<a href="#">Buy now</a>
42	<a href="#">6X14835310</a> Bush, Rubber	<a href="#">Buy now</a>
43	<a href="#">6X14835320</a> Bush, Rubber	<a href="#">Buy now</a>
44	<a href="#">6X14812900</a> -	<a href="#">Buy now</a>
45	<a href="#">6X14821300</a> Back Plate 2	<a href="#">Buy now</a>

# Remote Control Assy1 (Actuator)

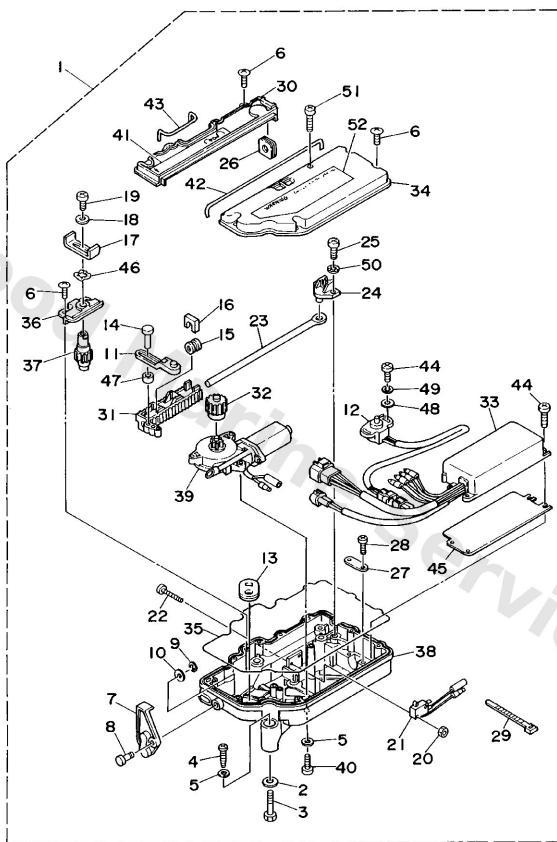

Ref	Part	
46	<a href="#">6X14855500</a> Washer, Wave	<a href="#">Buy now</a>
47	<a href="#">6X14824600</a> Spacer	<a href="#">Buy now</a>
48	<a href="#">9299005200</a> Ybs66-5 washer, plain	<a href="#">Buy now</a>
49	<a href="#">9299005100</a> Ybs67-5 washer, spring	<a href="#">Buy now</a>
50	<a href="#">9299005300</a> Washer, tooth	<a href="#">Buy now</a>
51	<a href="#">6X14812800</a> -	<a href="#">Buy now</a>
52	<a href="#">6X11343700</a> -	<a href="#">Buy now</a>


## Remote Control Assy2 (Junction)

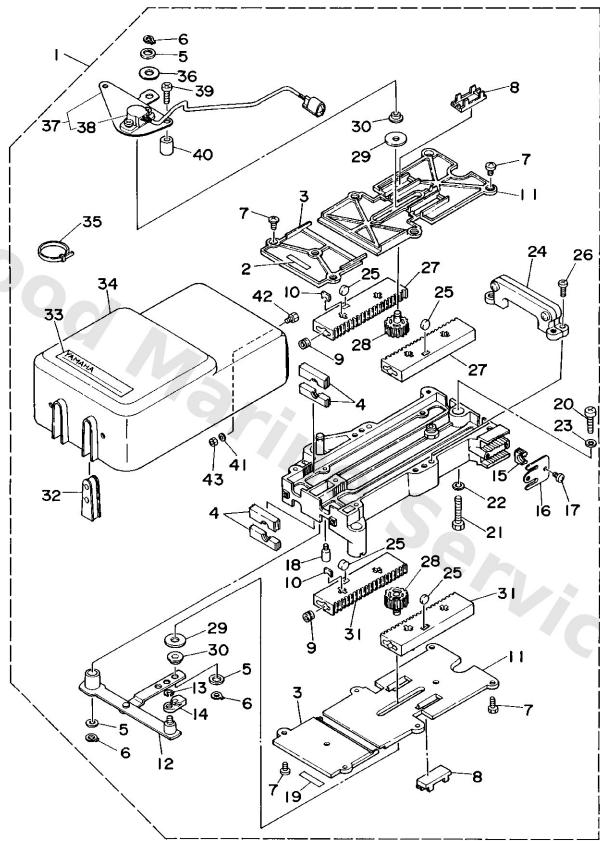

6X10110-2040

Ref	Part	
1	<a href="#">6X14820802</a> Junction Box (Dual Station)	<a href="#">Buy now</a>
2	<a href="#">6X14812500</a> -	<a href="#">Buy now</a>
3	<a href="#">6X14822900</a> Cover	<a href="#">Buy now</a>
4	<a href="#">6X14833100</a> Hook Cable	<a href="#">Buy now</a>
5	<a href="#">6X14828800</a> Washer, Plain	<a href="#">Buy now</a>
6	<a href="#">EL84825900</a> Circlip 1	<a href="#">Buy now</a>
7	<a href="#">EL84812700</a> Screw 1	<a href="#">Buy now</a>
8	<a href="#">6X14813800</a> Cap, lock arm	<a href="#">Buy now</a>
9	<a href="#">6X14833300</a> Cable, end	<a href="#">Buy now</a>
10	<a href="#">6X14835400</a> Set-plate, cable	<a href="#">Buy now</a>
11	<a href="#">6X14823500</a> Cover 1	<a href="#">Buy now</a>
12	<a href="#">6X14826100</a> Arm, Throttle	<a href="#">Buy now</a>
13	<a href="#">9343006024</a> Circlip (701)	<a href="#">Buy now</a>
14	<a href="#">7034834501</a> Cable end, remote control 2	<a href="#">Buy now</a>
15	<a href="#">6X14836100</a> Hook, Cable	<a href="#">Buy now</a>


## Remote Control Assy2 (Junction)

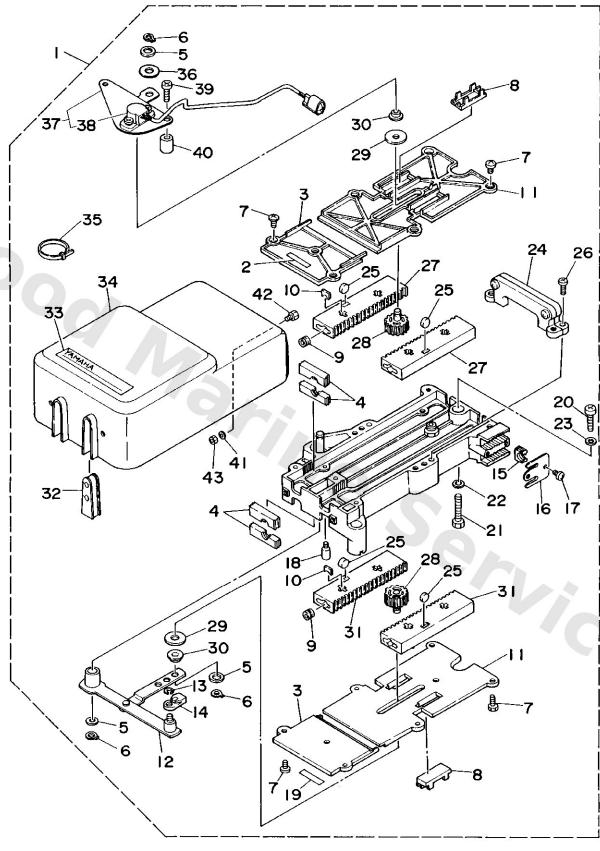

6X10110-2040

Ref	Part	
16	<a href="#">6X14814700</a> -	<a href="#">Buy now</a>
17	<a href="#">9858005010</a> Screw, pan head(62x)	<a href="#">Buy now</a>
18	<a href="#">6X14816300</a> -	<a href="#">Buy now</a>
19	<a href="#">6X14812600</a> -	<a href="#">Buy now</a>
20	<a href="#">6X04812800</a> Screw 2	<a href="#">Buy now</a>
21	<a href="#">6X14817100</a> -	<a href="#">Buy now</a>
22	<a href="#">9299008600</a> Washer, plain (663)	<a href="#">Buy now</a>
23	<a href="#">7024828800</a> Washer, Plain	<a href="#">Buy now</a>
24	<a href="#">6X14827401</a> Shift Housing Comp.	<a href="#">Buy now</a>
25	<a href="#">6X14823600</a> Roller, Detent	<a href="#">Buy now</a>
26	<a href="#">6X14828100</a> Screw (M5X0.8X12)	<a href="#">Buy now</a>
27	<a href="#">6X14823200</a> Gear	<a href="#">Buy now</a>
28	<a href="#">6X14823300</a> Gear 2	<a href="#">Buy now</a>
29	<a href="#">6X14828700</a> Washer	<a href="#">Buy now</a>
30	<a href="#">6X14823400</a> Bushing 1	<a href="#">Buy now</a>

## Remote Control Assy2 (Junction)

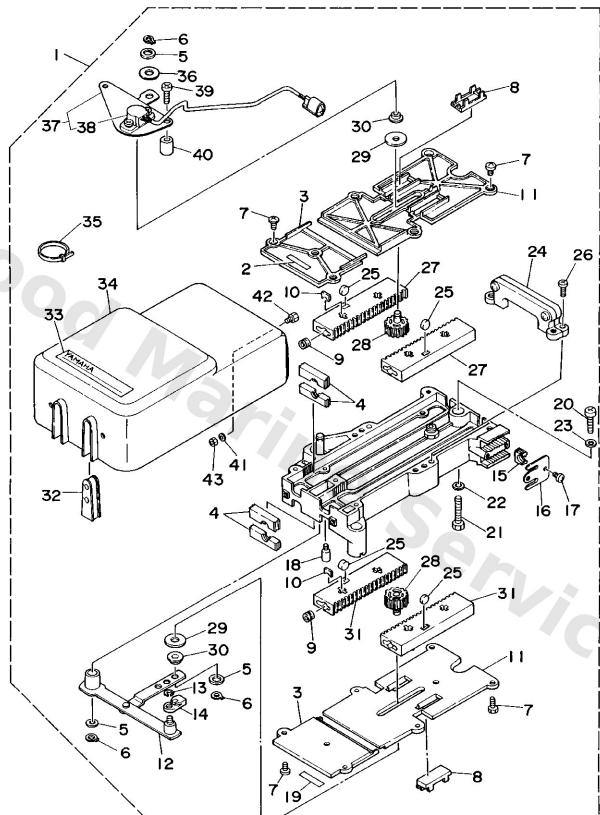

Ref	Part	
31	<a href="#">6X14812100</a> -	<a href="#">Buy now</a>
32	<a href="#">6X14816600</a> -	<a href="#">Buy now</a>
33	<a href="#">6X14822500</a> Graphic	<a href="#">Buy now</a>
34	<a href="#">6X14811900</a> -	<a href="#">Buy now</a>
35	<a href="#">7038259100</a> Band	<a href="#">Buy now</a>
36	<a href="#">7014826600</a> Spacer 2	<a href="#">Buy now</a>
37	<a href="#">6X14827102</a> Arm, Shift	<a href="#">Buy now</a>
38	<a href="#">6X28588510</a> Throttle sensor assembly	<a href="#">Buy now</a>
39	<a href="#">6X14828300</a> Screw (M5X0.8X25)	<a href="#">Buy now</a>
40	<a href="#">6X14829300</a> Spacer, Remote Control	<a href="#">Buy now</a>
41	<a href="#">9299005200</a> Ybs66-5 washer, plain	<a href="#">Buy now</a>
42	<a href="#">6X14816500</a> -	<a href="#">Buy now</a>
43	<a href="#">9538005600</a> Nut, hexagon (663)	<a href="#">Buy now</a>

# Disclaimer

This document is provided for convenience only. It is **not** an official Yamaha publication and is **not supplied, endorsed, or approved** by Yamaha Motor Co., Ltd.

Reasonable efforts are made to keep information accurate; however diagrams, part references, supersessions, descriptions, and applicability may contain errors or omissions. Specifications and part availability may change without notice.

You are responsible for confirming the correct parts for your engine (including model code, year, serial range, and any superseded part numbers) before ordering or fitting.