



Yamaha FL115AET 2002

Parts Manual

www.floodmarine.co.uk

+44 2882 246 539

 
Authorised Yamaha Dealers



Contents

BOTTOM COWLING	3
BRACKET 1	6
BRACKET 2	9
CONTROL	12
CRANKSHAFT. PISTON	15
CYLINDER. CRANKCASE 1	17
CYLINDER. CRANKCASE 2	20
ELECTRICAL 1	23
ELECTRICAL 2	24
ELECTRICAL 3	27
FUEL 1	29
FUEL 2	32
FUEL INJECTION NOZZLE	33
FUEL INJECTION PUMP	35
GENERATOR	38
INTAKE 1	40
INTAKE 2	42
LOWER CASING. DRIVE 1	45
LOWER CASING. DRIVE 2	51
LOWER CASING. DRIVE 3	54
LOWER CASING. DRIVE 4	60
METER	62
OIL PAN	64
POWER TRIM & TILT ASSY 1	66
POWER TRIM & TILT ASSY 2	69
REMOTE CONTROL ASSY 1	72
REMOTE CONTROL ASSY 2	77
REMOTE CONTROL BOX	83
REPAIR KIT 1	84
REPAIR KIT 2	86
STARTING MOTOR	88
STEERING 1	91
STEERING 2	95
STEERING FRICTION	98
STEERING GUIDE ATTACHMENT 1	100
STEERING GUIDE ATTACHMENT 2	101
SWITCH. PANEL	102
TOP COWLING	104
UPPER CASING	107
VALVE	109


Bottom Cowling

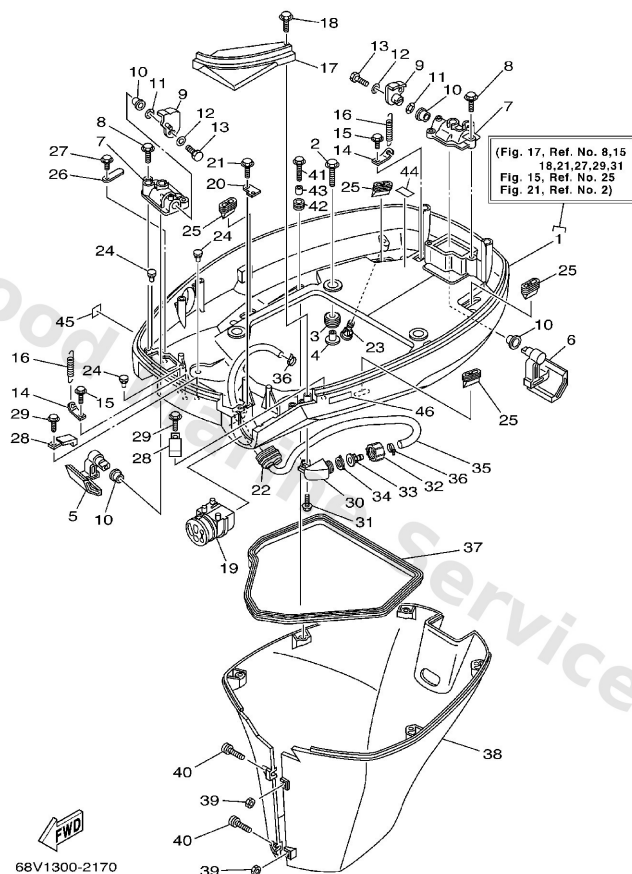

E4

Ref	Part	
1	68V-42710-00-8D Bottom cowling assembly	Buy now
2	90119-08M22 Bolt, with washer	Buy now
3	90480-22M15 Grommet (6e5)	Buy now
4	90387-08M37 Coller (6e5)	Buy now
5	67F-42815-00-8D Lever, clamp	Buy now
6	67F-42816-00-8D Lever, clamp	Buy now
7	67F-42828-00-5B Plate, clamp	Buy now
8	90109-06M82 Bolt	Buy now
9	68V-42818-00 Lever, clamp	Buy now
10	90386-15M73 Bush(6l2)	Buy now
11	90206-15M18 Washer, wave(6l2)	Buy now
12	90201-06068 Washer,plate (6k8)	Buy now
13	97095-06016 Bolt, hexagon deep recess	Buy now
14	64D-43144-00 Hook, spring	Buy now
15	90109-06M80 Bolt	Buy now

 
Bottom Cowling

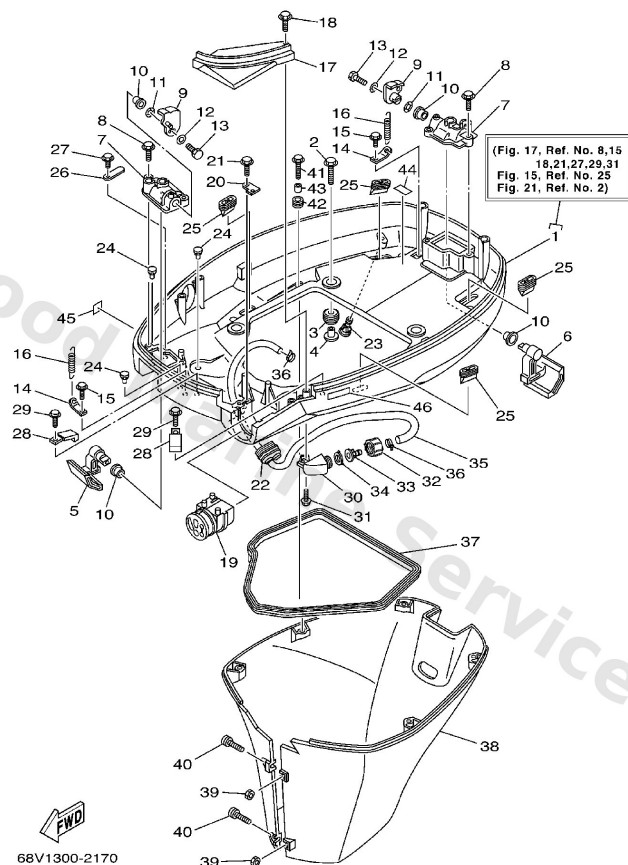

E4

Ref	Part	
16	90506-16M34 Spring, tension(64d)	Buy now
17	68V-42738-00-5B Plate, fitting	Buy now
19	68V-42725-00 Grommet	Buy now
20	67F-42756-00 Stay, clamp	Buy now
21	90109-06M86 Bolt	Buy now
22	6H1-42726-20 Grommet FLUSHING KIT	Buy now
23	6H3-44391-01 Nipple, hose	Buy now
24	6H4-42748-00 Grommet	Buy now
25	67F-42717-00 Rubber, seal 2	Buy now
26	6E5-82588-00 Plate	Buy now
27	90109-06M81 Bolt	Buy now
28	90465-08M23 Clamp (6h3)	Buy now
30	67F-12572-00 Adapter FLUSHING KIT	Buy now
32	6R3-12581-00 Joint, hose 1 FLUSHING KIT	Buy now
33	6R3-12582-00 Joint, hose 2 FLUSHING KIT	Buy now

 
Bottom Cowling

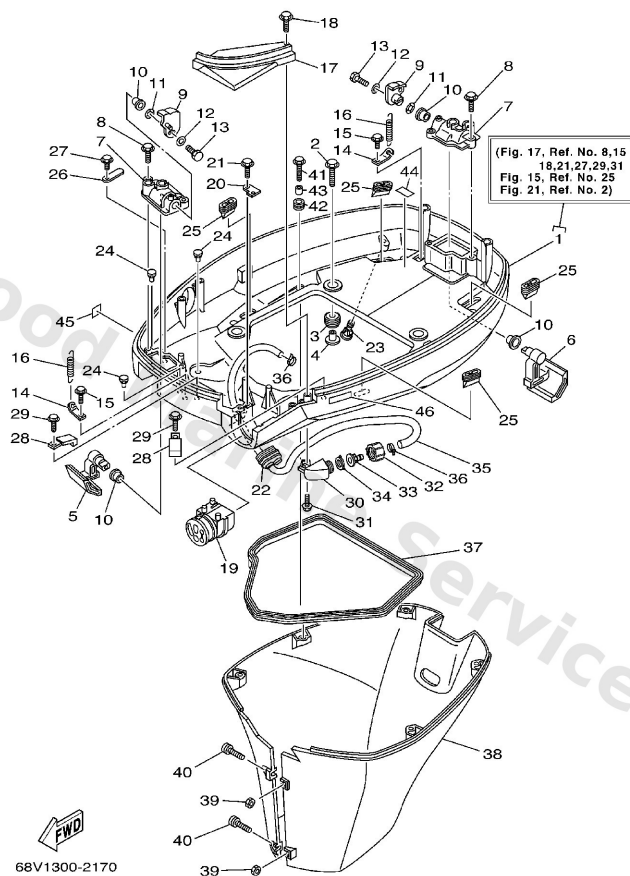

E4


Ref	Part	
34	6R3-12583-00 Gasket, hose joint FLUSHING KIT	Buy now
35	68V-24312-00 Pipe 2 FLUSHING KIT	Buy now
36	90465-11M10 Clamp FLUSHING KIT	Buy now
37	61A-42716-00 Rubber seal 1	Buy now
38	67F-42741-00-8D Apron	Buy now
39	95380-06600 Nut(661)	Buy now
40	90159-06M28 Screw, with washer	Buy now
42	90480-13M24 Grommet (6e9)	Buy now
43	90387-06M43 Collar (6e9)	Buy now
44	68V-82377-00 Label	Buy now
45	6A1-28176-00 Label Caution	Buy now
46	6E3-8257H-00 Plate Mark	Buy now

 Bracket 1

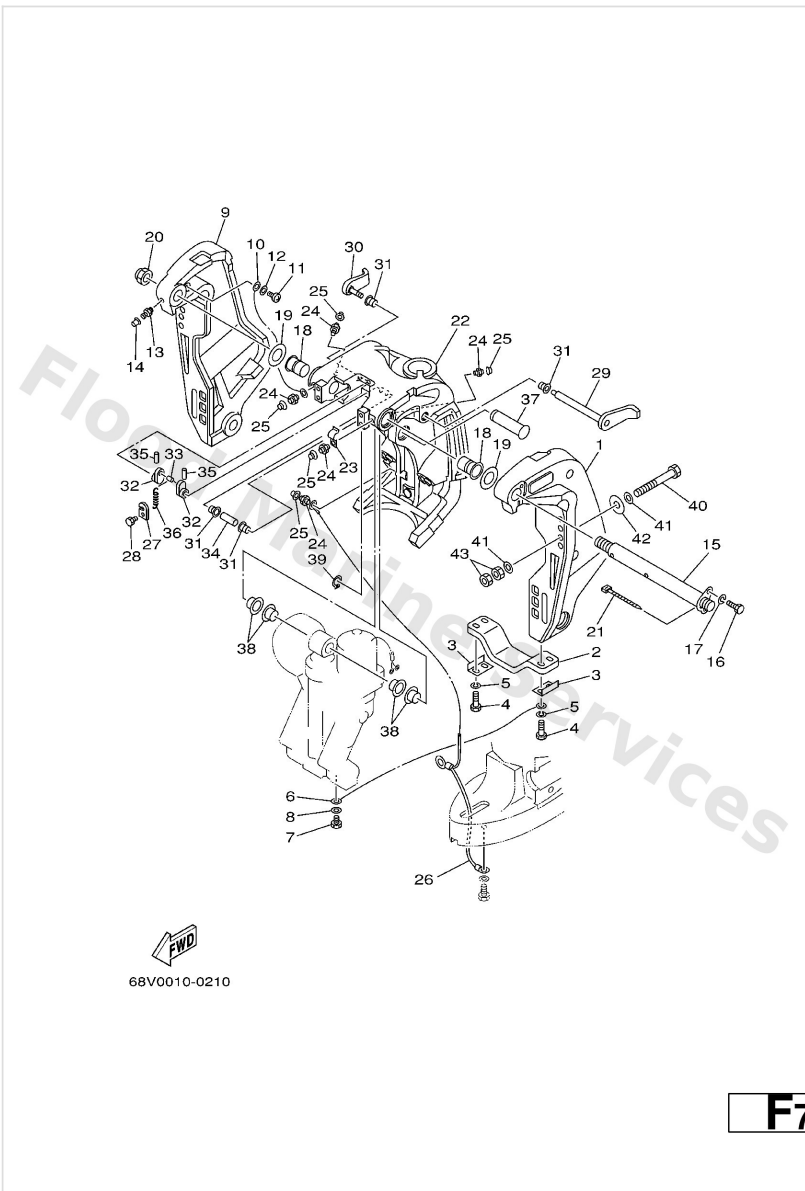


Ref	Part	
1	68V-43111-01-8D Bracket, clamp	Buy now
2	6G5-45251-01 Anode	Buy now
3	6G5-44526-00 Plate	Buy now
4	97095-06030 Bolt(jf7)	Buy now
5	92995-06100 Washer(6a1)	Buy now
6	6E5-82148-00 Wire, lead 5	Buy now
7	97095-06010 Bolt	Buy now
8	92995-06600 Washer, plain (646)	Buy now
9	68V-43112-01-8D Bracket, clamp	Buy now
11	97880-06012 Screw, pan head(62j)	Buy now
12	92990-06600 Washer, plain (646)	Buy now
13	93700-06M03 Nipple, grease(6a1)	Buy now
14	663-45119-00 Cap, grease nipple AP	Buy now
15	64E-43131-01 Bolt, clamp bracket	Buy now
16	97095-08020 Bolt, hexagon	Buy now

 Bracket 1

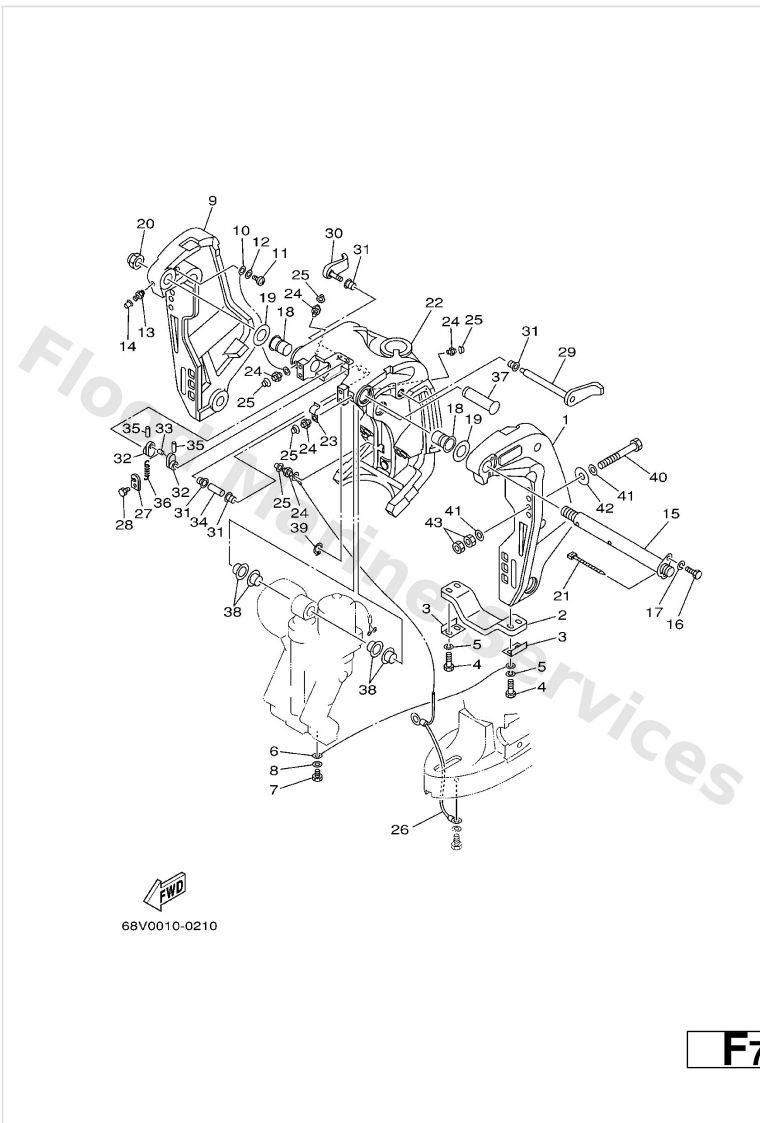


Ref	Part	
17	92995-08100 Ybs67-8 washer, spring	Buy now
18	90386-25M31 Bushing (6e5)	Buy now
19	90201-26M59 Washer, plate (6e5)	Buy now
20	90185-22M11 Nut, self-locking	Buy now
21	90465-11M10 Clamp	Buy now
22	64E-43311-10-8D Bracket, swivel L	Buy now
22	64E-43311-20-8D Bracket, swivel X	Buy now
23	90465-08M63 Clamp(61u)	Buy now
26	66K-82149-00 Wire, lead 3 L	Buy now
26	68V-82149-30 Wire, lead 3 X	Buy now
27	66T-43144-00 Hook, spring	Buy now
29	6G5-43181-02 Lever, tilt stop 1	Buy now
30	6G5-43185-02 Lever, tilt stop 2	Buy now
31	90386-10M16 Bushing (688)	Buy now
32	6G5-43148-00 Collar, distance	Buy now

 Bracket 1

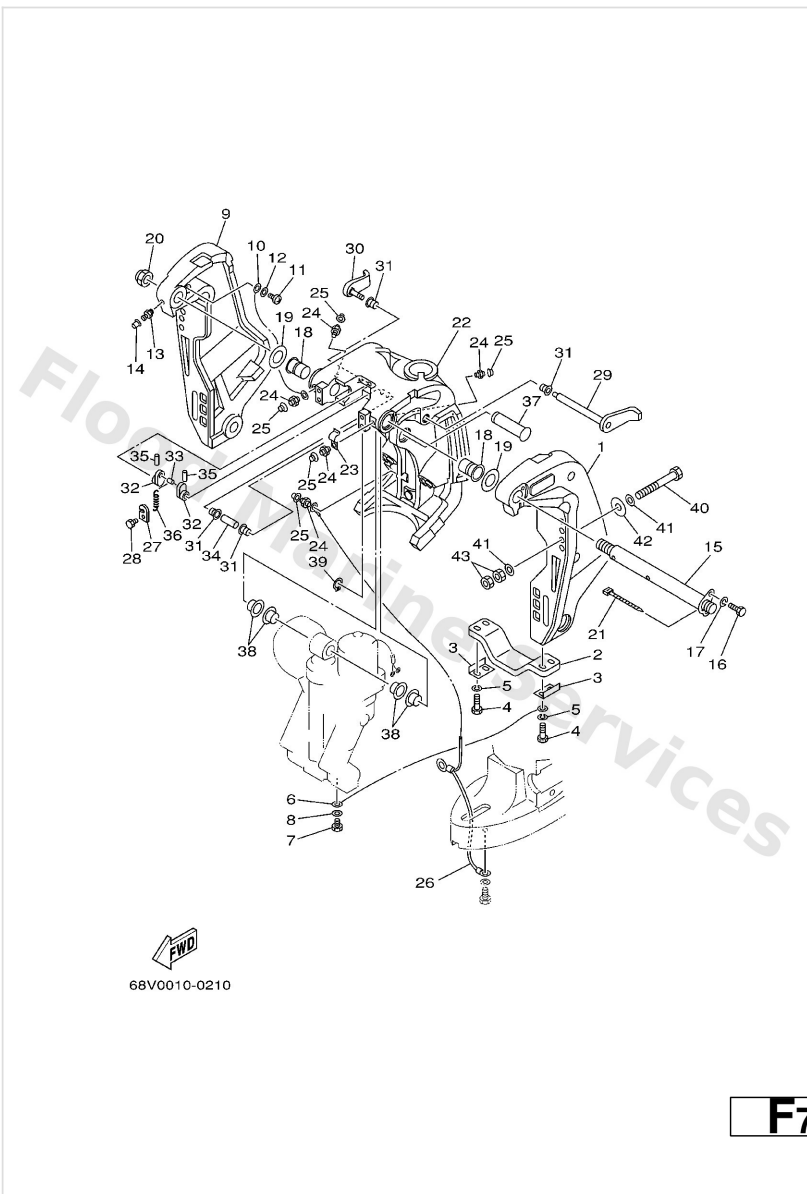

Ref	Part	
33	90249-06M19 Pin(6e5)	Buy now
34	90387-10M05 Collar(6e5)	Buy now
35	91690-30020 Pin, spring (6h4)	Buy now
36	90506-14M24 Spring, tension(6e5)	Buy now
37	64E-43126-00 Pin, upper shock mount	Buy now
38	90386-22M98 Bush(61u)	Buy now
39	93410-22M11 Circlip(61u)	Buy now
40	90101-12M05 Bolt (l:130mm)	Buy now
41	90201-13M01 Washer, plate(6e5)	Buy now
42	90201-12M05 Washer, plate(6e3)	Buy now
43	95380-12600 Nut (707)	Buy now

 Bracket 2

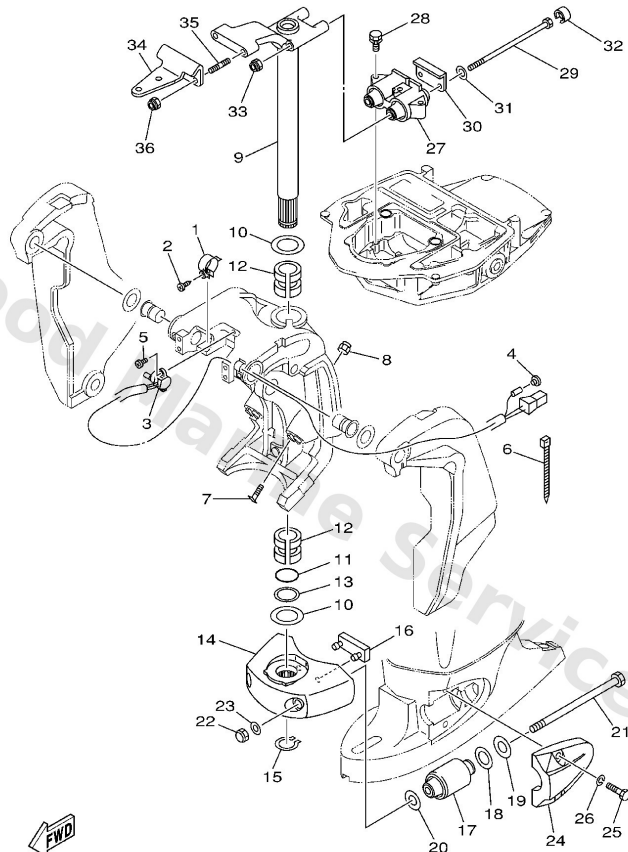


68V0010-0220

A5


Ref	Part	
1	64E-43139-02 Cam, trim sender (with screw)	Buy now
2	97780-60525 Screw, tapping(65j)	Buy now
3	64E-83672-02 Trim sender	Buy now
4	703-82119-00 Cover, lead wire	Buy now
5	97885-06016 Screw, pan head(6b0)	Buy now
6	90465-11M10 Clamp	Buy now
7	61A-43376-00 Bolt, thrust receiver	Buy now
8	95780-10300 Nut, nylon (6e5)	Buy now
9	68V-42510-10-8D Steering bracket assembly L	Buy now
9	68V-42510-30-8D Steering bracket assembly X	Buy now
10	90201-38M60 Washer, plate (6e5)	Buy now
11	93210-37MH7 O-ring(61u)	Buy now
12	90386-38M32 Bush(6e5)	Buy now
13	90202-40M47 Washer, plate(61a)	Buy now
14	68V-44551-00-8D Housing, lower mount rubber	Buy now

 Bracket 2

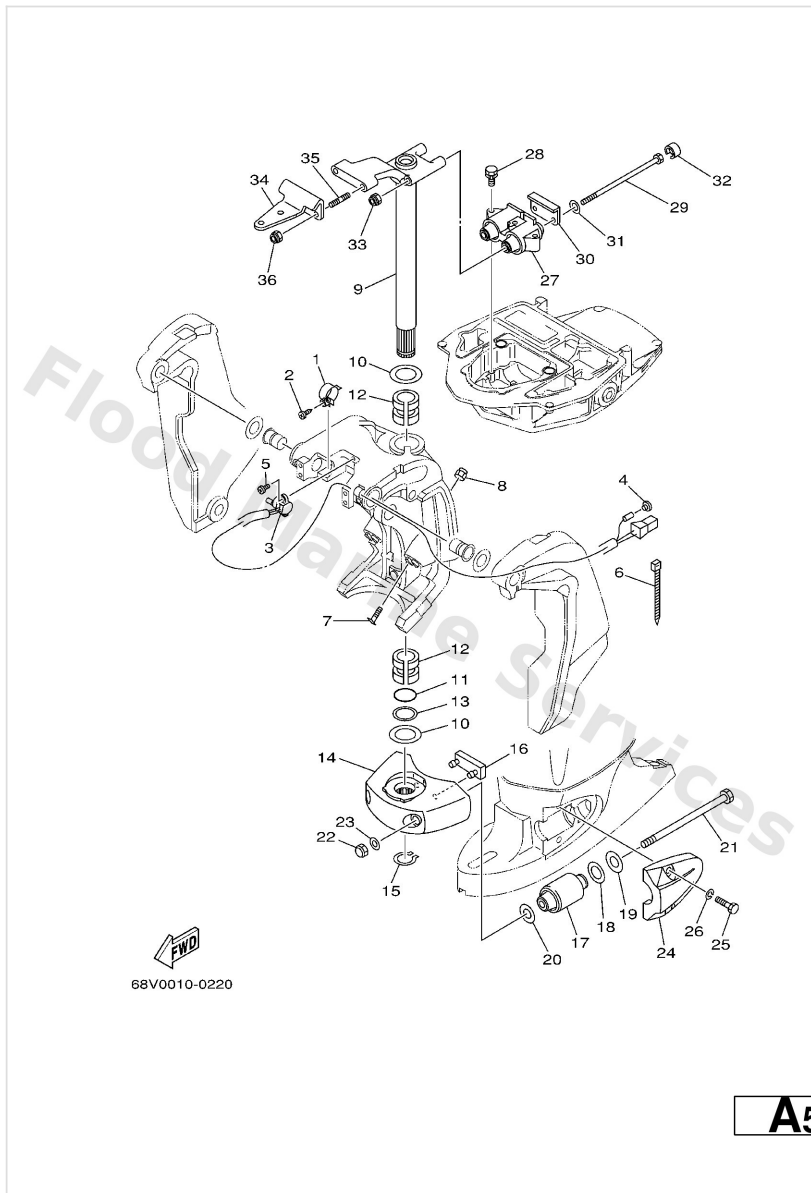

Ref	Part	
15	93410-37M04 Circlip (6e5)	Buy now
16	61A-44575-00 Damper, lower mount rubber	Buy now
17	61A-44555-01-94 Mount damper, lower side	Buy now
18	90202-32M19 Washer, plate (6e5)	Buy now
19	90201-16M55 Washer, plate (6e5)	Buy now
20	90201-15M58 Washer, plate (6e5)	Buy now
21	90109-14MA7 Bolt	Buy now
22	95380-14600 Nut,hex. (ge6)	Buy now
23	92995-14600 Washer (6e5)	Buy now
24	68V-44553-00-8D Cover, lower mount	Buy now
25	97075-10040 Bolt, hexagon deep recess	Buy now
26	92995-10100 Ybs67-10 washer, spring	Buy now
27	67F-44514-00-94 Mount damper, upper side	Buy now
28	97575-08445 Bolt, hexagon w/w deep recess	Buy now
29	90109-12M37 Bolt	Buy now

 Bracket 2

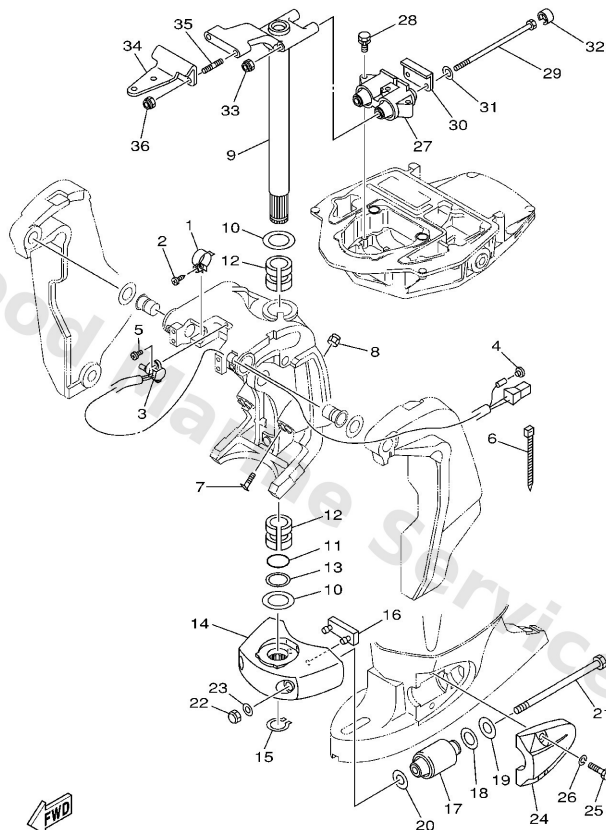


68V0010-0220

A5


Ref	Part	
30	67F-44526-00 Plate	Buy now
31	90201-12M09 Washer, plate	Buy now
32	67F-44533-00 Damper, upper mount rubber	Buy now
33	90185-12M12 Nut, self-locking(6e5)	Buy now
34	68V-48511-00-8D Hook, steering	Buy now
35	90116-10175 Bolt, stud	Buy now
36	90185-10051 Nut, self-locking	Buy now

 Control

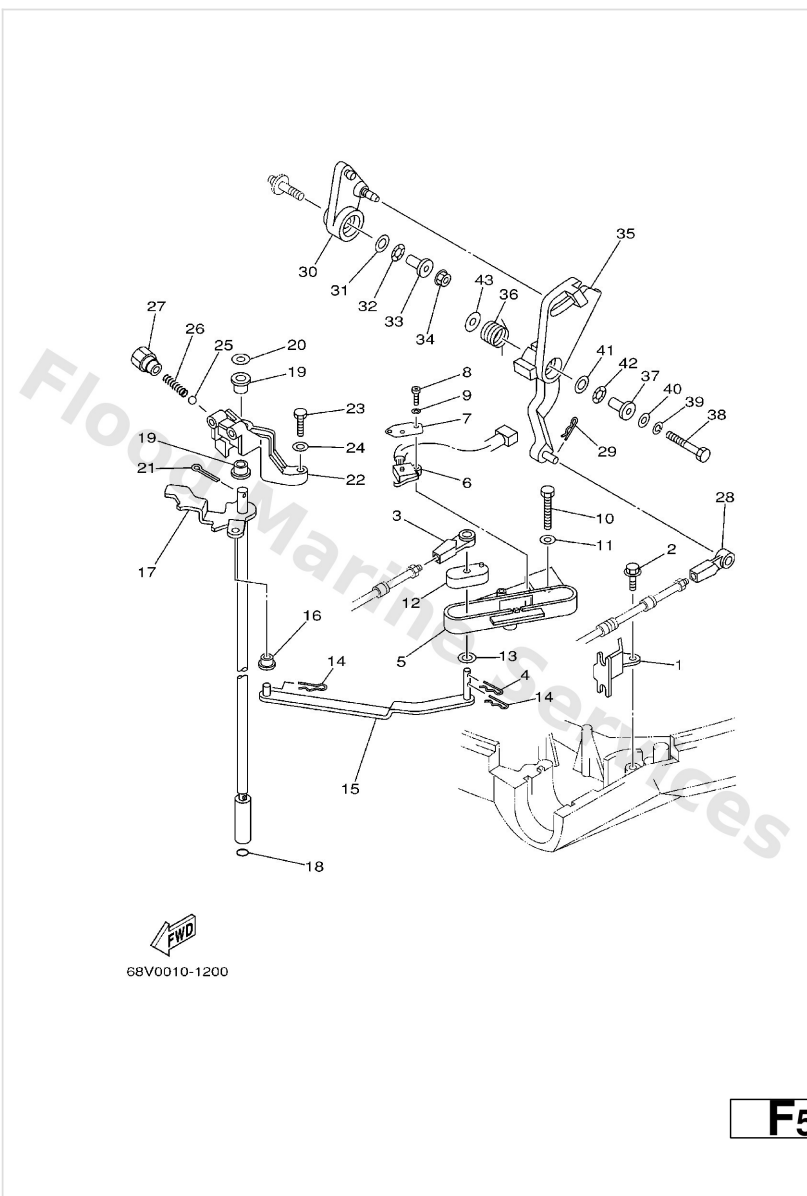

Ref	Part	
1	67F-48538-00 Clamp, cable 1	Buy now
2	90109-06M86 Bolt	Buy now
3	663-48344-00 Cable end, remote control	Buy now
4	90468-18008 Clip 620436610000	Buy now
5	68V-44117-00 Bracket	Buy now
6	68F-8259F-00 Switch assembly	Buy now
7	61A-82588-00 Plate	Buy now
8	97885-04016 Screw, panhead (796)	Buy now
9	92995-04100 Ybs67-4 washer, spring	Buy now
10	97095-06040 Bolt (682)	Buy now
11	92995-06600 Washer, plain (646)	Buy now
12	68V-44122-01 Bushing, shift rod lever	Buy now
13	90202-07M07 Washer, plate (688)	Buy now
15	68V-44121-00 Lever, shift rod	Buy now
16	90386-06M12 Bushing (688)	Buy now

 Control

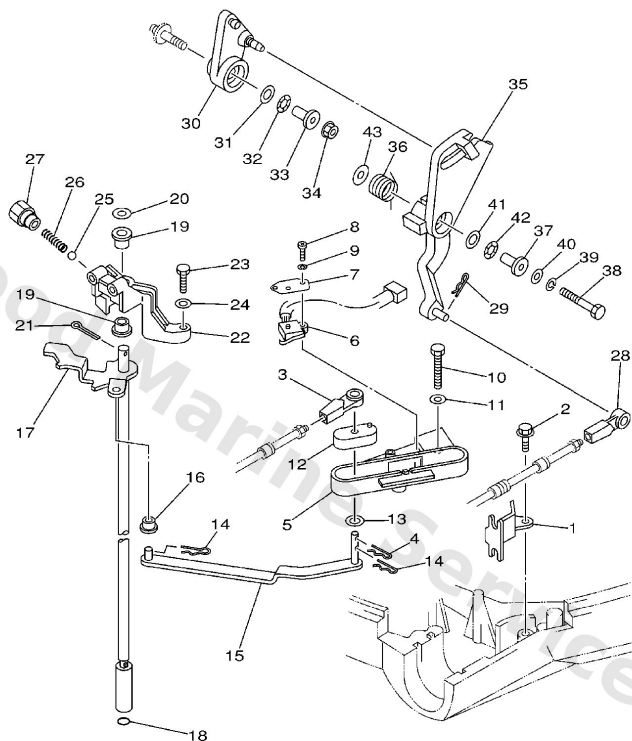


FWD
68V0010-1200

F5

Ref	Part	
17	68V-44120-10 Handle gear shift assembly L	Buy now
17	68V-44120-30 Handle gear shift assembly X	Buy now
18	93210-09165 O-ring	Buy now
19	90386-90M90 Bush(61a)	Buy now
20	90201-09M02 Washer, plate(61a)	Buy now
21	91490-20015 Pin, cotter (648)	Buy now
22	68V-44118-00 Bracket	Buy now
23	97075-06025 Bolt	Buy now
25	93501-04M02 Ball (697)	Buy now
26	90501-12082 Spring 6484411600	Buy now
27	648-42715-00 Bushing 2	Buy now
30	68V-42157-00 Lever, throttle	Buy now
31	90201-10M02 Washer, plate(6g9)	Buy now
32	90206-10M04 Washer, wave (676)	Buy now
33	90387-06M21 Collar	Buy now

 Control

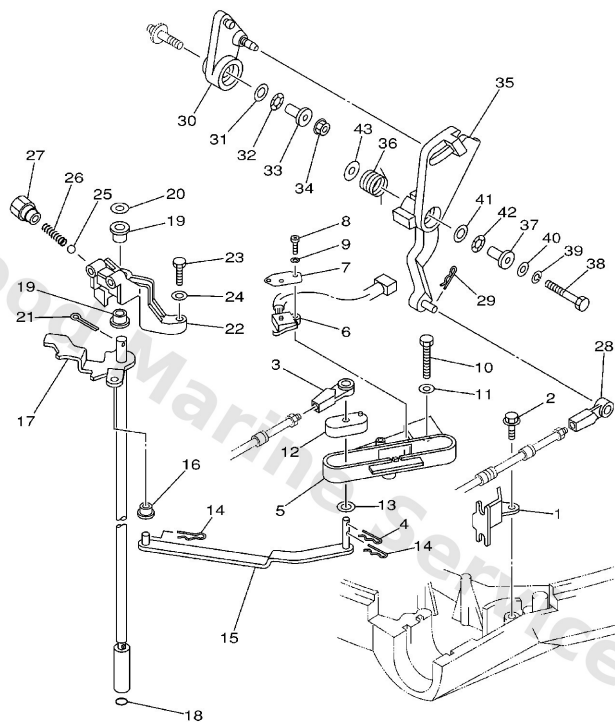



68V0010-1200

F5


Ref	Part	
34	90179-06M28 Nut(63v)	Buy now
35	68V-42154-00 Lever, throttle control	Buy now
36	67F-44135-00 Spring	Buy now
38	97095-06035 Bolt(j52)	Buy now
39	92995-06100 Washer(6a1)	Buy now
43	90201-06M31 Washer (6a0)	Buy now

 Crankshaft. Piston

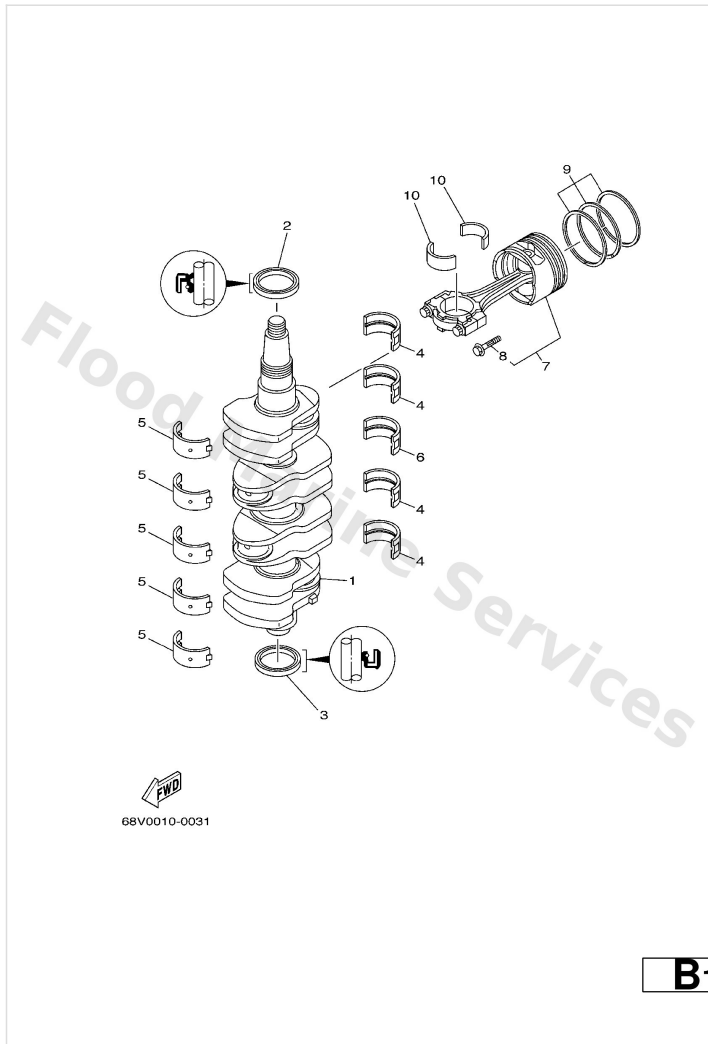

Ref	Part	
1	68V-11411-00 Crankshaft	Buy now
2	93102-48009 Oil seal	Buy now
3	93101-48002 Oil seal	Buy now
4	67F-11416-00 Plane bearing, crankshaft 1 UR GREEN	Buy now
4	67F-11416-10 Plane bearing, crankshaft 1 UR BLUE	Buy now
4	67F-11416-20 Plane bearing, crankshaft 1 UR RED	Buy now
5	67F-11417-00 Plane bearing, crankshaft 2 UR YELLOW	Buy now
5	67F-11417-10 Plane bearing, crankshaft 2 UR GREEN	Buy now
5	67F-11417-20 Plane bearing, crankshaft 2 UR BLUE	Buy now
5	67F-11417-30 Plane bearing, crankshaft 2 UR RED	Buy now
6	67F-11418-00 Plane bearing, crankshaft 3 UR GREEN	Buy now
6	67F-11418-10 Plane bearing, crankshaft 3 UR BLUE	Buy now
6	67F-11418-20 Plane bearing, crankshaft 3 UR RED	Buy now
7	68V-W1164-00 Piston/con-rod assembly std	Buy now
7	68V-W1164-10 Piston/con-rod assembly(0.25mm os) AP	Buy now

 
Crankshaft. Piston

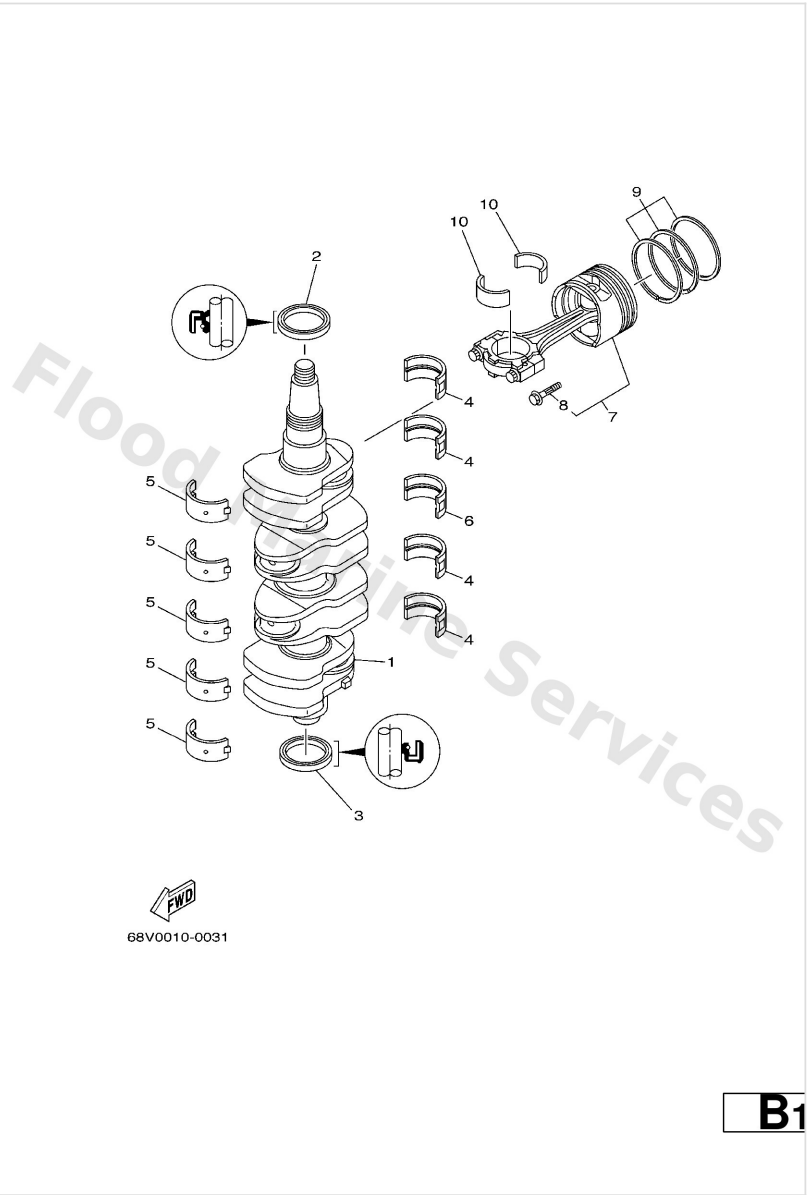

B1

Ref	Part	
8	K1C-A3275-00 Bolt, connecting rod	Buy now
9	67F-11603-01 Piston ring set (std)	Buy now
9	67F-11604-01 Piston ring set (0.25mm o/s) AP	Buy now
10	68V-11656-00 Plane bearing, connecting rod UR YELLOW	Buy now
10	68V-11656-10 Plane bearing, connecting rod UR GREEN	Buy now
10	68V-11656-20 Plane bearing, connecting rod UR BLUE	Buy now
10	68V-11656-30 Plane bearing, connecting rod UR RED	Buy now

 
Cylinder. Crankcase 1

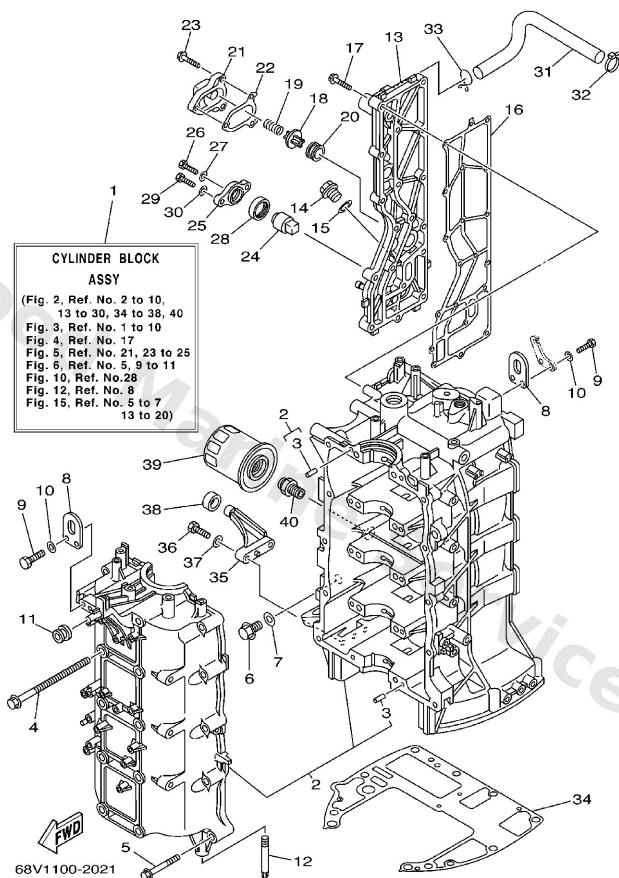

A6

Ref	Part	
3	93606-12019 Pin, dowel (614)	Buy now
4	90119-10M88 Bolt, with washer	Buy now
5	90119-08M66 Bolt, with washer	Buy now
6	90340-14M06 Plug, straight screw(62y)	Buy now
7	90430-14115 Gasket (663)	Buy now
8	62Y-11119-00 Hanger, engine	Buy now
9	97095-06020 Bolt(7u8)	Buy now
10	92995-06600 Washer, plain (646)	Buy now
11	90480-12072 Grommet(53y)	Buy now
12	67F-15142-00 Guide 1	Buy now
14	90340-18M09 Plug, straight screw	Buy now
15	90430-18130 Gasket (1j7)	Buy now
16	67F-41114-A0 Gasket, exhaust outer cover	Buy now
17	90119-06MA4 Bolt, with washer	Buy now
18	6G5-12416-00 Valve, pressure control	Buy now

 
Cylinder. Crankcase 1

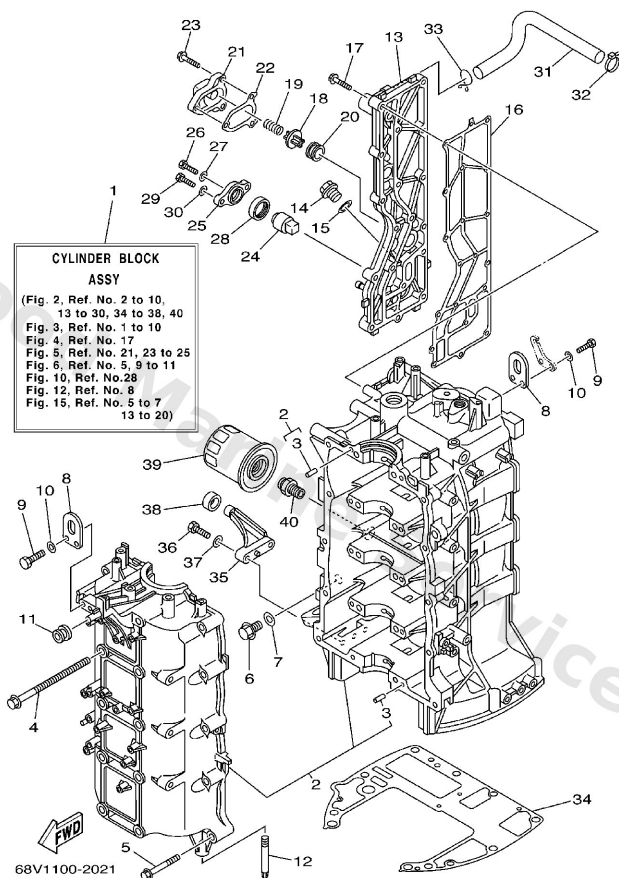

A6


Ref	Part	
19	90501-16M11 Spring, compression (688)	Buy now
20	90480-20M05 Grommet (688)	Buy now
22	67F-12435-A0 Gasket	Buy now
23	90119-06MA2 Bolt, with washer	Buy now
24	67F-11325-00 Anode	Buy now
26	97075-06020 Bolt(7u8)	Buy now
28	67F-11328-00 Grommet, anode	Buy now
29	97075-08025 Bolt, hexagon deep recess	Buy now
30	92995-08600 Washer, plain (663)	Buy now
31	67F-1243A-00 Hose 1	Buy now
32	90465-11M10 Clamp	Buy now
33	90467-20M15 Clip	Buy now
34	67F-11351-01 Gasket, cylinder	Buy now
35	67F-42761-00-94 Stopper	Buy now
36	97095-06025 Bolt	Buy now

 Cylinder. Crankcase 1

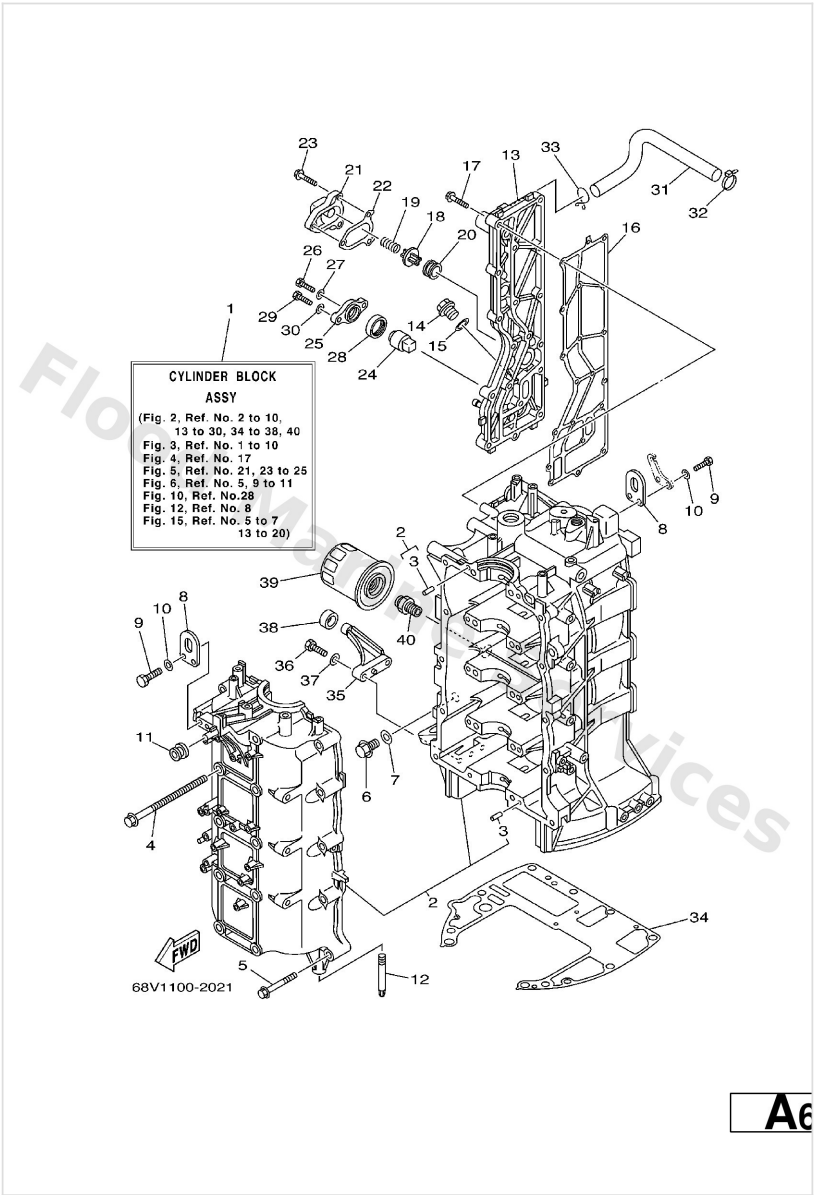


Ref	Part	
38	68F-44533-00 Damper, upper mount rubber	Buy now
39	5GH-13440-00 Element assembly, oil cleaner	Buy now
40	90401-20145 Bolt, union	Buy now

 Cylinder. Crankcase 2

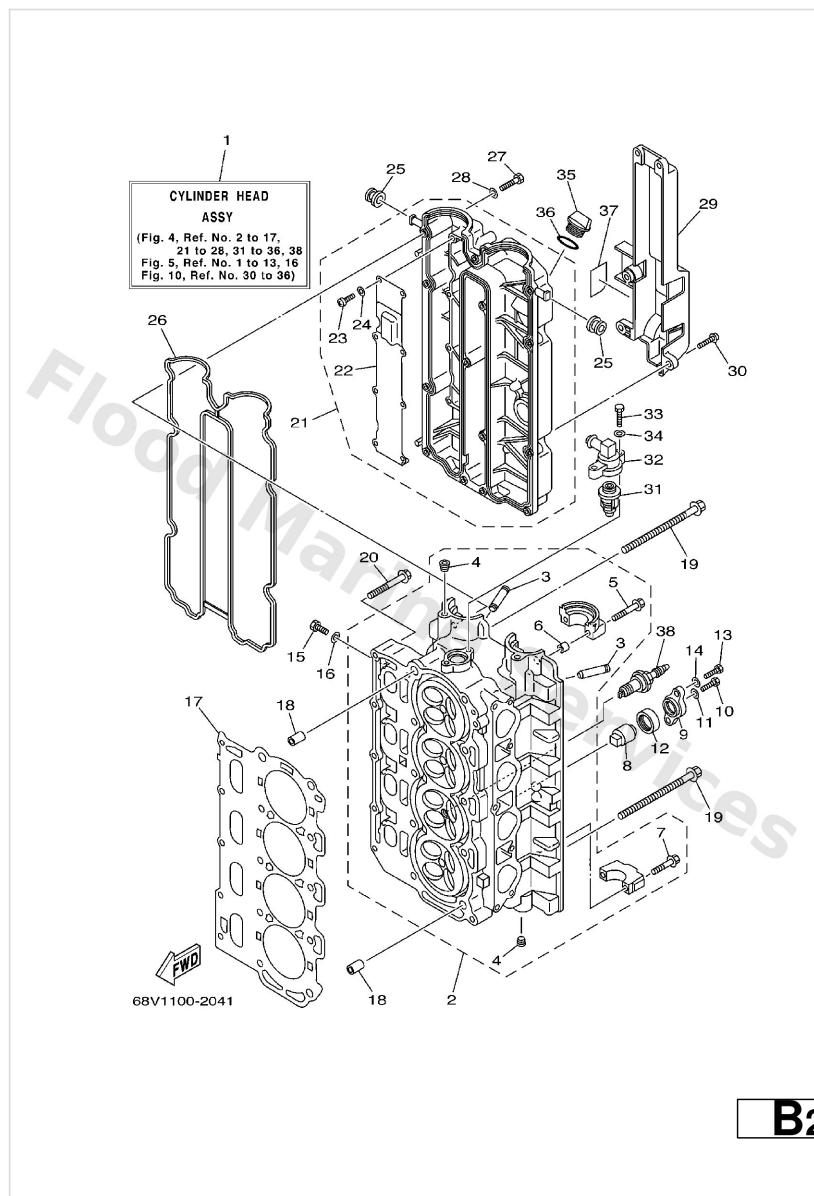


Ref	Part	
3	67F-11133-10 Guide, intake valve	Buy now
4	90344-51019 Plug, taper screw	Buy now
5	90119-07235 Bolt, with washer	Buy now
6	91809-08006 Pin, dowel	Buy now
7	90119-07234 Bolt, with washer	Buy now
8	67F-11325-00 Anode	Buy now
10	97075-06020 Bolt(7u8)	Buy now
11	92995-06600 Washer, plain (646)	Buy now
12	67F-11328-00 Grommet, anode	Buy now
13	97075-08025 Bolt, hexagon deep recess	Buy now
14	92995-08600 Washer, plain (663)	Buy now
15	97095-08014 Bolt, hexagon deep recess	Buy now
16	90430-08143 Gasket (256-11198-00)	Buy now
17	67F-11181-01 Gasket, cylinder head 1	Buy now
18	90387-10M08 Pin, dowel	Buy now

 Cylinder. Crankcase 2

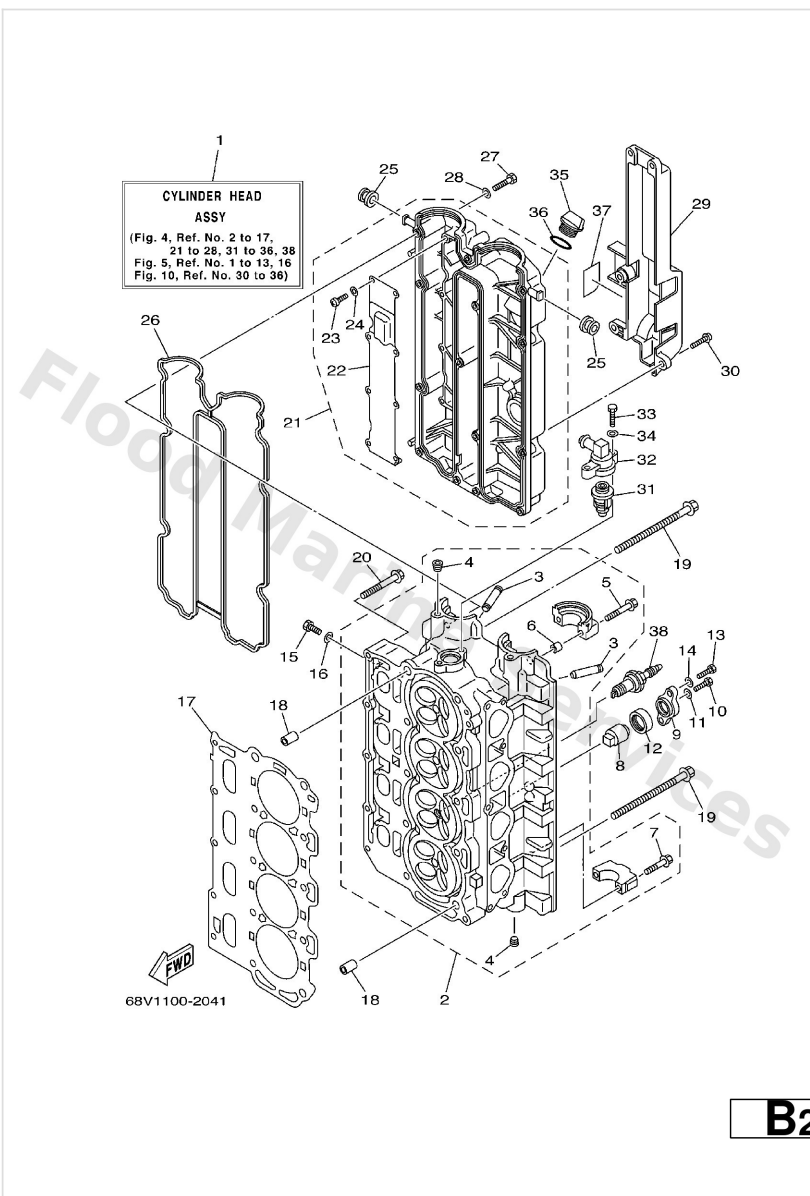


Ref	Part	
19	90105-10M89 Bolt, washer based	Buy now
20	90119-08M91 Bolt, with washer	Buy now
22	67F-11168-00 Cover, breather	Buy now
23	98507-04008 Screw, pan head(jg1)	Buy now
24	92907-04600 Washer(jf2)	Buy now
25	90480-12072 Grommet(53y)	Buy now
26	67F-11356-00 Seal, cylinder 2	Buy now
27	97095-06030 Bolt(jf7)	Buy now
29	67F-11192-00 Cover, cylinder head 2	Buy now
30	90159-06M29 Screw, with washer	Buy now
31	68V-12411-00 Thermostat	Buy now
32	68V-12413-00-1S Cover, thermostat	Buy now
33	97095-06025 Bolt	Buy now
35	6G8-15363-00 Plug, oil	Buy now
36	93210-24M79 O-ring	Buy now

 Cylinder. Crankcase 2

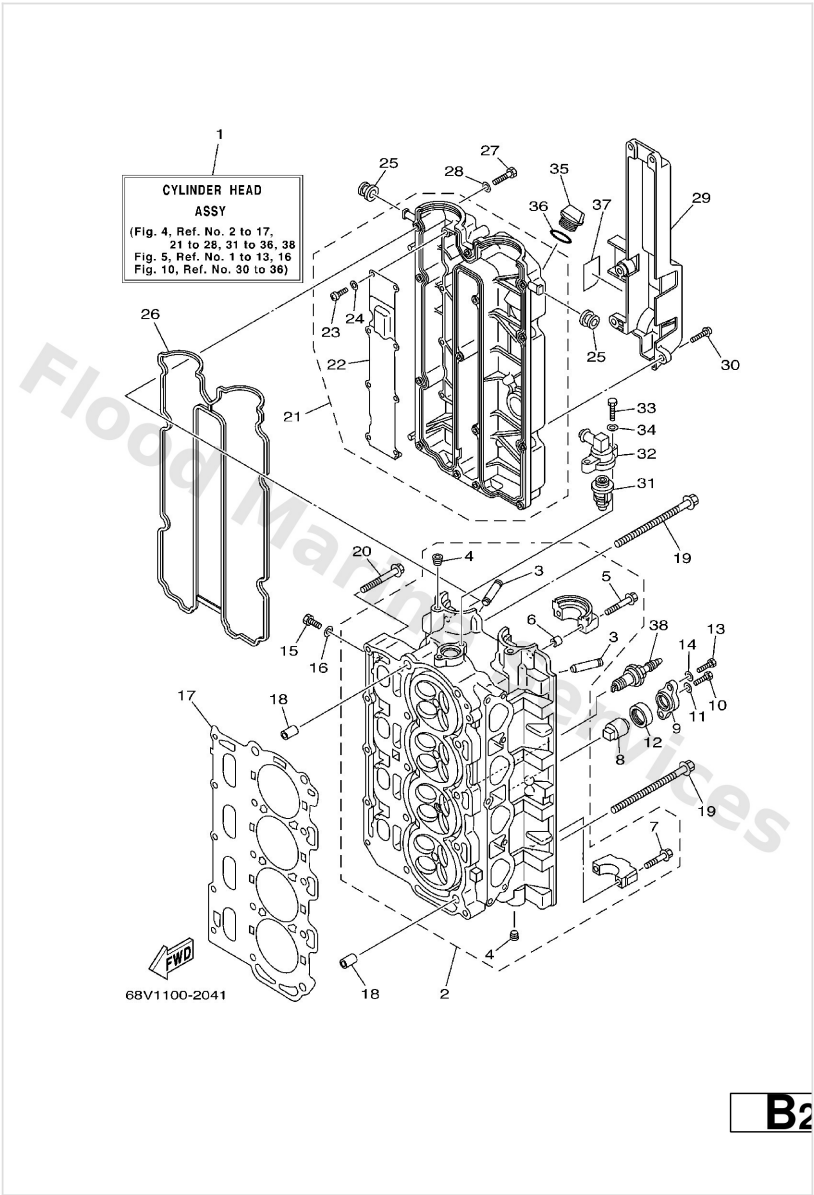

Ref	Part	
37	68V-83626-00 Mark 6	Buy now
38	94702-00400 Plug, spark (lfr6a-11)	Buy now

 
Electrical 1

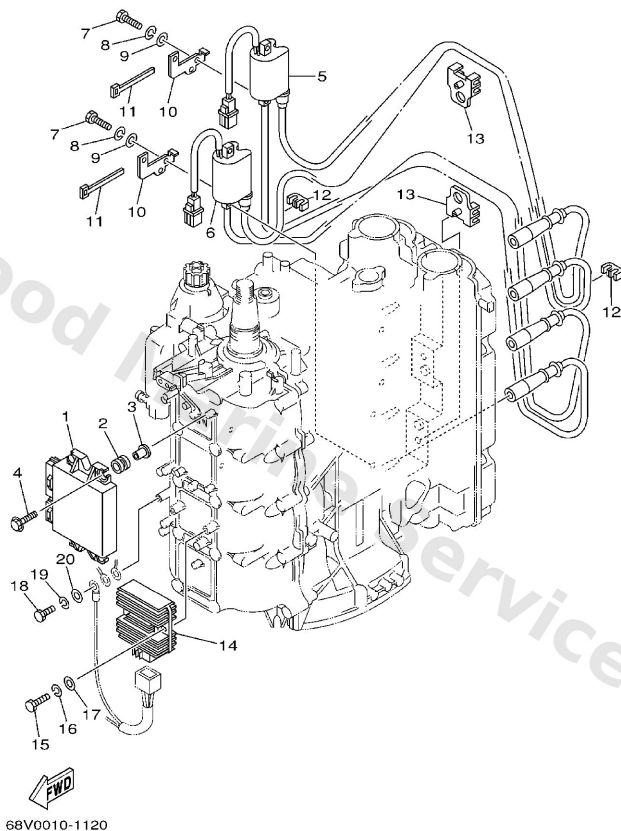

D5


Ref	Part	
1	68V-8591A-10 Engine control unit assembly	Buy now
2	68V-82317-00 Damper, ignition coil	Buy now
3	624-42542-00 Collar	Buy now
4	90119-06M59 Bolt, with washer	Buy now
5	68V-82310-00 Ignition coil assembly	Buy now
6	68V-82310-10 Ignition coil assembly	Buy now
7	97095-06025 Bolt	Buy now
8	92995-06100 Washer(6a1)	Buy now
9	92995-06600 Washer, plain (646)	Buy now
10	68V-82388-00 Plate	Buy now
11	90464-06001 Clamp	Buy now
12	67F-82361-00 Clamp, cord	Buy now
13	67F-82362-00 Clamp, cord 2	Buy now
14	68V-81960-00 Rectifier & regulator assembly	Buy now
18	97095-06020 Bolt(7u8)	Buy now

 Electrical 2

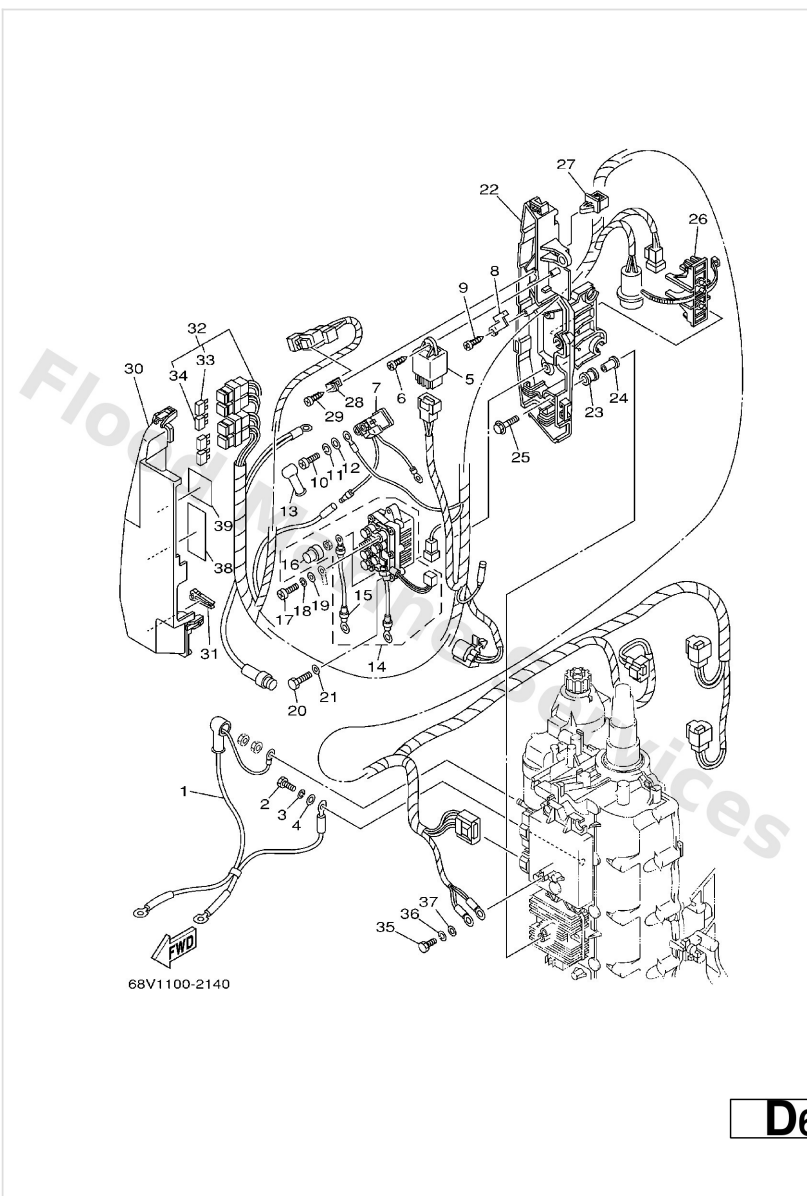


Ref	Part	
1	68V-82105-00 Battery cable	Buy now
2	97013-06020 Bolt(62y)	Buy now
3	92903-06100 Washer(6a1)	Buy now
4	92903-06600 Washer, plain (646)	Buy now
5	68V-81950-00 Relay assembly	Buy now
6	97780-60625 Screw, tapping(65j)	Buy now
7	68V-8194A-00 Relay	Buy now
8	68V-81953-00 Stay, relay	Buy now
9	97780-60620 Screw, tapping(6k8)	Buy now
10	97880-06010 Screw pan head	Buy now
11	92990-06100 Washer(6a1)	Buy now
12	92990-06600 Washer, plain (646)	Buy now
13	6G5-82119-00 Cover, lead wire	Buy now
14	68V-8195B-00 Relay assembly	Buy now
15	68V-81949-00 Wire, lead	Buy now

 Electrical 2

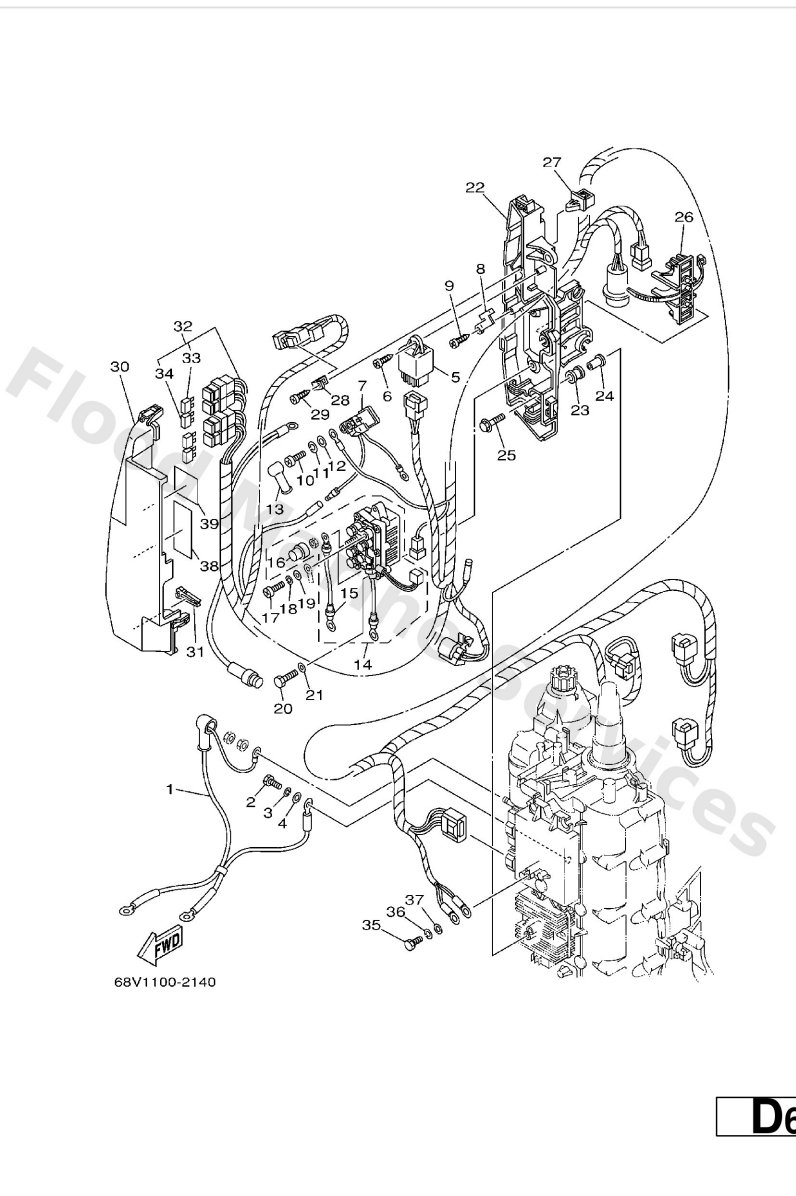


Ref	Part	
16	68V-82532-00 Cap	Buy now
22	68V-81948-00 Brkt. Cover Set	Buy now
23	6A0-82317-00 Damper, ignition coil	Buy now
24	624-42542-00 Collar	Buy now
25	90119-06M59 Bolt, with washer	Buy now
26	68V-82594-00 Clamp	Buy now
27	90464-12M58 Clamp	Buy now
28	68V-85548-00 Holder	Buy now
30	68V-81942-00 Cover	Buy now
31	67F-2812A-00 Puller, fuse	Buy now
32	68V-82590-10 Wire Harness assembly	Buy now
33	67F-82151-00 Fuse	Buy now
34	67F-82151-10 Fuse	Buy now
35	97095-06020 Bolt(7u8)	Buy now
36	92995-06100 Washer(6a1)	Buy now

 Electrical 2

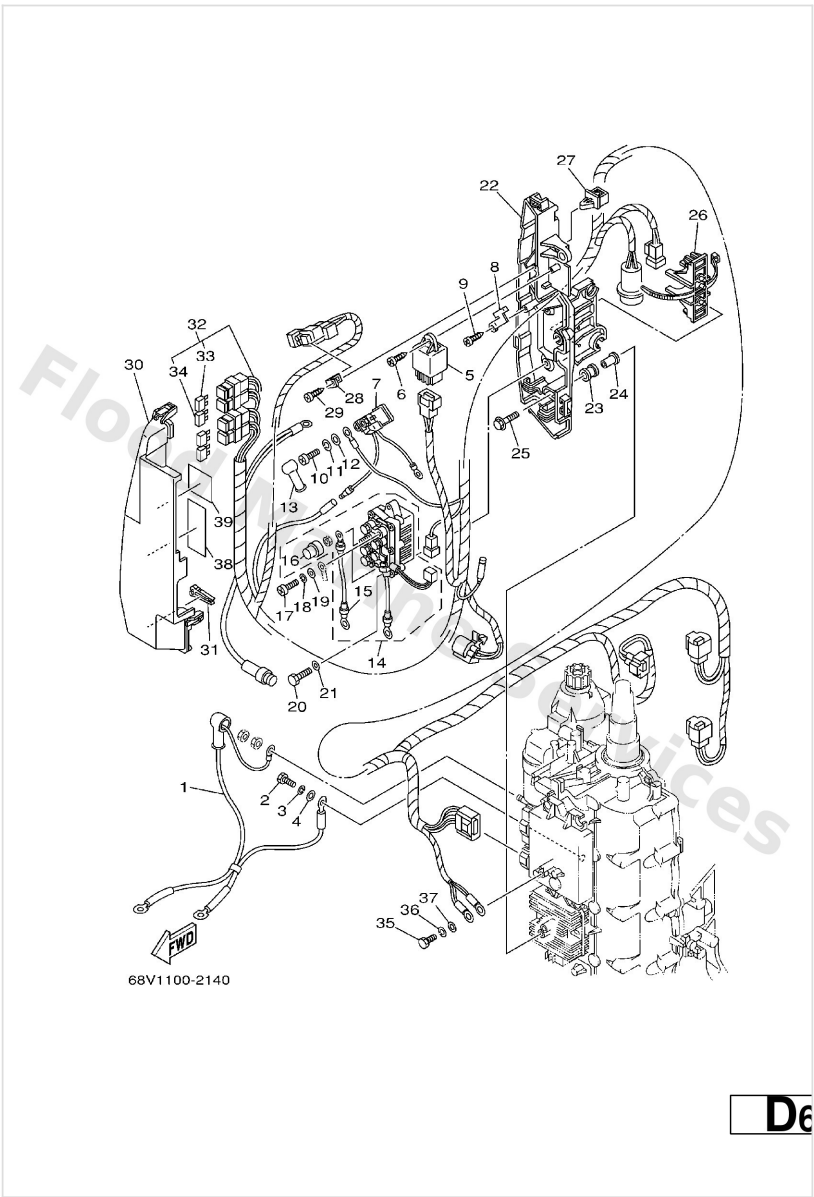


Ref	Part	
37	92995-06600 Washer, plain (646)	Buy now
38	68V-81919-00 Graphic, regulator	Buy now
39	68V-81919-10 Graphic, regulator	Buy now

 Electrical 3

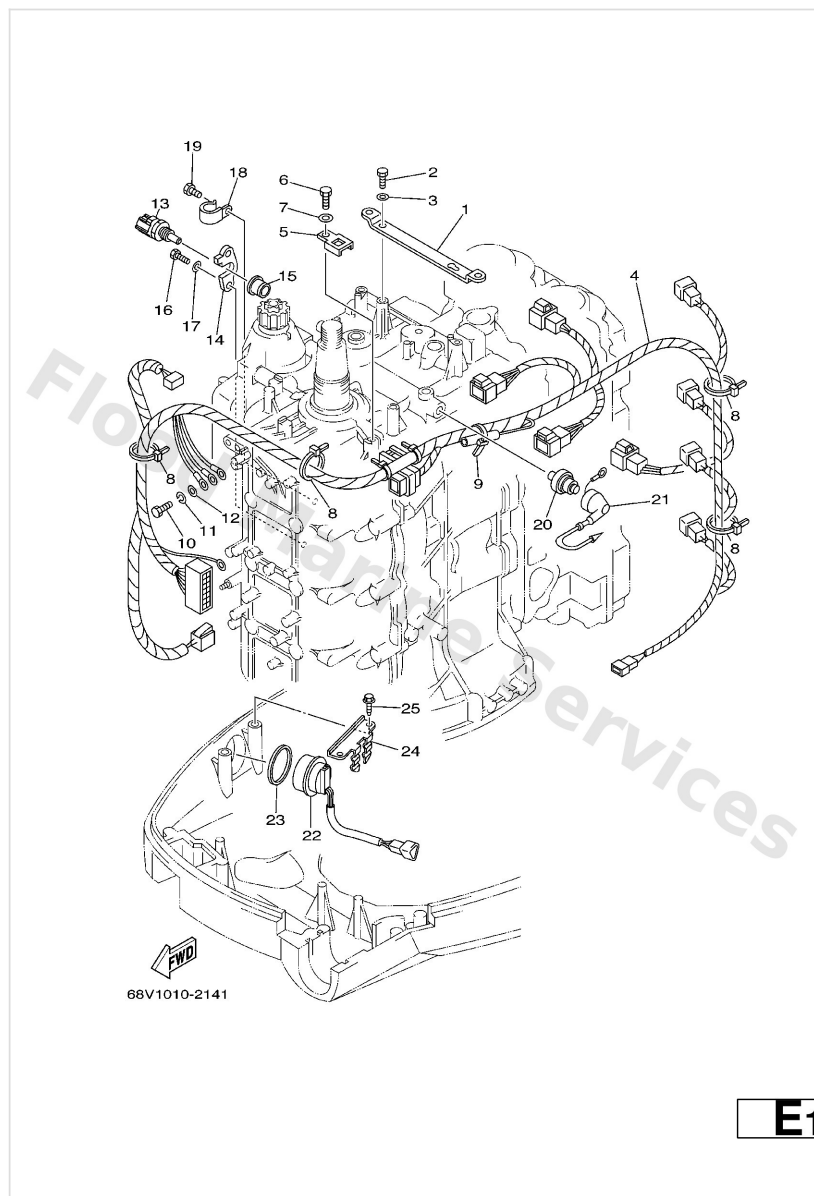

Ref	Part	
1	67F-8132G-01 Plate	Buy now
2	97095-06016 Bolt, hexagon deep recess	Buy now
3	92995-06600 Washer, plain (646)	Buy now
4	68V-8259M-00 Wire harness assembly 2	Buy now
5	68V-82588-00 Plate	Buy now
6	97095-06012 Bolt(gh1)	Buy now
8	90465-13M18 Clamp	Buy now
9	90465-11M10 Clamp	Buy now
10	97095-06020 Bolt(7u8)	Buy now
11	92995-06100 Washer(6a1)	Buy now
13	67F-85790-00 Thermosensor assembly	Buy now
14	67F-85757-00 Retainer	Buy now
15	68V-85753-00 Gasket, sender unit	Buy now
18	90465-06M86 Clamp	Buy now
19	97095-06010 Bolt	Buy now

 
Electrical 3

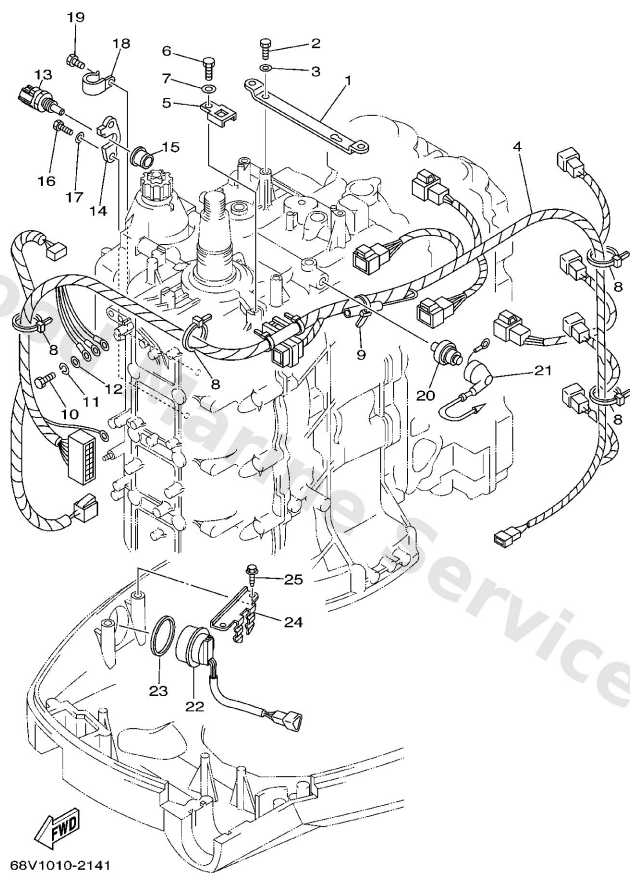

E1


Ref	Part	
20	68V-82504-00 Oil pressure switch assembly	Buy now
21	68V-81315-00 Lead wire assembly	Buy now
22	63D-82563-10 Trim & tilt switch assembly	Buy now
23	6E5-82587-00 Gasket	Buy now
24	67F-83614-00 Bracket	Buy now
25	90109-06M86 Bolt	Buy now

 Fuel 1

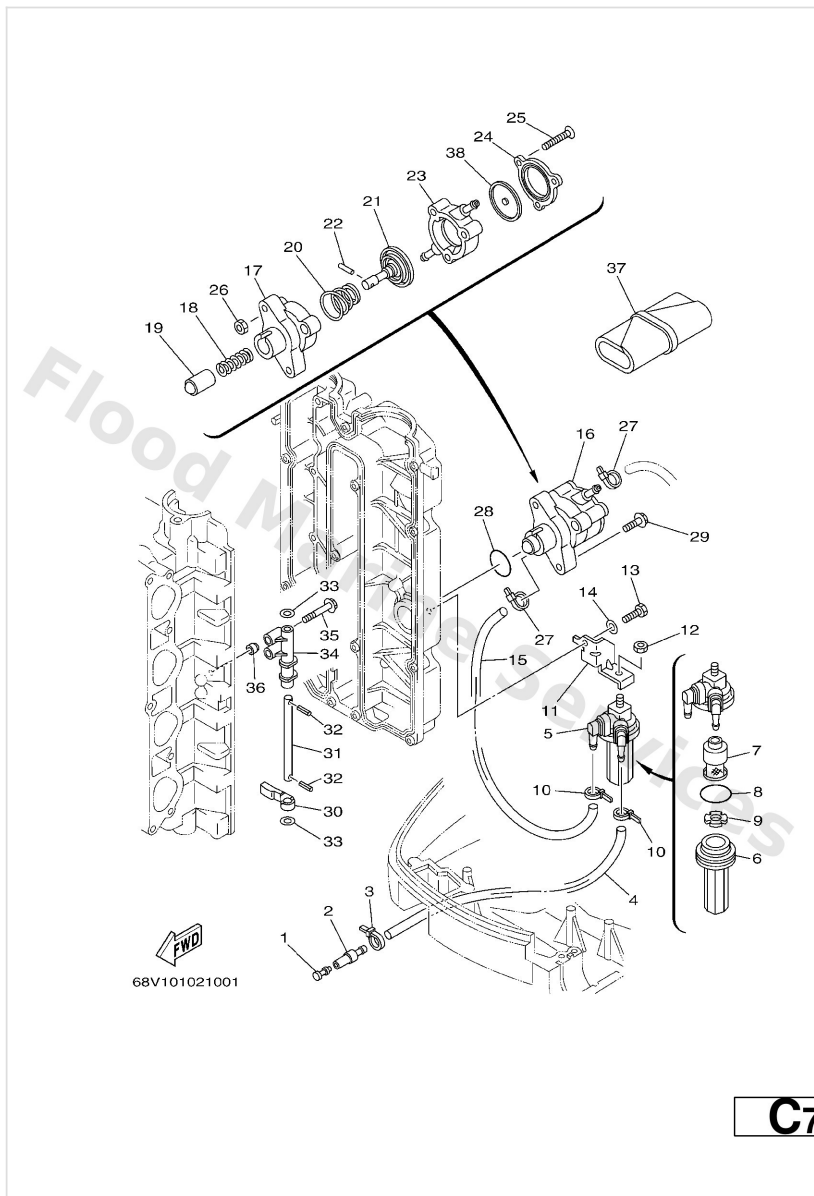


Ref	Part	
1	689-85547-00 Damper	Buy now
2	6R3-24377-00 Pipe, joint 3	Buy now
3	90465-11M10 Clamp	Buy now
4	90445-13M27 Hose (I950)	Buy now
5	68V-24560-01 Filter assembly	Buy now
6	68V-24521-01 Cup, filter	Buy now
7	68V-24563-00 Element, filter	Buy now
8	93210-32738 O-ring(1wg)	Buy now
9	68V-24469-01 Float, water level	Buy now
11	68V-24566-00 Bracket Filter	Buy now
12	95380-08600 Nut (661)	Buy now
13	97095-06016 Bolt, hexagon deep recess	Buy now
14	92995-06600 Washer, plain (646)	Buy now
15	90445-13M11 Pipe, fuel 1	Buy now
16	68V-24410-00 Fuel pump assembly	Buy now

 Fuel 1

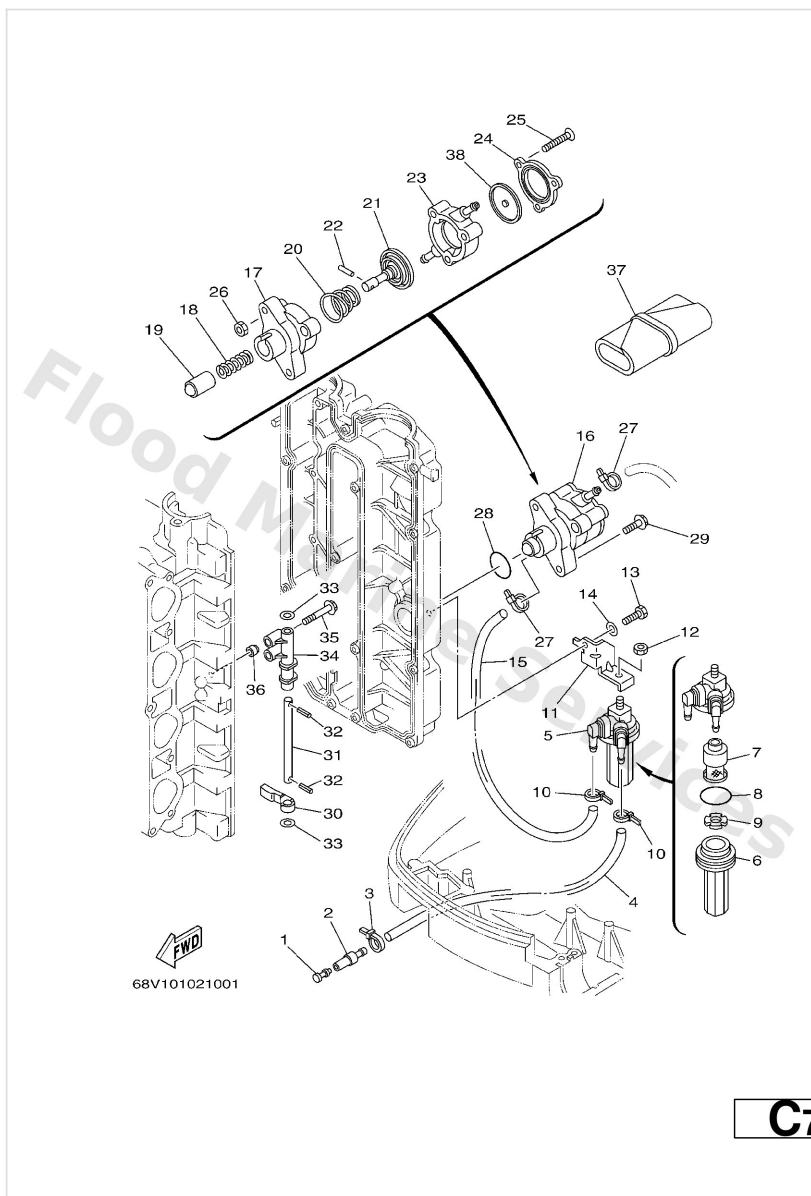


Ref	Part	
17	68V-24412-00 Body 1	Buy now
18	68V-24454-00 Spring	Buy now
19	68V-13131-00 Plunger	Buy now
20	68V-24423-00 Spring, diaphragm	Buy now
21	68V-24411-00 Diaphragm	Buy now
22	68V-24374-00 Pin	Buy now
23	68V-24413-00 Body 2	Buy now
24	68V-24414-00 Body 3	Buy now
25	68V-24444-00 Screw	Buy now
26	68V-24149-00 Nut	Buy now
28	93210-30682 O-ring (371)	Buy now
29	90119-06M83 Bolt, with washer	Buy now
30	67F-24575-00 Lever, fuel change	Buy now
31	68V-24495-00 Shaft	Buy now
32	91609-25014 Pin, Spring	Buy now

 Fuel 1

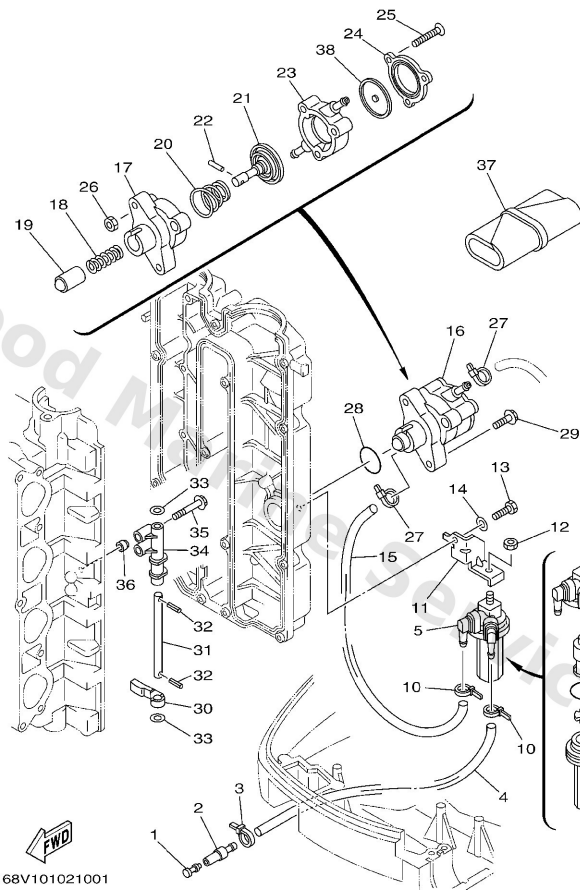

Ref	Part	
33	90201-08M12 Washer plate (682)	Buy now
34	67F-24491-00 Bracket, fuel pump	Buy now
35	90119-07235 Bolt, with washer	Buy now
36	91809-08006 Pin, dowel	Buy now
37	67F-28100-00 Tool kit	Buy now
38	4EB2314400 Seal, dust	Buy now
38	68V2447110 Diaphragm	Buy now

 Fuel 2

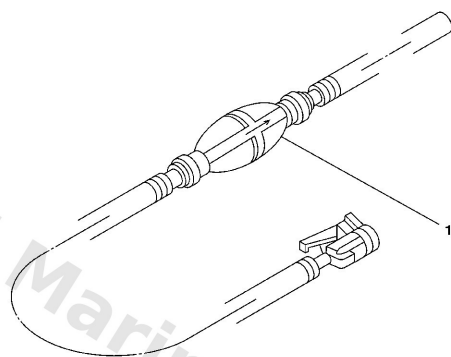


68F0300-0140

D2

Ref	Part	
1	6YK-24306-42 Fuel pipe comp. 1 AP	Buy now

 Fuel Injection Nozzle

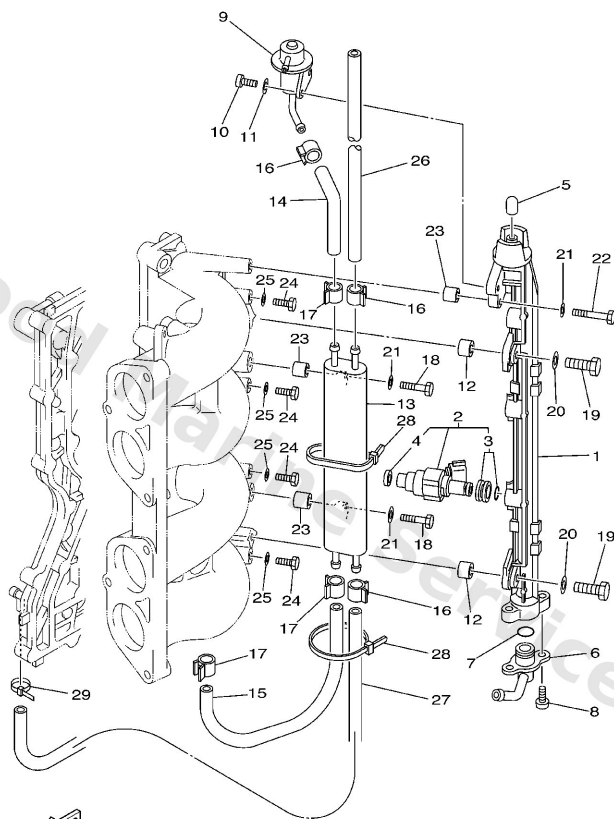


FWD
68V1010-2080

C3

Ref	Part	
1	68V-13160-00 Delivery pipe assembly 1	Buy now
2	68V-8A360-00 Injector unit	Buy now
3	68V-1410B-00 Packing kit	Buy now
4	68V-13766-00 Rubber, injector	Buy now
5	68V-14225-00 Cap	Buy now
6	68V-13435-00 Nipple	Buy now
7	68V-14397-00 O-ring	Buy now
8	68V-81147-00 Screw 3	Buy now
9	68V-13906-00 Regulator, pressure (with o-ri	Buy now
10	68V-14565-00 Screw	Buy now
11	68V-14356-00 Washer, spring	Buy now
12	68V-14264-00 Collar	Buy now
13	68V-21841-00 Cooler	Buy now
14	68V-13971-00 Pipe Fuel 1	Buy now
15	68V-13972-00 Pipe, fuel 2	Buy now

 Fuel Injection Nozzle

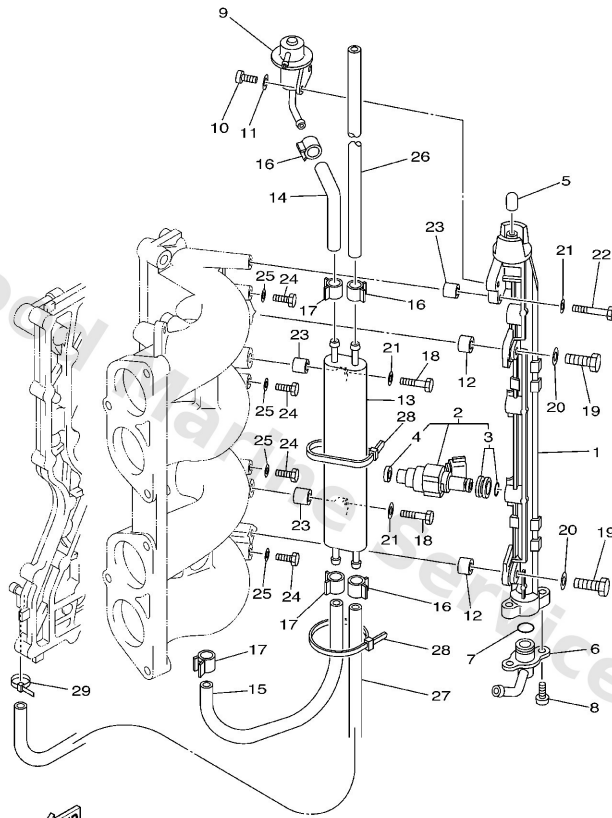


68V1010-2080

C3


Ref	Part	
16	68V-24519-00 Clip	Buy now
17	68V-2411M-00 Clip	Buy now
18	68V-14777-00 Bolt	Buy now
19	68V-14428-00 Bolt	Buy now
20	68V-14475-00 Washer	Buy now
21	68V-14357-00 Washer, plain	Buy now
22	68V-14446-00 Bolt	Buy now
23	68V-14265-00 Collar	Buy now
24	97095-06010 Bolt	Buy now
25	90430-06014 Gasket 256113960000	Buy now
26	68V-2247A-00 Hose 1	Buy now
27	68V-2247B-00 Hose 2	Buy now
28	68V-2481H-00 Clamp	Buy now
29	90465-11M10 Clamp	Buy now

 Fuel Injection Pump

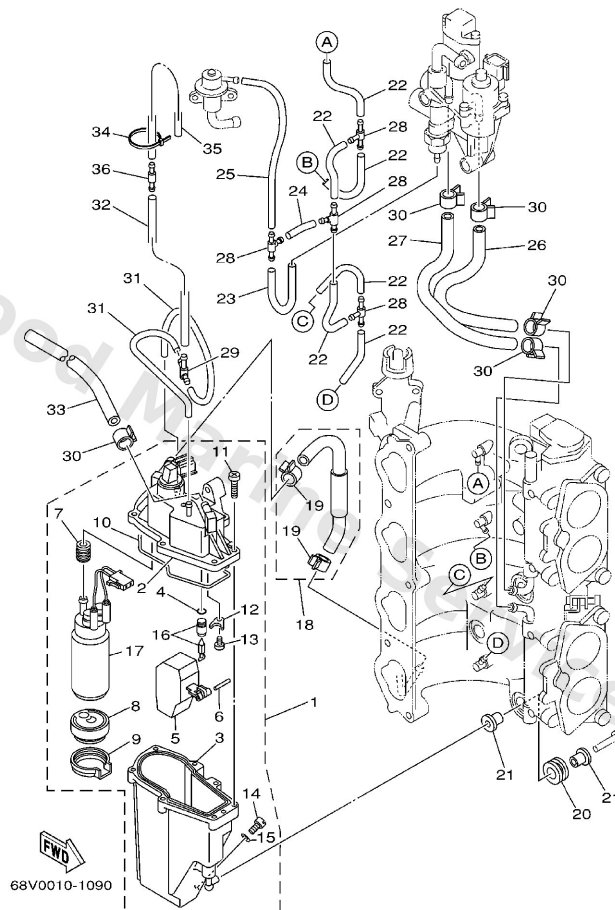

Ref	Part	
1	68V-14180-01 Float chamber assembly	Buy now
2	68V-14182-01 Cover, float chamber	Buy now
3	68V-14181-00 Body, float chamber 1	Buy now
4	68V-13769-00 O-ring	Buy now
5	68V-14985-00 Float	Buy now
6	68V-14386-00 Pin,float	Buy now
7	68V-13781-00 Damper, pump	Buy now
8	68V-13915-00 Filter	Buy now
9	68V-13784-00 Cover, pump	Buy now
10	68V-14984-00 Gasket, float chamber	Buy now
11	68V-14567-00 Screw	Buy now
12	68V-14255-00 Plate, valve seat	Buy now
13	68V-14592-00 Screw	Buy now
14	68V-14191-00 Plug, drain	Buy now
15	68V-14126-00 Washer	Buy now

 
Fuel Injection Pump

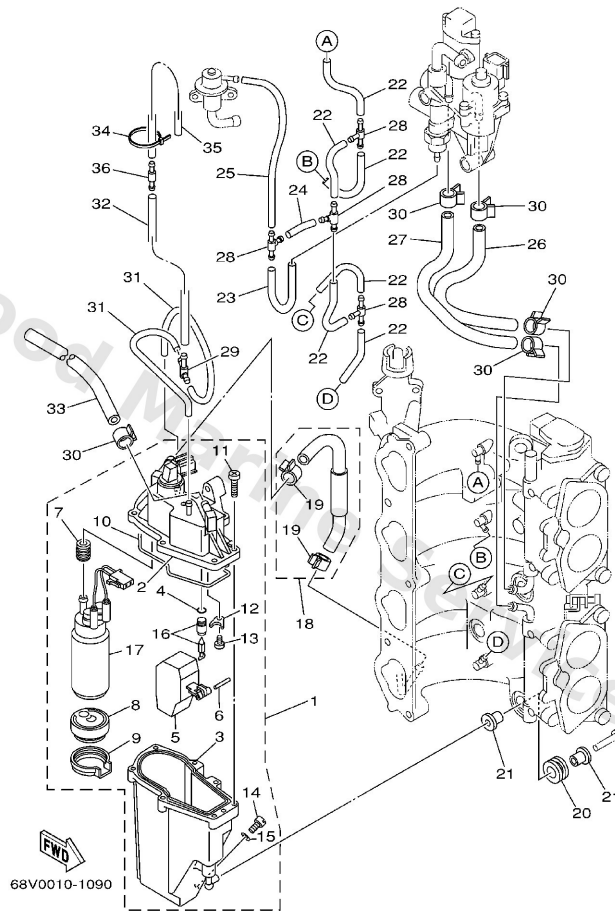

C5

Ref	Part	
16	68V-14546-00 Valve, needle	Buy now
17	68V-13907-00 Fuel pump comp.	Buy now
18	68V-14807-00 Hose comp.	Buy now
19	68V-24387-00 Clip	Buy now
20	68V-13593-00 Damper	Buy now
21	68V-13716-00 Collar	Buy now
22	68V-13542-00 Hose, vacuum sensing 1	Buy now
23	68V-13533-00 Hose, vacuum sensing 4	Buy now
24	68V-13544-00 Hose Vacuum Sensing 2	Buy now
25	68V-13532-00 Hose, vacuum sensing 3	Buy now
26	68V-13545-00 Hose 1	Buy now
27	68V-13546-00 Hose 2	Buy now
28	68V-24377-00 Pipe, joint 1	Buy now
29	68V-24379-00 Pipe, joint 4	Buy now
30	68V-13577-00 Clip	Buy now

 
Fuel Injection Pump

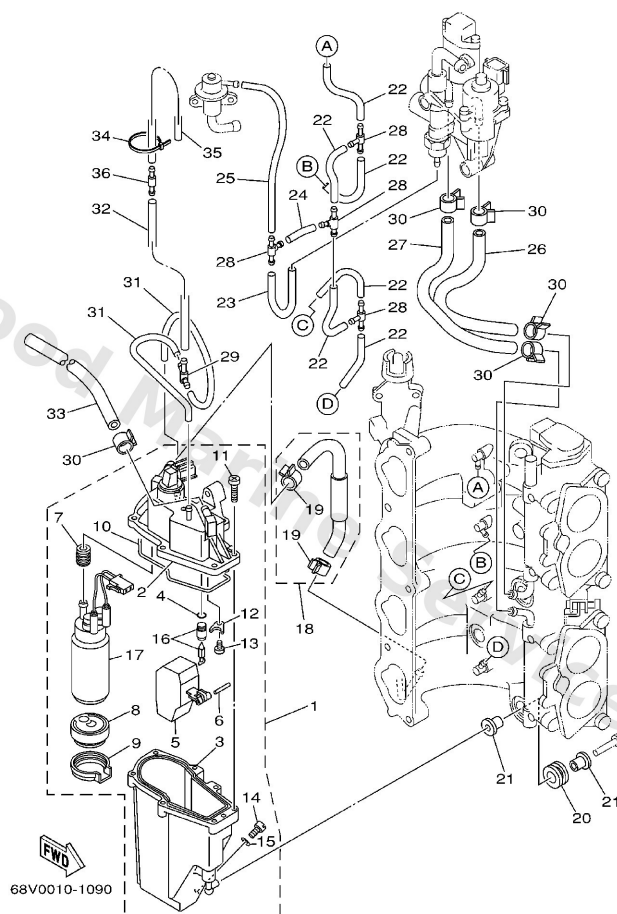

C5

Ref	Part	
31	68V-13534-00 Hose, vacuum sensing 5	Buy now
32	68V-13547-01 Hose 3	Buy now
33	68V-14294-00 Hose	Buy now
34	68V-2481H-00 Clamp	Buy now
35	68V-13535-00 Hose, vacuum sensing 5	Buy now
36	68V-13490-01 Relief Valve assembly	Buy now

 
Generator

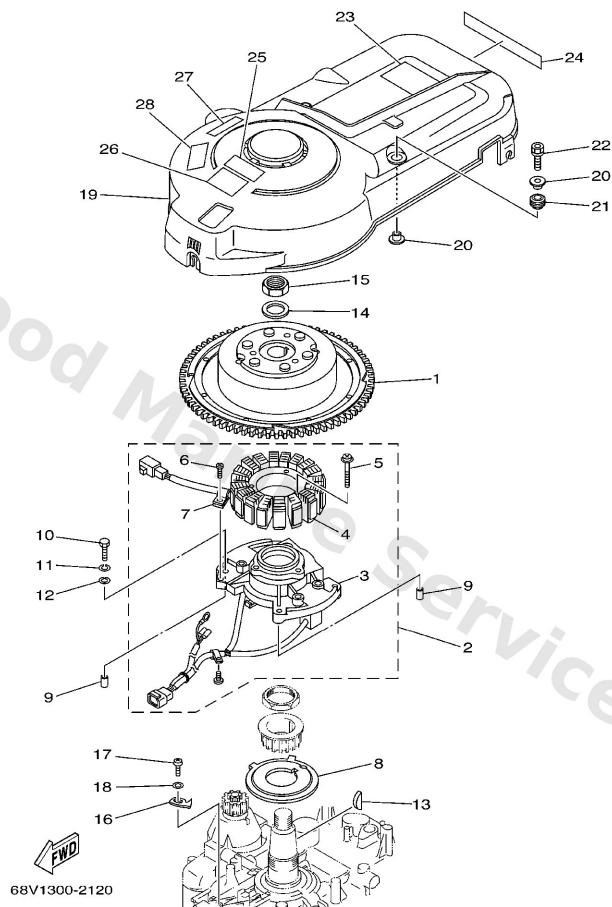

D3

Ref	Part	
1	68V-81450-00 Rotor assembly	Buy now
2	68V-81460-00 Base assembly	Buy now
3	68V-85580-00 Coil, pulser	Buy now
4	68V-81410-00 Stator assembly	Buy now
5	63D-81345-20 Screw, pan	Buy now
6	97607-04112 Screw, pan head	Buy now
7	445-81328-20 Clamp, read	Buy now
8	68V-81673-00 Rotor	Buy now
9	99530-08012 Pin, dowel(6g8)	Buy now
10	97095-06030 Bolt(jf7)	Buy now
11	92995-06100 Washer(6a1)	Buy now
12	92995-06600 Washer, plain (646)	Buy now
13	90280-04M08 Key, woodruff	Buy now
14	90201-25M02 Washer, plate(61a)	Buy now
15	90170-24M22 Nut(61a)	Buy now

 
Generator

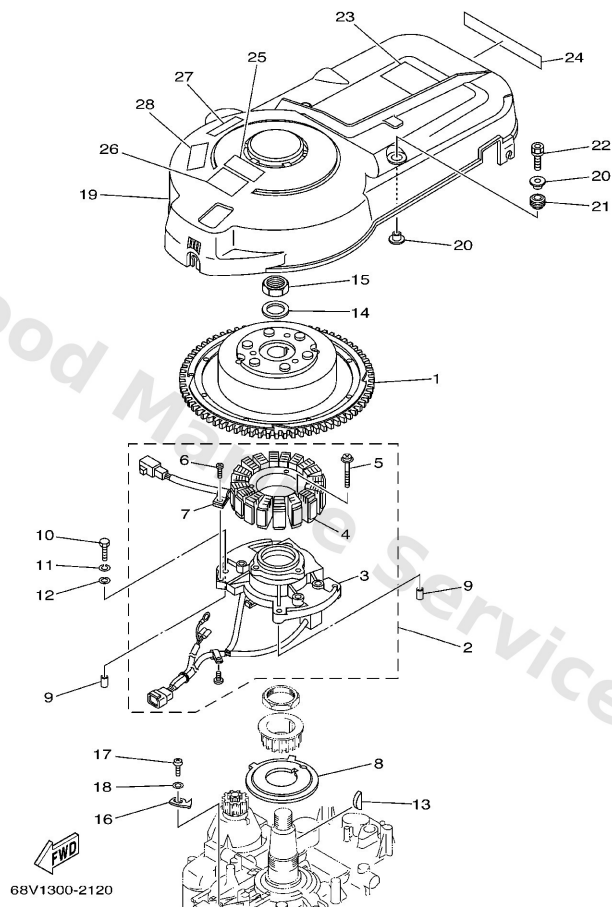

D3

Ref	Part	
16	67F-81332-00 Plate, timing	Buy now
17	97885-06010 Screw pan head	Buy now
19	67F-81337-01 Cover, flywheel	Buy now
20	90387-06M71 Collar (6g8)	Buy now
21	90480-15M31 Grommet (6g1)	Buy now
22	90119-06M92 Bolt, with washer	Buy now
23	67F-12138-60 Mark Caution	Buy now
24	67F-13437-60 Mark, Caution	Buy now
25	6A1-83625-41 Mark 5	Buy now
26	6A1-83625-51 Mark 5	Buy now
27	6K1-83623-41 Mark 3	Buy now
28	6K1-83623-50 Mark 3	Buy now

 
Intake 1

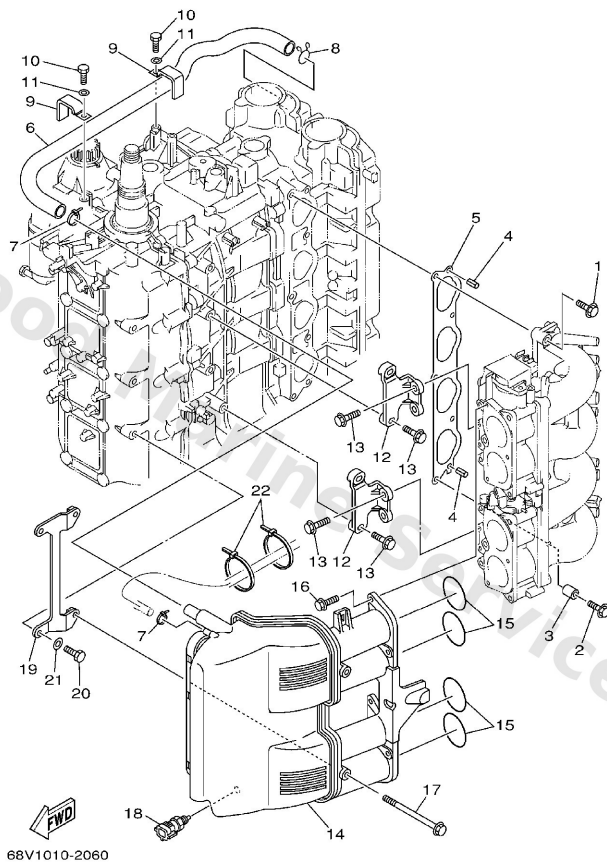

B7

Ref	Part	
1	97575-08540 Bolt, hexagon w/w deep recess	Buy now
2	90119-08M68 Bolt, with washer	Buy now
3	90387-08M32 Collar	Buy now
4	91690-50014 Pin, spring (647)	Buy now
5	68V-13645-00 Gasket, manifold 1	Buy now
6	67F-15373-00 Pipe, breather	Buy now
7	90465-11M10 Clamp	Buy now
8	90467-20M15 Clip	Buy now
9	90465-12M03 Clamp, cord (688)	Buy now
10	97095-06012 Bolt(gh1)	Buy now
11	92995-06600 Washer, plain (646)	Buy now
12	68V-14291-00-94 Bracket 1	Buy now
13	90119-06M49 Bolt, with washer	Buy now
14	68V-14440-00 Silencer assembly Intake	Buy now
15	93210-48MJ9 O-ring	Buy now

 
Intake 1

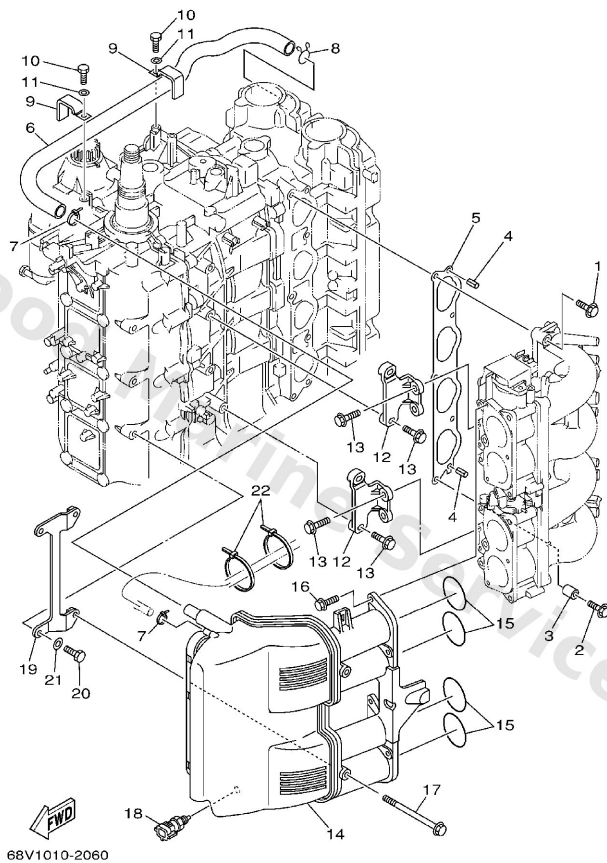

B7

Ref	Part	
16	90119-06M82 Bolt, with washer	Buy now
17	90119-06ME1 Bolt, with washer	Buy now
18	65L-85886-00 Thermosensor	Buy now
19	68V-14292-00 Bracket 2	Buy now
20	97095-08020 Bolt, hexagon	Buy now
21	92995-08600 Washer, plain (663)	Buy now
22	90465-13M18 Clamp	Buy now

 
Intake 2

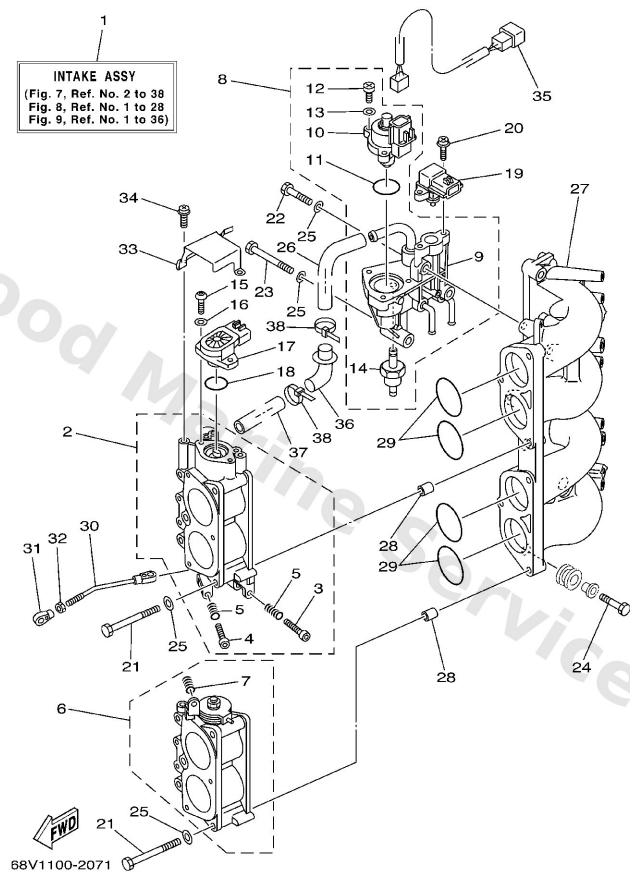

C1


Ref	Part	
1	68V-14200-02 Intake assembly	Buy now
2	68V-13751-01 Body, Throttle 1	Buy now
3	68V-14323-00 Screw, air adjusting	Buy now
4	68V-14321-00 Screw, throttle	Buy now
5	68V-14331-00 Spring, throttle valve	Buy now
6	68V-13752-01 Body, throttle 2	Buy now
8	68V-13105-00 Control valve assembly	Buy now
9	68V-14960-00 Body assembly	Buy now
10	68V-1312A-00 Valve, control	Buy now
11	68V-13473-00 O-ring	Buy now
12	68V-81146-00 Screw 2	Buy now
13	68V-81162-00 Washer Plain	Buy now
14	68V-14511-00 Filter assembly	Buy now
15	68V-81145-00 Screw 1	Buy now
17	68V-85885-00 Throttle sensor assembly	Buy now

 Intake 2

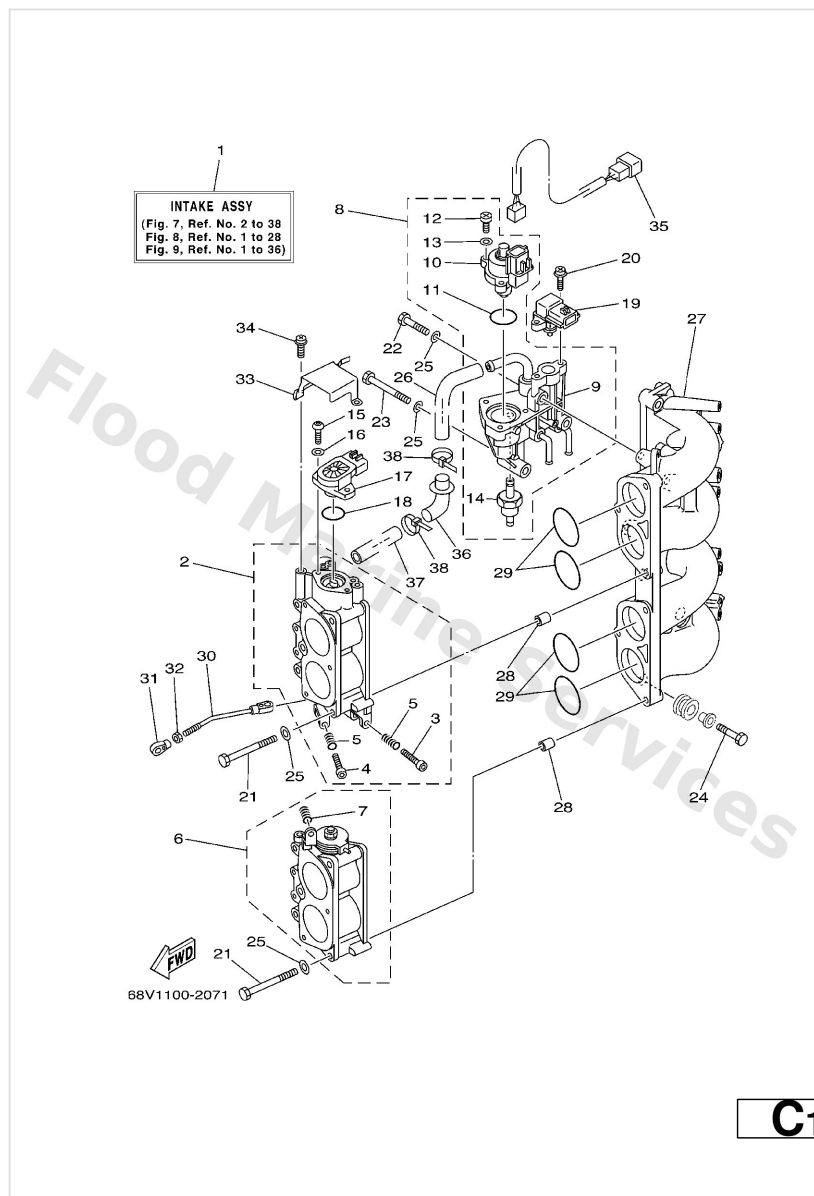


Ref	Part	
18	68V-8182L-00 O-ring 1	Buy now
19	68V-82380-00 Sensor, pressure	Buy now
20	68V-81147-00 Screw 3	Buy now
21	68V-14496-00 Bolt	Buy now
22	68V-13574-00 Bolt 2	Buy now
23	68V-13573-00 Bolt 1	Buy now
24	68V-14777-00 Bolt	Buy now
25	68V-14475-00 Washer	Buy now
26	68V-14419-10 Pipe	Buy now
27	68V-13641-00-94 Manifold 1	Buy now
28	99530-10114 Pin, dowel(3vd)	Buy now
29	93210-48MG8 O-ring	Buy now
30	68V-41237-00 Joint, link	Buy now
31	6H4-41237-00 Joint, link	Buy now
32	95380-05700 Nut (656)	Buy now

 Intake 2

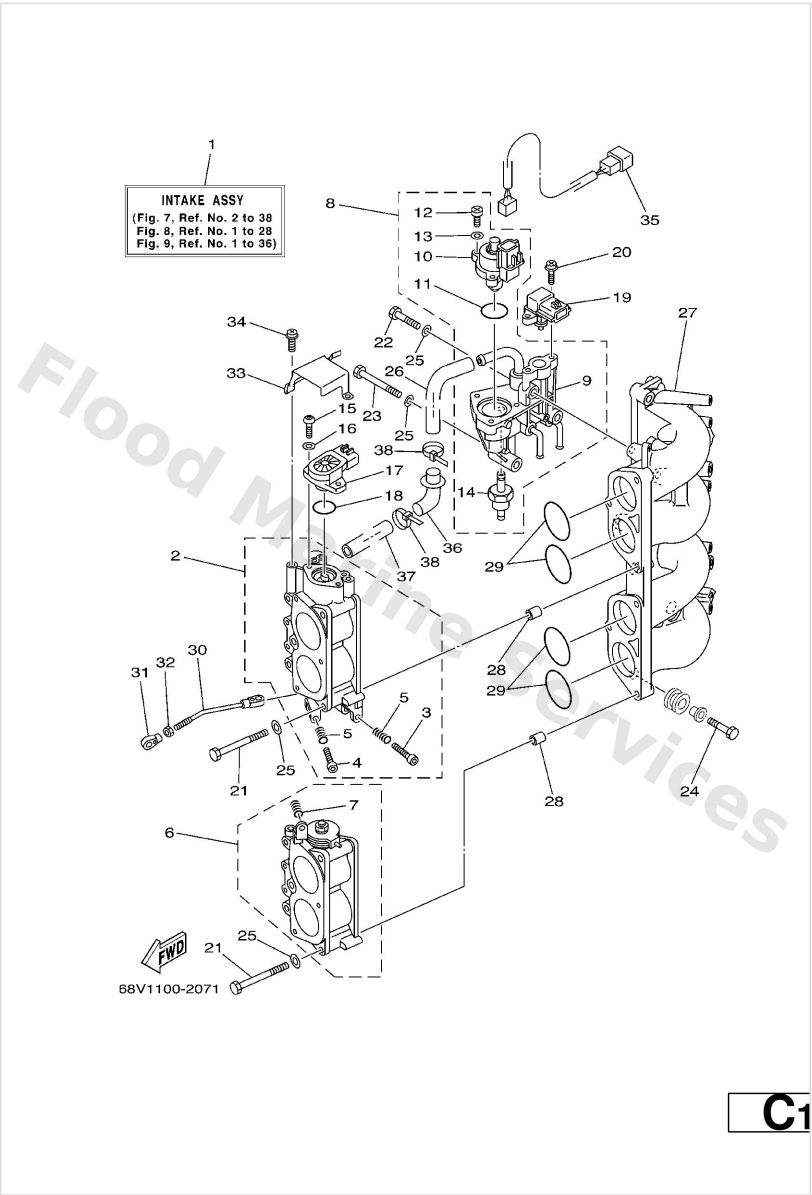


Ref	Part	
33	68V-1441L-00 Bracket 1	Buy now
35	68V-8259N-00 Wire Harness assembly 3	Buy now
36	68V-14453-00 Joint, air cleaner 1	Buy now
37	68V-1441J-00 Pipe, silencer	Buy now
38	68V-2417H-00 Clamp 1	Buy now

 Lower Casing. Drive 1

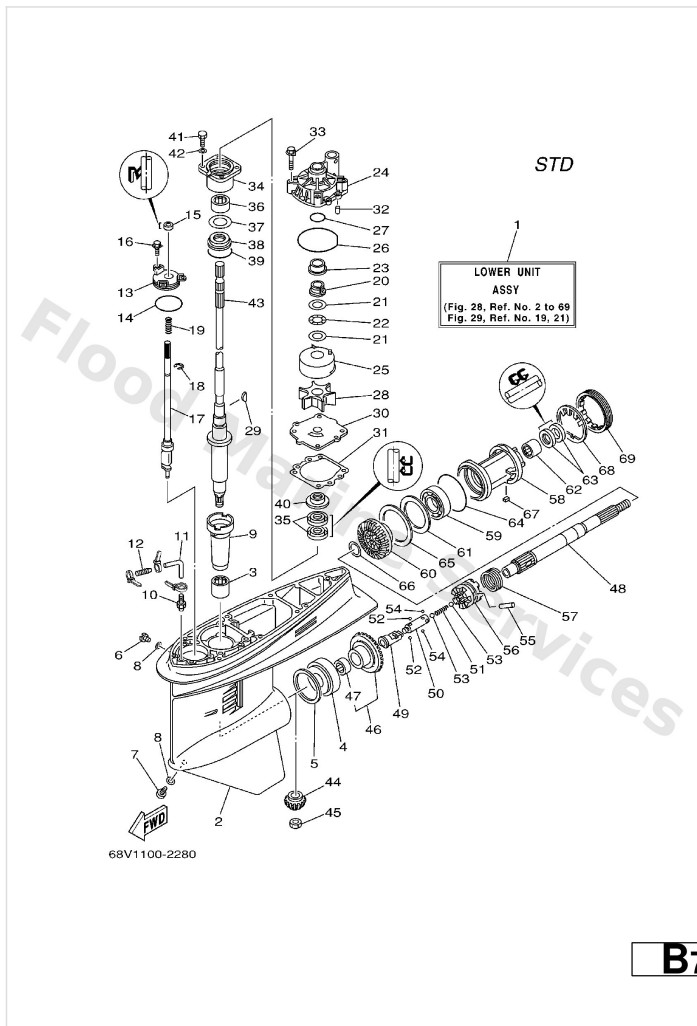

Ref	Part	
1	68V-45300-11-8D Lower unit assembly L	Buy now
1	68V-45300-31-8D Lower unit assembly X	Buy now
2	6E5-45301-04-8D Casing, lower	Buy now
3	93315-628U9 Brg,cyl-cal roller (6e5)	Buy now
4	93332-000U7 Brg,tapered roller 76mm (6e5)	Buy now
5	6E5-45567-01-10 Shim (t:0.10mm) UR	Buy now
5	6E5-45567-01-12 Shim (t:0.12mm) UR	Buy now
5	6E5-45567-01-15 Shim (t:0.15mm) UR	Buy now
5	6E5-45567-01-18 Shim (t:0.18mm) UR	Buy now
5	6E5-45567-01-30 Shim (t:0.30mm) UR	Buy now
5	6E5-45567-01-40 Shim (t:0.40mm) UR	Buy now
5	6E5-45567-01-50 Shim (t:0.50mm) UR	Buy now
6	90340-08002 Plug, straight screw	Buy now
7	688-45341-10 Plug, drain	Buy now
8	90430-08020 Gasket	Buy now

 
Lower Casing. Drive 1

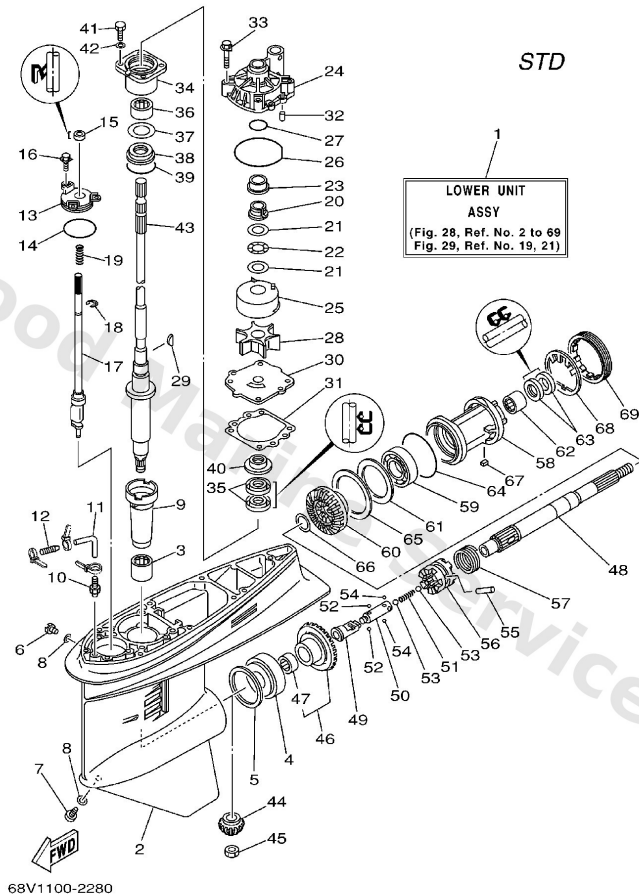

B7


Ref	Part	
9	6E5-45536-00 Sleeve, drive shaft	Buy now
10	6E5-45378-00 Nipple, hose	Buy now
11	90445-07ME8 Hose (I250) L	Buy now
11	90445-07ME9 Hose (I250) X	Buy now
12	6E5-83558-10 End, nipple	Buy now
13	6E5-45321-00 Plate	Buy now
14	93210-58144 O-ring(47x)	Buy now
15	93106-09014 Oil seal	Buy now
16	90119-06M10 Bolt, with washer	Buy now
17	6L6-44150-01 Shift cam assembly	Buy now
18	99001-08600 Circlip(2r6)	Buy now
19	90501-11M10 Spring, compression (663)	Buy now
20	61A-45538-00 Spacer, 1	Buy now
21	90201-22M01 Washer, plate(61a)	Buy now
22	90206-22M19 Washer, wave(61a)	Buy now

 Lower Casing. Drive 1

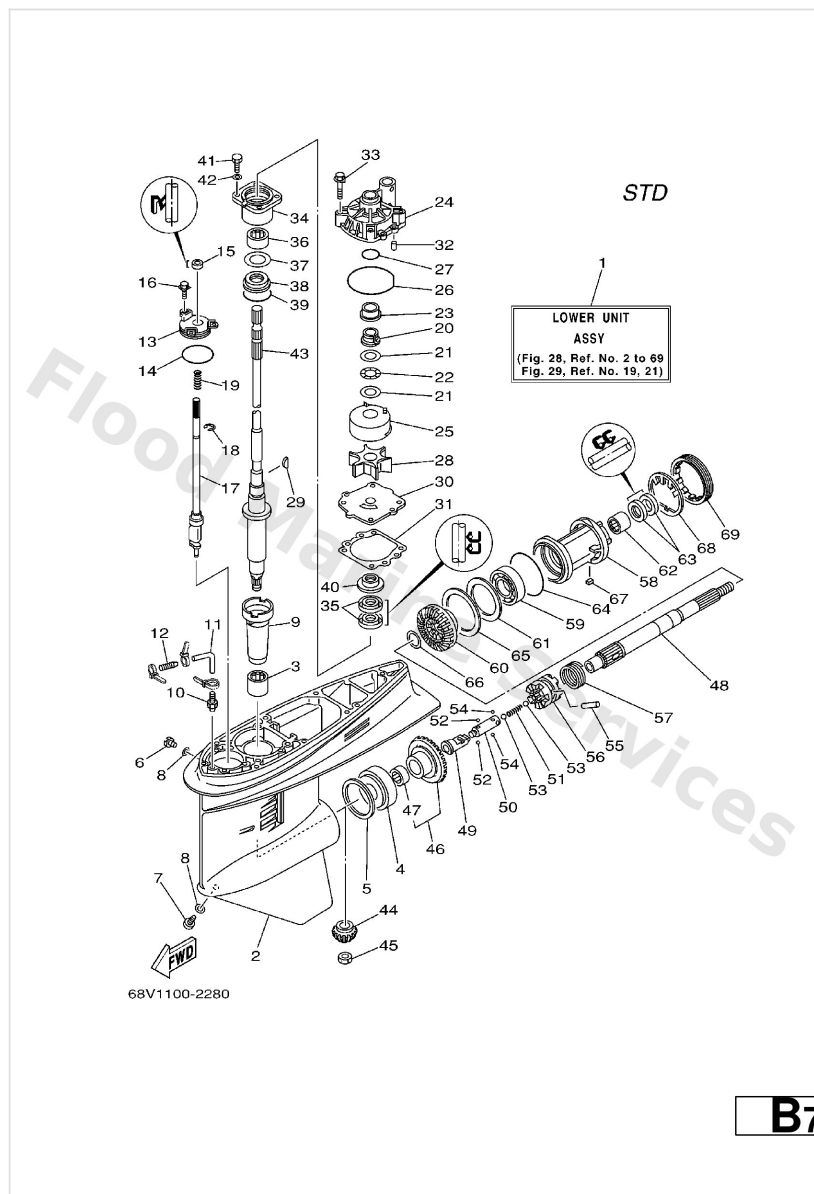


Ref	Part	
23	61A-45527-00 Collar, drive shaft	Buy now
24	61A-44311-01 Housing, water pump	Buy now
25	61A-44322-02 Insert, cartridge	Buy now
26	93210-86M38 O-ring (6e5)	Buy now
27	93210-37160 O-ring (6g8)	Buy now
28	6E5-44352-01 Impeller	Buy now
29	90280-04M05 Key, woodruff (6e5)	Buy now
30	68V-44323-00 Outer plate, cartridge	Buy now
31	6E5-44315-A0 Gasket, water pump	Buy now
32	93606-12019 Pin, dowel (614)	Buy now
33	90119-08M14 Bolt, with washer	Buy now
34	6E5-45331-00-94 Housing, bearing	Buy now
35	93101-28M16 Oil seal (6e5)	Buy now
36	93317-330U2 Bearing, cylindrical(6k0)	Buy now
37	6E5-45587-01-10 Shim (t:0.10mm) UR	Buy now

 Lower Casing. Drive 1

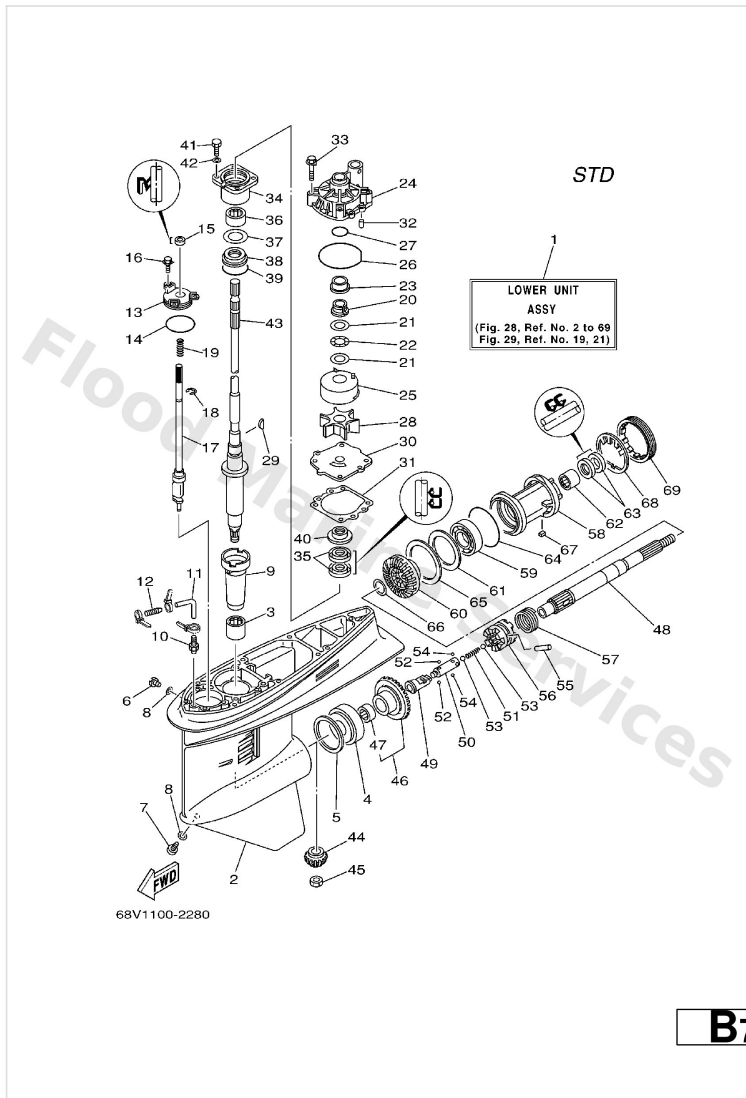


Ref	Part	
37	6E5-45587-01-12 Shim (t:0.12mm) UR	Buy now
37	6E5-45587-01-15 Shim (t:0.15mm) UR	Buy now
37	6E5-45587-01-18 Shim (t:0.18mm) UR	Buy now
37	6E5-45587-01-30 Shim (t:0.30mm) UR	Buy now
37	6E5-45587-01-40 Shim (t:0.40mm) UR	Buy now
37	6E5-45587-01-50 Shim (t:0.50mm) UR	Buy now
38	93341-930V2 Bearing, thrust(64d)	Buy now
39	93210-55M14 O-ring (70e)	Buy now
40	6E5-45344-00 Cover, oil seal	Buy now
41	97095-08025 Bolt (62g)	Buy now
42	92995-08600 Washer, plain (663)	Buy now
43	68V-45501-10 Drive shaft comp. L	Buy now
43	68V-45501-30 Drive shaft comp. X	Buy now
44	68V-45551-00 Pinion	Buy now
45	90170-16M01 Nut, hexagon (688)	Buy now

 Lower Casing. Drive 1

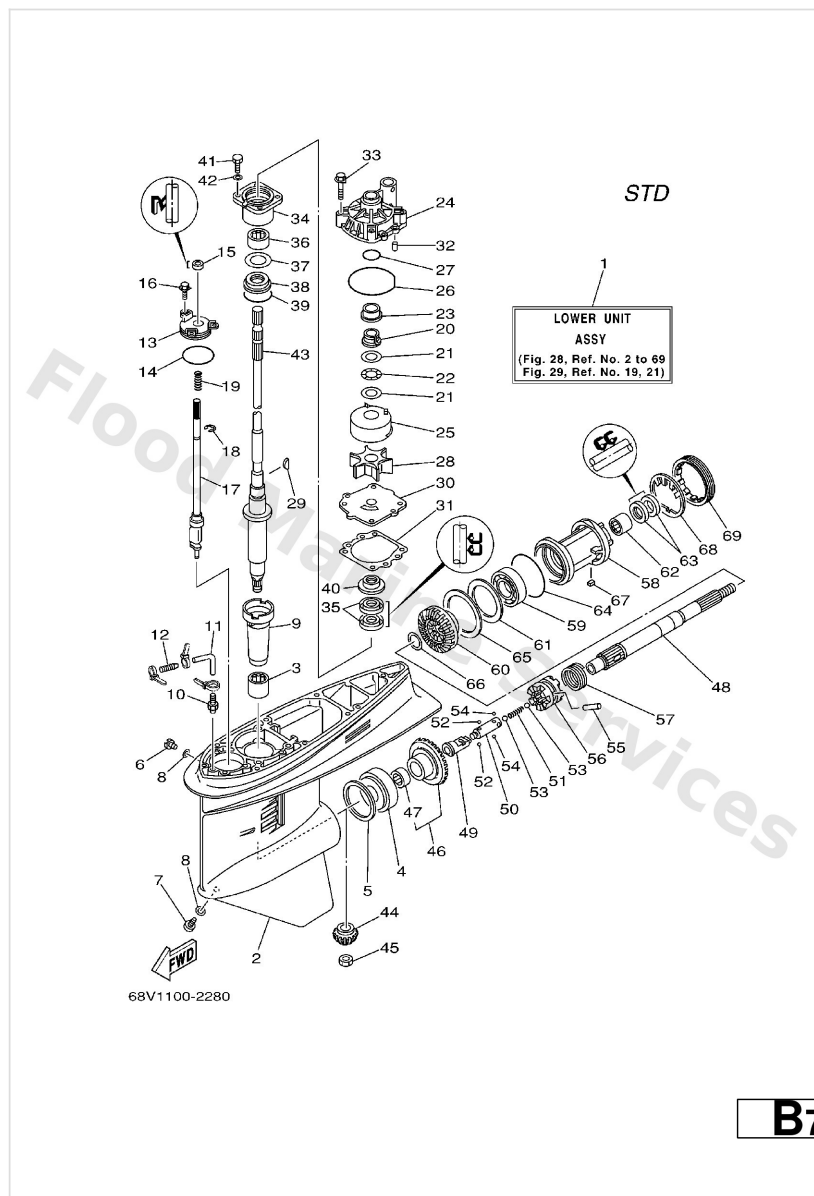


Ref	Part	
46	68V-45560-00 Gear	Buy now
47	93315-425U7 Brg,cyl-cal roller (6e5)	Buy now
48	6E5-45611-01 Shaft, propeller	Buy now
49	6K1-45641-01 Shifter	Buy now
50	6E5-45634-01 Slide, shift	Buy now
51	90501-16M37 Spring (6g5)	Buy now
52	93507-32009 Ball (12r)	Buy now
53	93511-32017 Ball (498)	Buy now
54	93503-16003 Ball	Buy now
55	90250-08M07 Pin, straight (6g5)	Buy now
56	68V-45631-01 Clutch, dog	Buy now
57	6E5-45633-01 Ring, cross pin	Buy now
58	6E5-45332-00-94 Housing, bearing	Buy now
59	93306-208U0 Brg,r-b 6208 80mm 345g (6e5)	Buy now
60	68V-45571-00 Gear	Buy now

 Lower Casing. Drive 1

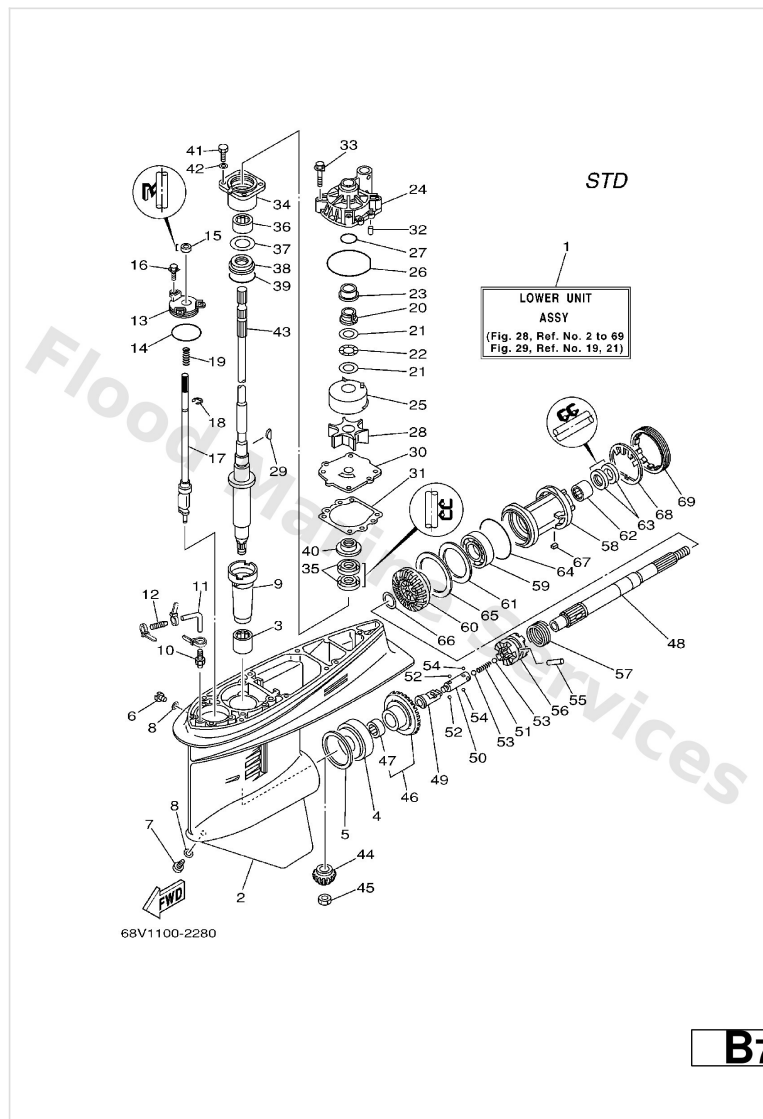


Ref	Part	
61	6E5-45576-00 Washer, thrust 2	Buy now
62	93315-430U8 Bearing	Buy now
63	93101-30M17 Oil seal (6e5)	Buy now
64	93210-86M39 O-ring (6e5)	Buy now
65	6L6-45577-00-10 Shim (t:0.10mm) UR	Buy now
65	6L6-45577-00-12 Shim (t:0.12mm) UR	Buy now
65	6L6-45577-00-15 Shim (t:0.15mm) UR	Buy now
65	6L6-45577-00-18 Shim (t:0.18mm) UR	Buy now
65	6L6-45577-00-30 Shim (t:0.30mm) UR	Buy now
65	6L6-45577-00-40 Shim (t:0.40mm) UR	Buy now
65	6L6-45577-00-50 Shim (t:0.50mm) UR	Buy now
66	90201-30M92 Washer (6g5)	Buy now
67	90282-04010 Key, strait(663)	Buy now
68	688-45383-02 Washer, claw	Buy now
69	688-45384-00 Nut	Buy now

 Lower Casing. Drive 2

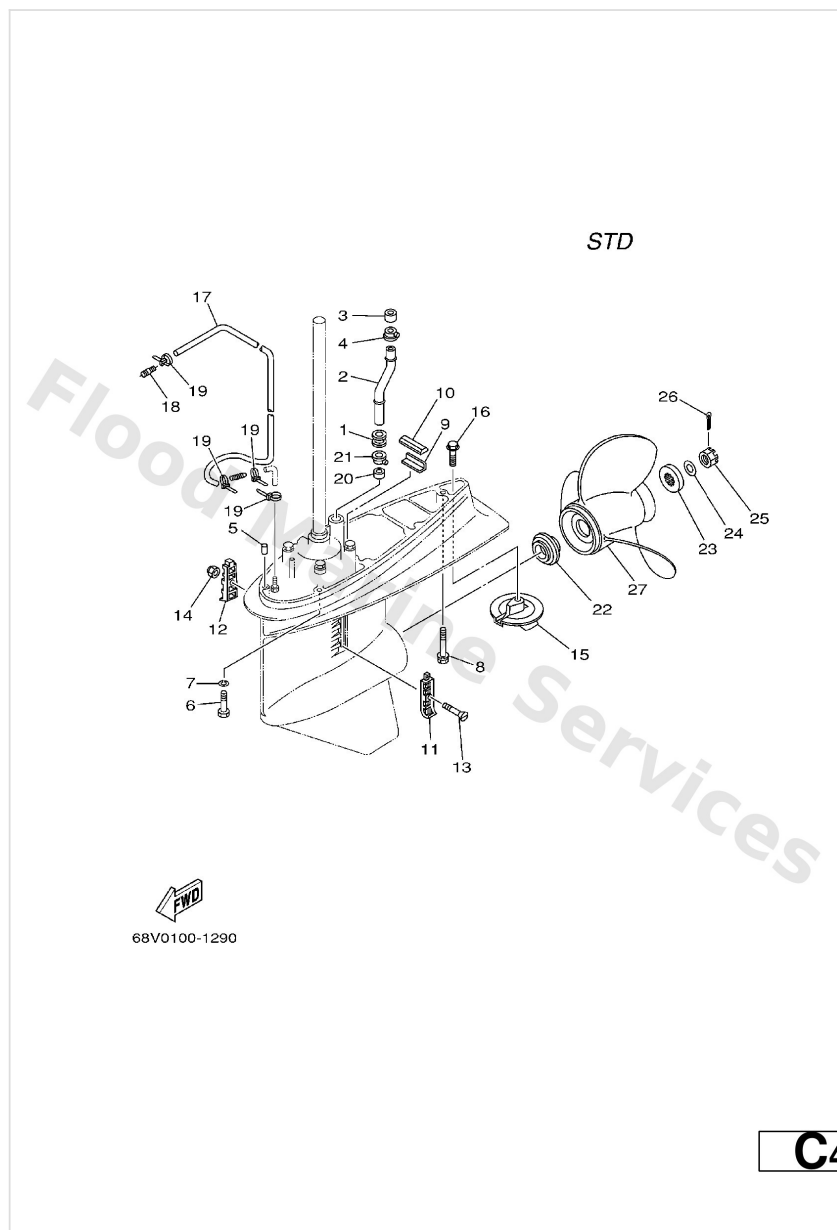


Ref	Part	
1	6E5-44366-00 Damper, water seal 2	Buy now
2	68V-44361-10 Tube, water 1 L	Buy now
2	68V-44361-30 Tube, water 1 X	Buy now
3	6E5-44365-00 Damper, water seal 1	Buy now
4	6E5-44312-00 Cover, water pump housing	Buy now
5	93608-12M05 Pin, dowel b (6e5)	Buy now
6	97075-10045 Bolt(64d)	Buy now
7	92995-10100 Ybs67-10 washer, spring	Buy now
8	90119-10M89 Bolt, with washer	Buy now
9	663-45376-00-94 Guide, seal damper	Buy now
10	688-45375-00 Damper, seal 2	Buy now
11	688-45214-02 Cover, water inlet	Buy now
12	688-45215-02 Cover, water inlet	Buy now
13	90152-05M07 Screw, countersunk	Buy now
14	90185-05002 Nut nylon (sus)(ex4)	Buy now

 Lower Casing. Drive 2

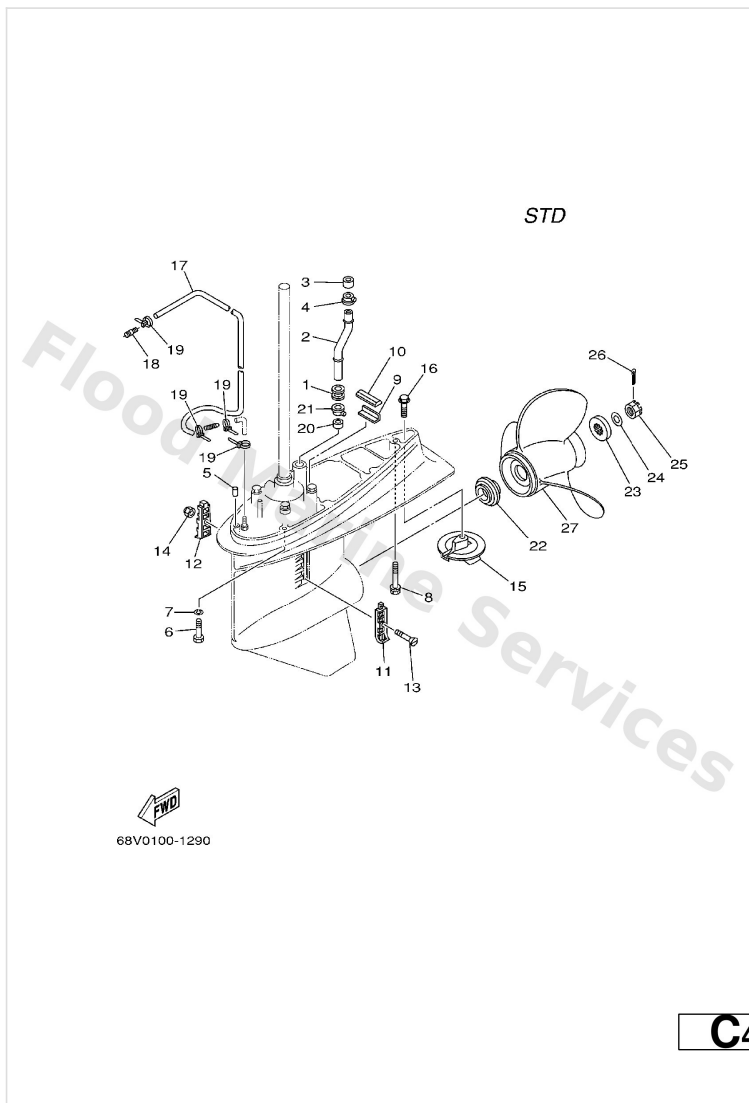


Ref	Part	
15	6E5-45371-01 Trim tab	Buy now
16	90105-10M00 Bolt, hexagon (663)	Buy now
17	90445-076K2 Hose (I1700)	Buy now
18	6E5-83558-00 End, nipple	Buy now
19	90465-11M10 Clamp	Buy now
22	6E5-45987-01 Spacer 1	Buy now
23	688-45997-01 Spacer 2	Buy now
24	92990-18200 Washer (6e5)	Buy now
25	90171-18M04 Nut, castle (6e5)	Buy now
26	91490-40030 Pin, cotter (663)	Buy now
27	62A-45970-10 29 – UR	Buy now
27	62A-45972-10 29 – UR	Buy now
27	62A-45974-10 29 – UR	Buy now
27	688-45930-02-98 Propeller (3x13x17) UR	Buy now
27	688-45932-60-98 Propeller (3x13-1/2"x14"-k) UR	Buy now

 Lower Casing. Drive 2

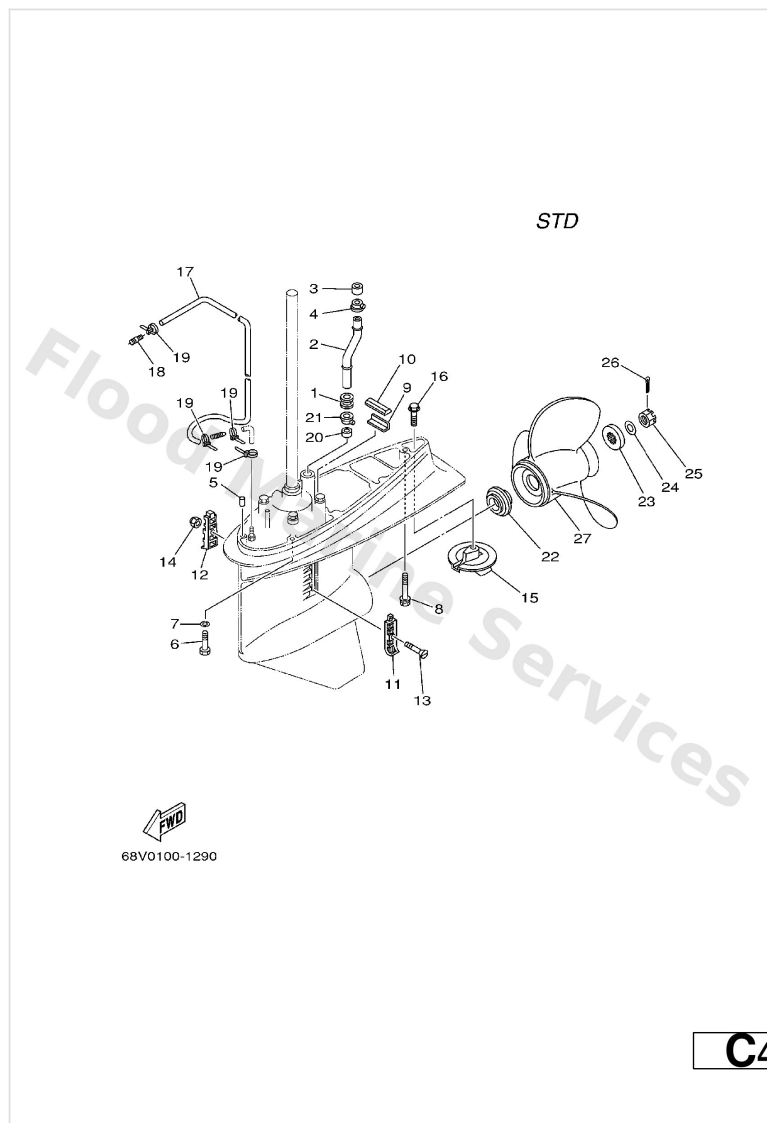


Ref	Part	
27	688-45970-03-98 Propeller (3x13"x19"-k) UR	Buy now
27	688-45972-02-98 Propeller (3x13"x21"-k) UR	Buy now
27	688-45974-02-98 Propeller (3x13"x23"-k) UR	Buy now
27	688-45976-01-98 Propeller (ss 3x13"x25"-k) UR	Buy now
27	688-45978-60-98 Propeller (3x13-1/2"x16"-k) UR	Buy now
27	6E5-45941-00-EL Propeller (3x13x19-k) UR	Buy now
27	6E5-45943-00-EL Propeller (3x12-5/8"x21"-k) UR	Buy now
27	6E5-45945-01-EL Propeller (3x13-1/4"x17-k) UR	Buy now
27	6E5-45947-00-EL Propeller (3x13-1/2"x15-k) UR	Buy now
27	6E5-45949-00-EL Propeller (3x13-5/8"x13"-k) UR	Buy now
27	6E5-45952-00-EL Propeller (3x13"x23"-k) UR	Buy now
27	6E5-45954-00-EL Propeller (3x14"x11"-k) UR	Buy now
27	6E5-45956-00-EL Propeller (3x13"x25"-k) UR	Buy now

 Lower Casing. Drive 3

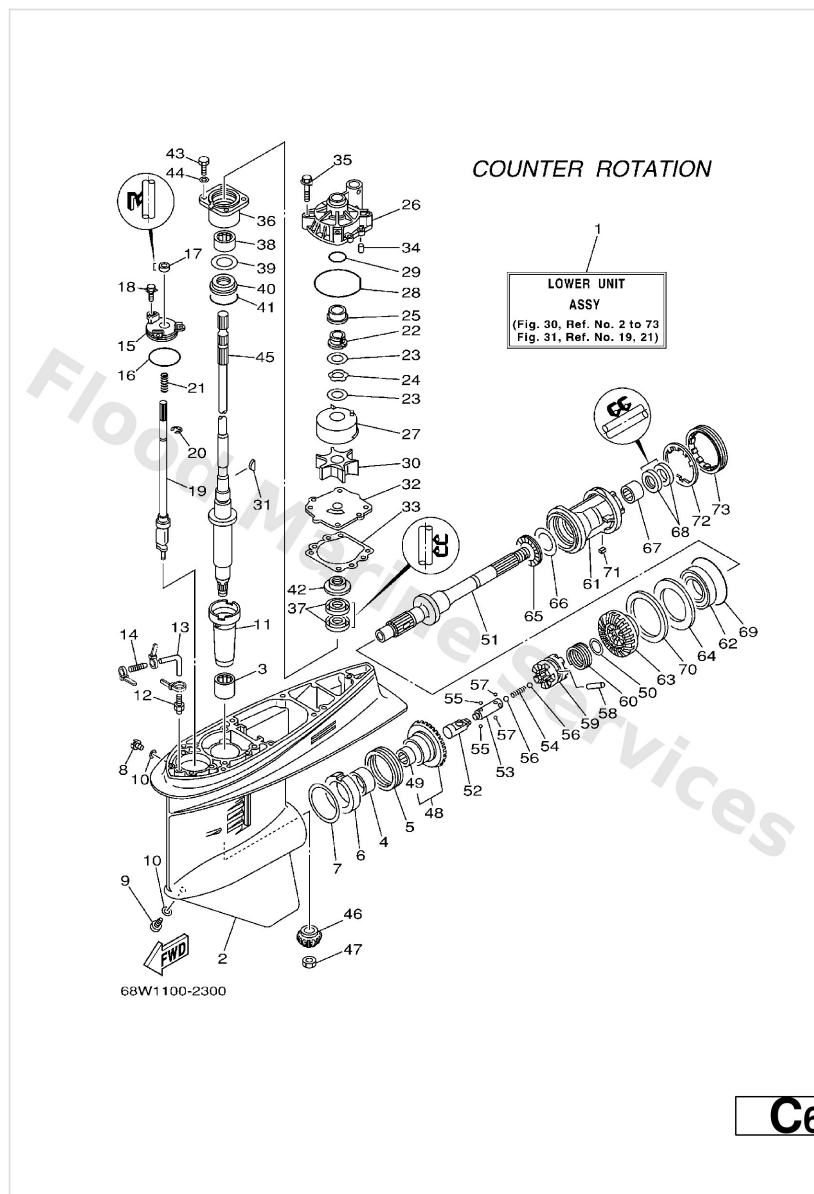

Ref	Part	
3	93315-628U9 Brg,cyl-cal roller (6e5)	Buy now
4	93315-345W0 Bearing, cylindrical(6l6)	Buy now
5	93341-360U8 Bearing, thrust (6l6)	Buy now
6	6L6-45538-00 Spacer, 1	Buy now
8	90340-08002 Plug, straight screw	Buy now
9	688-45341-10 Plug, drain	Buy now
10	90430-08020 Gasket	Buy now
11	6E5-45536-00 Sleeve, drive shaft	Buy now
12	6E5-45378-00 Nipple, hose	Buy now
13	90445-07ME9 Hose (l250) X	Buy now
14	6E5-83558-10 End, nipple	Buy now
15	6E5-45321-00 Plate	Buy now
16	93210-58144 O-ring(47x)	Buy now
17	93106-09014 Oil seal	Buy now
18	90119-06M10 Bolt, with washer	Buy now

 
Lower Casing. Drive 3

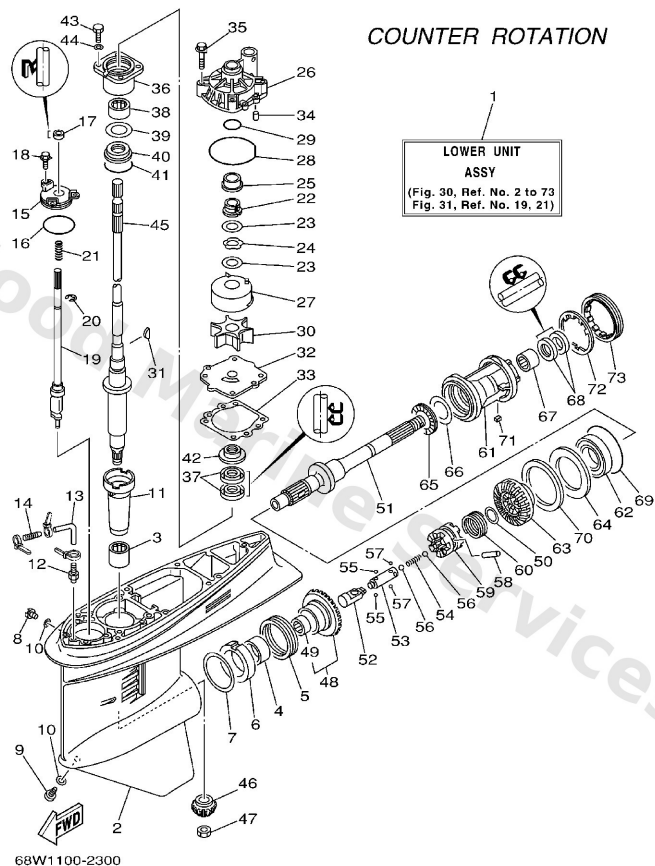

C6


Ref	Part	
19	6E5-44150-02 Shift cam assembly	Buy now
20	99001-08600 Circlip(2r6)	Buy now
21	90501-11M10 Spring, compression (663)	Buy now
22	61A-45538-00 Spacer, 1	Buy now
23	90201-22M01 Washer, plate(61a)	Buy now
24	90206-22M19 Washer, wave(61a)	Buy now
25	61A-45527-00 Collar, drive shaft	Buy now
26	61A-44311-01 Housing, water pump	Buy now
27	61A-44322-02 Insert, cartridge	Buy now
28	93210-86M38 O-ring (6e5)	Buy now
29	93210-37160 O-ring (6g8)	Buy now
30	6E5-44352-01 Impeller	Buy now
31	90280-04M05 Key, woodruff (6e5)	Buy now
32	68V-44323-00 Outer plate, cartridge	Buy now
33	6E5-44315-A0 Gasket,water pump	Buy now

 Lower Casing. Drive 3

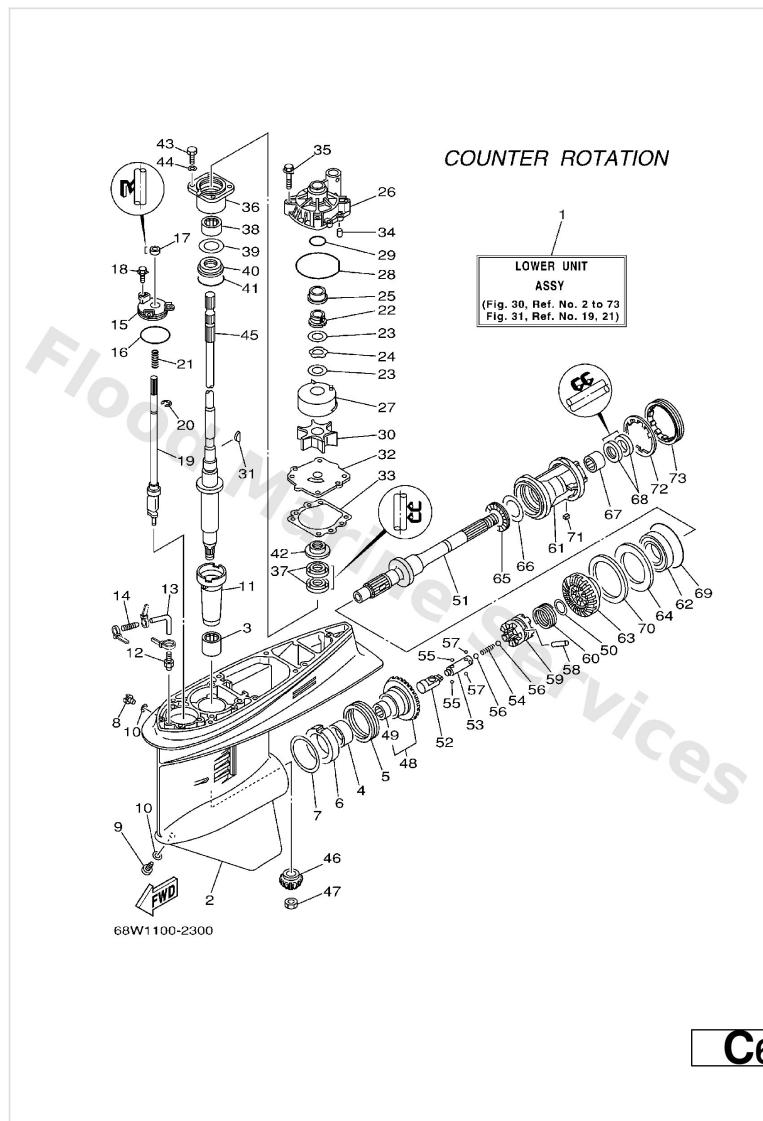

Ref	Part	
34	93606-12019 Pin, dowel (614)	Buy now
35	90119-08M14 Bolt, with washer	Buy now
36	6E5-45331-00-94 Housing, bearing	Buy now
37	93101-28M16 Oil seal (6e5)	Buy now
38	93317-330U2 Bearing, cylindrical(6k0)	Buy now
39	6E5-45587-01-10 Shim (t:0.10mm) UR	Buy now
39	6E5-45587-01-12 Shim (t:0.12mm) UR	Buy now
39	6E5-45587-01-15 Shim (t:0.15mm) UR	Buy now
39	6E5-45587-01-18 Shim (t:0.18mm) UR	Buy now
39	6E5-45587-01-30 Shim (t:0.30mm) UR	Buy now
39	6E5-45587-01-40 Shim (t:0.40mm) UR	Buy now
39	6E5-45587-01-50 Shim (t:0.50mm) UR	Buy now
40	93341-930V2 Bearing, thrust(64d)	Buy now
41	93210-55M14 O-ring (70e)	Buy now
42	6E5-45344-00 Cover, oil seal	Buy now

 
Lower Casing. Drive 3

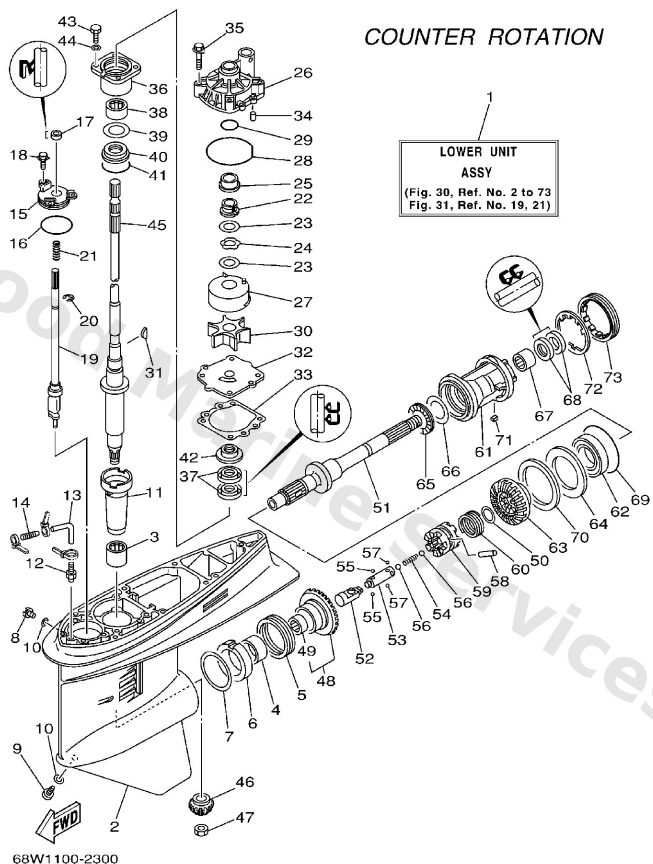

C6


Ref	Part	
43	97095-08025 Bolt (62g)	Buy now
44	92995-08600 Washer, plain (663)	Buy now
45	68V-45501-30 Drive shaft comp. X	Buy now
46	68V-45551-00 Pinion	Buy now
47	90170-16M01 Nut, hexagon (688)	Buy now
48	68W-45560-00 Gear	Buy now
49	93315-425U7 Brg,cyl-cal roller (6e5)	Buy now
50	90201-26M00 Washer, plate(6k0)	Buy now
51	68W-45611-00 Shaft, propeller	Buy now
52	6E5-45641-02 Shifter	Buy now
53	6E5-45634-01 Slide, shift	Buy now
54	90501-16M37 Spring (6g5)	Buy now
55	93507-32009 Ball (12r)	Buy now
56	93511-32017 Ball (498)	Buy now
57	93503-16003 Ball	Buy now

 Lower Casing. Drive 3

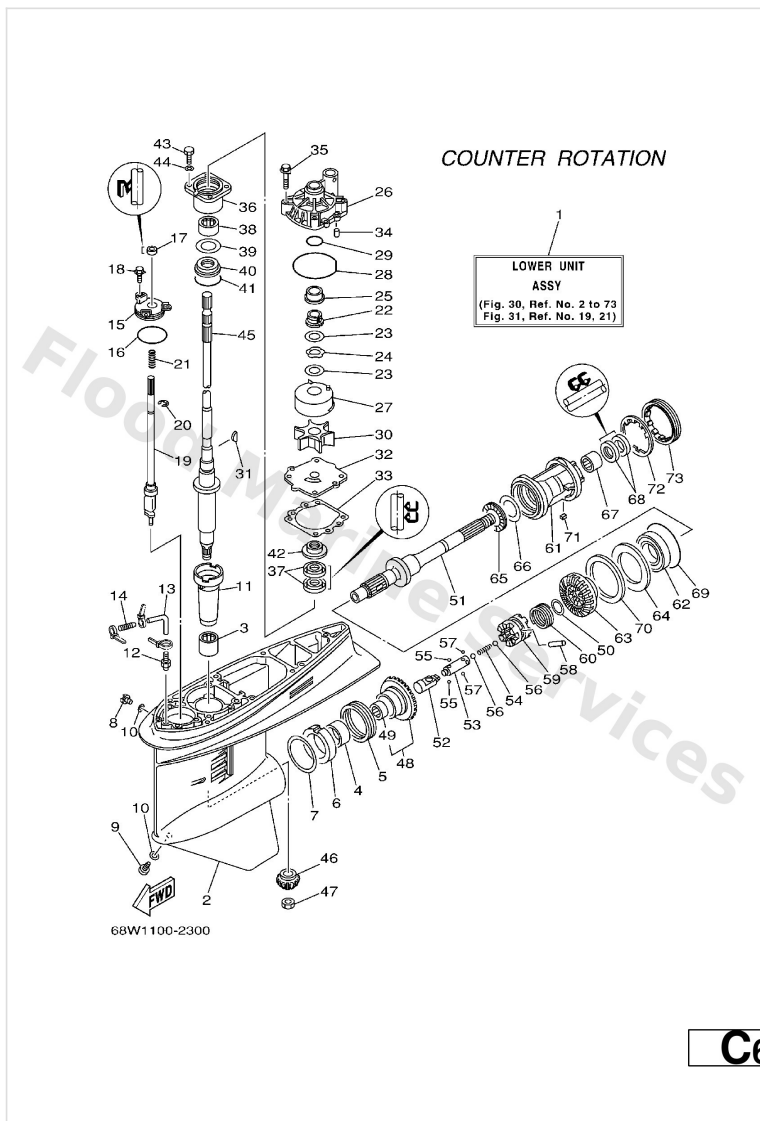


Ref	Part	
58	90250-08M07 Pin, straight (6g5)	Buy now
59	68V-45631-01 Clutch, dog	Buy now
60	6E5-45633-01 Ring, cross pin	Buy now
61	6L6-45332-00-94 Housing, bearing	Buy now
62	93332-000V7 Bearing(6l6)	Buy now
63	68W-45570-10 Gear	Buy now
64	6L6-45576-00 Washer, thrust	Buy now
65	93341-440U5 Bearing, thrust (6k0)	Buy now
66	6K1-45578-01-10 Shim (t:0.10mm) UR	Buy now
66	6K1-45578-01-12 Shim (t:0.12mm) UR	Buy now
66	6K1-45578-01-15 Shim (t:0.15mm) UR	Buy now
66	6K1-45578-01-18 Shim (t:0.18mm) UR	Buy now
66	6K1-45578-01-30 Shim (t:0.30mm) UR	Buy now
66	6K1-45578-01-40 Shim (t:0.40mm) UR	Buy now
66	6K1-45578-01-50 Shim (t:0.50mm) UR	Buy now

 Lower Casing. Drive 3

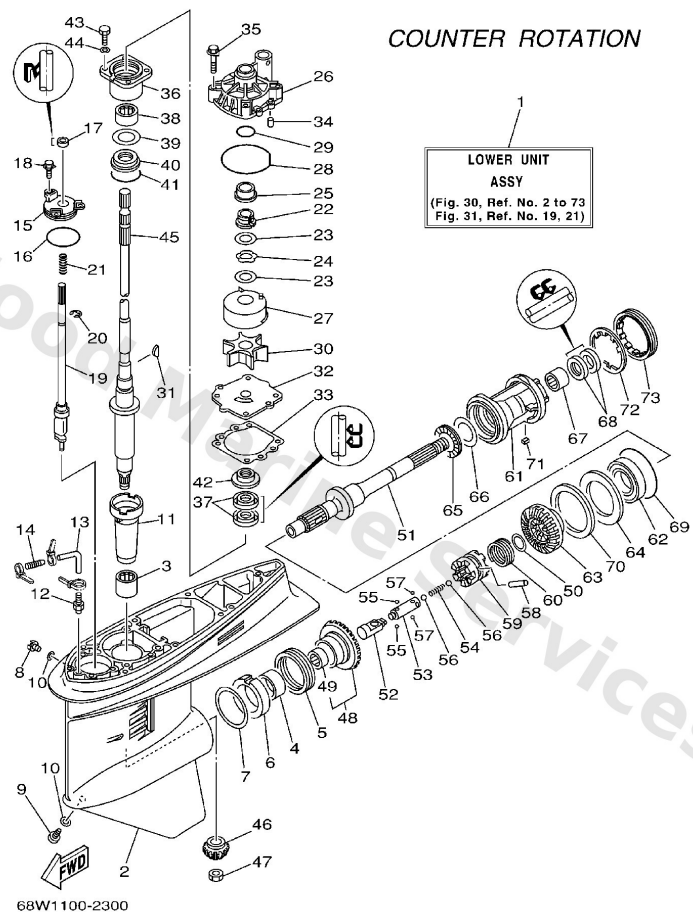


Ref	Part	
67	93317-330U5 Bearing	Buy now
68	93101-30M17 Oil seal (6e5)	Buy now
69	93210-86M39 O-ring (6e5)	Buy now
70	6L6-45577-00-10 Shim (t:0.10mm) UR	Buy now
70	6L6-45577-00-12 Shim (t:0.12mm) UR	Buy now
70	6L6-45577-00-15 Shim (t:0.15mm) UR	Buy now
70	6L6-45577-00-18 Shim (t:0.18mm) UR	Buy now
70	6L6-45577-00-30 Shim (t:0.30mm) UR	Buy now
70	6L6-45577-00-40 Shim (t:0.40mm) UR	Buy now
70	6L6-45577-00-50 Shim (t:0.50mm) UR	Buy now
71	90282-04010 Key, strait(663)	Buy now
72	688-45383-02 Washer, claw	Buy now
73	688-45384-00 Nut	Buy now

 Lower Casing. Drive 4

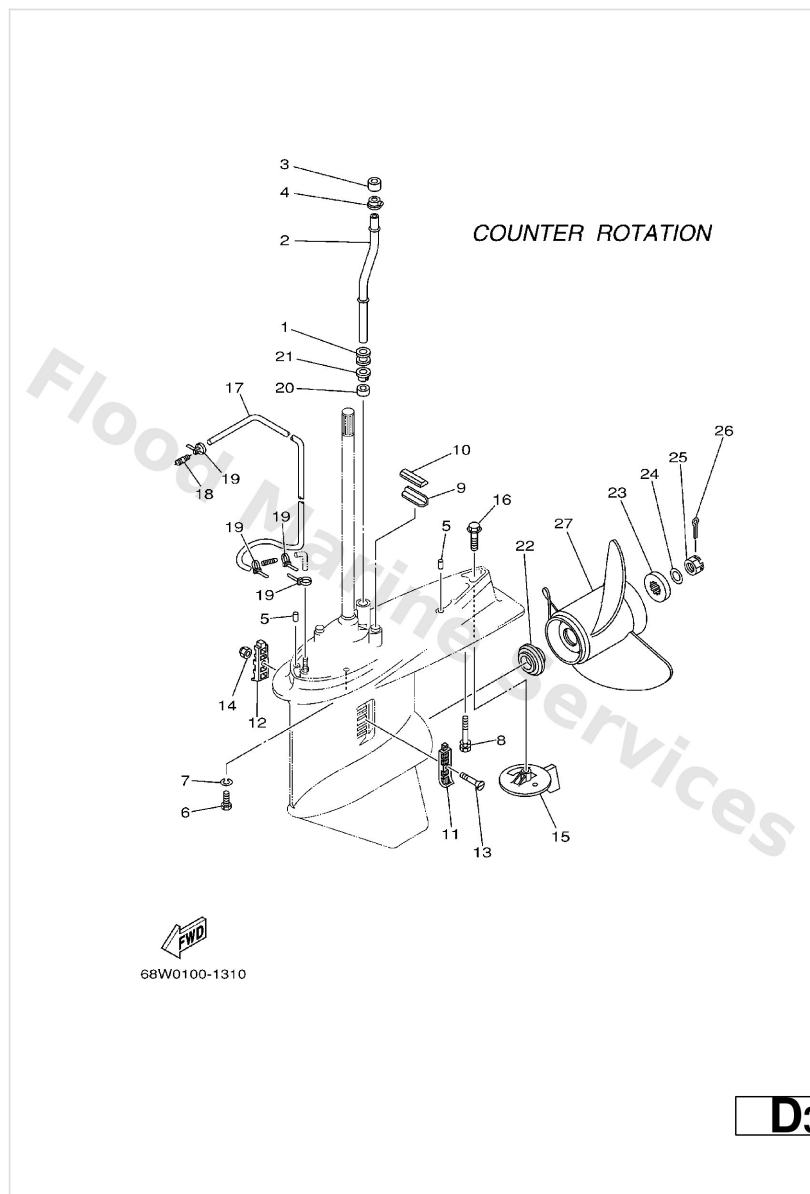

Ref	Part	
1	6E5-44366-00 Damper, water seal 2	Buy now
2	68V-44361-30 Tube, water 1 X	Buy now
3	6E5-44365-00 Damper, water seal 1	Buy now
4	6E5-44312-00 Cover, water pump housing	Buy now
5	93608-12M05 Pin, dowel b (6e5)	Buy now
6	97075-10045 Bolt(64d)	Buy now
7	92995-10100 Ybs67-10 washer, spring	Buy now
8	90119-10M89 Bolt, with washer	Buy now
9	663-45376-00-94 Guide, seal damper	Buy now
10	688-45375-00 Damper, seal 2	Buy now
11	688-45214-02 Cover, water inlet	Buy now
12	688-45215-02 Cover, water inlet	Buy now
13	90152-05M07 Screw, countersunk	Buy now
14	90185-05002 Nut nylon (sus)(ex4)	Buy now
15	6L6-45371-00 Tab-trim	Buy now

 Lower Casing. Drive 4

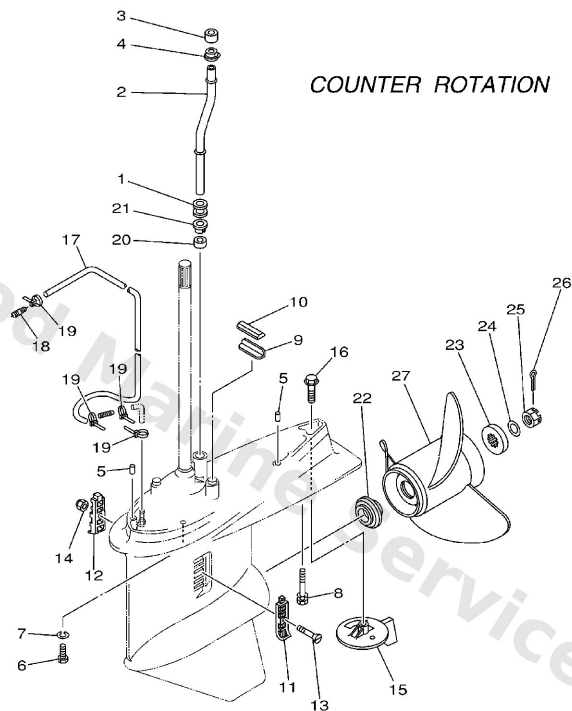


68W0100-1310

D3


Ref	Part	
16	90105-10M00 Bolt, hexagon (663)	Buy now
17	90445-076K2 Hose (I1700)	Buy now
18	6E5-83558-00 End, nipple	Buy now
19	90465-11M10 Clamp	Buy now
22	6E5-45987-01 Spacer 1	Buy now
23	688-45997-01 Spacer 2	Buy now
24	92990-18200 Washer (6e5)	Buy now
25	90171-18M04 Nut, castle (6e5)	Buy now
26	91490-40030 Pin, cotter (663)	Buy now
27	6L6-45930-01-98 Propeller (3x13"x17"-kl) UR	Buy now
27	6L6-45970-00-98 Propeller (3x13 x19 -kl) UR	Buy now
27	6L6-45972-00-98 Propeller (ss 3x13"x21"-kl) UR	Buy now

 Meter

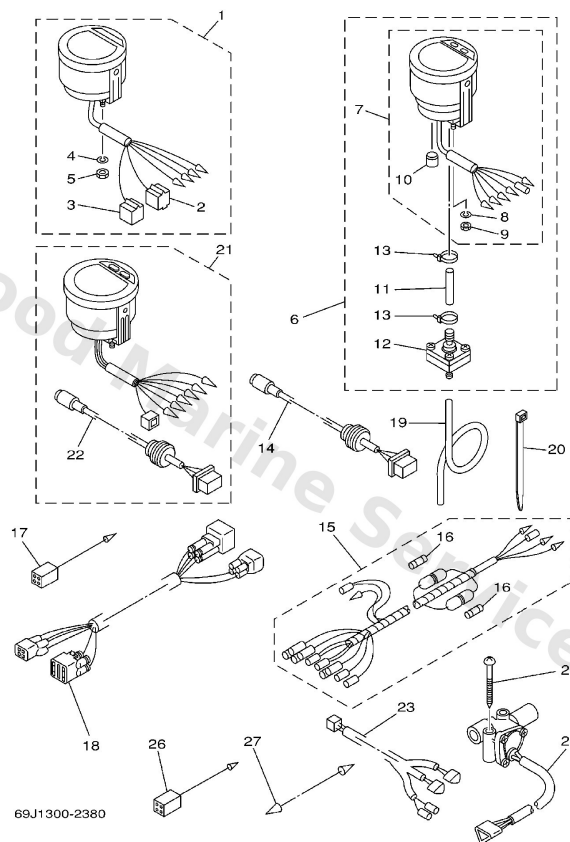


Ref	Part	
1	6Y5-8350T-01 Digital tachometer assembly AP	Buy now
2	9E450-04433 Housing, connector (m-4-w) M-4-W	Buy now
3	9E450-04533 Housing, f-4-w(5pcs) F-4-W	Buy now
4	92990-04100 Ybs67-4 washer, spring	Buy now
5	95380-04600 Nut,hex	Buy now
6	6Y5-83500-S5 Meter assembly AP	Buy now
7	6Y5-83570-S5 Speedometer assembly	Buy now
10	6Y5-83533-T2 Grommet	Buy now
11	6Y5-83557-31 Tube	Buy now
12	6Y5-83728-00 Connector assembly	Buy now
20	90465-11M10 Clamp AP	Buy now
14	6Y5-87122-S0 Cord assembly 1 AP	Buy now
15	6Y5-83553-00 Wire, lead (l=2.5m) AP	Buy now
15	6Y5-83553-M0 Wire, lead (l=2.5m) AP	Buy now
16	1E6-82151-00 Fuse (10a)	Buy now

 Meter

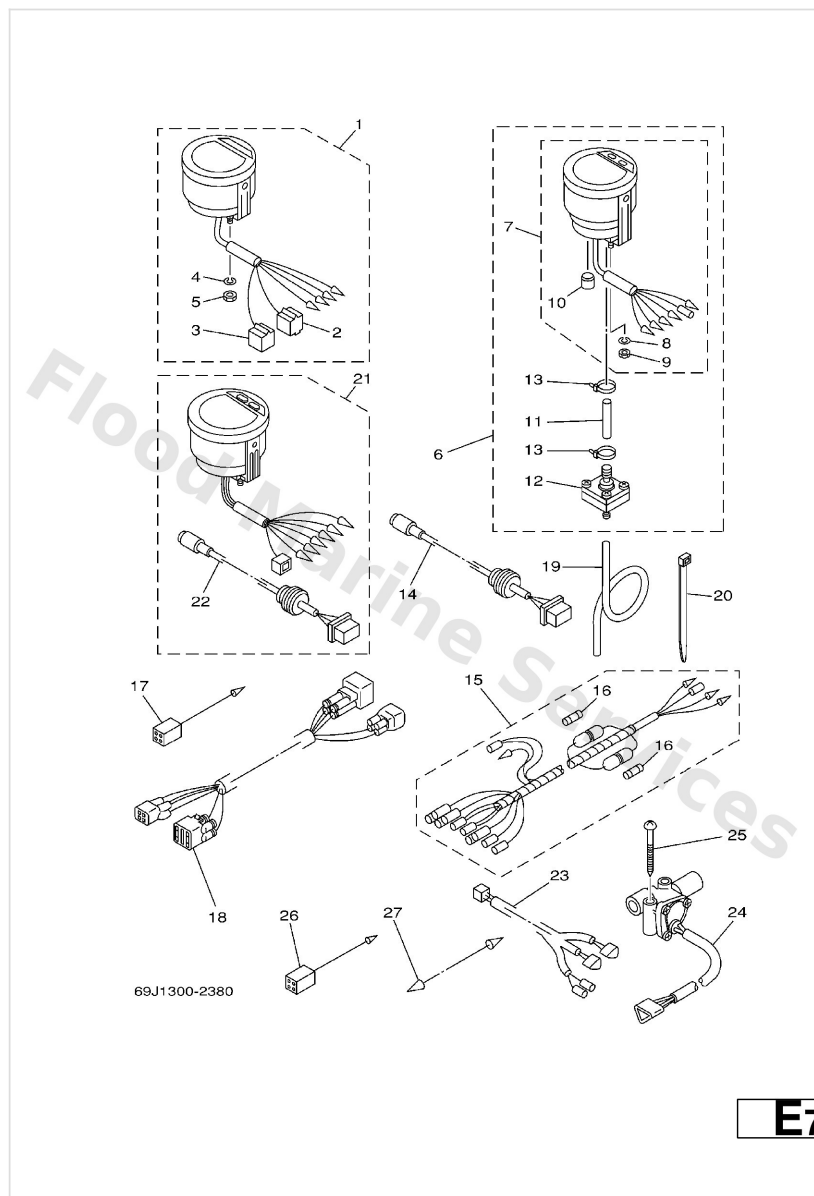

Ref	Part	
17	6Y5-82117-00 Wire, lead AP	Buy now
18	68F-82553-80 Extension, wire lead (8m) AP	Buy now
18	68F-82553-90 Extension, wire lead (9m) AP	Buy now
19	6Y5-83557-10 Tube (8m) AP	Buy now
21	6Y5-8350F-00 Fuel meter movement assembly AP	Buy now
23	6Y5-83553-F1 Wire, lead AP	Buy now
24	6Y5-85752-01 Sender unit assembly, fuel meter AP	Buy now
25	90158-06002 33 – AP	Buy now
27	703-82531-00 Wire, lead AP	Buy now

 
Oil Pan

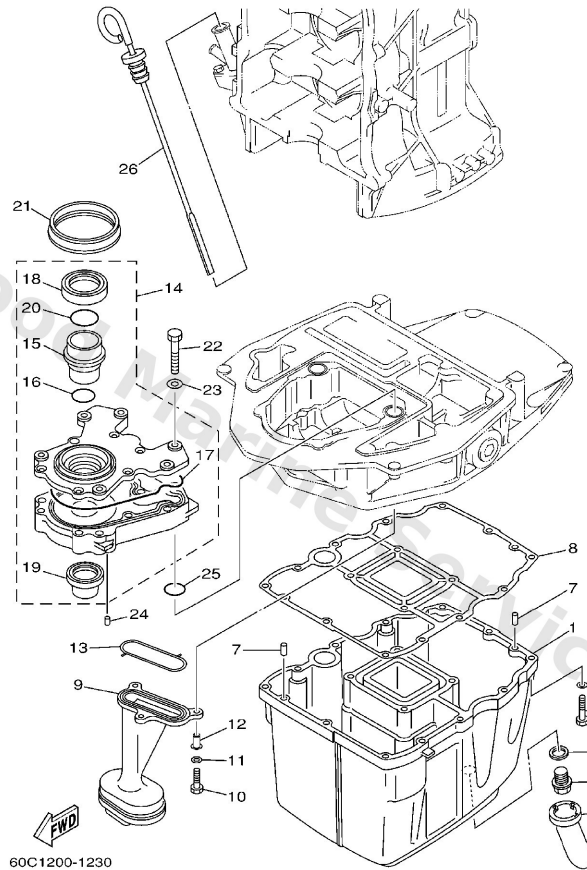

B6

Ref	Part	
1	67F-15311-00-5B Oil pan set	Buy now
2	67F-15316-00 Damper 1	Buy now
3	90340-14M06 Plug, straight screw(62y)	Buy now
4	90430-14M09 Gasket	Buy now
5	97075-06025 Bolt	Buy now
6	92995-06600 Washer, plain (646)	Buy now
7	93606-12019 Pin, dowel (614)	Buy now
8	67F-15312-00 Gasket, oil pan	Buy now
9	67F-13411-00 Strainer, oil	Buy now
10	97027-06025 Bolt, hexagon	Buy now
11	92907-06600 Washer(6ta)	Buy now
12	90387-06M64 Collar	Buy now
13	67F-13415-00 Seal, oil strainer	Buy now
14	67F-13300-03 Oil pump assembly	Buy now
15	67F-13314-01 Shaft, Pump	Buy now

 
Oil Pan

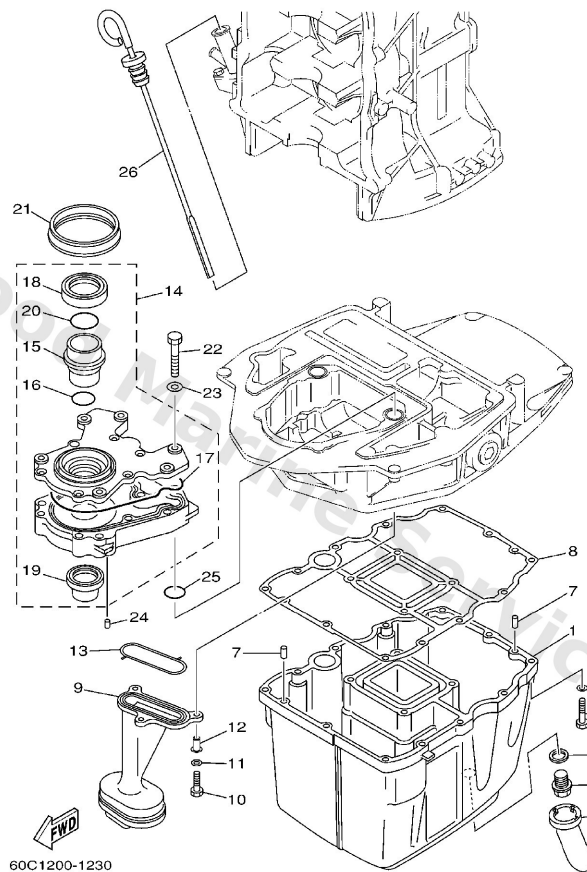

B6

Ref	Part	
16	67F-13473-01 O-ring	Buy now
17	67F-13329-00 Gasket, pump cover	Buy now
18	67F-13119-01 Oil seal	Buy now
19	67F-13631-02 Oil seal	Buy now
20	67F-13769-00 O-ring	Buy now
21	67F-13338-00 Seal	Buy now
22	97095-06045 Bolt, hexagon	Buy now
24	93604-12M07 Pin, dowel (688)	Buy now
25	93210-19MJ1 O-ring	Buy now
26	68V-15362-00 Plug, Oil Level	Buy now

 
Power Trim & Tilt Assy 1

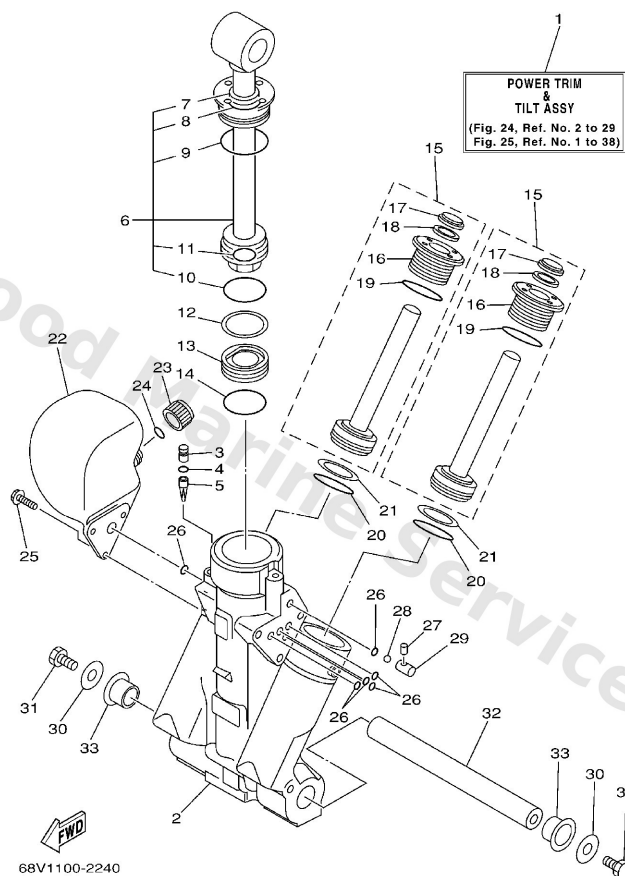

A7


Ref	Part	
1	68V-43800-01-4D Power trim & tilt assembly	Buy now
2	64E-43825-01 Housing Trim & Tilt	Buy now
3	64E-4388J-00 Plug 2	Buy now
4	93210-10M74 O-ring	Buy now
5	64E-43817-00 Filter 2	Buy now
6	64E-43810-00 Tilt piston sub assembly	Buy now
7	64E-43898-00 Seal, dust 2	Buy now
8	64E-43867-00 O-ring 7	Buy now
9	64E-43866-00 O-ring 6	Buy now
10	6E5-43862-00 O-ring 2	Buy now
11	64E-43883-00 O-ring 10	Buy now
12	6E5-43872-00 Ring, back-up 2	Buy now
13	6E5-43814-02 Piston, free	Buy now
15	64E-43820-00 Trim piston sub assembly	Buy now
16	64E-43821-00 Screw, trim cylinder end	Buy now

 Power Trim & Tilt Assy 1

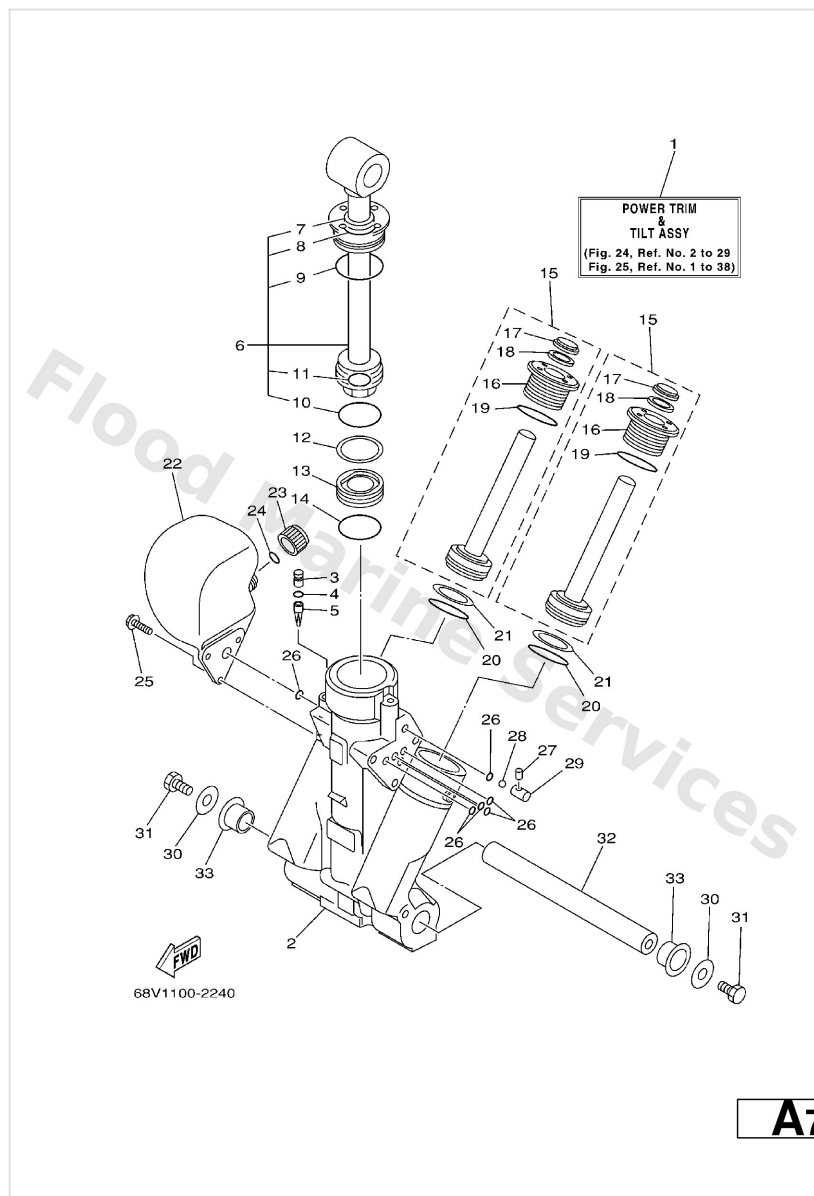

Ref	Part	
17	64E-43822-00 Seal, trim dust	Buy now
18	64E-4384J-00 Seal, trim down	Buy now
19	6G5-43864-00 O-ring 4	Buy now
20	6E5-43864-00 O-ring 4	Buy now
21	6E5-43874-01 Ring, back-up 4	Buy now
22	64E-43828-00 Body, reservoir	Buy now
23	64E-43829-00 Plug, reservoir	Buy now
24	64E-43897-00 O-ring	Buy now
25	64E-4388E-00 Bolt ,screw (l:14mm)	Buy now
26	64E-43869-00 O-ring 9	Buy now
27	64E-4381G-00 Pin 1	Buy now
28	6E5-43858-00 Ball 1	Buy now
29	64E-4382G-00 Valve seat	Buy now
30	90201-08M14 Washer, plate	Buy now
31	97080-08016 Bolt	Buy now

 
Power Trim & Tilt Assy 1

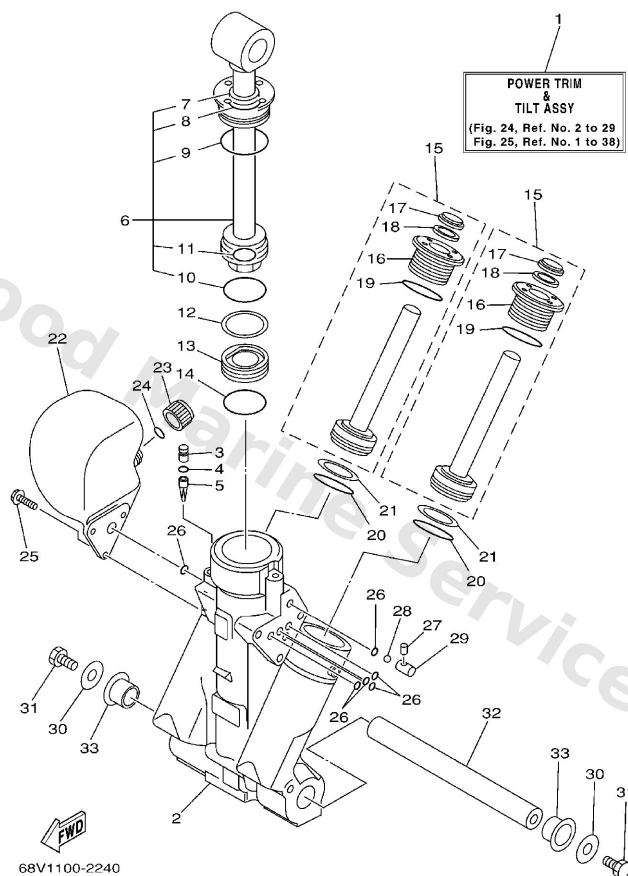

A7

Ref	Part	
32	64E-43818-01 Lower shock mount pin set	Buy now
33	90386-22M98 Bush(61u)	Buy now

 
Power Trim & Tilt Assy 2

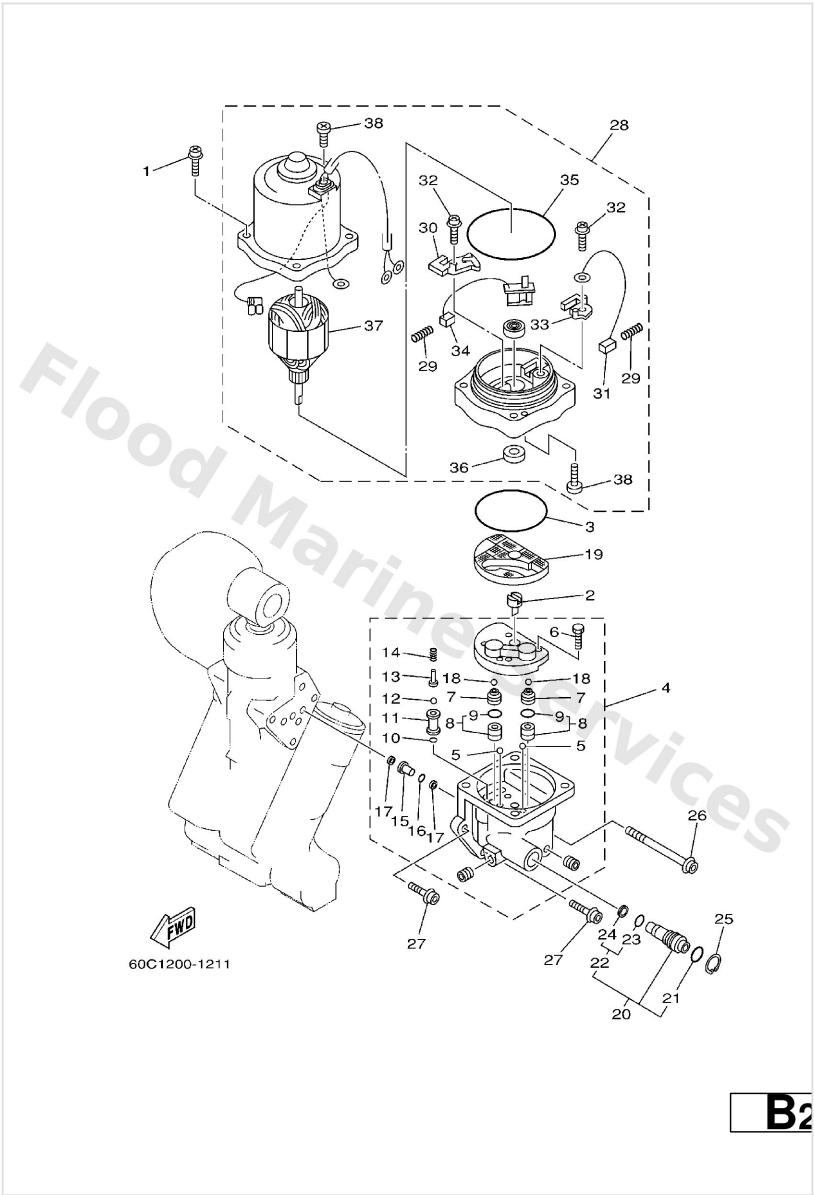

B2


Ref	Part	
1	64E-4388E-10 Bolt ,screw (l:34.7mm)	Buy now
2	64E-43831-00 Connector, shaft	Buy now
3	64E-43868-00 O-ring 8	Buy now
4	68V-43830-00 Gear pump assembly	Buy now
5	72X-43858-00 Ball	Buy now
6	64E-43843-00 Screw, valve lock	Buy now
7	64E-43841-00 Piston, shuttle	Buy now
8	64E-43802-00 Valve sub assembly	Buy now
9	6E5-43896-00 O-ring	Buy now
10	6G5-43863-00 O-ring 3	Buy now
11	66Y-43851-00 Seat, relief valve	Buy now
12	64E-43858-00 Ball	Buy now
13	64E-43859-00 Pin, Valve Support	Buy now
14	68V-43855-00 Spring Up Relief	Buy now
15	64E-43850-00 Valve sub assembly	Buy now

 Power Trim & Tilt Assy 2

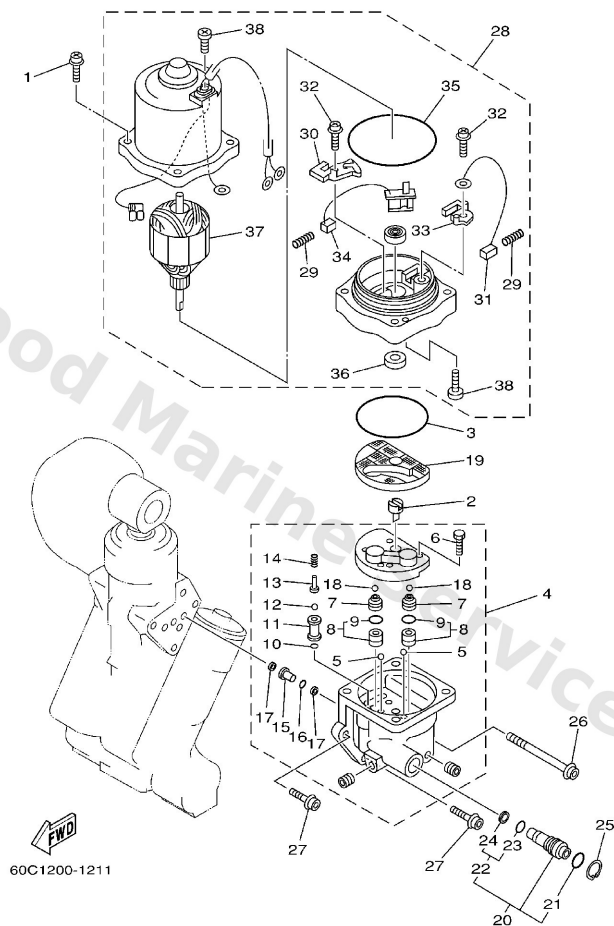

Ref	Part	
16	64E-43865-00 O-ring 10	Buy now
17	64E-43816-00 Filter 1	Buy now
19	64E-43817-10 Filter 2	Buy now
20	64E-43860-00 Manual valve sub-assembly	Buy now
21	72X-85075-L0 O-ring (nsd161)	Buy now
22	64E-43827-00 Ring set	Buy now
23	64E-4387A-00 O-ring	Buy now
24	64E-43873-00 Ring, back up	Buy now
25	64E-43875-00 Ring, snap	Buy now
26	64E-43879-10 Screw, with washer	Buy now
27	64E-43879-00 Screw, with washer	Buy now
28	68V-43880-01 Motor assembly	Buy now
29	6H1-4386K-10 Spring, brush	Buy now
30	64E-4380J-00 Holder Brush	Buy now
31	64E-43891-00 Brush 1	Buy now

 
Power Trim & Tilt Assy 2

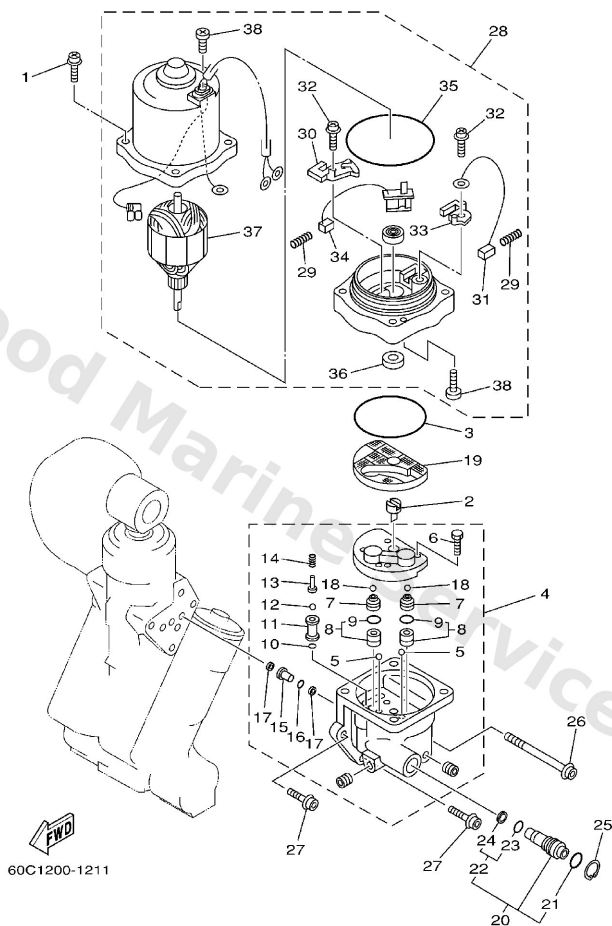

B2

Ref	Part	
32	97607-04310 Screw, pan head(6g8)	Buy now
33	64E-4380F-00 Holder, brush 2	Buy now
34	64E-43892-00 Breaker comp. (brush 2)	Buy now
35	6G5-43865-00 O-ring	Buy now
36	93102-08M43 Oil seal(6b0)	Buy now
37	64E-43805-00 Armature assembly	Buy now
38	64E-43843-10 Screw valve lock	Buy now

 
Remote Control Assy 1

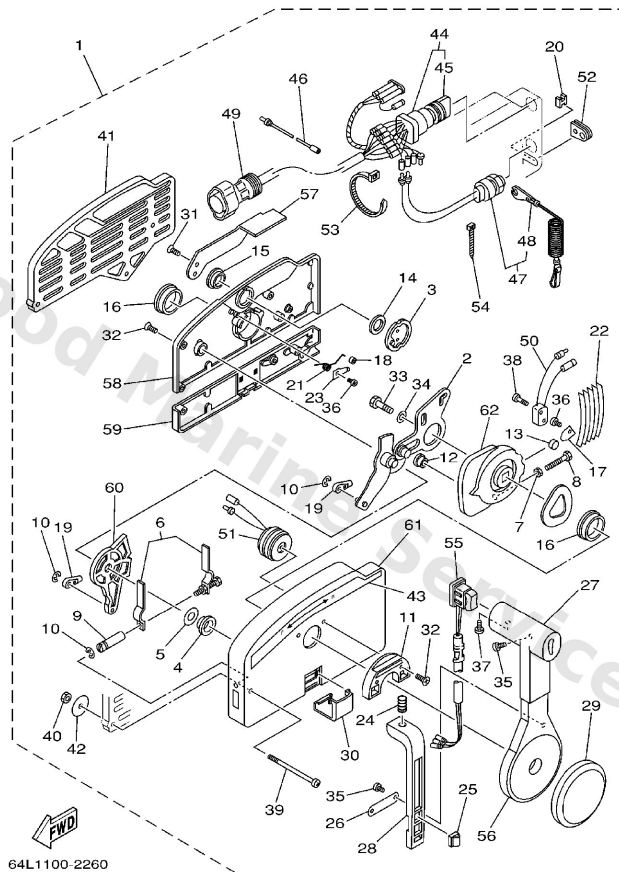

E1

Ref	Part	
1	703-48205-17 Remote control assembly (10p, ptt) AP WITH PT/T SW.	Buy now
2	703-48261-01 Arm, throttle	Buy now
3	703-48153-00 Shaft, free accel.	Buy now
4	703-48235-00 Bushing	Buy now
5	703-48268-00 Spacer 3	Buy now
6	703-48264-00 Throttle, friction	Buy now
7	95380-05600 Nut, hexagon (663)	Buy now
8	97380-05025 Bolt	Buy now
9	703-48265-00 Shaft Friction	Buy now
10	93430-06024 Circlip (701)	Buy now
11	703-48245-00 Plate, lock	Buy now
12	703-48252-00 Roller, cam	Buy now
13	701-48248-00 Roller, free accel	Buy now
14	703-48198-00 Washer, wave 3	Buy now
15	703-48243-00 Bushing 3	Buy now

 
Remote Control Assy 1

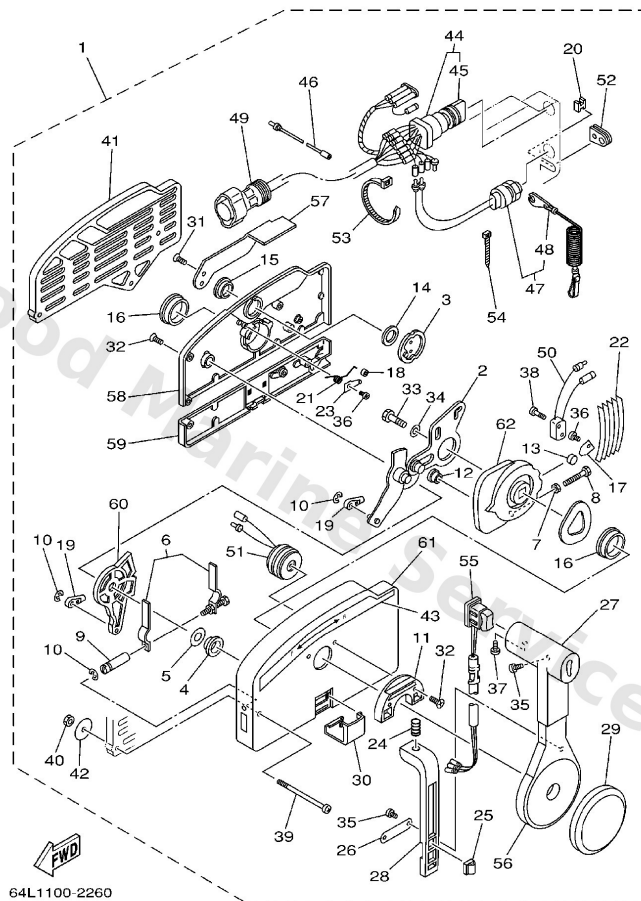

E1

Ref	Part	
16	703-48236-00 Bushing	Buy now
17	703-48189-00 Retainer	Buy now
18	703-48234-00 Roller, detent	Buy now
19	703-48345-01 Cable end, remote control 2	Buy now
20	703-48358-00 Anchor, cable	Buy now
21	703-48244-00 Spring, free accel.	Buy now
22	703-48238-00 Spring, detent	Buy now
23	703-48246-00 Spacer 1	Buy now
24	703-48227-00 Spring, neutral lock	Buy now
25	703-82594-00 Clamp WITH PT/T SW.	Buy now
26	703-48226-00 Plate, stopper	Buy now
27	703-48222-00 Grip, control lever SINGLE	Buy now
28	703-48223-00 Lock, neutral	Buy now
29	703-48225-00 Cover	Buy now
30	703-48219-00 Cover, lead	Buy now

 
Remote Control Assy 1

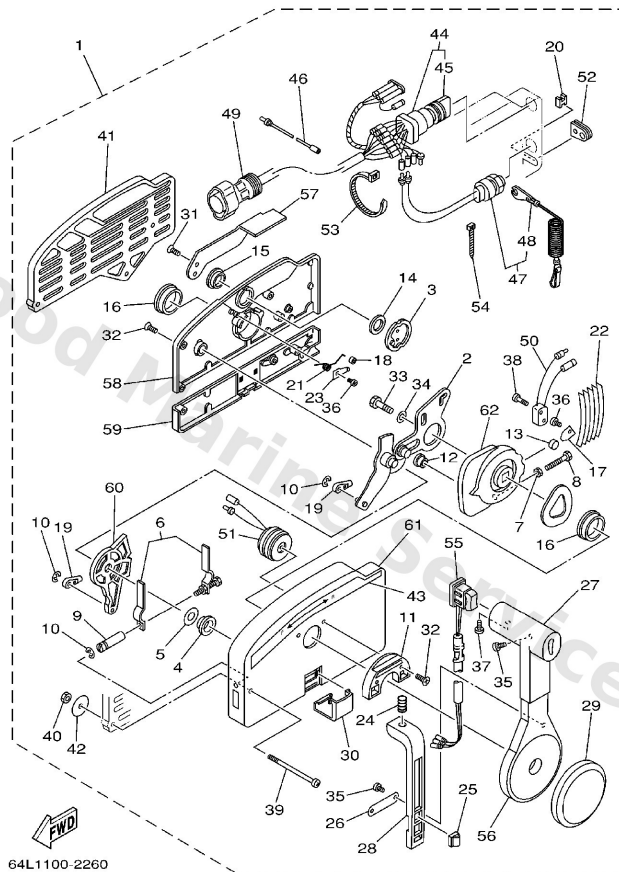

E1

Ref	Part	
31	703-48281-00 Screw, flat head	Buy now
32	703-48282-00 Screw	Buy now
33	97380-08030 Bolt, hexagon (fj1)	Buy now
34	92990-08600 Washer, plain (663)	Buy now
35	98580-04010 Screw, pan head (e56)	Buy now
36	98580-04006 Screw, pan head (7h3)	Buy now
37	98580-05010 Screw, pan head(62x)	Buy now
38	98580-03015 Screw, pan head (n151)	Buy now
39	703-48291-10 Screw	Buy now
40	95380-06600 Nut(661)	Buy now
41	703-48293-10 Spacer, remote control SINGLE	Buy now
42	701-48287-00 Washer 1	Buy now
43	703-48215-00 Graphic	Buy now
44	703-82510-43 Main switch assembly	Buy now
45	703-82577-00 Cap, key	Buy now

 
Remote Control Assy 1

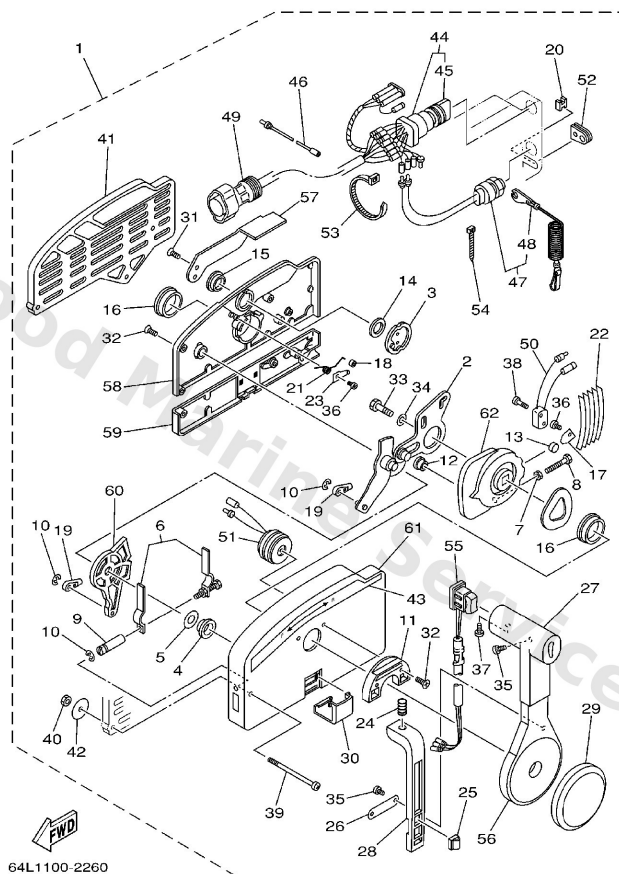

E1

Ref	Part	
46	703-82531-00 Wire, lead	Buy now
47	688-82575-01 Engine stop switch assembly	Buy now
48	682-82556-00 Lanyard, stop switch	Buy now
49	688-8258A-20 10p main harness mec 2m (6ft) L)5M (10P)	Buy now
50	703-82540-00 Neutral switch assembly	Buy now
51	703-83383-02 Buzzer	Buy now
52	703-48284-00 Grommet	Buy now
53	703-82591-00 Band	Buy now
54	703-82592-00 Band	Buy now
55	703-82563-02 Trim & tilt switch assembly	Buy now
56	703-48221-00 Grip	Buy now
57	703-48152-00 Knob, free accel	Buy now
58	703-48212-00 Rear housing	Buy now
59	703-48213-00 Back, panel	Buy now
60	703-48271-00 Arm, shift	Buy now

 
Remote Control Assy 1

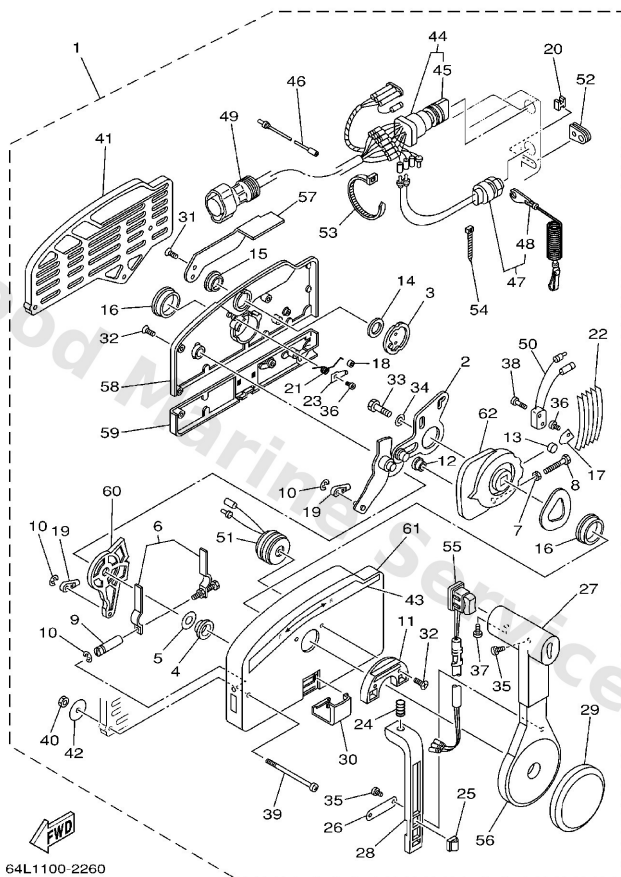

E1

Ref	Part	
61	703-48211-01 Housing,1	Buy now
62	703-48232-00 Drive gear	Buy now

 
Remote Control Assy 2

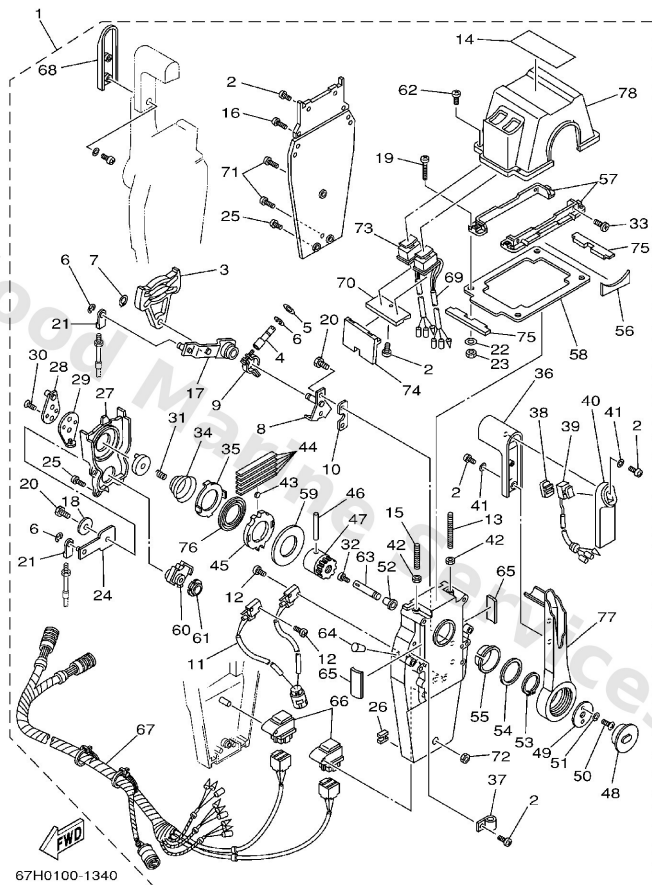

E4

Ref	Part	
1	704-48207-23 Remote Control assembly AP WITH PT/T SW.	Buy now
2	97890-05016 Screw, pan head(6b0)	Buy now
3	EL8-48251-00 Plate, cam	Buy now
4	704-48265-00 Shaft, friction	Buy now
5	701-48246-00 Spacer	Buy now
6	93430-06024 Circlip (701)	Buy now
7	EL8-48259-00 Circlip 1	Buy now
8	704-48262-00 Shaft, throttle	Buy now
9	704-48264-00 Friction, throttle	Buy now
10	704-48266-00 Spacer 2	Buy now
11	704-82540-10 Neutral switch assembly	Buy now
12	6A5-48129-10 Screw, pan head (n151)	Buy now
13	EL8-48281-00 Screw 1	Buy now
14	704-48215-10 Graphic 1	Buy now
15	704-48281-00 Screw1	Buy now

 
Remote Control Assy 2

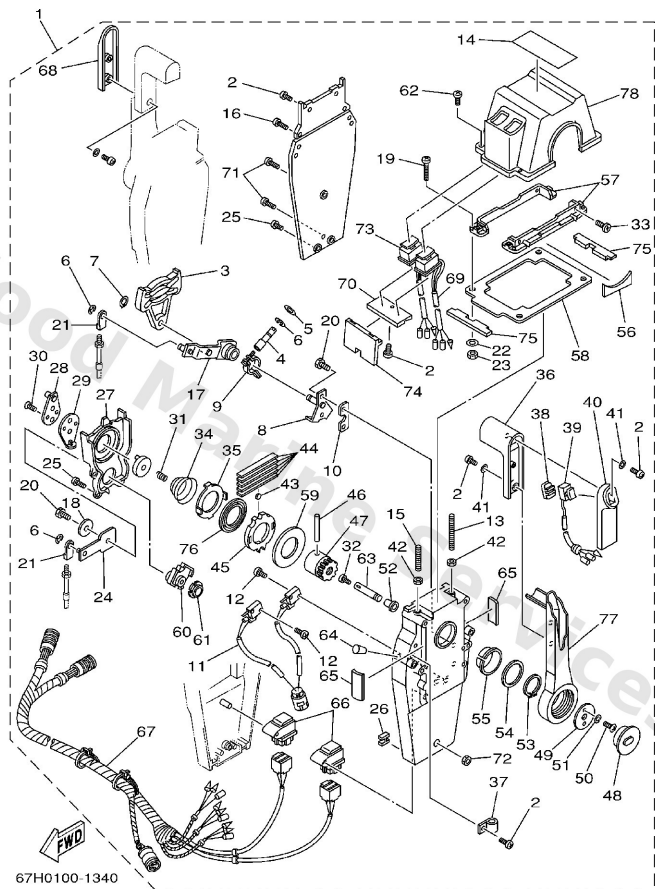

E4

Ref	Part	
16	97890-05025 Screw, panhead (a93)	Buy now
17	704-48261-00 Arm, throttle	Buy now
18	EL8-48191-00 Washer 1	Buy now
19	704-48283-00 Screw, panhead (eg9)	Buy now
20	97380-06018 Bolt (fj0)	Buy now
21	703-48345-01 Cable end, remote control 2	Buy now
22	704-48287-00 Washer 1	Buy now
23	95380-05600 Nut, hexagon (663)	Buy now
24	EL8-48271-00 Arm, shift	Buy now
25	EL8-48127-00 Screw 1	Buy now
26	703-48358-00 Anchor, cable	Buy now
27	EL8-48231-00 Housing, gear	Buy now
28	EL8-48241-00 Arm, drive	Buy now
29	EL8-48254-00 Stopper Throttle Adjusting	Buy now
30	92780-06020 Screw flat head	Buy now

 
Remote Control Assy 2

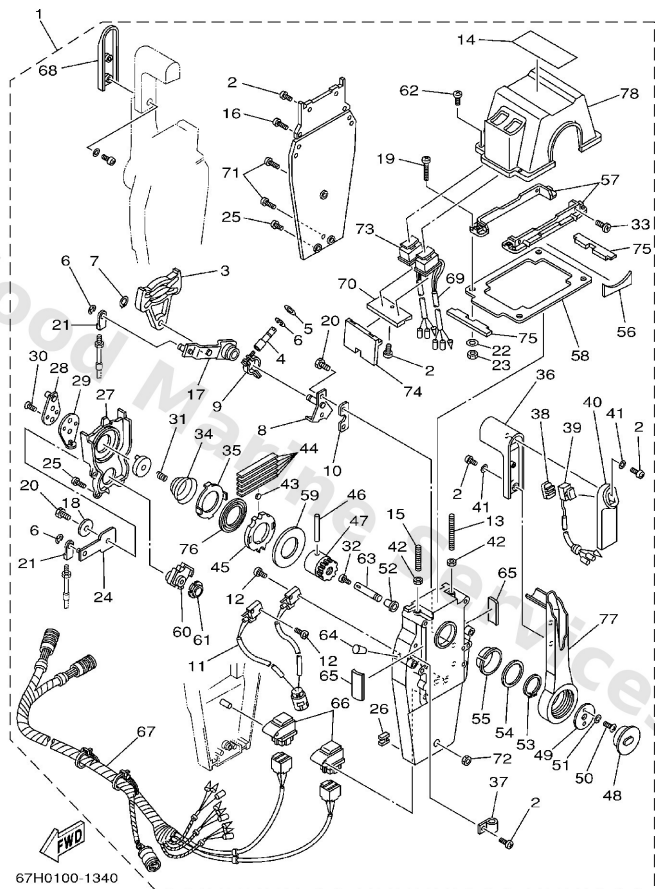

E4


Ref	Part	
31	EL8-48158-00 Spring 1	Buy now
32	98580-04006 Screw, pan head (7h3)	Buy now
33	98780-05018 Screw (704)	Buy now
34	EL8-48244-00 Spring, free accel.	Buy now
35	EL8-48245-00 Plate, lock	Buy now
36	704-48222-00 Grip, control lever	Buy now
37	704-82594-00 Clamp	Buy now
38	704-48228-00 Holder, switch	Buy now
39	704-82563-31 Trim & tilt switch assembly	Buy now
40	704-48229-00 Grip, control lever 2	Buy now
41	92990-05300 Washer, tooth	Buy now
42	95380-06600 Nut(661)	Buy now
43	701-48248-00 Roller, free accel	Buy now
44	703-48238-00 Spring, detent	Buy now
45	EL8-48232-00 Gear 1	Buy now

 Remote Control Assy 2

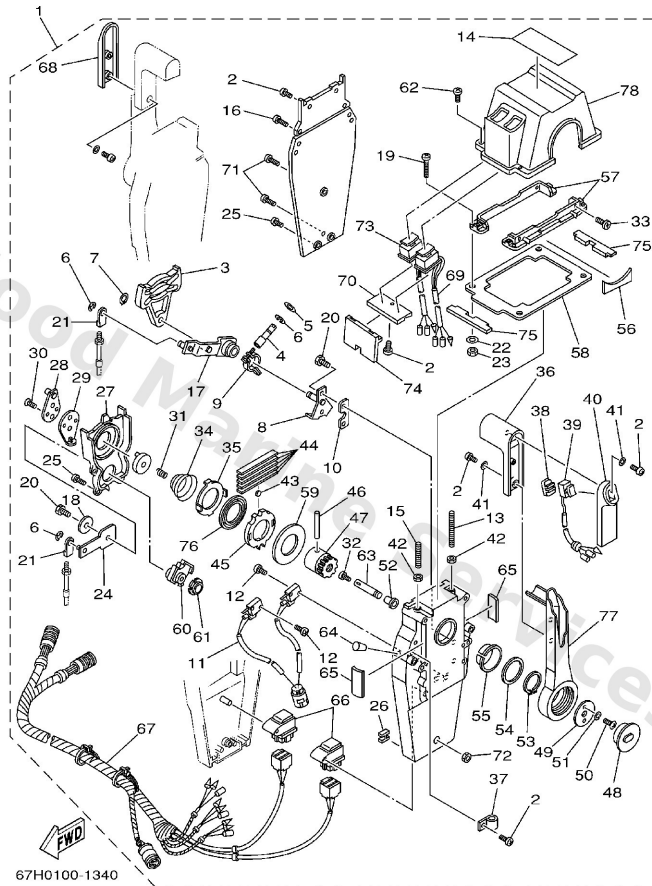


Ref	Part	
46	EL8-48164-00 Pin 2	Buy now
47	704-48242-00 Shaft, drive	Buy now
48	704-48225-00 Cover	Buy now
49	704-48192-00 Washer 2	Buy now
50	97890-06018 Screw, pan head(6e5)	Buy now
51	92990-06300 Washer, tooth	Buy now
52	702-48263-00 Bushing 4	Buy now
53	EL8-48279-00 Circlip 2	Buy now
54	704-48193-00 Washer 3	Buy now
55	EL8-48234-00 Bushing 1	Buy now
56	704-48219-00 Cover, lead	Buy now
57	704-48144-00 Plate, stopper 2	Buy now
58	704-48176-10 Grommet	Buy now
59	703-48192-00 Washer 2	Buy now
60	EL8-48233-00 Gear 2	Buy now

 Remote Control Assy 2

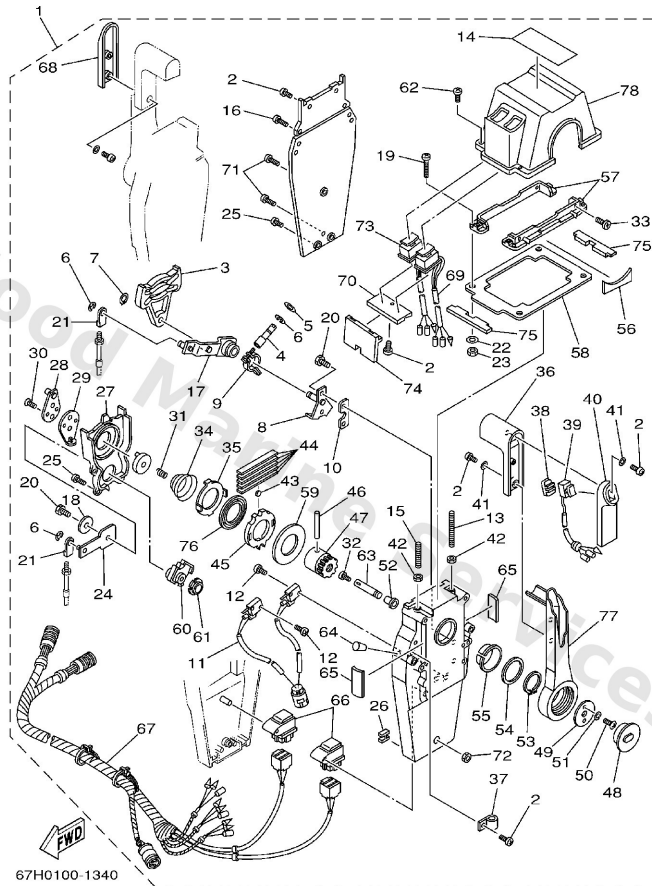

Ref	Part	
61	703-48235-00 Bushing	Buy now
62	704-48282-00 Screw 2	Buy now
63	EL8-48153-10 Shaft, free accel.	Buy now
64	704-48166-00 Plug	Buy now
65	704-48284-00 Grommet	Buy now
66	704-81950-00 Relay assembly	Buy now
67	704-82590-10 Wireharness assembly	Buy now
68	704-48229-10 Grip, control lever 2	Buy now
69	704-82563-E0 Trim & tilt switch assembly	Buy now
70	704-48228-10 Holder, switch	Buy now
71	704-48128-00 Screw, pan head	Buy now
72	704-48156-00 Nut 1	Buy now
73	704-82563-F0 Trim & tilt switch assembly	Buy now
74	704-48285-00 Grommet 2	Buy now
75	704-48286-00 Grommet 3	Buy now

 
Remote Control Assy 2

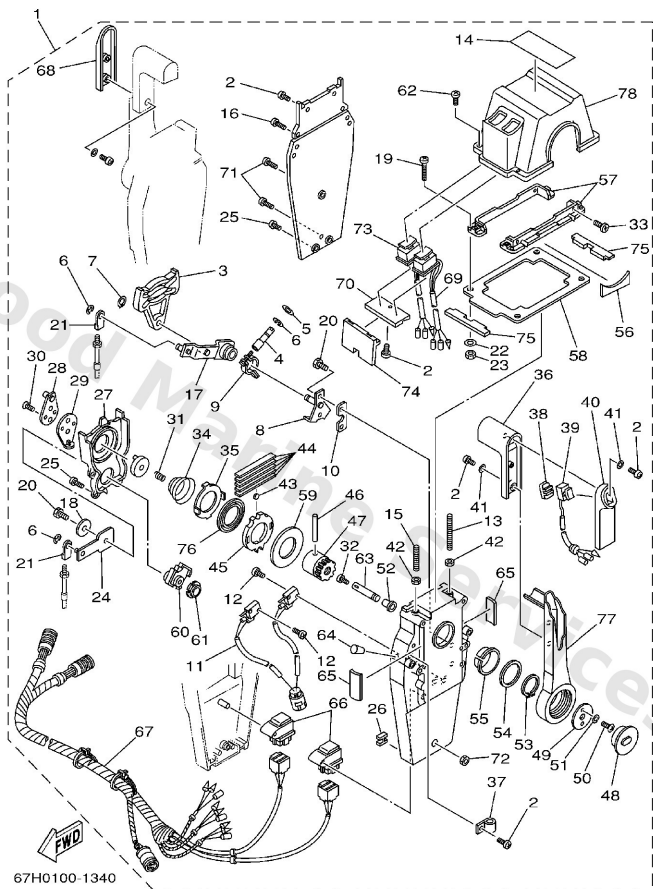

E4


Ref	Part	
76	704-48178-00 Plate, shift	Buy now
77	704-48221-00 Lever control	Buy now
78	704-48119-20 Cover	Buy now

 Remote Control Box

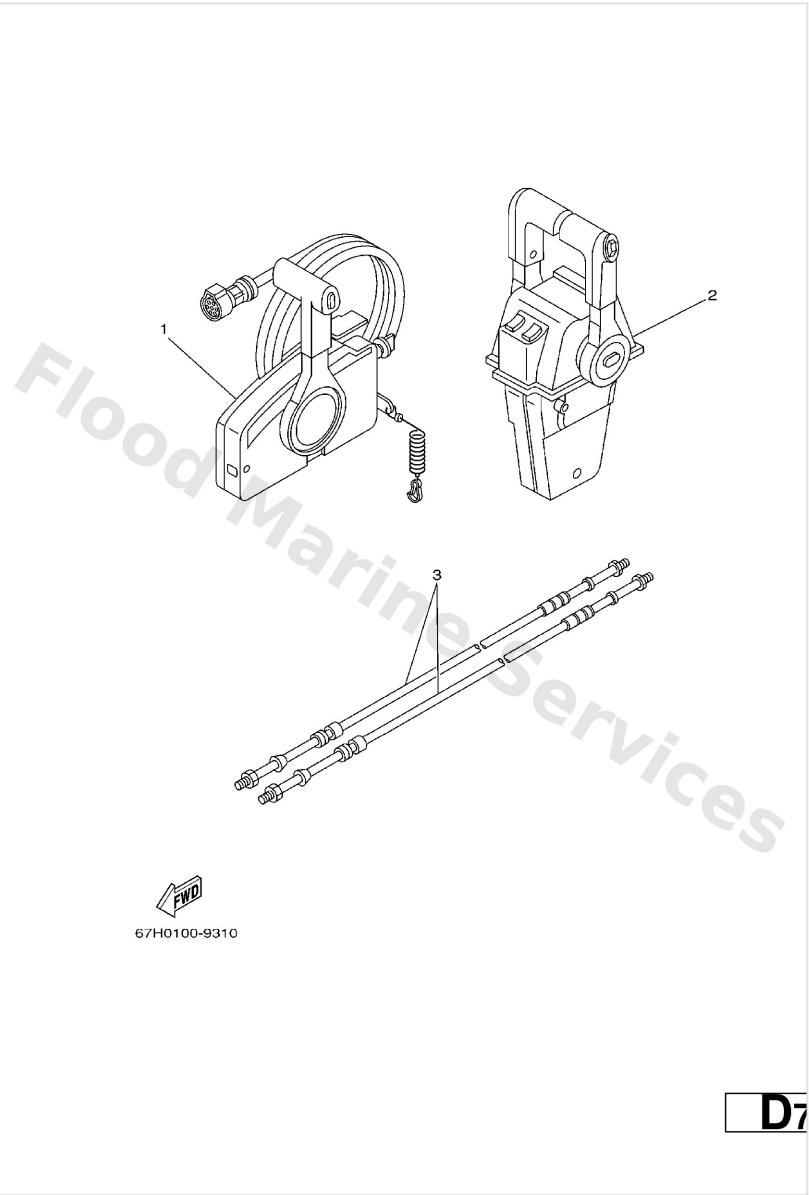


Ref	Part	
1	703-48205-17 Remote control assembly (10p, ptt) AP WITH PT/T SW.	Buy now
2	704-48207-23 Remote Control assembly AP WITH PT/T SW.	Buy now
3	701-48320-50 Cable, Remote Control L=15F UR	Buy now
3	701-48320-60 Cable, Remote Control L=16F UR	Buy now
3	701-48320-80 Cable, Remote Control L=17F UR	Buy now
3	701-48350-00 Cable, Remote Control L=21F UR	Buy now
3	701-48350-20 Cable, Remote Control L=23F UR	Buy now

 Repair Kit 1

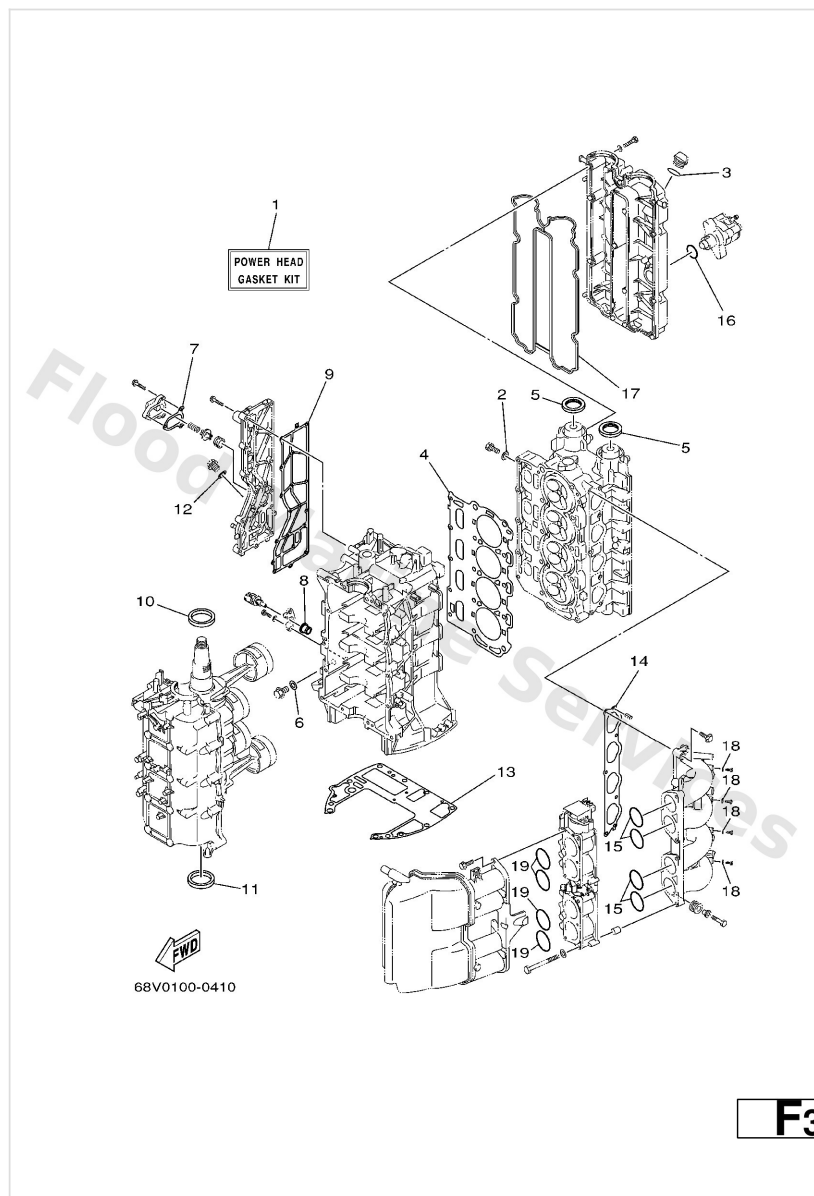


Ref	Part	
1	68V-W0001-01 Power head gasket kit	Buy now
2	90430-08143 Gasket (256-11198-00)	Buy now
3	93210-24M79 O-ring	Buy now
4	67F-11181-01 Gasket, cylinder head 1	Buy now
5	93102-38M59 Oil seal	Buy now
6	90430-14115 Gasket (663)	Buy now
7	67F-12435-A0 Gasket	Buy now
8	68V-85753-00 Gasket, sender unit	Buy now
9	67F-41114-A0 Gasket, exhaust outer cover	Buy now
10	93102-48009 Oil seal	Buy now
11	93101-48002 Oil seal	Buy now
12	90430-18130 Gasket (1j7)	Buy now
13	67F-11351-01 Gasket, cylinder	Buy now
14	68V-13645-00 Gasket, manifold 1	Buy now
15	93210-48MG8 O-ring	Buy now

 Repair Kit 1

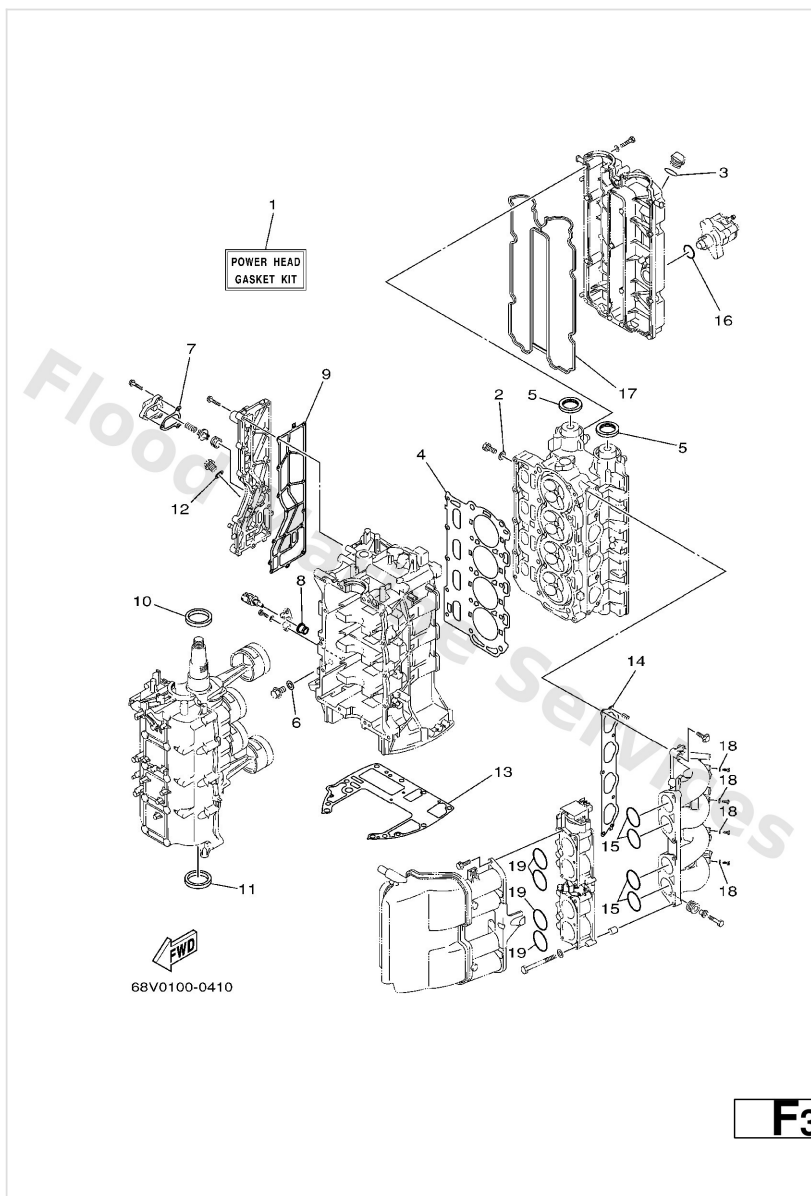


Ref	Part	
16	93210-30682 O-ring (371)	Buy now
17	67F-11356-00 Seal, cylinder 2	Buy now
18	90430-06014 Gasket 256113960000	Buy now
19	93210-48MJ9 O-ring	Buy now

 Repair Kit 2

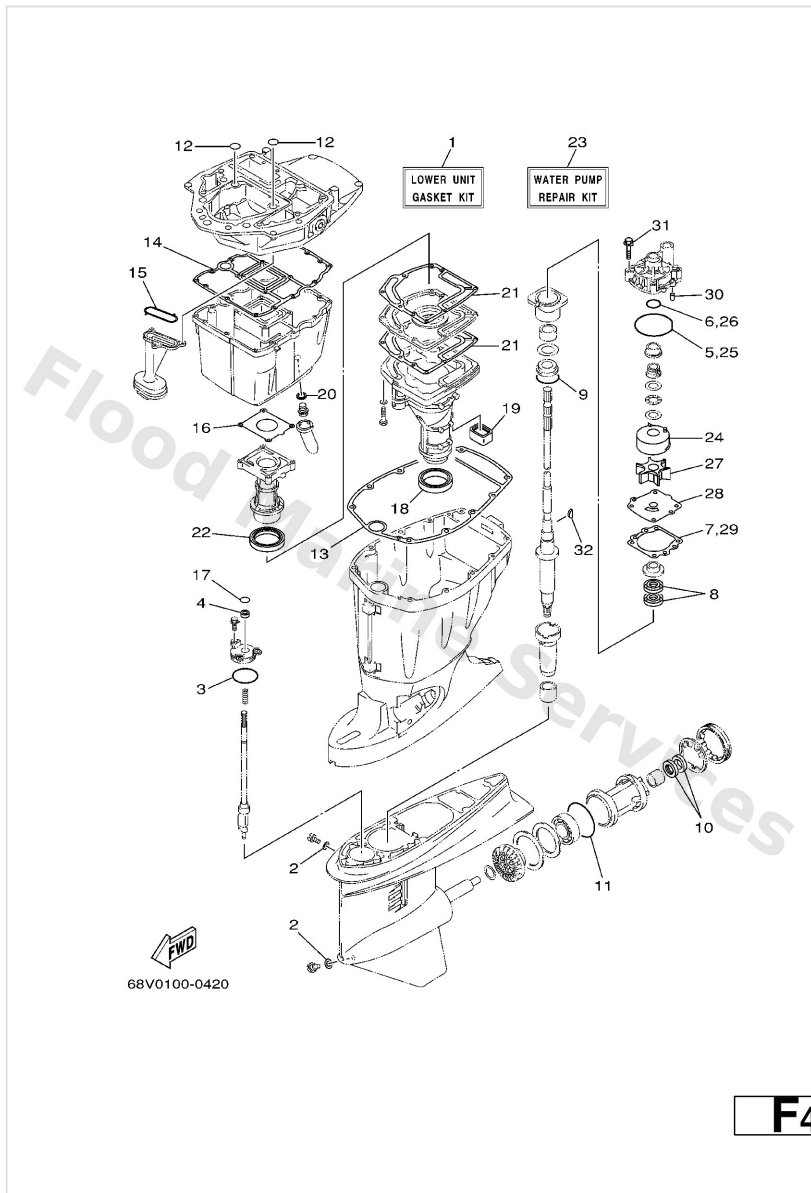


Ref	Part	
1	68V-W0001-20 Lower unit gasket kit	Buy now
2	90430-08020 Gasket	Buy now
3	93210-58144 O-ring(47x)	Buy now
4	93106-09014 Oil seal	Buy now
5	93210-86M38 O-ring (6e5)	Buy now
6	93210-37160 O-ring (6g8)	Buy now
7	6E5-44315-A0 Gasket,water pump	Buy now
8	93101-28M16 Oil seal (6e5)	Buy now
9	93210-55M14 O-ring (70e)	Buy now
10	93101-30M17 Oil seal (6e5)	Buy now
11	93210-86M39 O-ring (6e5)	Buy now
12	93210-19MJ1 O-ring	Buy now
13	67F-45113-00 Gasket, upper casing	Buy now
14	67F-15312-00 Gasket, oil pan	Buy now
15	67F-13415-00 Seal, oil strainer	Buy now

 Repair Kit 2

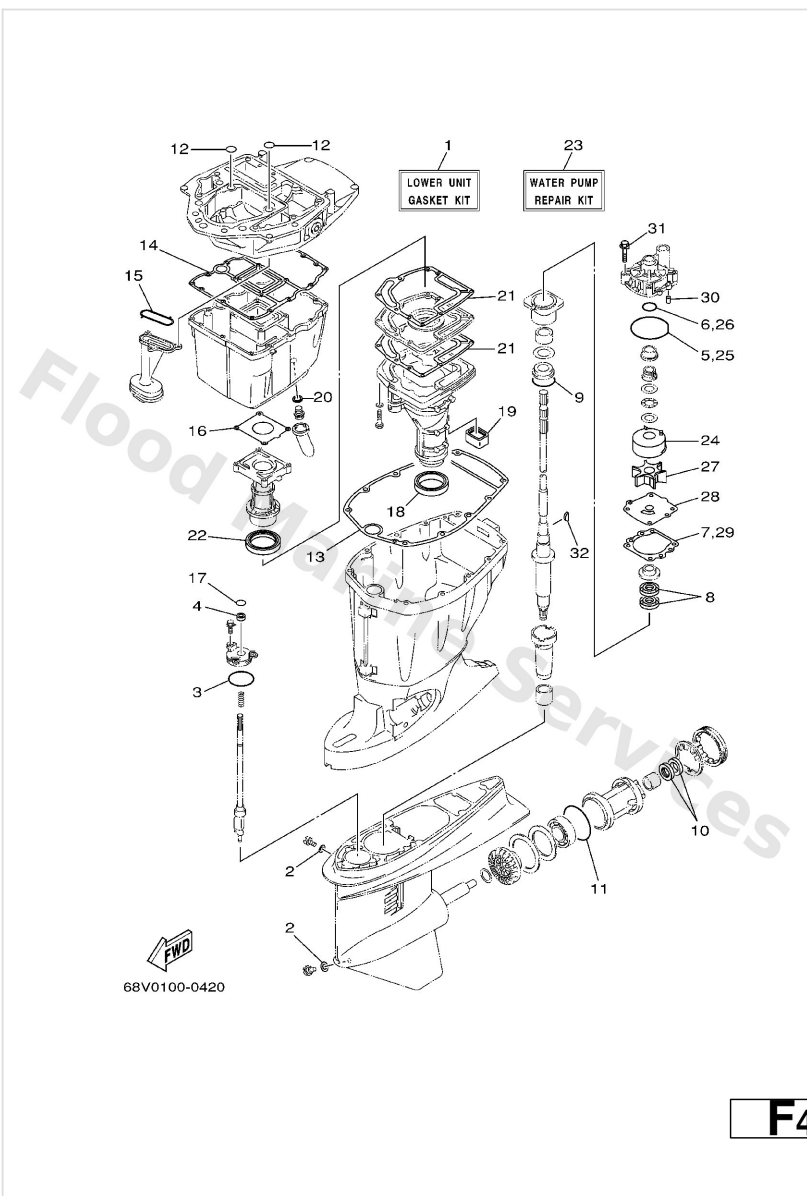


Ref	Part	
16	67F-41133-A0 Gasket, exhaust manifold 1	Buy now
17	93210-09165 O-ring	Buy now
18	68V-45123-00 Gasket, muffler	Buy now
19	67F-45127-00 Seal	Buy now
20	90430-14228 Gasket(n261)	Buy now
21	67F-41134-A0 Gasket, exhaust manifold	Buy now
22	67F-41138-00 Seal, ext. 1	Buy now
23	68V-W0078-00 Water pump repair kit	Buy now
24	61A-44322-02 Insert, cartridge	Buy now
27	6E5-44352-01 Impeller	Buy now
28	68V-44323-00 Outer plate, cartridge	Buy now
30	93606-12019 Pin, dowel (614)	Buy now
31	90119-08M14 Bolt, with washer	Buy now
32	90280-04M05 Key, woodruff (6e5)	Buy now

 Starting Motor

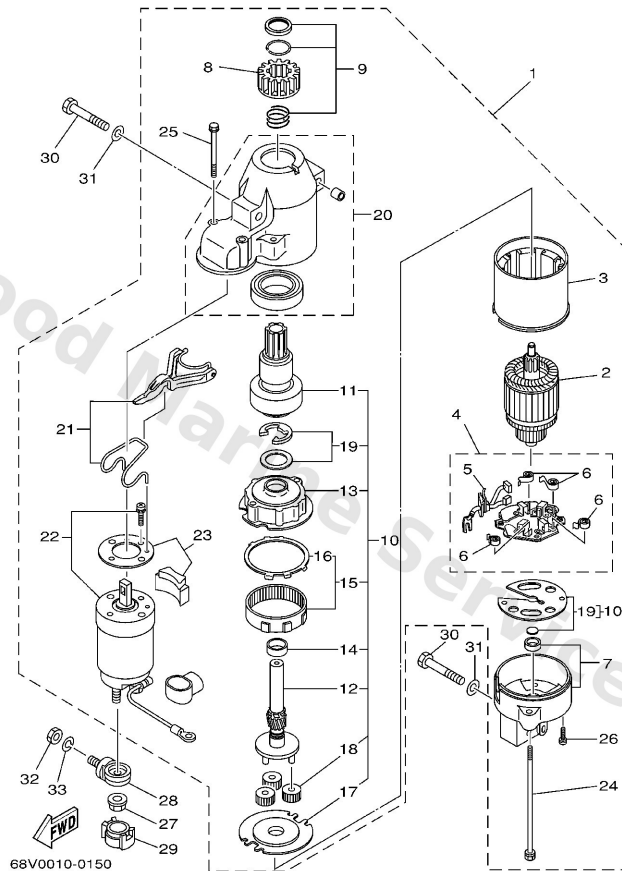

Ref	Part	
1	68V-81800-01 Starting motor assembly	Buy now
2	67F-81850-00 Armature assembly	Buy now
3	67F-81810-00 Stator assembly	Buy now
4	68F-81840-00 Brush holder assembly	Buy now
5	67F-81801-00 Brush set	Buy now
6	67F-81813-00 Spring, brush	Buy now
7	68F-81820-00 Rear bracket assembly	Buy now
8	67F-81808-00 Pinion assembly	Buy now
9	67F-81857-00 Pinion stopper set	Buy now
10	67F-81807-00 Gear assembly, starting motor	Buy now
11	67F-81832-00 Clutch, over run	Buy now
12	67F-81836-00 Shaft, pinion	Buy now
13	67F-81821-00 Bracket, center 1	Buy now
14	67F-81841-00 Bearing	Buy now
15	67F-81891-00 Gear, ring	Buy now

 
Starting Motor

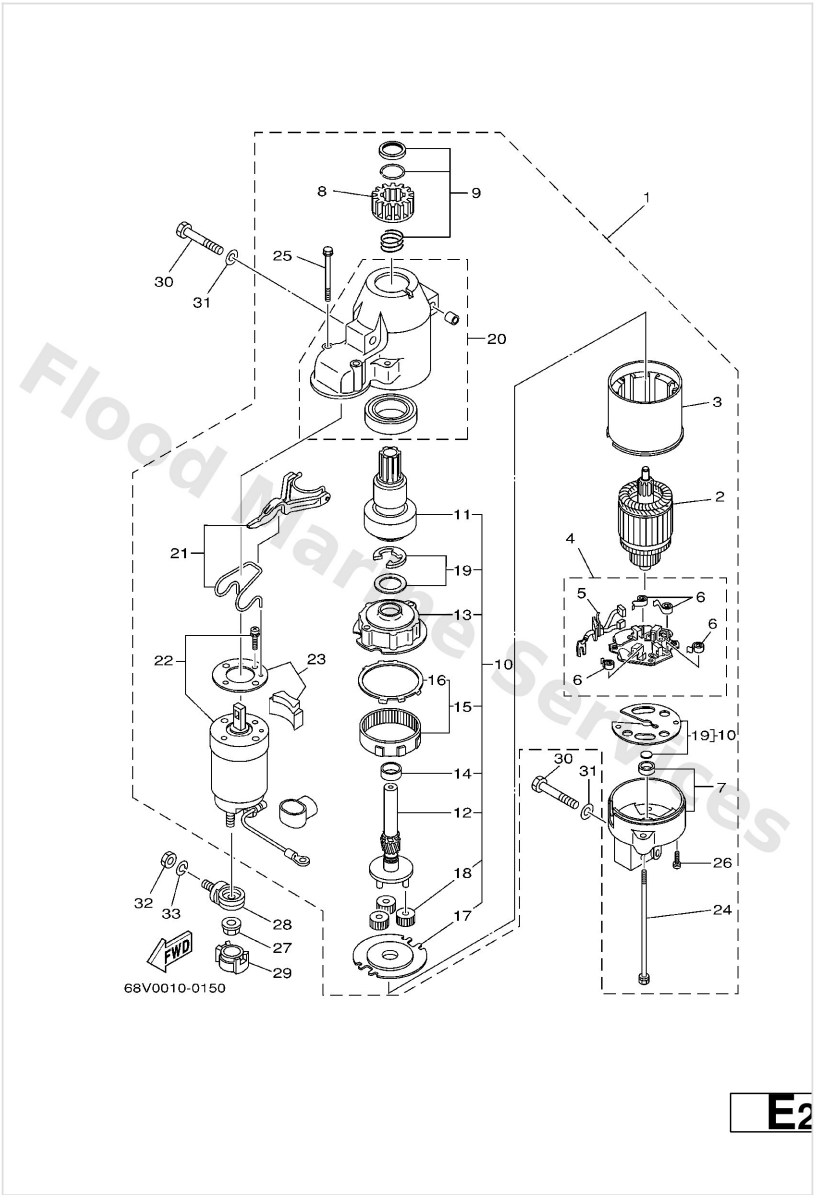

E2

Ref	Part	
16	67F-8183R-00 Gasket	Buy now
17	67F-81830-00 Bracket, center 2	Buy now
18	67F-8183T-00 Gear, Idler	Buy now
19	67F-81809-00 Washer kit	Buy now
20	67F-81842-00 Cover	Buy now
21	67F-81839-00 Lever assembly	Buy now
22	68V-81941-01 Starter relay assembly	Buy now
23	67F-81869-00 Cover, dust	Buy now
24	6K7-81826-10 Bolt	Buy now
25	67F-81828-00 Bolt 2	Buy now
26	67F-81846-00 Screw	Buy now
27	90179-08003 Nut	Buy now
28	68F-81925-00 Terminal	Buy now
29	68F-82582-00 Cover, wire harness	Buy now
30	97013-08045 Bolt	Buy now

 
Starting Motor

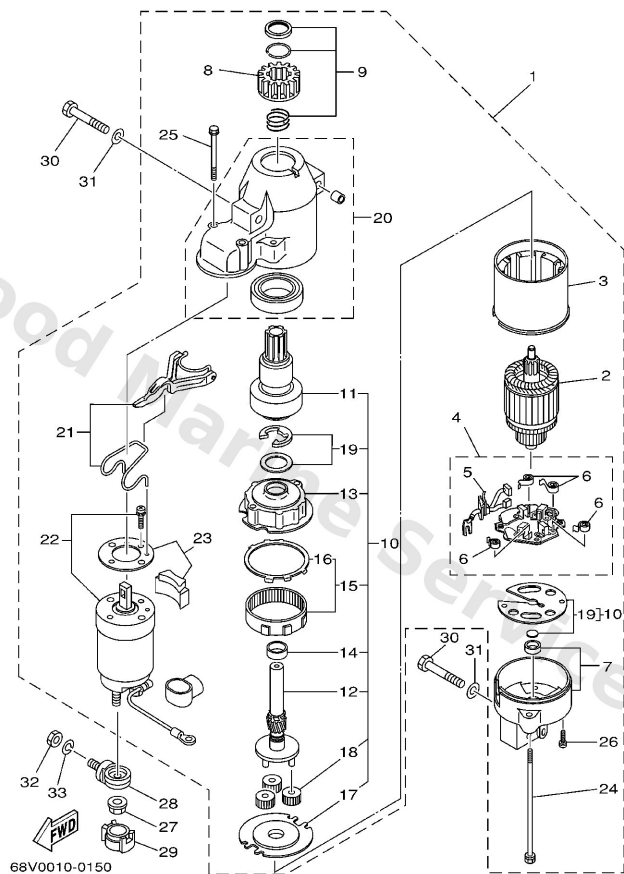

E2


Ref	Part	
31	92903-08600 Washer, plain (663)	Buy now
32	95333-08600 Nut(612)	Buy now
33	92903-08100 Ybs67-8 washer, spring	Buy now

 Steering 1

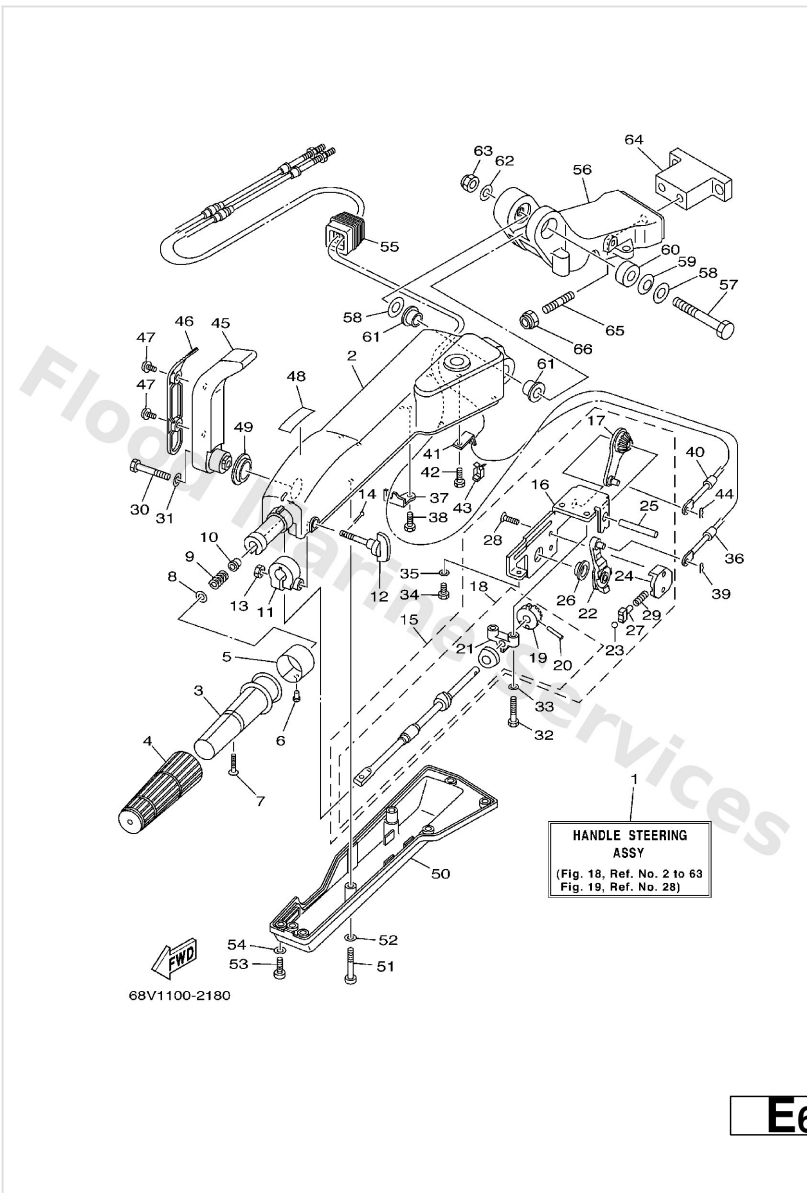


Ref	Part	
3	664-42119-00 Grip, steering handle	Buy now
4	6G1-42177-00 Rubber, handle	Buy now
5	6H2-42137-00 Indicator, throttle	Buy now
6	90269-02M09 Rivet(6I5)	Buy now
7	90149-05M13 Screw, countersunk	Buy now
8	92903-10600 Washer, plate	Buy now
9	90501-23215 Spring (655)	Buy now
10	90386-08032 Bushing (650)	Buy now
11	63D-42126-00 Friction, steering handle grip	Buy now
12	63D-48154-00 Knob, Throttle	Buy now
13	95380-06600 Nut(661)	Buy now
14	91490-20010 Pin, cotter	Buy now
15	67G-44100-10 Shift Link assembly	Buy now
16	67G-44104-00 Plate Comp	Buy now
17	67G-48261-00 Arm, Throttle	Buy now

 Steering 1

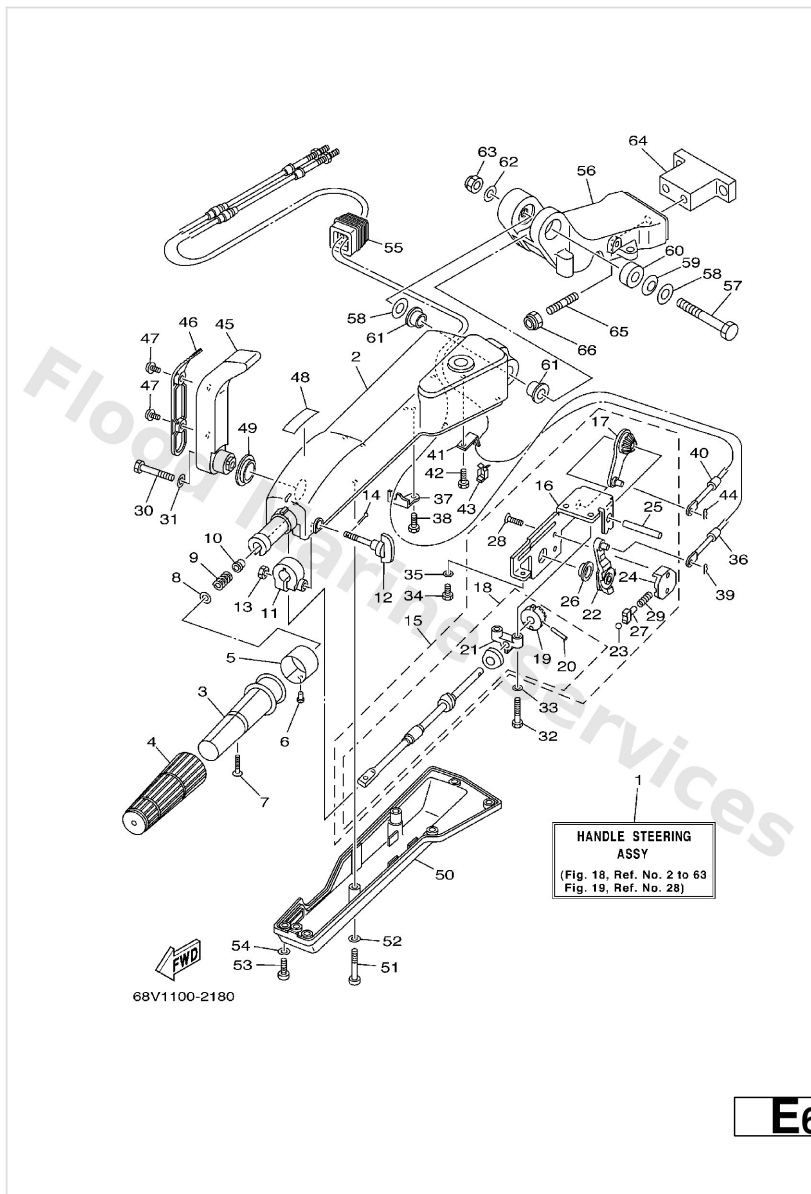


Ref	Part	
18	67G-42115-10 Shaft, Steering Handle	Buy now
20	91690-30025 Pin, spring	Buy now
21	67G-42159-00 Stay	Buy now
22	67G-44113-00 Cam Plate, Handle	Buy now
23	63D-48236-00 Roller, detent	Buy now
24	63D-48119-00 Cover	Buy now
25	67G-42153-00 Shaft, Throttle Control	Buy now
26	67G-44132-00 Bushing	Buy now
27	63D-48237-00 Adaptor	Buy now
28	98785-05014 Screw 3	Buy now
29	63D-48238-00 Spring, detent	Buy now
30	97095-08040 Bolt, hexagon	Buy now
31	92995-08600 Washer, plain (663)	Buy now
32	97095-06030 Bolt(jf7)	Buy now
33	92995-06600 Washer, plain (646)	Buy now

 Steering 1

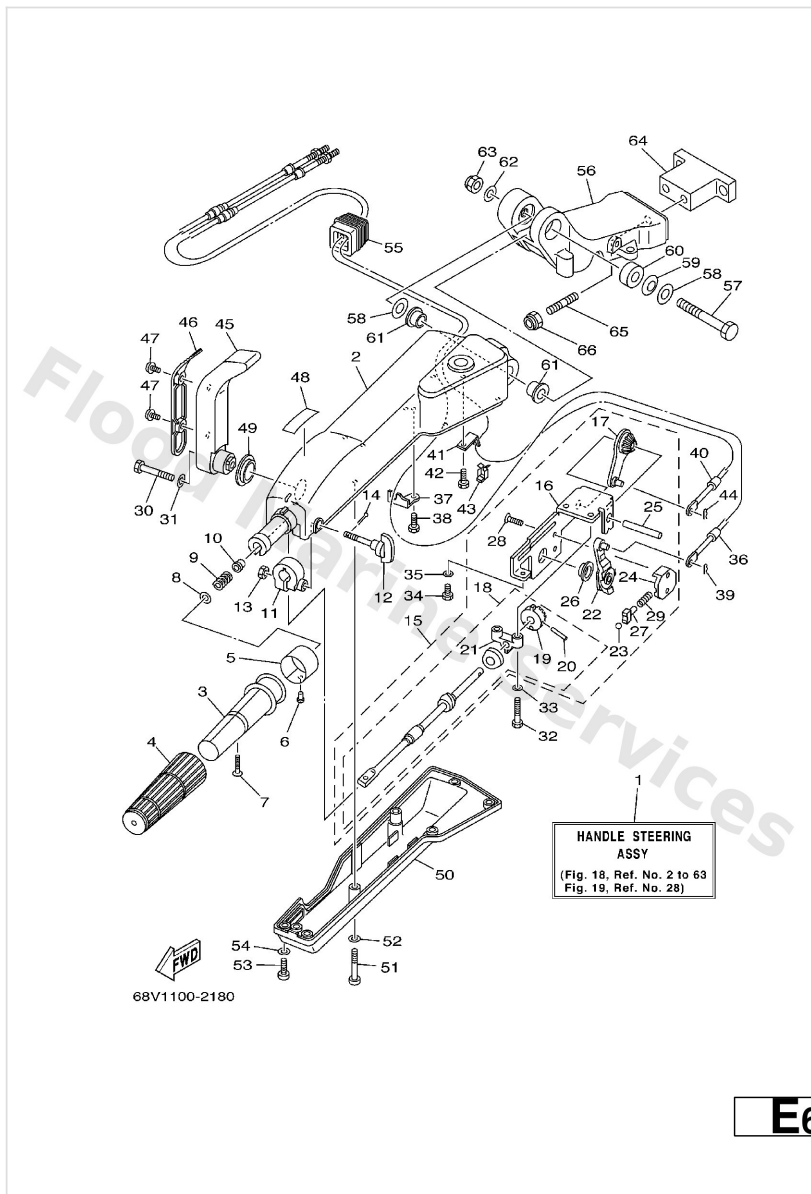

Ref	Part	
34	97095-06014 Bolt(gj3)	Buy now
36	67G-48321-10 Cable	Buy now
37	67G-48531-00 Bracket Remote Control 1	Buy now
39	90468-10005 Pin, hair 6264123500	Buy now
40	67G-26301-10 Throttle cable assembly	Buy now
41	66R-48538-00 Clamp, cable 1	Buy now
43	63D-48538-00 Clamp, cable 1	Buy now
45	67G-44159-00-4D Handle Gear Shift	Buy now
46	67G-44173-00 Lever, Shift Control	Buy now
47	90159-06M18 Screw, with washer(6b0)	Buy now
48	6G8-44191-00 Indicator, shift	Buy now
49	90386-26MA3 Bush	Buy now
50	67G-42131-00 Cover Handle Steering	Buy now
51	97885-06040 Screw pan head	Buy now
53	97885-06016 Screw, pan head(6b0)	Buy now

 
Steering 1

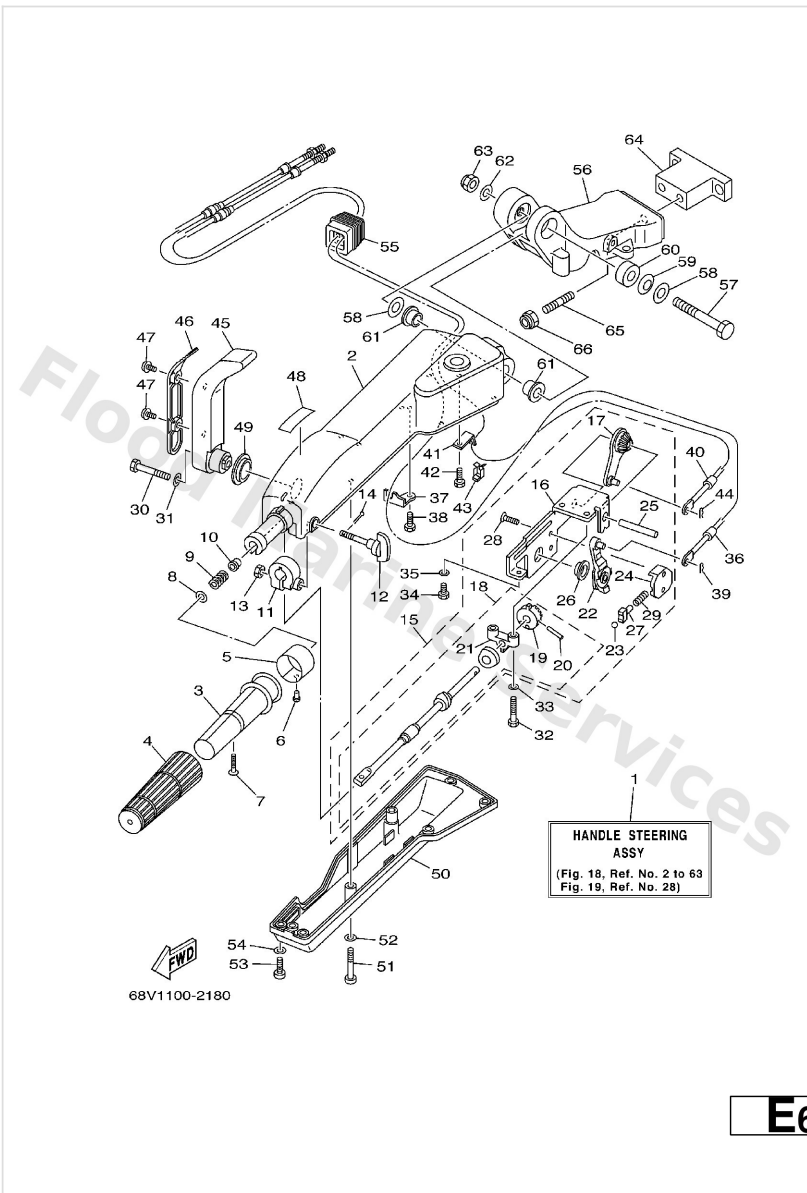

Ref	Part	
55	63D-42725-00 Grommet	Buy now
56	67G-42121-00-4D Bracket	Buy now
57	90101-12M09 Bolt	Buy now
58	92990-12200 Ybs66-12 washer,plain	Buy now
59	90206-12M22 Washer, wave(6b0)	Buy now
60	90387-12M02 Collar(6b0)	Buy now
61	90386-12M93 Bush(6b0)	Buy now
62	92990-12600 Washer, plate(663)	Buy now
63	90185-12M12 Nut, self-locking(6e5)	Buy now
64	68V-42121-00-4D Bracket AP	Buy now
65	90116-10175 Bolt, stud AP	Buy now
66	90185-10051 Nut, self-locking AP	Buy now


E6

 Steering 2

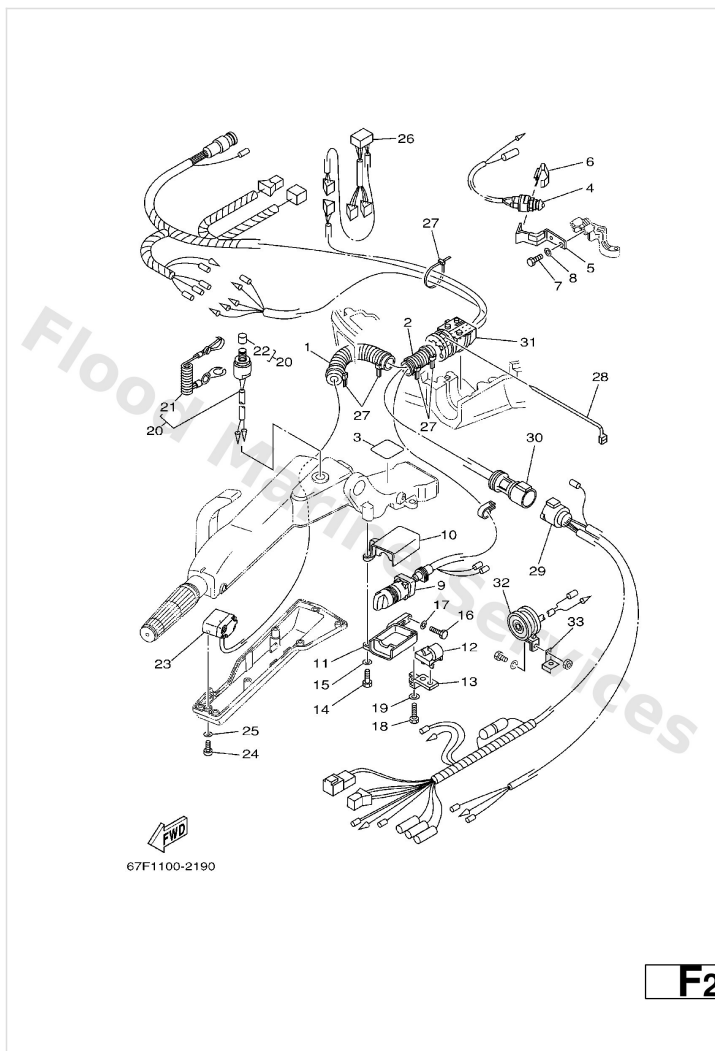


Ref	Part	
1	90446-24M79 Hose AP	Buy now
2	6K3-83557-00 Tube AP	Buy now
3	67G-42735-00 Protector AP	Buy now
4	688-82540-11 Neutral switch assembly AP	Buy now
5	67G-82554-01 Stay Neutral Switch AP	Buy now
6	62Y-82555-00 Damper Main Switch 1 AP	Buy now
7	97095-06014 Bolt(gj3) AP	Buy now
8	92995-06600 Washer, plain (646) AP	Buy now
9	67G-82510-30 Main Switch assembly AP	Buy now
10	63D-8252E-01-4D Cover, main switch 1 AP	Buy now
11	63D-8252F-01-4D Cover, main switch 2 AP	Buy now
12	63D-24367-00 Clamp, fuel pipe 2 AP	Buy now
13	63D-24364-00 Stay AP	Buy now
14	97095-06025 Bolt AP	Buy now
16	97095-06020 Bolt(7u8) AP	Buy now

 Steering 2

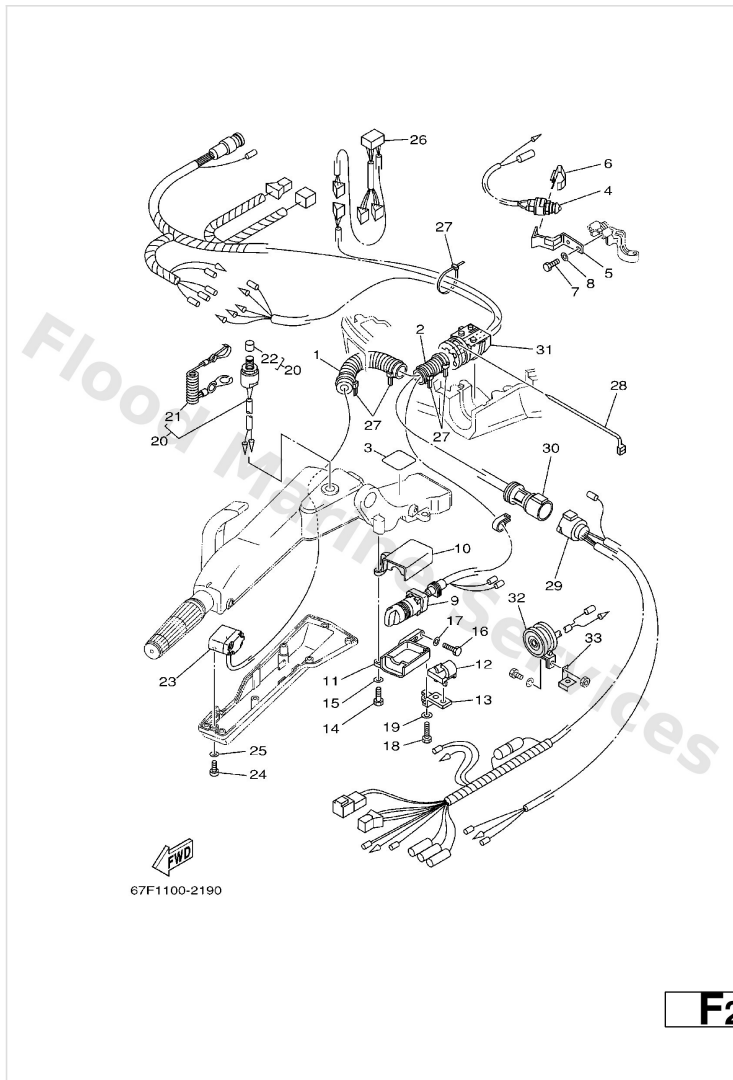

Ref	Part	
18	97095-06030 Bolt(jf7) AP	Buy now
20	63D-82575-00 Engine stop switch assembly AP	Buy now
21	682-82556-00 Lanyard, stop switch	Buy now
22	689-8257Y-00 Cap	Buy now
23	67G-82563-00 Trim & tilt switch assembly AP	Buy now
24	97885-06016 Screw, pan head(6b0) AP	Buy now
26	63D-83728-00 Connector assembly AP	Buy now
27	90465-13M24 Band, switch cord AP	Buy now
28	90465-13M30 Clamp AP	Buy now
29	6H5-83553-11 19 - AP	Buy now
30	63D-82586-00 Extension, Wire Harness AP	Buy now
31	67G-42725-00 Grommet AP	Buy now
32	688-83383-11 Buzzer AP	Buy now
33	6H5-83386-00 Buzzer Stay AP	Buy now

 Steering Friction

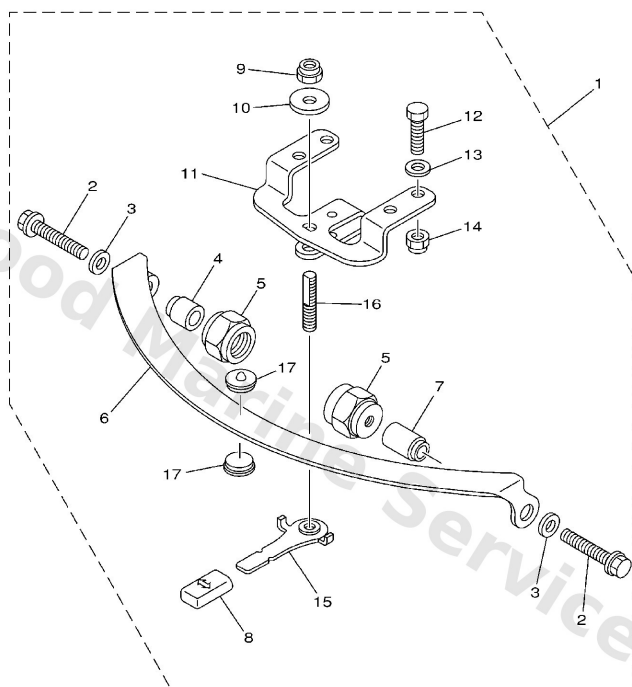


67F1100-2200

F4

Ref	Part	
1	67G-42508-00 Steering friction assembly AP	Buy now
2	90119-08M74 Bolt, with washer(61a)	Buy now
3	90201-08M01 Washer, plate(6l2)	Buy now
4	67G-42541-00 Pipe 1	Buy now
5	67G-42546-00 Nut	Buy now
6	63D-42527-00 Plate, friction	Buy now
7	67G-42541-10 Pipe 1	Buy now
8	682-43318-01 Cover	Buy now
9	90185-10M14 Nut, self-locking	Buy now
10	90201-10M76 Washer, plate (6e5)	Buy now
11	67G-42526-00 Plate Friction	Buy now
12	97095-08025 Bolt (62g)	Buy now
13	92995-08600 Washer, plain (663)	Buy now
14	90185-08057 Nut, nylon (6j8)	Buy now
15	67G-42561-00 Knob, steering lock	Buy now

 Steering Friction

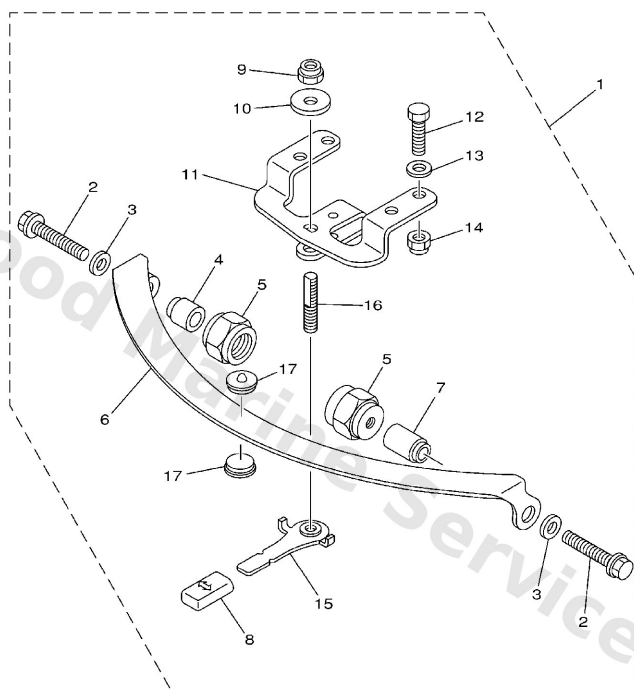


67F1100-2200

F4

Ref	Part	
16	67G-42562-00 Shaft, steering lock	Buy now
17	63D-42528-00 Plate, friction	Buy now

 Steering Guide Attachment 1

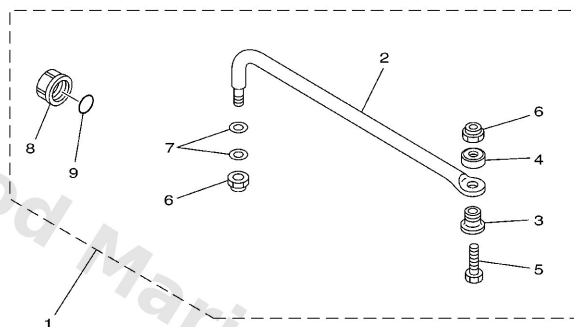


67H0100-9290

D5

Ref	Part	
1	6E5-61350-02 Steering guide attachment kit AP	Buy now
2	6E5-61351-01 Rod, steering link	Buy now
3	90387-10M61 Collar (6e5)	Buy now
4	90560-12M01 Spacer (6e5)	Buy now
5	6E5-61355-00 Bolt	Buy now
6	90185-09M01 Nut, nylon (663)	Buy now
7	90201-10M20 Washer, plate (663)	Buy now
8	6E5-43145-01 Cap, clamp bracket	Buy now
9	93210-16275 O-ring	Buy now

 Steering Guide Attachment 2

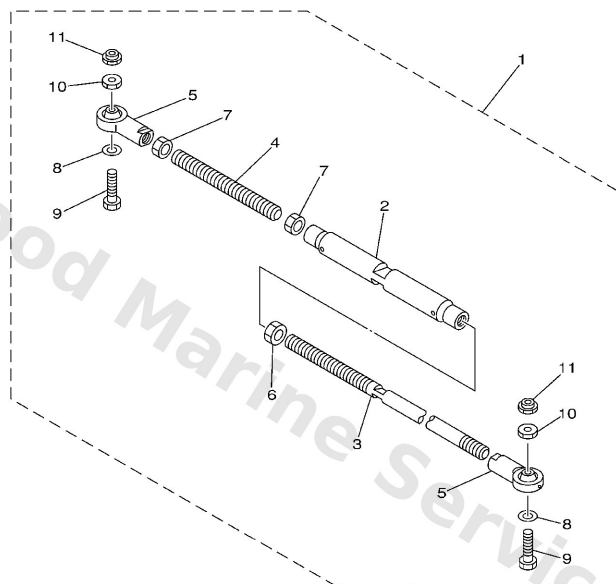


67H0100-0300

D6


Ref	Part	
1	6E5-61301-01 Tie bar assembly (l:600-800mm) AP	Buy now
2	6E5-61313-00 Adjuster	Buy now
3	6E5-61311-11 Tie bar	Buy now
4	6E5-61315-00 Tie bar, 2	Buy now
5	6E5-61303-00 Steering axle comp.	Buy now
6	90170-14M06 Nut (6e5)	Buy now
7	95380-14700 Nut (6e5)	Buy now
8	90201-10M76 Washer, plate (6e5)	Buy now
9	90101-09M70 Bolt (6e5)	Buy now
10	90170-09M05 Nut, hexagon (6e5)	Buy now
11	90185-09M01 Nut, nylon (663)	Buy now

 Switch. Panel

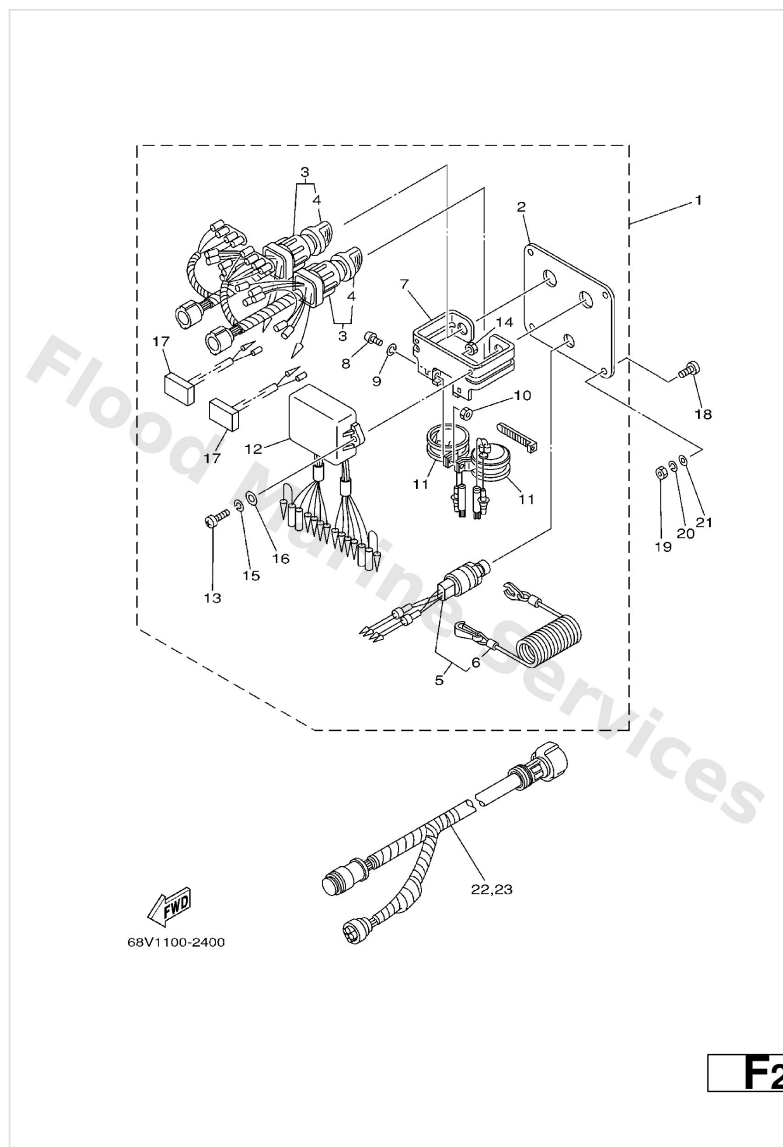


Ref	Part	
1	6K1-82570-07 Panel switch assembly AP	Buy now
2	6K1-82571-01 Plate, panel switch	Buy now
3	6K1-82510-06 Main switch assembly	Buy now
4	703-82577-00 Cap, key	Buy now
5	6K1-82575-00 Engine stop switch assembly	Buy now
6	682-82556-00 Lanyard, stop switch	Buy now
7	6K1-83614-01 Bracket	Buy now
8	98980-05010 Screw, bind(6k1)	Buy now
20	92990-05100 Ybs67-5 washer, spring AP	Buy now
19	95380-05600 Nut, hexagon (663) AP	Buy now
11	688-83383-11 Buzzer	Buy now
12	6K1-85830-01 Control unit assembly	Buy now
13	98980-06020 Screw, bind (j17)	Buy now
14	95380-06600 Nut(661)	Buy now
15	92990-06100 Washer(6a1)	Buy now

 Switch. Panel

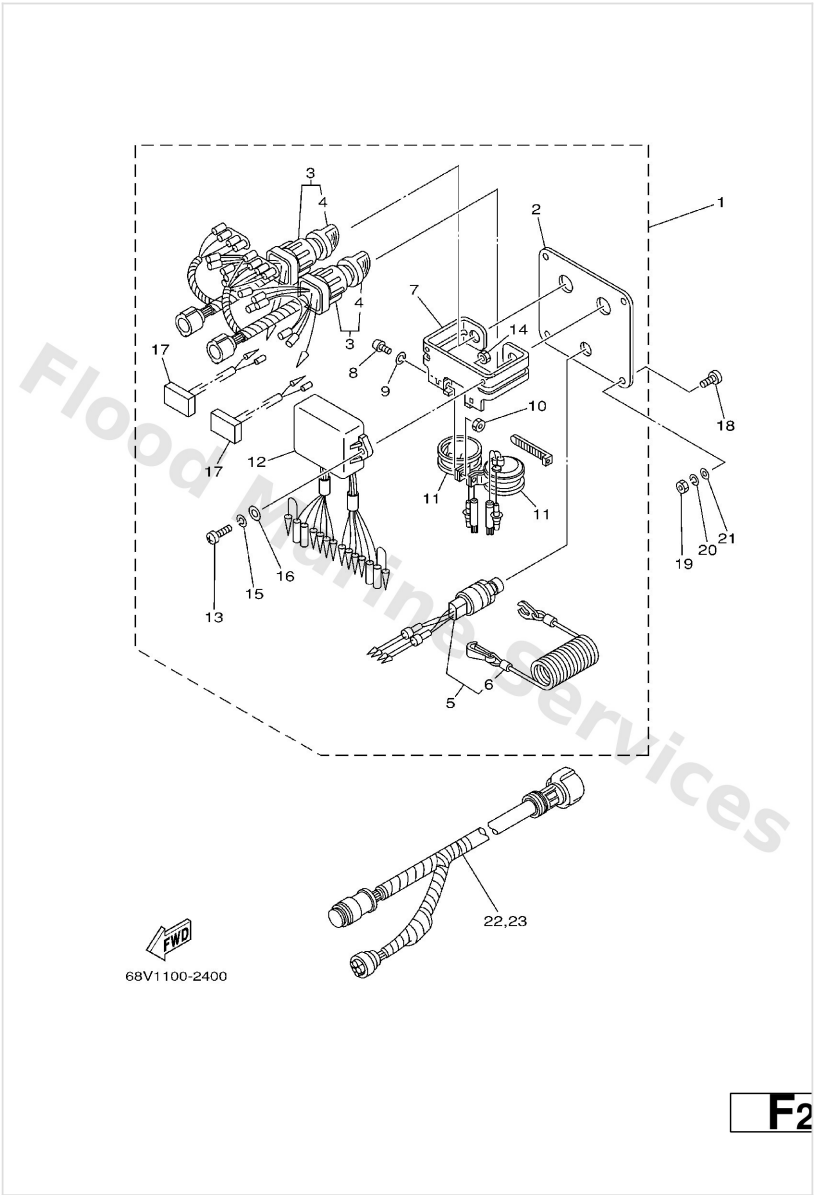

Ref	Part	
16	92990-06600 Washer, plain (646)	Buy now
17	6K1-81980-00 Diode assembly	Buy now
18	90149-05M05 Screw(6k0) AP	Buy now
21	92990-05600 Washer, plain (646) AP	Buy now
22	6K1-8258A-40 Extension, wire harness AP	Buy now
23	61B-8258A-01 Extension, wire harness AP	Buy now

 
Top Cowling

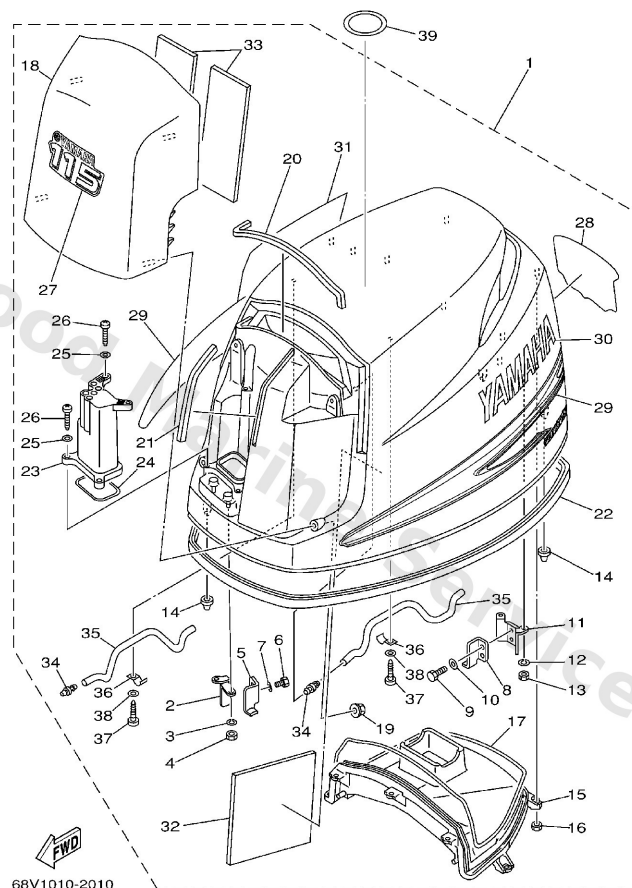

A4

Ref	Part	
1	68V-42610-10-8D Top Cowling assembly	Buy now
2	68V-42647-00 Holder Clamp Band	Buy now
3	92990-06100 Washer(6a1)	Buy now
4	95380-06600 Nut(661)	Buy now
5	68V-42651-00 Hook	Buy now
6	97095-06012 Bolt(gh1)	Buy now
7	92995-06600 Washer, plain (646)	Buy now
8	68V-42652-00 Hook	Buy now
11	67F-42649-00 Holder, clamp band	Buy now
14	67F-42662-00 Damper	Buy now
15	68V-42613-00 Molding, air duct	Buy now
17	68V-42629-00 Seal	Buy now
18	68V-42612-00-8D Air duct, top cowling	Buy now
19	90179-06M28 Nut(63v)	Buy now
20	68V-42628-00 Seal	Buy now

 
Top Cowling

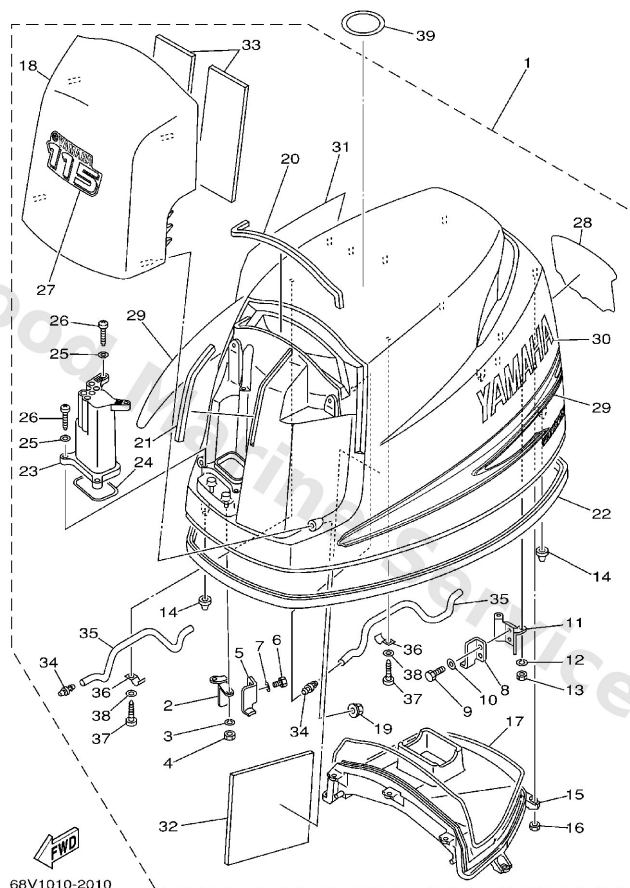

A4

Ref	Part	
21	68V-42718-00 Rubber, seal 3	Buy now
22	68V-42615-00 Seal	Buy now
23	68V-42632-00 Window	Buy now
24	68V-42634-00 Seal, Window	Buy now
25	92990-05200 Ybs66-5 washer, plain	Buy now
26	97780-50625 Screw, tapping	Buy now
27	68V-42677-10 Graphic, front	Buy now
28	68V-42678-10 Graphic, front	Buy now
29	68V-W0070-10 Graphic set	Buy now
30	68V-42681-10 Mark, cowling	Buy now
31	68V-42682-10 Mark, cowling	Buy now
32	68V-42617-00 Damper Form	Buy now
33	68V-42619-00 Damper, form	Buy now
34	6H3-44391-01 Nipple, hose	Buy now
35	90445-10M18 Hose (I400)	Buy now

 
Top Cowling

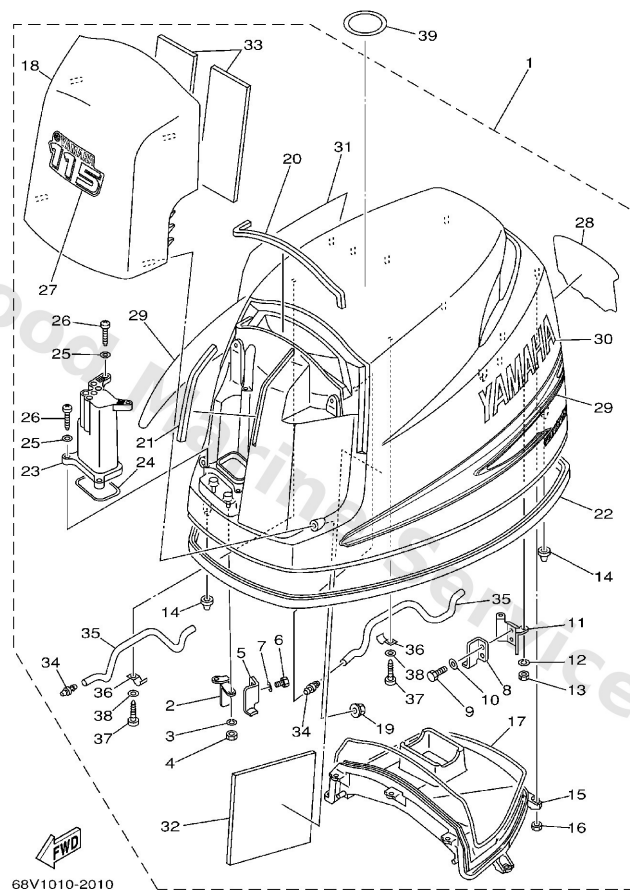

A4

Ref	Part	
36	90465-08M63 Clamp(61u)	Buy now
37	97780-50620 Screw, tapping	Buy now
39	67F-13434-02 Label, Caution	Buy now

 
Upper Casing

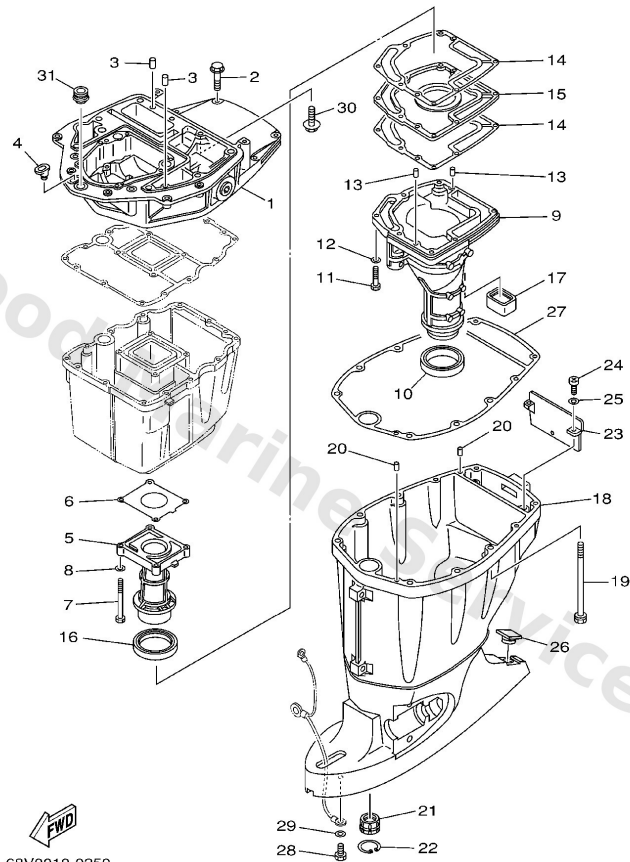

B4

Ref	Part	
1	67F-41137-01-94 Guide, exhaust	Buy now
2	97575-08540 Bolt, hexagon w/w deep recess	Buy now
3	93608-16M16 Pin, dowel(6t4)	Buy now
4	6G1-42727-00 Grommet	Buy now
5	67F-41131-00-5B Manifold, ext. 1	Buy now
6	67F-41133-A0 Gasket, exhaust manifold 1	Buy now
7	97075-06070 Bolt(4kg)	Buy now
8	92995-06600 Washer, plain (646)	Buy now
9	68V-14711-10-5B Muffler 1 L	Buy now
9	68V-14711-30-5B Muffler 1 X	Buy now
10	68V-45123-00 Gasket, muffler	Buy now
11	97075-06030 Bolt(jf7)	Buy now
13	93606-19M23 Pin, dowel	Buy now
14	67F-41134-A0 Gasket, exhaust manifold	Buy now
15	67F-45181-00-5B Plate	Buy now

 
Upper Casing

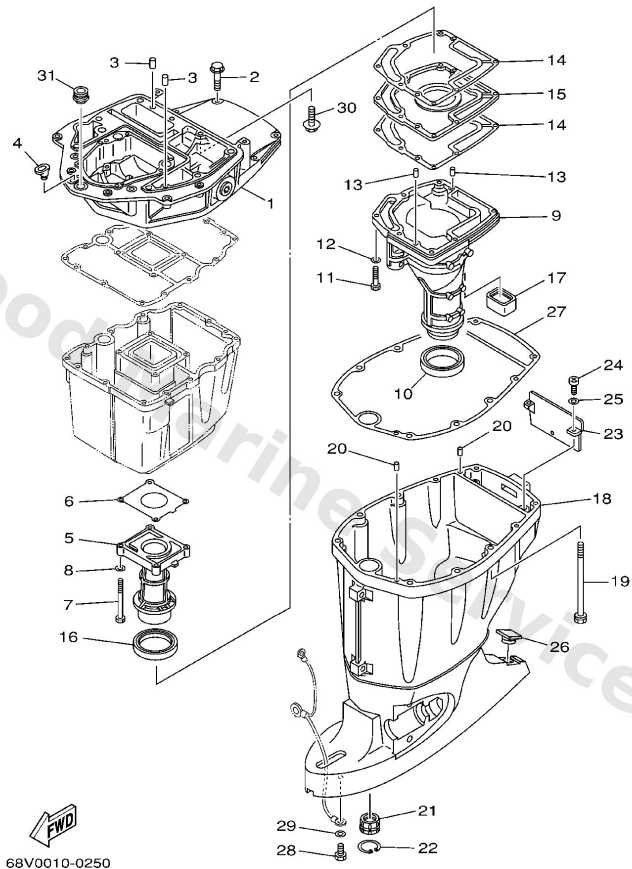

B4


Ref	Part	
16	67F-41138-00 Seal, ext. 1	Buy now
17	67F-45127-00 Seal	Buy now
18	68V-45111-10-8D Casing, upper L	Buy now
18	68V-45111-30-8D Casing, upper X	Buy now
19	90119-10M08 Bolt, with washer	Buy now
21	6E5-45318-00 Bushing, drive shaft 3	Buy now
22	93420-36M01 Circlip (6a0)	Buy now
23	67F-45151-00 Cover, upper casing	Buy now
24	97880-06016 Screw pan head	Buy now
25	92990-06600 Washer, plain (646)	Buy now
26	6H3-45155-00 Cap	Buy now
27	67F-45113-00 Gasket, upper casing	Buy now
28	97095-06010 Bolt	Buy now
30	90119-08M58 Bolt, with washer	Buy now
31	67F-42724-00 Grommet	Buy now

 Valve

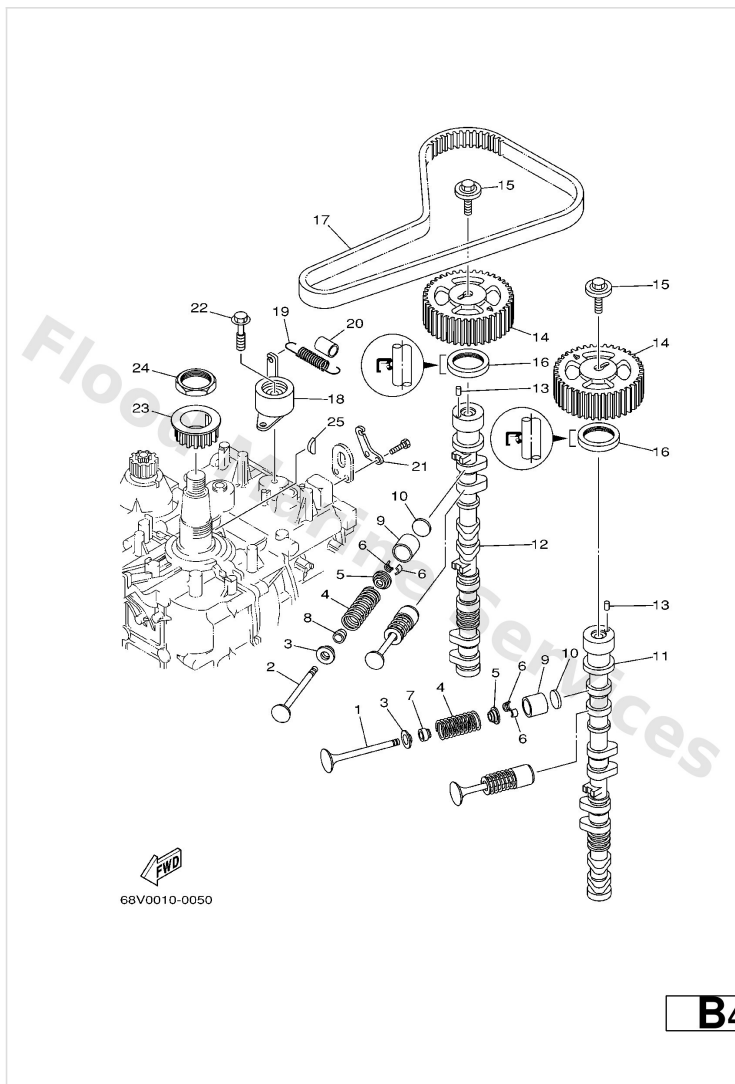


Ref	Part	
1	68V-12111-00 Valve, intake	Buy now
2	68V-12121-00 Valve, exhaust	Buy now
3	67F-12116-00 Seat, valve spring	Buy now
4	67F-12114-00 Spring, valve outer	Buy now
5	67F-12117-00 Retainer, valve spring	Buy now
6	67F-12118-00 Cotter, valve	Buy now
7	K0A-A3721-00 Seal, valve stem	Buy now
8	K0A-A3722-00 Seal, valve stem 2	Buy now
9	67F-12153-00 Lifter, valve	Buy now
10	67F-12168-00 Pad, adjusting (2.000) UR	Buy now
10	67F-12168-10 Pad, adjusting (2.025) UR	Buy now
10	67F-12168-20 Pad, adjusting (2.050) UR	Buy now
10	67F-12168-30 Pad, adjusting (2.075) UR	Buy now
10	67F-12168-40 Pad, adjusting (2.100) UR	Buy now
10	67F-12168-50 Pad, adjusting (2.125) UR	Buy now

 Valve

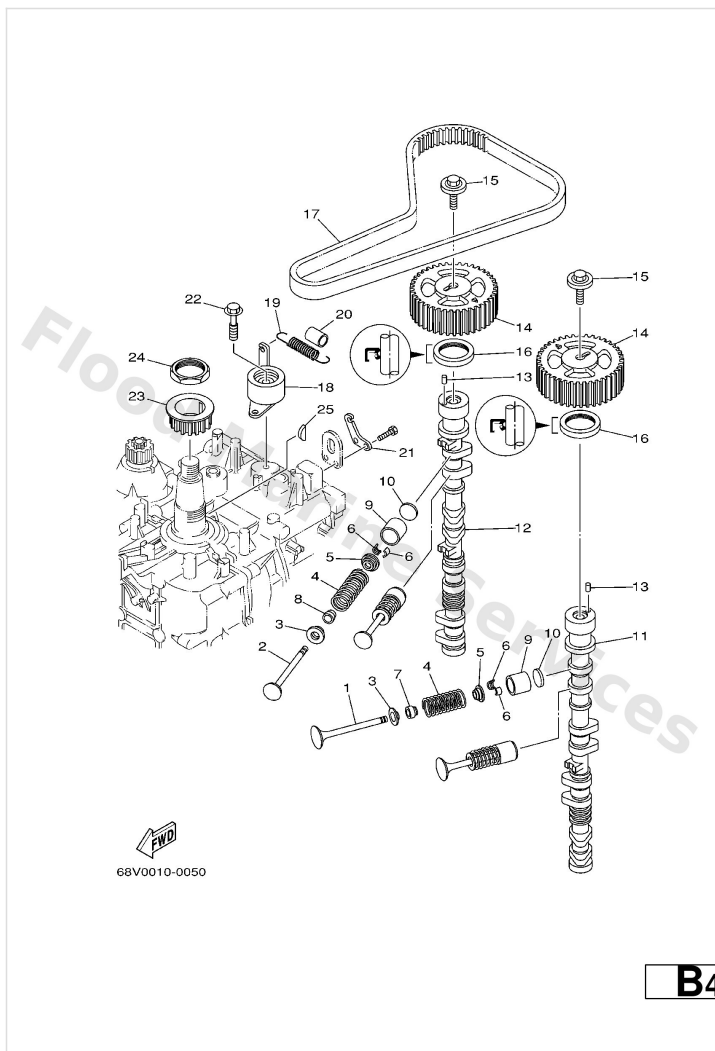


Ref	Part	
10	67F-12168-60 Pad, adjusting (2.150) UR	Buy now
10	67F-12168-70 Pad, adjusting (2.175) UR	Buy now
10	67F-12168-80 Pad, adjusting (2.200) UR	Buy now
10	67F-12168-A0 Pad, adjusting (2.225) UR	Buy now
10	67F-12168-B0 Pad, adjusting (2.250) UR	Buy now
10	67F-12168-C0 Pad, adjusting (2.275) UR	Buy now
10	67F-12168-D0 Pad, adjusting (2.300) UR	Buy now
10	67F-12168-E0 Pad, adjusting (2.325) UR	Buy now
10	67F-12168-F0 Pad, adjusting (2.350) UR	Buy now
10	67F-12168-G0 Pad, adjusting (2.375) UR	Buy now
10	67F-12168-H0 Pad, adjusting (2.400) UR	Buy now
10	67F-12168-J0 Pad, adjusting (2.425) UR	Buy now
10	67F-12168-K0 Pad, adjusting (2.450) UR	Buy now
10	67F-12168-L0 Pad, adjusting (2.475) UR	Buy now
10	67F-12168-M0 Pad, adjusting (2.500) UR	Buy now

 Valve

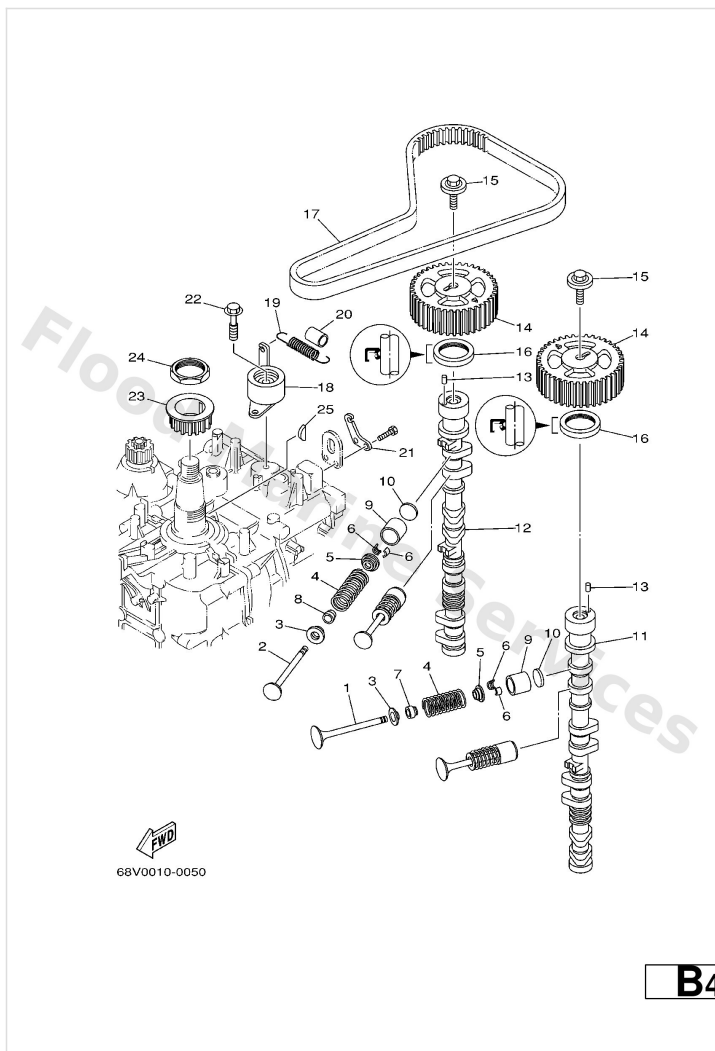


Ref	Part	
10	67F-12168-N0 Pad, adjusting (2.525) UR	Buy now
10	67F-12168-P0 Pad, adjusting (2.550) UR	Buy now
10	67F-12168-R0 Pad, adjusting (2.575) UR	Buy now
10	67F-12168-S0 Pad, adjusting (2.600) UR	Buy now
10	67F-12168-T0 Pad, adjusting (2.625) UR	Buy now
10	67F-12168-U0 Pad, adjusting (2.650) UR	Buy now
10	67F-12168-V0 Pad, adjusting (2.675) UR	Buy now
10	67F-12168-W0 Pad, adjusting (2.700) UR	Buy now
10	67F-12168-X0 Pad, adjusting (2.725) UR	Buy now
10	67F-12168-Y0 Pad, adjusting (2.750) UR	Buy now
10	67F-12169-00 Pad, adjusting (2.775) UR	Buy now
10	67F-12169-10 Pad, adjusting (2.800) UR	Buy now
10	67F-12169-20 Pad, adjusting (2.825) UR	Buy now
10	67F-12169-30 Pad, adjusting (2.850) UR	Buy now
10	67F-12169-40 Pad, adjusting (2.875) UR	Buy now

 Valve

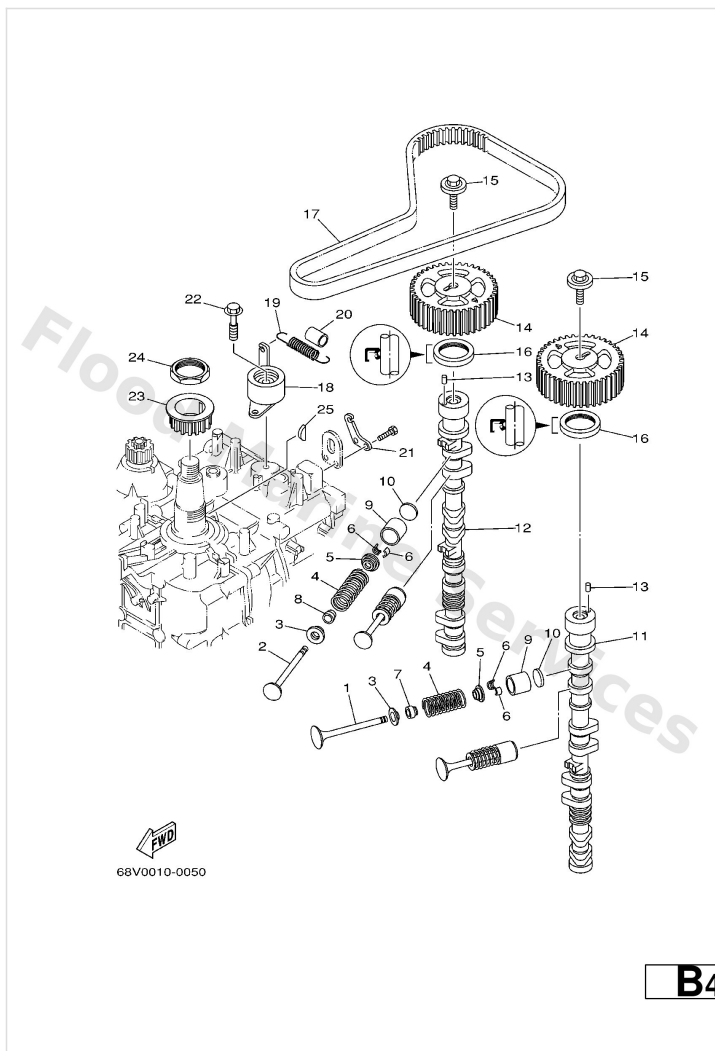

Ref	Part	
10	67F-12169-50 Pad, adjusting (2.900) UR	Buy now
10	67F-12169-60 Pad, adjusting (2.925) UR	Buy now
10	67F-12169-70 Pad, adjusting (2.950) UR	Buy now
10	67F-12169-80 Pad, adjusting (2.975) UR	Buy now
10	67F-12169-A0 Pad, adjusting (3.000) UR	Buy now
10	67F-12169-B0 Pad, adjusting (3.025) UR	Buy now
10	67F-12169-C0 Pad, adjusting (3.050) UR	Buy now
10	67F-12169-D0 Pad, adjusting (3.075) UR	Buy now
10	67F-12169-E0 Pad, adjusting (3.100) UR	Buy now
10	67F-12169-F0 Pad, adjusting (3.125) UR	Buy now
10	67F-12169-G0 Pad, adjusting (3.150) UR	Buy now
10	67F-12169-H0 Pad, adjusting (3.175) UR	Buy now
10	67F-12169-J0 Pad, adjusting (3.200) UR	Buy now
10	67F-12169-K0 Pad, adjusting (3.225) UR	Buy now
10	67F-12169-L0 Pad, adjusting (3.250) UR	Buy now

 
Valve

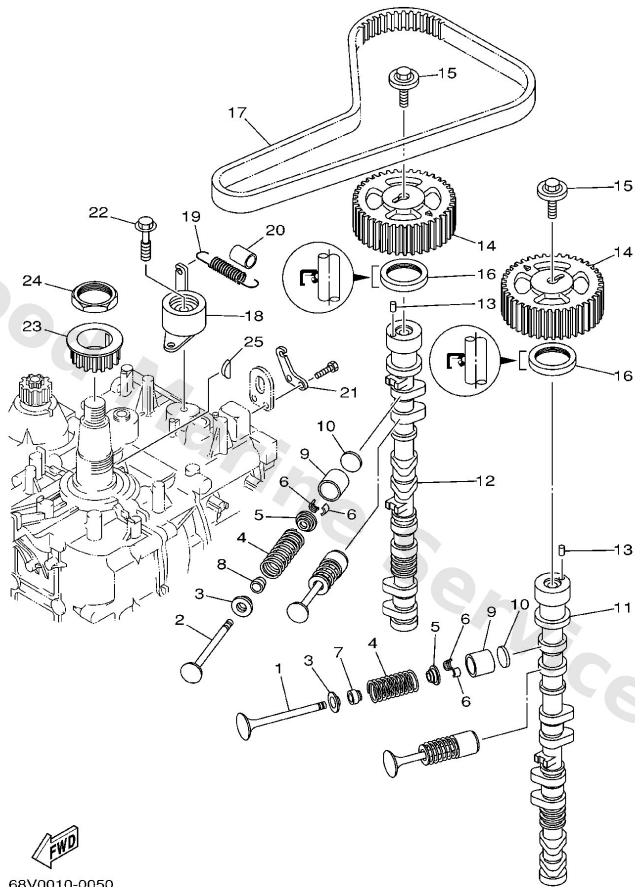

B4

Ref	Part	
10	67F-12169-M0 Pad, adjusting (3.275) UR	Buy now
10	67F-12169-N0 Pad, adjusting (3.300) UR	Buy now
11	67F-12171-00 Camshaft 1	Buy now
12	67F-12181-00 Camshaft 2	Buy now
13	93605-10108 Pin, dowel (8g8)	Buy now
14	67F-11537-00 Gear, driven	Buy now
15	90119-10M06 Bolt	Buy now
16	93102-38M59 Oil seal	Buy now
17	67F-46241-00 Belt	Buy now
18	67F-11590-00 Tensioner assembly	Buy now
19	90506-16M39 Spring, tension	Buy now
20	90445-15M03 Hose (I23)	Buy now
21	67F-11595-00 Plate, valve	Buy now
22	90119-10M72 Bolt, with washer(6m6)	Buy now
23	67F-11536-00 Gear Drive	Buy now

 Valve

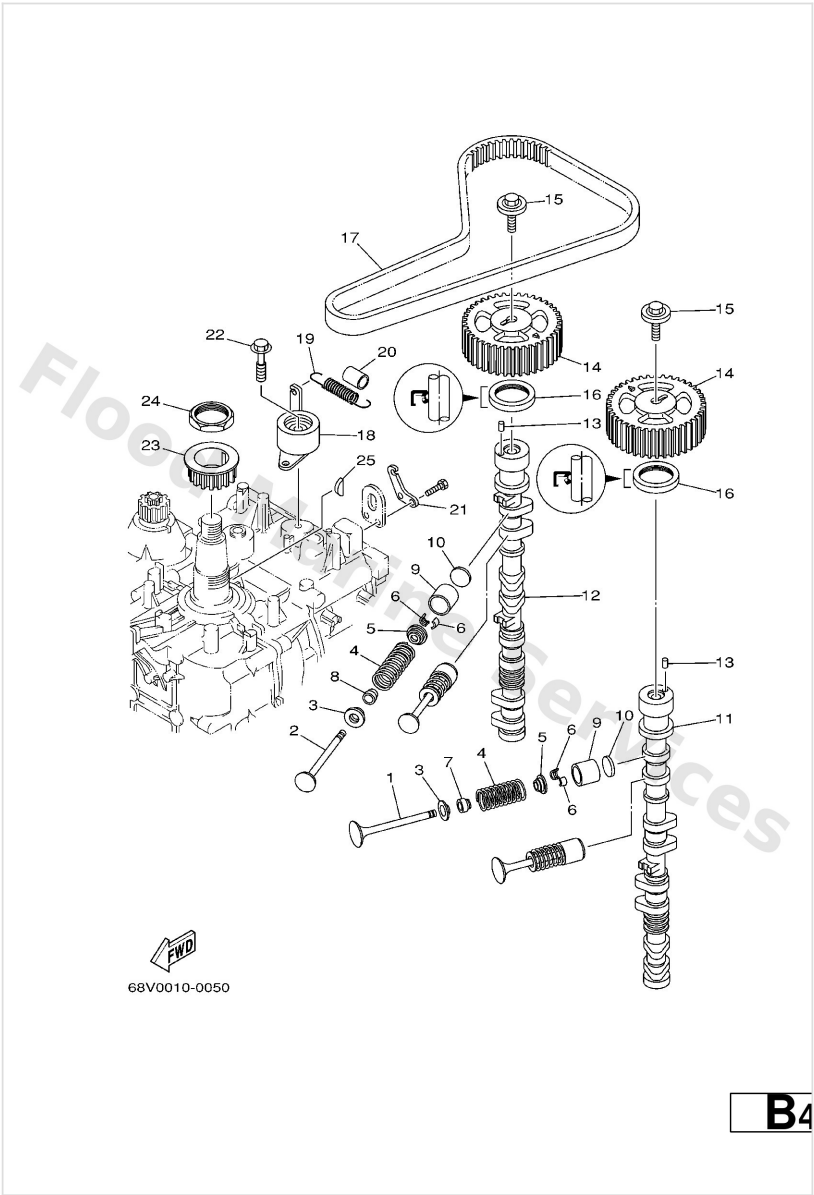

Ref	Part	
24	90170-40003 Nut	Buy now
25	90280-04008 Key woodruff 604115450000	Buy now

Disclaimer

This document is provided for convenience only. It is **not** an official Yamaha publication and is **not supplied, endorsed, or approved** by Yamaha Motor Co., Ltd.

Reasonable efforts are made to keep information accurate; however diagrams, part references, supersessions, descriptions, and applicability may contain errors or omissions. Specifications and part availability may change without notice.

You are responsible for confirming the correct parts for your engine (including model code, year, serial range, and any superseded part numbers) before ordering or fitting.