



Yamaha Remote Control - 704 2017

Parts Manual

www.floodmarine.co.uk

+44 2882 246 539


Authorised Yamaha Dealers



Contents


REMOTE CONTROL ASSY 1	3
REMOTE CONTROL ASSY 2	8
SWITCH & PANEL 1	13
SWITCH & PANEL 2	14

Remote Control Assy 1

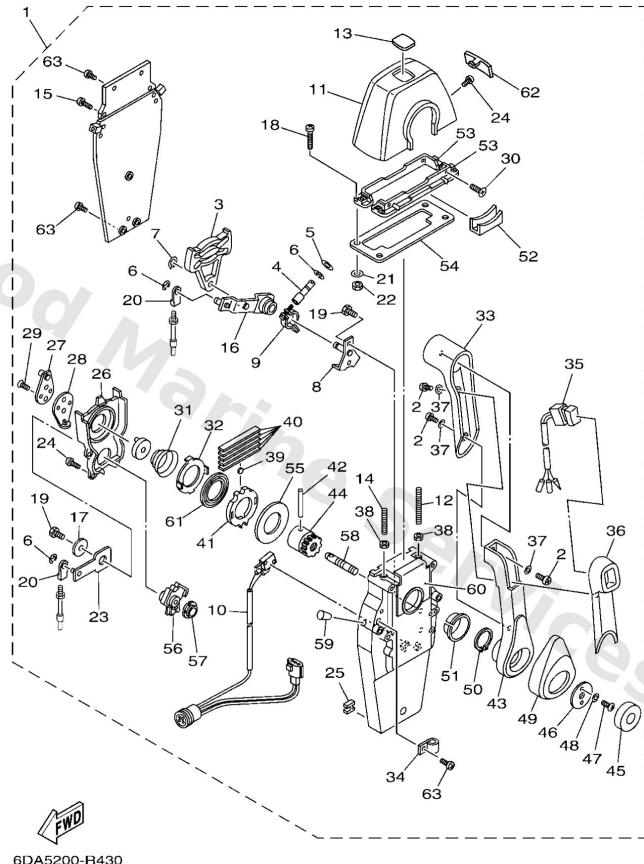


Ref	Part	
1	<u>70448205R0</u> 704 single top mount (mec rc) UR SINGLE WITH PT/T SW.	Buy now
1	<u>70448206R0</u> Remote control assembly UR SINGLE WITH PT/T SW.	Buy now
2	<u>7044812910</u> Screw 3	Buy now
3	<u>EL84825100</u> Plate, cam	Buy now
4	<u>7044826500</u> Shaft, friction	Buy now
5	<u>7014824600</u> Spacer	Buy now
6	<u>9343006024</u> Circlip (701)	Buy now
7	<u>EL84825900</u> Circlip 1	Buy now
8	<u>7044826200</u> Shaft, throttle	Buy now
9	<u>7044826400</u> Friction, throttle	Buy now
10	<u>7048254040</u> Neutral switch assembly	Buy now
11	<u>7044811950</u> Cover	Buy now
12	<u>EL84828100</u> Screw 1	Buy now
13	<u>7044821560</u> Graphic	Buy now
14	<u>7044828100</u> Screw1	Buy now

Remote Control Assy 1

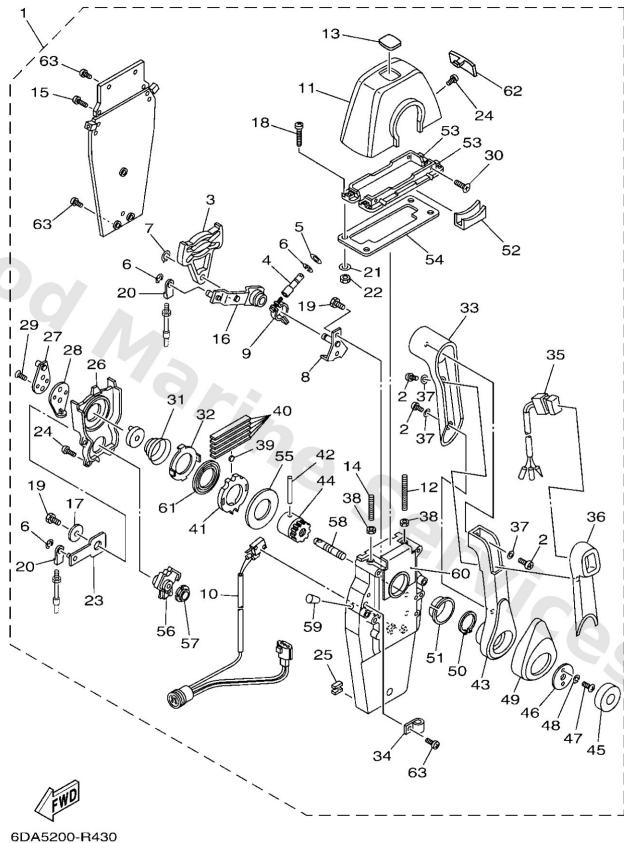


Ref	Part	
15	9789005025 Screw, panhead (a93)	Buy now
16	7044826100 Arm, throttle	Buy now
17	EL84819100 Washer 1	Buy now
18	7044828300 Screw,panhead (eg9)	Buy now
19	9738006018 Bolt (fj0)	Buy now
20	7034834501 Cable end, remote control 2	Buy now
21	7044828700 Washer 1	Buy now
22	9538005600 Nut, hexagon (663)	Buy now
23	7044827100 Arm, shift	Buy now
24	EL84812700 Screw 1	Buy now
25	7034835800 Anchor, cable	Buy now
26	7044823100 Housing, gear	Buy now
27	EL84824100 Arm, drive	Buy now
28	EL84825400 Stopper Throttle Adjusting	Buy now
29	9278006020 Screw flat head	Buy now

Remote Control Assy 1

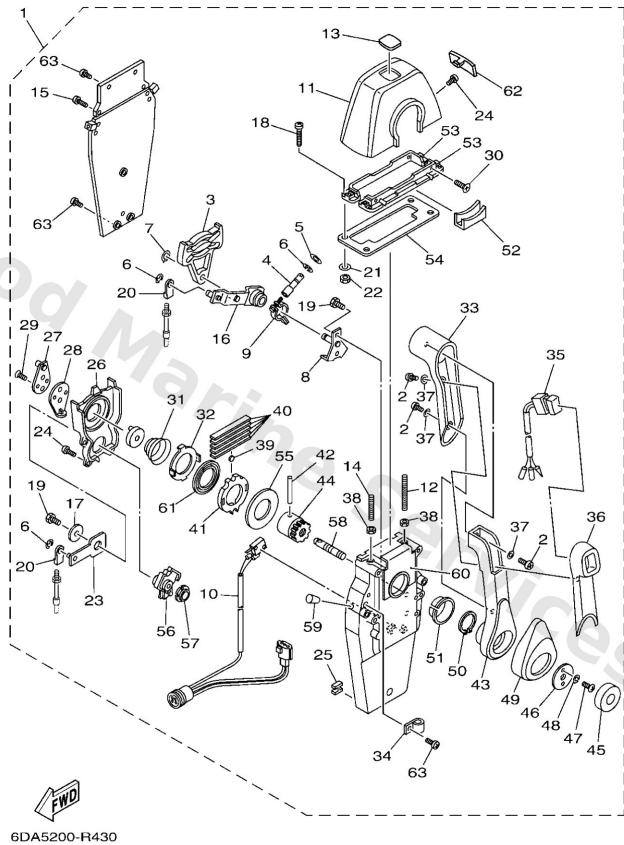


Ref	Part	
30	9878005018 Screw (704)	Buy now
31	EL84824400 Spring, free accel.	Buy now
32	EL84824500 Plate, lock	Buy now
33	7044822210 Grip, control lever	Buy now
34	7048259400 Clamp	Buy now
35	7048256360 Trim & tilt switch assembly	Buy now
36	7044822910 Grip, control lever 2	Buy now
37	9299005300 Washer, tooth	Buy now
38	9538006600 Nut(661)	Buy now
39	7014824800 Roller, free accel	Buy now
40	7044823800 Spring, detent	Buy now
41	70448232P1 Gear	Buy now
42	EL84816400 Pin 2	Buy now
43	70448221R0 Lever, control	Buy now
44	7044824210 Shaft, drive	Buy now

Remote Control Assy 1

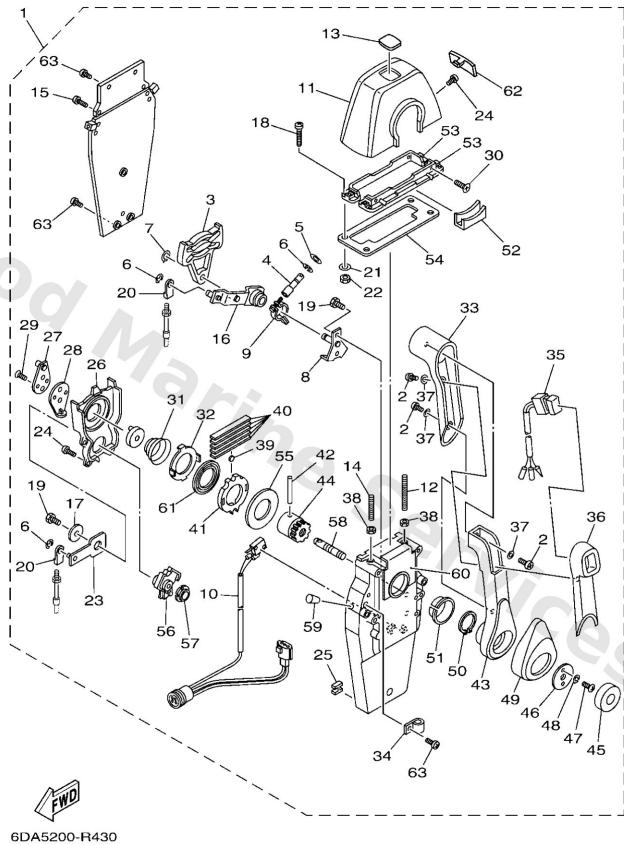


Ref	Part	
45	70448225R0 Cover	Buy now
46	7044819200 Washer 2	Buy now
47	9789006018 Screw, pan head(6e5)	Buy now
48	9299006300 Washer, tooth	Buy now
49	70448224R0 Cover, control lever	Buy now
50	EL84827900 Circlip 2	Buy now
51	7044823400 Bushing 1	Buy now
52	70448219R0 Cover, lead	Buy now
53	7044814410 Plate, stopper 2	Buy now
54	7044817600 Grommet	Buy now
55	70448192P0 Washer 2	Buy now
56	7044823300 Gear 2	Buy now
57	7044823500 Bushing	Buy now
58	7044815300 Shaft, free accel.	Buy now
59	7044816600 Plug	Buy now

Remote Control Assy 1

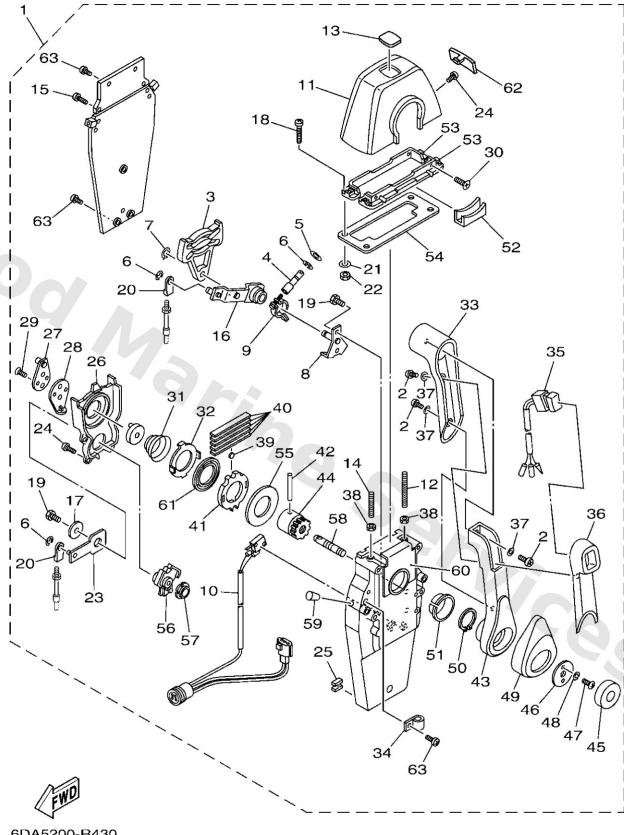


Ref	Part	
60	70448284P0 Grommet	Buy now
61	7044817810 Plate, shift	Buy now
62	7044816720 Plug	Buy now
63	9789005016 Screw, pan head(6b0)	Buy now

Remote Control Assy 2

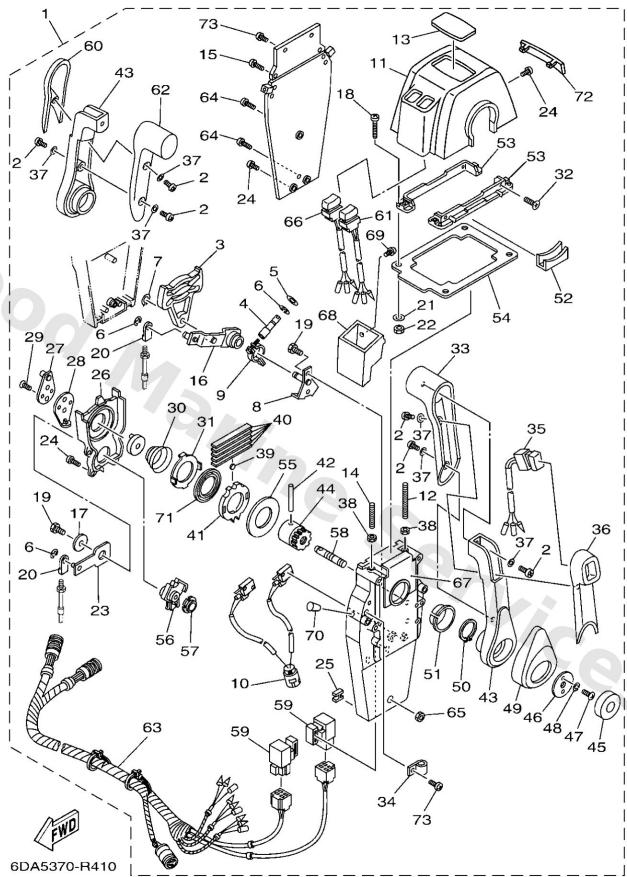


Ref	Part	
1	70448207R0 704 twin top mount (mec rc) TWIN WITH PT/T SW.	Buy now
2	7044812910 Screw 3	Buy now
3	EL84825100 Plate, cam	Buy now
4	7044826500 Shaft, friction	Buy now
5	7014824600 Spacer	Buy now
6	9343006024 Circlip (701)	Buy now
7	EL84825900 Circlip 1	Buy now
8	7044826200 Shaft, throttle	Buy now
9	7044826400 Friction, throttle	Buy now
10	7048254030 Neutral switch assembly	Buy now
11	7044811960 Cover	Buy now
12	EL84828100 Screw 1	Buy now
13	7044821570 Graphic	Buy now
14	7044828100 Screw1	Buy now
15	9789005025 Screw, panhead (a93)	Buy now

Remote Control Assy 2

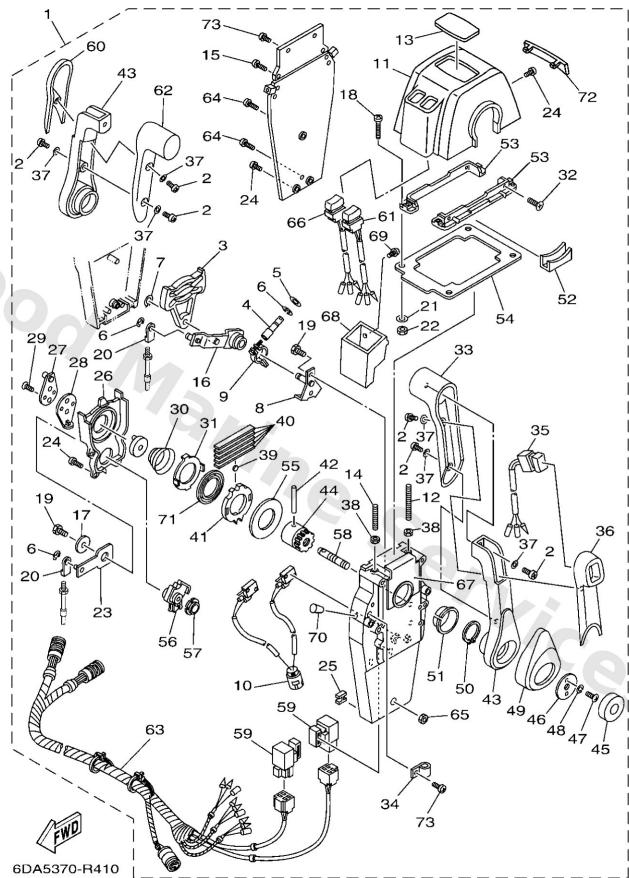


Ref	Part	
16	7044826100 Arm, throttle	Buy now
17	EL84819100 Washer 1	Buy now
18	7044828300 Screw,panhead (eg9)	Buy now
19	9738006018 Bolt (fj0)	Buy now
20	7034834501 Cable end, remote control 2	Buy now
21	7044828700 Washer 1	Buy now
22	9538005600 Nut, hexagon (663)	Buy now
23	7044827100 Arm, shift	Buy now
24	EL84812700 Screw 1	Buy now
25	7034835800 Anchor, cable	Buy now
26	7044823100 Housing, gear	Buy now
27	EL84824100 Arm, drive	Buy now
28	EL84825400 Stopper Throttle Adjusting	Buy now
29	9278006020 Screw flat head	Buy now
30	EL84824400 Spring, free accel.	Buy now

Remote Control Assy 2

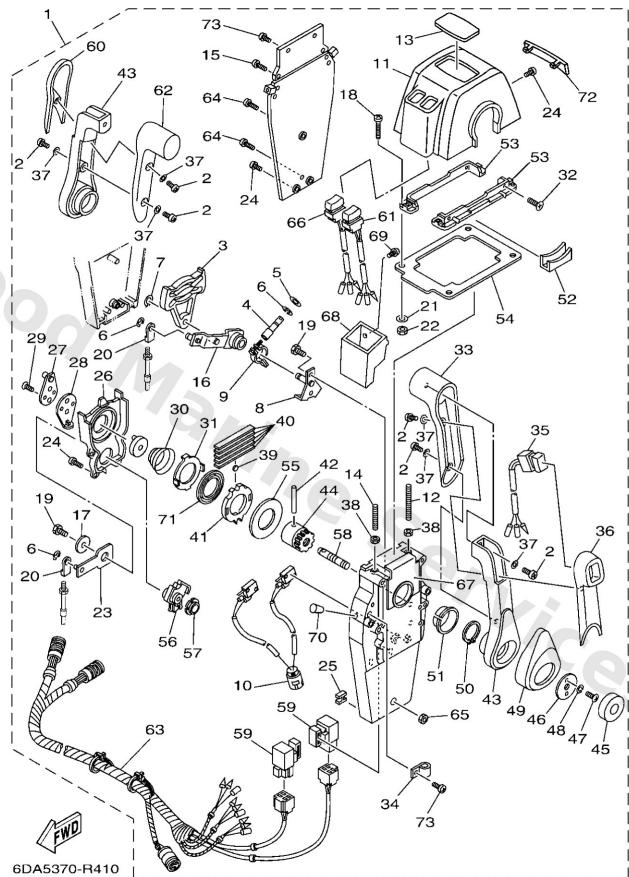


Ref	Part	
31	EL84824500 Plate, lock	Buy now
32	9878005018 Screw (704)	Buy now
33	7044822230 Grip, control lever	Buy now
34	7048259400 Clamp	Buy now
35	7048256370 Trim & tilt switch assembly	Buy now
36	7044822910 Grip, control lever 2	Buy now
37	9299005300 Washer, tooth	Buy now
38	9538006600 Nut(661)	Buy now
39	7014824800 Roller, free accel	Buy now
40	7044823800 Spring, detent	Buy now
41	70448232P1 Gear	Buy now
42	EL84816400 Pin 2	Buy now
43	70448221R0 Lever, control	Buy now
44	7044824210 Shaft, drive	Buy now
45	70448225R0 Cover	Buy now

Remote Control Assy 2

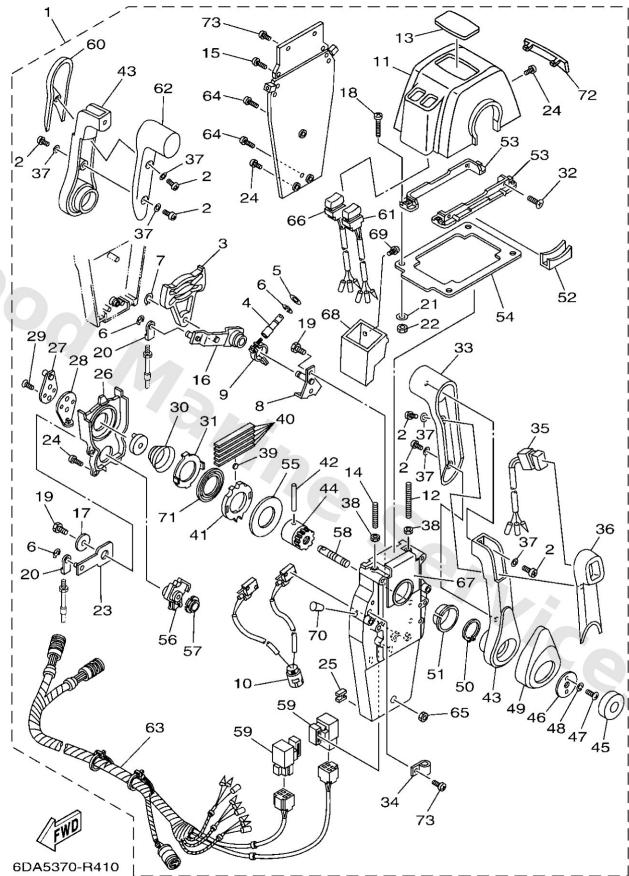


Ref	Part	
46	7044819200 Washer 2	Buy now
47	9789006018 Screw, pan head(6e5)	Buy now
48	9299006300 Washer, tooth	Buy now
49	70448224R0 Cover, control lever	Buy now
50	EL84827900 Circlip 2	Buy now
51	7044823400 Bushing 1	Buy now
52	70448219R0 Cover, lead	Buy now
53	7044814420 Plate, stopper 2	Buy now
54	7044817610 Grommet	Buy now
55	70448192P0 Washer 2	Buy now
56	7044823300 Gear 2	Buy now
57	7044823500 Bushing	Buy now
58	7044815300 Shaft, free accel.	Buy now
59	7048195010 Relay assembly	Buy now
60	7044822920 Grip, control lever	Buy now

Remote Control Assy 2

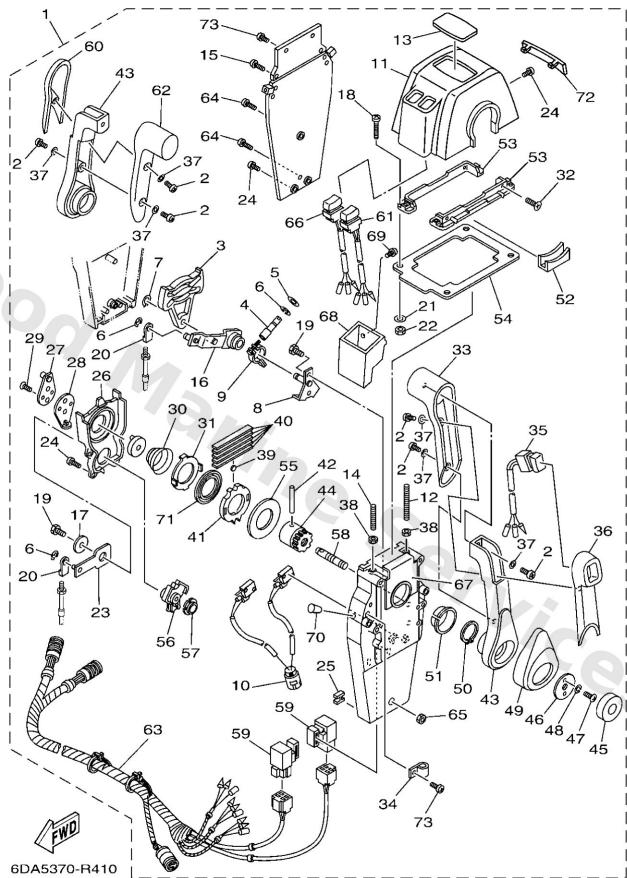

Ref	Part	
61	7048256380 Trim & tilt switch assembly	Buy now
62	7044822220 Grip, control lever	Buy now
63	7048259010 Wireharness assembly	Buy now
64	7044812800 Screw, pan head	Buy now
65	7044815600 Nut 1	Buy now
66	7048256390 Trim & tilt switch assembly	Buy now
67	70448284P0 Grommet	Buy now
68	7044828520 Grommet 2	Buy now
69	7044812960 Screw 3	Buy now
70	7044816600 Plug	Buy now
71	7044817800 Plate, shift	Buy now
72	7044816730 Plug	Buy now
73	9789005016 Screw, pan head(6b0)	Buy now


Switch & Panel 1

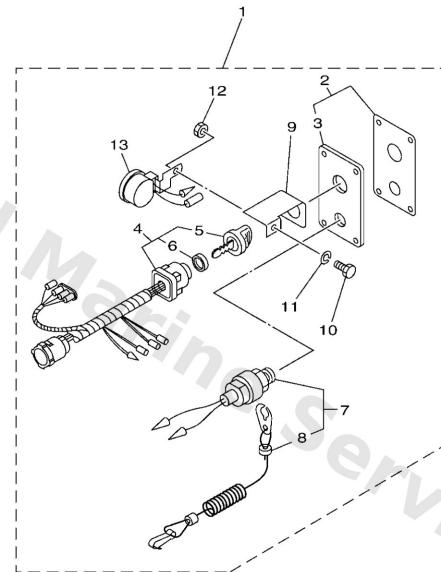

7042100-R030


Ref	Part	
1	7048257012 Panel switch assembly FOR SINGLE	Buy now
2	7048257102 Panel, switch	Buy now
3	6R58258801 Plate	Buy now
4	704825100A Main switch assembly	Buy now
5	7038257700 Cap, key	Buy now
6	6K18253200 Cap	Buy now
7	6888257502 Engine stop switch assembly	Buy now
8	6828255600 Lanyard, stop switch	Buy now
9	64D8258100 Stay, cord clamp	Buy now
10	9730305012 Bolt, hexagon	Buy now
11	9290305100 Ybs67-5 washer, spring	Buy now
12	9530305700 Nut (656)	Buy now
13	6888338312 Buzzer	Buy now

Switch & Panel 2

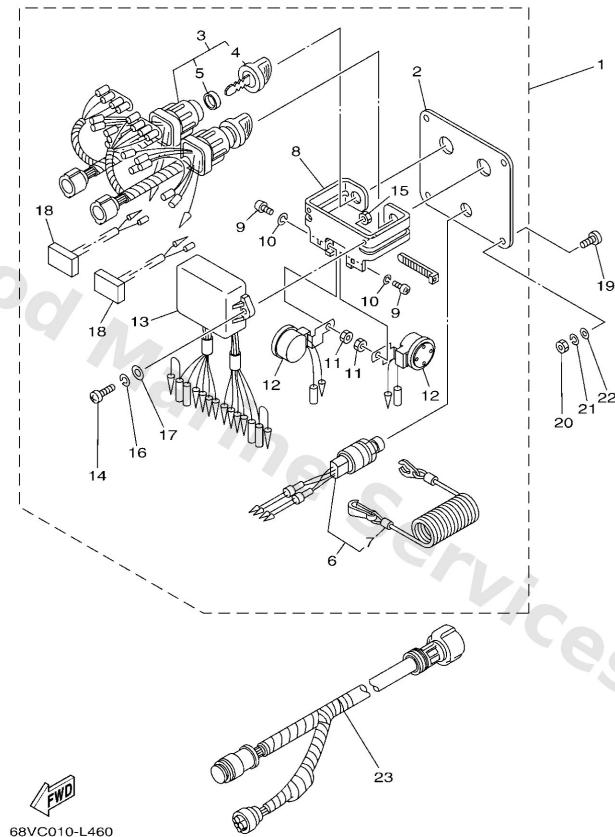

Ref	Part	
1	6K18257013 Panel switch assembly FOR TWIN	Buy now
2	6K18257102 Plate, panel switch	Buy now
3	6K18251007 Main switch assembly	Buy now
4	7038257700 Cap, key	Buy now
5	6K18253200 Cap	Buy now
6	6K18257501 Engine stop switch assembly	Buy now
7	6828255600 Lanyard, stop switch	Buy now
8	6K18361401 Bracket	Buy now
9	9898005010 Screw, bind(6k1)	Buy now
10	9299005100 Ybs67-5 washer, spring	Buy now
11	9538005600 Nut, hexagon (663)	Buy now
12	6888338312 Buzzer	Buy now
13	6K18583002 Control unit assembly	Buy now
14	9898006020 Screw, bind (j17)	Buy now
15	9538006600 Nut(661)	Buy now

Switch & Panel 2

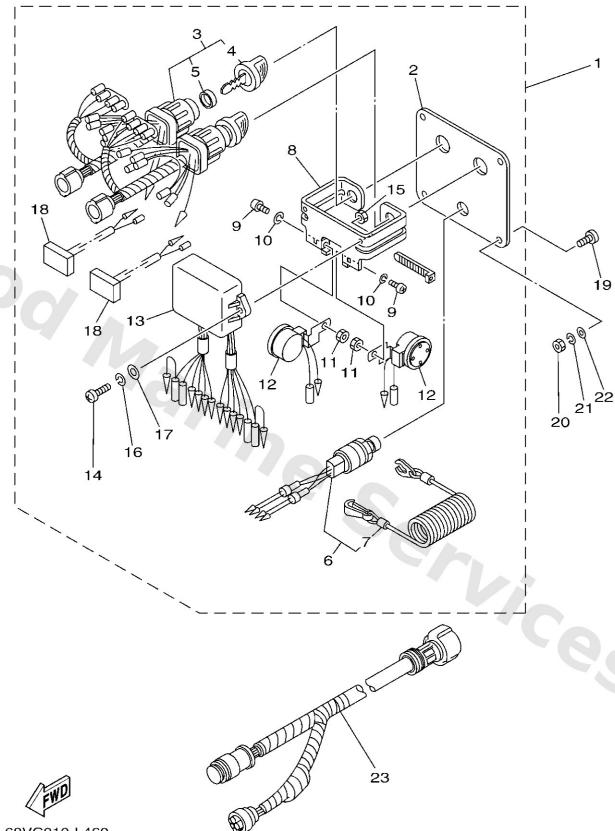

68VC010-L460

Ref	Part	
16	9299006100 Washer(6a1)	Buy now
17	9299006600 Washer, plain (646)	Buy now
18	6K18198000 Diode assembly	Buy now
19	9014905M05 Screw(6k0)	Buy now
22	9299005600 Washer, plain (646)	Buy now
23	6K18258A40 Extension, wire harness (10P)	Buy now

Disclaimer

This document is provided for convenience only. It is **not** an official Yamaha publication and is **not supplied, endorsed, or approved** by Yamaha Motor Co., Ltd.

Reasonable efforts are made to keep information accurate; however diagrams, part references, supersessions, descriptions, and applicability may contain errors or omissions. Specifications and part availability may change without notice.

You are responsible for confirming the correct parts for your engine (including model code, year, serial range, and any superseded part numbers) before ordering or fitting.