



# Yamaha SX250TRB 2003

## Parts Manual

[www.floodmarine.co.uk](http://www.floodmarine.co.uk)

+44 2882 246 539

 
Authorised Yamaha Dealers



# Contents


|                                    |     |
|------------------------------------|-----|
| <b>BOTTOM COWLING</b>              | 3   |
| <b>BRACKET 1</b>                   | 7   |
| <b>BRACKET 2</b>                   | 11  |
| <b>CONTROL</b>                     | 14  |
| <b>CRANKSHAFT. PISTON</b>          | 18  |
| <b>CYLINDER. CRANKCASE 1</b>       | 21  |
| <b>CYLINDER. CRANKCASE 2</b>       | 24  |
| <b>ELECTRICAL 1</b>                | 26  |
| <b>ELECTRICAL 2</b>                | 28  |
| <b>ELECTRICAL 3</b>                | 31  |
| <b>ELECTRICAL 4</b>                | 35  |
| <b>FUEL 1</b>                      | 36  |
| <b>FUEL 2</b>                      | 40  |
| <b>FUEL 3</b>                      | 41  |
| <b>FUEL INJECTION NOZZLE</b>       | 42  |
| <b>FUEL INJECTION PUMP</b>         | 45  |
| <b>FUEL TANK</b>                   | 49  |
| <b>GENERATOR</b>                   | 50  |
| <b>INTAKE</b>                      | 52  |
| <b>LOWER CASING. DRIVE 1</b>       | 54  |
| <b>LOWER CASING. DRIVE 2</b>       | 61  |
| <b>LOWER CASING. DRIVE 3</b>       | 63  |
| <b>LOWER CASING. DRIVE 4</b>       | 71  |
| <b>METER</b>                       | 73  |
| <b>OIL PUMP</b>                    | 76  |
| <b>OIL TANK</b>                    | 78  |
| <b>POWER TRIM &amp; TILT ASSY</b>  | 81  |
| <b>REMOTE CONTROL ASSY 1</b>       | 88  |
| <b>REMOTE CONTROL ASSY 2</b>       | 93  |
| <b>REMOTE CONTROL BOX</b>          | 99  |
| <b>REPAIR KIT 1</b>                | 100 |
| <b>REPAIR KIT 2</b>                | 102 |
| <b>STARTING MOTOR</b>              | 104 |
| <b>STEERING GUIDE ATTACHMENT 1</b> | 106 |
| <b>STEERING GUIDE ATTACHMENT 2</b> | 107 |
| <b>SWITCH. PANEL 1</b>             | 108 |
| <b>SWITCH. PANEL 2</b>             | 110 |
| <b>TOP COWLING</b>                 | 112 |
| <b>UPPER CASING</b>                | 115 |

## Bottom Cowling

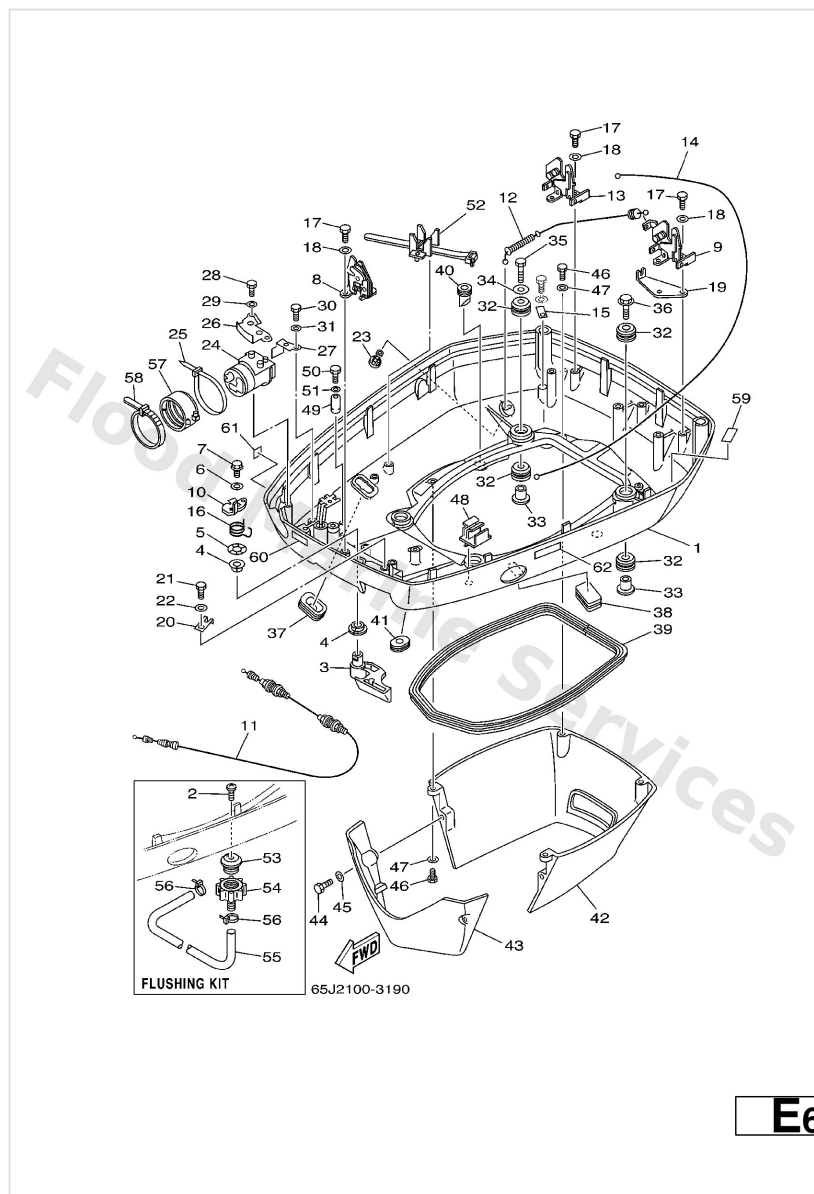


| Ref | Part                                                                    |                         |
|-----|-------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">61A-42711-05-8D</a><br>Cowling, Bottom 1                    | <a href="#">Buy now</a> |
| 2   | <a href="#">90169-05M00</a><br>Screw truss head tapping<br>FLUSHING KIT | <a href="#">Buy now</a> |
| 3   | <a href="#">61A-42815-01-8D</a><br>Lever, Clamp                         | <a href="#">Buy now</a> |
| 4   | <a href="#">90386-13M88</a><br>Bush(6r3)                                | <a href="#">Buy now</a> |
| 5   | <a href="#">90206-13M10</a><br>Washer, wave (6e5)                       | <a href="#">Buy now</a> |
| 6   | <a href="#">90201-06M30</a><br>Washer, plate (6a1)                      | <a href="#">Buy now</a> |
| 7   | <a href="#">90109-06M50</a><br>Bolt(61a)                                | <a href="#">Buy now</a> |
| 8   | <a href="#">6R3-42824-00</a><br>Base, clamp lever                       | <a href="#">Buy now</a> |
| 9   | <a href="#">6R3-42811-01</a><br>Stay                                    | <a href="#">Buy now</a> |
| 10  | <a href="#">6R3-42816-00</a><br>Lever, clamp                            | <a href="#">Buy now</a> |
| 11  | <a href="#">6R3-42850-10</a><br>Wire, complete                          | <a href="#">Buy now</a> |
| 12  | <a href="#">61A-42850-01</a><br>Wire Complete                           | <a href="#">Buy now</a> |
| 13  | <a href="#">6R3-42811-10</a><br>Stay                                    | <a href="#">Buy now</a> |
| 14  | <a href="#">61A-42850-20</a><br>Wire, complete                          | <a href="#">Buy now</a> |
| 15  | <a href="#">682-44117-00</a><br>Bracket 1                               | <a href="#">Buy now</a> |

## Bottom Cowling

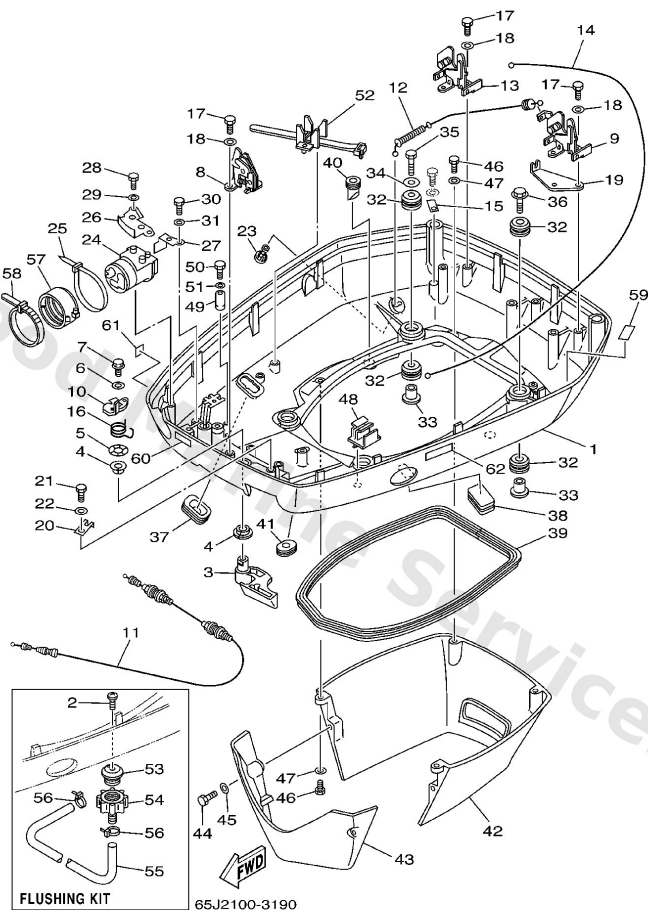 


| Ref | Part                                                         |                         |
|-----|--------------------------------------------------------------|-------------------------|
| 16  | <a href="#">6R3-42813-00</a><br>Spring, clamp lever          | <a href="#">Buy now</a> |
| 17  | <a href="#">97095-06016</a><br>Bolt, hexagon deep recess     | <a href="#">Buy now</a> |
| 18  | <a href="#">92995-06600</a><br>Washer, plain (646)           | <a href="#">Buy now</a> |
| 19  | <a href="#">6N7-42828-00</a><br>Plate, clamp                 | <a href="#">Buy now</a> |
| 20  | <a href="#">6R3-42828-00</a><br>Plate, clamp                 | <a href="#">Buy now</a> |
| 21  | <a href="#">97095-06010</a><br>Bolt                          | <a href="#">Buy now</a> |
| 23  | <a href="#">6E5-44391-00</a><br>Nipple, hose                 | <a href="#">Buy now</a> |
| 24  | <a href="#">61A-42725-12</a><br>Grommet<br>FOR OCEANIA,CARIB | <a href="#">Buy now</a> |
| 24  | <a href="#">61A-42725-31</a><br>Grommet<br>FOR USA,CANADA    | <a href="#">Buy now</a> |
| 25  | <a href="#">90465-13M30</a><br>Clamp                         | <a href="#">Buy now</a> |
| 26  | <a href="#">61A-42738-02-5B</a><br>Plate, fitting            | <a href="#">Buy now</a> |
| 27  | <a href="#">64D-42738-10-5B</a><br>Plate, fitting            | <a href="#">Buy now</a> |
| 30  | <a href="#">97095-06012</a><br>Bolt(gh1)                     | <a href="#">Buy now</a> |
| 32  | <a href="#">90480-22M81</a><br>Grommet                       | <a href="#">Buy now</a> |
| 33  | <a href="#">90387-08M37</a><br>Coller (6e5)                  | <a href="#">Buy now</a> |

## Bottom Cowling

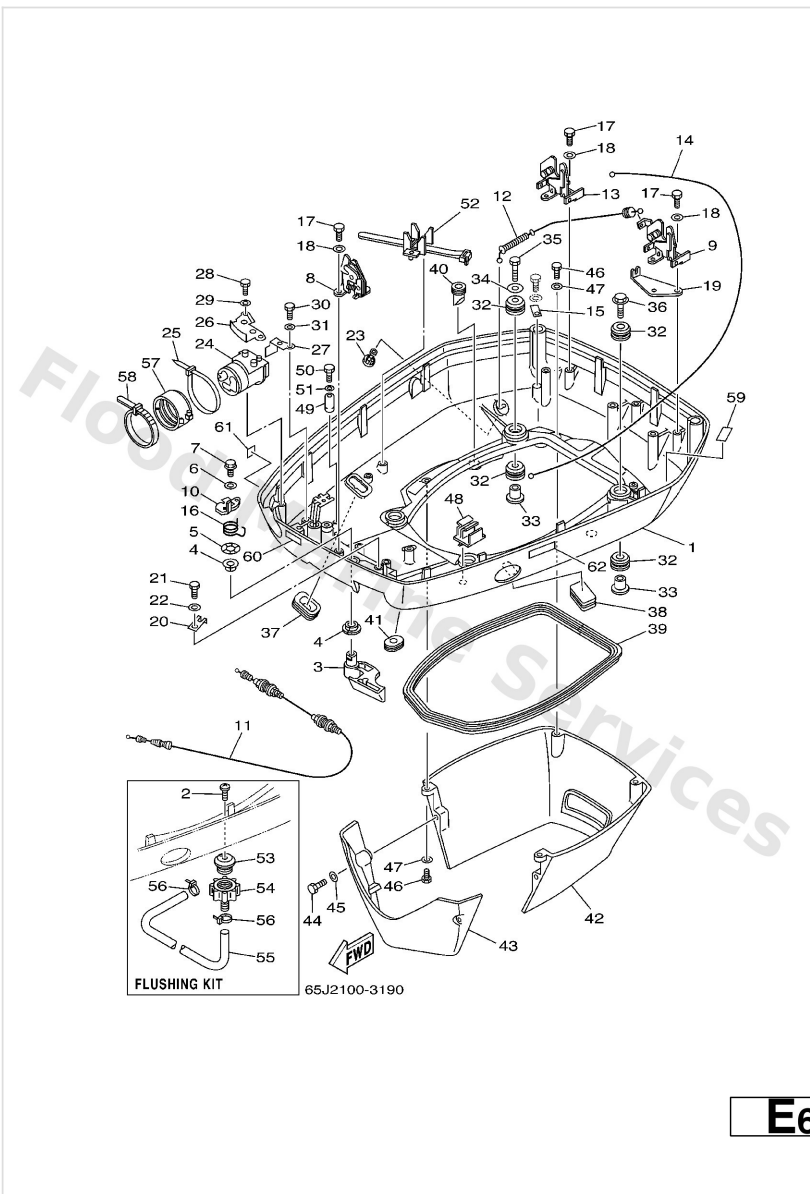 


| Ref | Part                                               |                         |
|-----|----------------------------------------------------|-------------------------|
| 34  | <a href="#">90201-08M54</a><br>Washer, plate (6e5) | <a href="#">Buy now</a> |
| 35  | <a href="#">97075-08035</a><br>Bolt(70w)           | <a href="#">Buy now</a> |
| 36  | <a href="#">90119-08M22</a><br>Bolt, with washer   | <a href="#">Buy now</a> |
| 37  | <a href="#">688-42726-10</a><br>Grommet            | <a href="#">Buy now</a> |
| 38  | <a href="#">6H4-42726-00</a><br>Grommet            | <a href="#">Buy now</a> |
| 39  | <a href="#">61A-42716-00</a><br>Rubber seal 1      | <a href="#">Buy now</a> |
| 40  | <a href="#">61A-42717-00</a><br>Rubber, seal 2     | <a href="#">Buy now</a> |
| 41  | <a href="#">61A-42727-00</a><br>Grommet            | <a href="#">Buy now</a> |
| 42  | <a href="#">61A-42741-01-8D</a><br>Apron           | <a href="#">Buy now</a> |
| 43  | <a href="#">61A-42771-01-8D</a><br>Apron           | <a href="#">Buy now</a> |
| 44  | <a href="#">97095-06030</a><br>Bolt(jf7)           | <a href="#">Buy now</a> |
| 46  | <a href="#">97095-06020</a><br>Bolt(7u8)           | <a href="#">Buy now</a> |
| 48  | <a href="#">6E5-82594-00</a><br>Clamp              | <a href="#">Buy now</a> |
| 49  | <a href="#">6E5-82588-00</a><br>Plate              | <a href="#">Buy now</a> |
| 52  | <a href="#">688-82594-00</a><br>Clamp              | <a href="#">Buy now</a> |

## Bottom Cowling

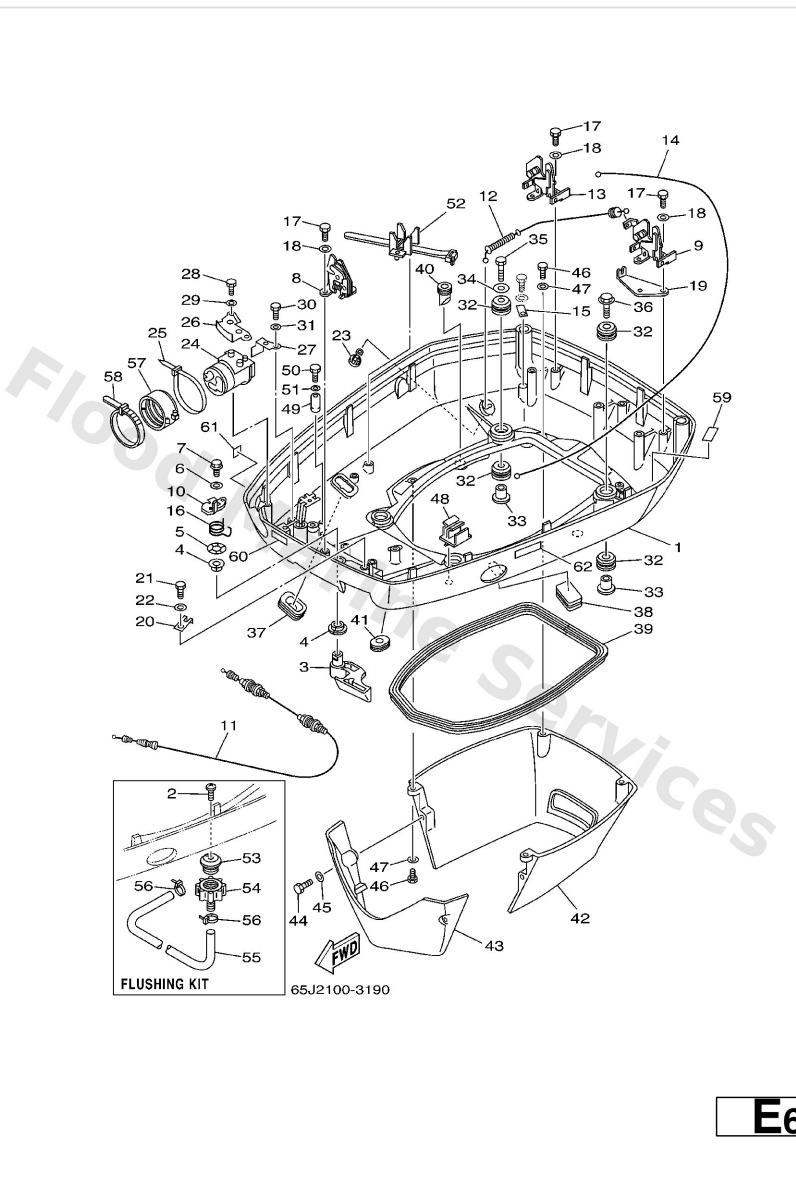 

| Ref | Part                                                               |                         |
|-----|--------------------------------------------------------------------|-------------------------|
| 53  | <a href="#">6R3-12572-00</a><br>Adapter<br>FLUSHING KIT            | <a href="#">Buy now</a> |
| 54  | <a href="#">6R3-12580-00</a><br>Joint assembly<br>FLUSHING KIT     | <a href="#">Buy now</a> |
| 55  | <a href="#">90445-11M36</a><br>Hose (I700)<br>FLUSHING KIT         | <a href="#">Buy now</a> |
| 56  | <a href="#">90465-11M10</a><br>Clamp<br>FLUSHING KIT               | <a href="#">Buy now</a> |
| 57  | <a href="#">68F-42753-00</a><br>Fastner<br>FOR USA,CANADA          | <a href="#">Buy now</a> |
| 58  | <a href="#">90464-20258</a><br>Clamp<br>FOR USA,CANADA             | <a href="#">Buy now</a> |
| 59  | <a href="#">6K7-42791-00</a><br>Mark 1                             | <a href="#">Buy now</a> |
| 60  | <a href="#">65L-2415E-40</a><br>Label, Caution<br>FOR USA,OCEANIA  | <a href="#">Buy now</a> |
| 60  | <a href="#">65L-2415E-60</a><br>Label, Caution<br>FOR CANADA,CARIB | <a href="#">Buy now</a> |
| 61  | <a href="#">6A1-28176-00</a><br>Label Caution<br>FOR CARIB         | <a href="#">Buy now</a> |
| 62  | <a href="#">6E3-8257H-00</a><br>Plate Mark<br>FOR CARIB            | <a href="#">Buy now</a> |


# Bracket 1

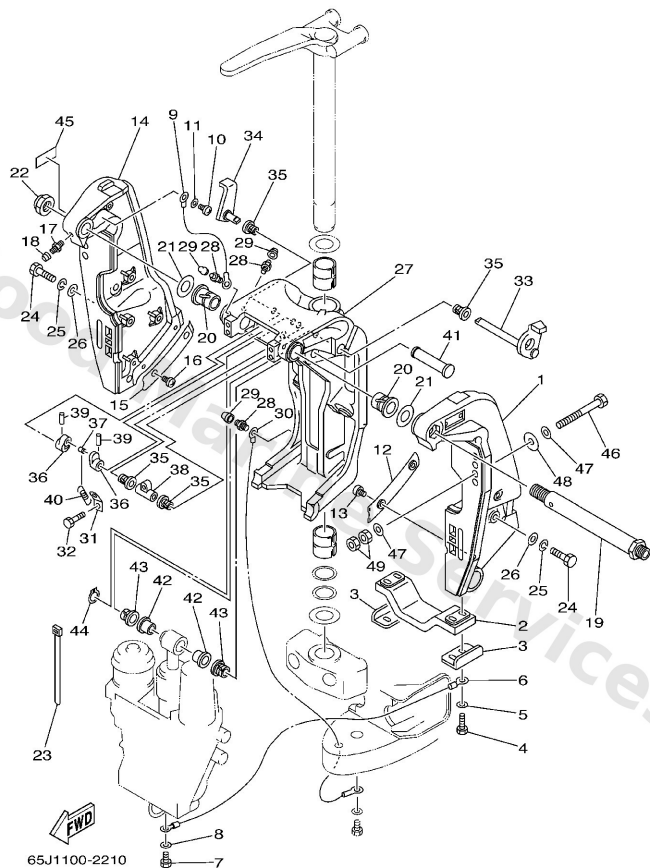 

**F5**

| Ref | Part                                                |                         |
|-----|-----------------------------------------------------|-------------------------|
| 1   | <a href="#">61A-43111-23-8D</a><br>Bracket, Clamp 1 | <a href="#">Buy now</a> |
| 2   | <a href="#">6G5-45251-02</a><br>Anode               | <a href="#">Buy now</a> |
| 3   | <a href="#">6G5-44526-00</a><br>Plate               | <a href="#">Buy now</a> |
| 4   | <a href="#">97095-06025</a><br>Bolt                 | <a href="#">Buy now</a> |
| 5   | <a href="#">92995-06600</a><br>Washer, plain (646)  | <a href="#">Buy now</a> |
| 6   | <a href="#">6H1-82148-00</a><br>Wire, lead          | <a href="#">Buy now</a> |
| 7   | <a href="#">97095-06010</a><br>Bolt                 | <a href="#">Buy now</a> |
| 9   | <a href="#">6E5-82148-00</a><br>Wire, lead 5        | <a href="#">Buy now</a> |
| 10  | <a href="#">97885-06012</a><br>Screw, pan head(62j) | <a href="#">Buy now</a> |
| 12  | <a href="#">61A-43132-00</a><br>Washer, friction    | <a href="#">Buy now</a> |
| 13  | <a href="#">97885-06010</a><br>Screw pan head       | <a href="#">Buy now</a> |
| 14  | <a href="#">61A-43112-23-8D</a><br>Bracket, clamp   | <a href="#">Buy now</a> |
| 15  | <a href="#">61A-43133-00</a><br>Washer,friction     | <a href="#">Buy now</a> |
| 17  | <a href="#">93700-06M03</a><br>Nipple, grease(6a1)  | <a href="#">Buy now</a> |
| 18  | <a href="#">663-45119-00</a><br>Cap, grease nipple  | <a href="#">Buy now</a> |

 
# Bracket 1

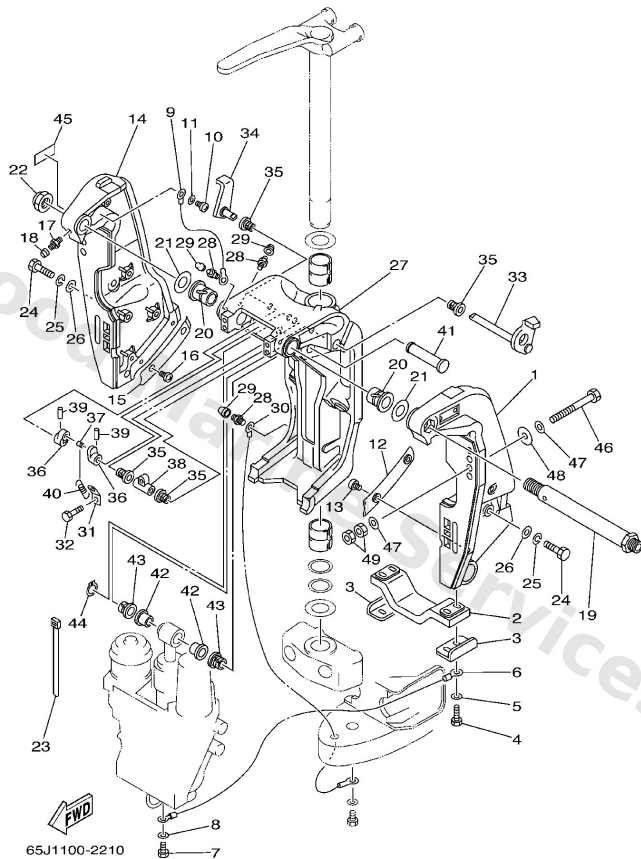

**F5**


| Ref | Part                                                      |                         |
|-----|-----------------------------------------------------------|-------------------------|
| 19  | <a href="#">6R3-43131-00</a><br>Bolt, clamp bracket       | <a href="#">Buy now</a> |
| 20  | <a href="#">90386-25M31</a><br>Bushing (6e5)              | <a href="#">Buy now</a> |
| 21  | <a href="#">90201-26M59</a><br>Washer, plate (6e5)        | <a href="#">Buy now</a> |
| 22  | <a href="#">90185-22M11</a><br>Nut, self-locking          | <a href="#">Buy now</a> |
| 23  | <a href="#">90465-11M10</a><br>Clamp                      | <a href="#">Buy now</a> |
| 24  | <a href="#">97095-10045</a><br>Bolt(64d)                  | <a href="#">Buy now</a> |
| 25  | <a href="#">92995-10100</a><br>Ybs67-10 washer, spring    | <a href="#">Buy now</a> |
| 26  | <a href="#">92995-10600</a><br>Washer, plate              | <a href="#">Buy now</a> |
| 27  | <a href="#">61A-43311-21-8D</a><br>Bracket, swivel 1<br>X | <a href="#">Buy now</a> |
| 27  | <a href="#">61A-43311-31-8D</a><br>Bracket, swivel<br>U   | <a href="#">Buy now</a> |
| 30  | <a href="#">61A-82147-20</a><br>Wire, lead 5<br>X         | <a href="#">Buy now</a> |
| 30  | <a href="#">61A-82147-30</a><br>Wire, lead 5<br>U         | <a href="#">Buy now</a> |
| 31  | <a href="#">6G5-43144-00</a><br>Hook, spring              | <a href="#">Buy now</a> |
| 33  | <a href="#">61A-43181-01</a><br>Lever, tilt stop 1        | <a href="#">Buy now</a> |
| 34  | <a href="#">6G5-43185-02</a><br>Lever, tilt stop 2        | <a href="#">Buy now</a> |
 
# Bracket 1

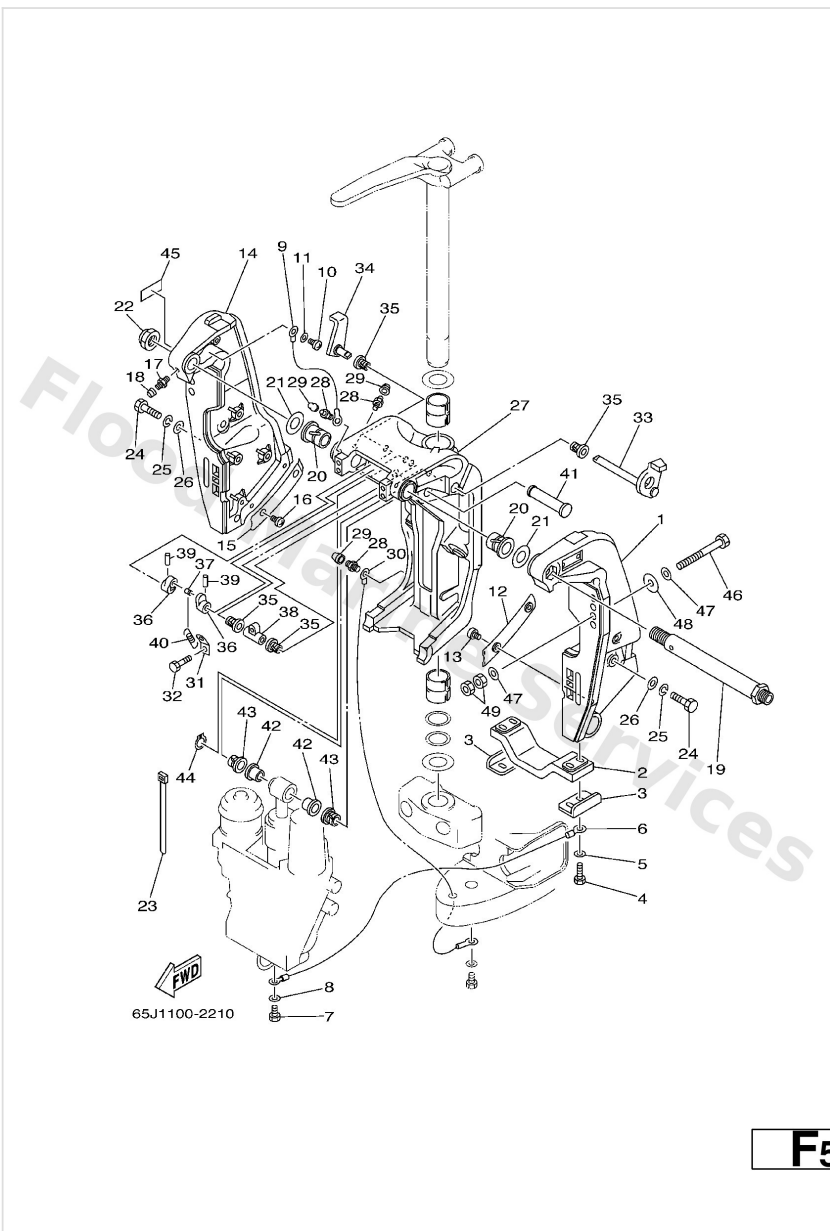


| Ref | Part                                                                         |                         |
|-----|------------------------------------------------------------------------------|-------------------------|
| 35  | <a href="#">90386-10M16</a><br>Bushing (688)                                 | <a href="#">Buy now</a> |
| 36  | <a href="#">6G5-43148-00</a><br>Collar, distance                             | <a href="#">Buy now</a> |
| 37  | <a href="#">90249-06M19</a><br>Pin(6e5)                                      | <a href="#">Buy now</a> |
| 38  | <a href="#">90387-10M02</a><br>Collar(6e5)                                   | <a href="#">Buy now</a> |
| 39  | <a href="#">91690-30020</a><br>Pin, spring (6h4)                             | <a href="#">Buy now</a> |
| 40  | <a href="#">90506-14M24</a><br>Spring, tension(6e5)                          | <a href="#">Buy now</a> |
| 41  | <a href="#">6E5-43126-02</a><br>Pin, upper shock mount                       | <a href="#">Buy now</a> |
| 42  | <a href="#">90386-18M63</a><br>Bush(6e5)                                     | <a href="#">Buy now</a> |
| 43  | <a href="#">90386-18M14</a><br>Bushing (6e5)                                 | <a href="#">Buy now</a> |
| 44  | <a href="#">93410-18M02</a><br>Circlip (6f2)                                 | <a href="#">Buy now</a> |
| 45  | <a href="#">63V-82377-50</a><br>Label (Spark, Ignition)<br><b>FOR CANADA</b> | <a href="#">Buy now</a> |
| 46  | <a href="#">90101-12M05</a><br>Bolt (l:130mm)                                | <a href="#">Buy now</a> |
| 46  | <a href="#">90101-12M77</a><br>Bolt (l:150mm)<br><b>USA,CANADA ONLY</b>      | <a href="#">Buy now</a> |
| 47  | <a href="#">90201-13M01</a><br>Washer, plate(6e5)                            | <a href="#">Buy now</a> |
| 48  | <a href="#">90201-12M05</a><br>Washe, plate(663)                             | <a href="#">Buy now</a> |

# Bracket 1

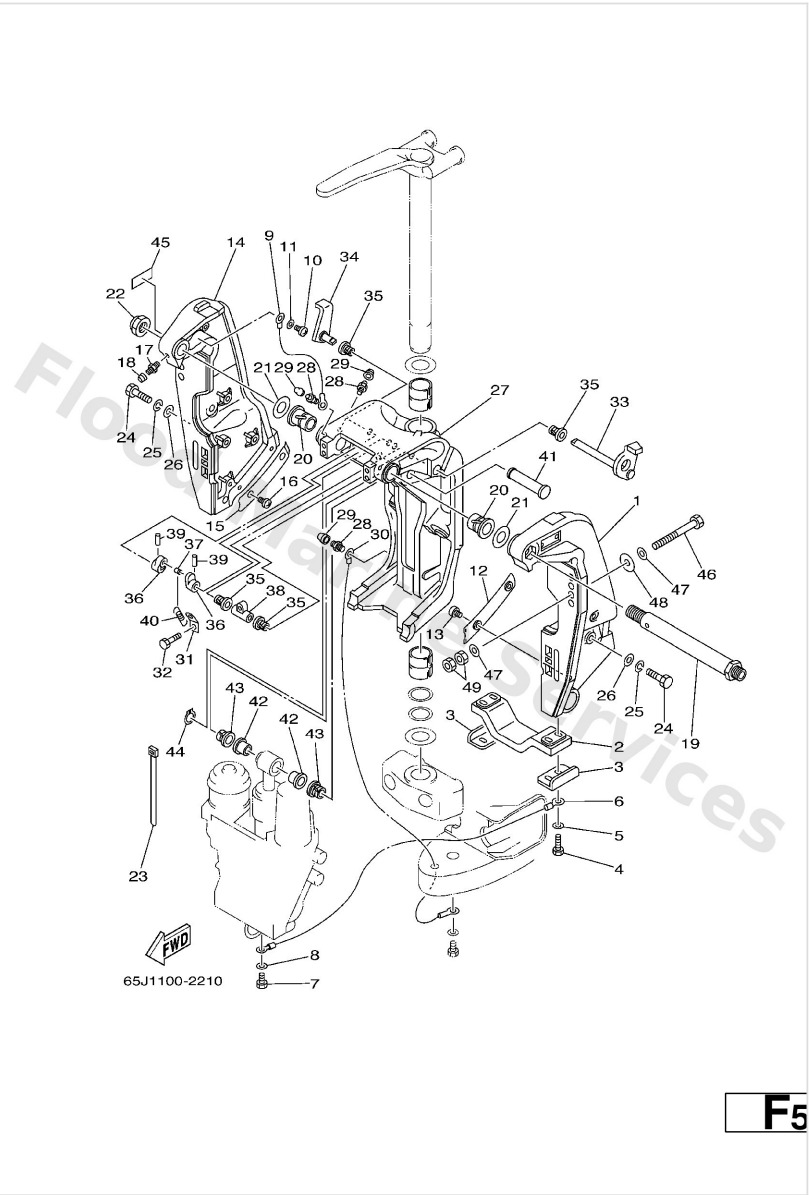 


| Ref | Part                                     |                         |
|-----|------------------------------------------|-------------------------|
| 49  | <a href="#">95380-12600</a><br>Nut (707) | <a href="#">Buy now</a> |

## Bracket 2

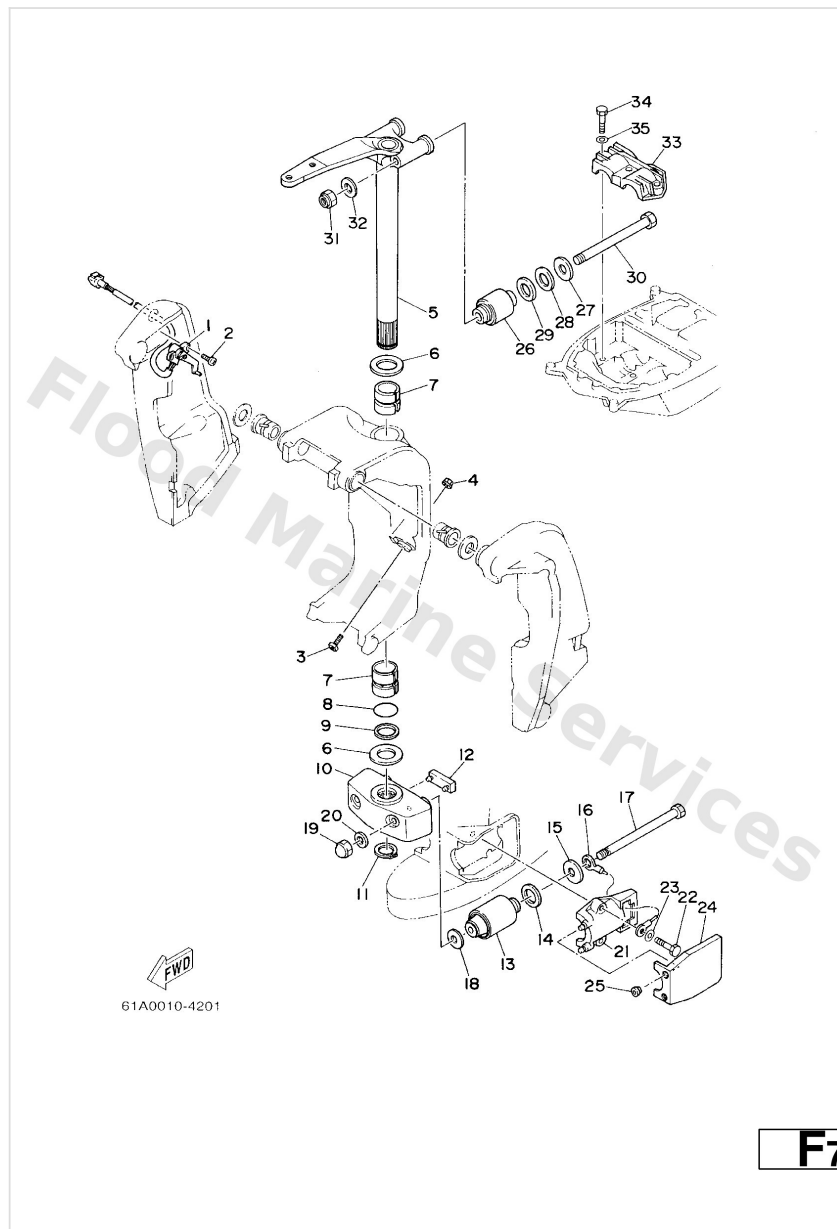 


| Ref | Part                                                              |                         |
|-----|-------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">61A-83672-02</a><br>Trim sender                       | <a href="#">Buy now</a> |
| 2   | <a href="#">97885-06016</a><br>Screw, pan head(6b0)               | <a href="#">Buy now</a> |
| 3   | <a href="#">61A-43376-00</a><br>Bolt, thrust receiver             | <a href="#">Buy now</a> |
| 4   | <a href="#">95780-10300</a><br>Nut, nylon (6e5)                   | <a href="#">Buy now</a> |
| 5   | <a href="#">61A-42510-31-8D</a><br>Steering bracket assembly<br>U | <a href="#">Buy now</a> |
| 5   | <a href="#">69J-42510-00-8D</a><br>Steering bracket assembly<br>X | <a href="#">Buy now</a> |
| 6   | <a href="#">90201-40M00</a><br>Washer, plate(61a)                 | <a href="#">Buy now</a> |
| 7   | <a href="#">90386-39M89</a><br>Bush(61a)                          | <a href="#">Buy now</a> |
| 8   | <a href="#">93210-35321</a><br>O-ring (3m7)                       | <a href="#">Buy now</a> |
| 9   | <a href="#">90202-40M47</a><br>Washer, plate(61a)                 | <a href="#">Buy now</a> |
| 10  | <a href="#">61A-44551-01-8D</a><br>Housing, lower mount rubber    | <a href="#">Buy now</a> |
| 11  | <a href="#">93410-37M04</a><br>Circlip (6e5)                      | <a href="#">Buy now</a> |
| 12  | <a href="#">61A-44575-00</a><br>Damper, lower mount rubber        | <a href="#">Buy now</a> |
| 13  | <a href="#">61A-44555-01-94</a><br>Mount damper, lower side       | <a href="#">Buy now</a> |
| 14  | <a href="#">90202-32M19</a><br>Washer, plate (6e5)                | <a href="#">Buy now</a> |

## Bracket 2

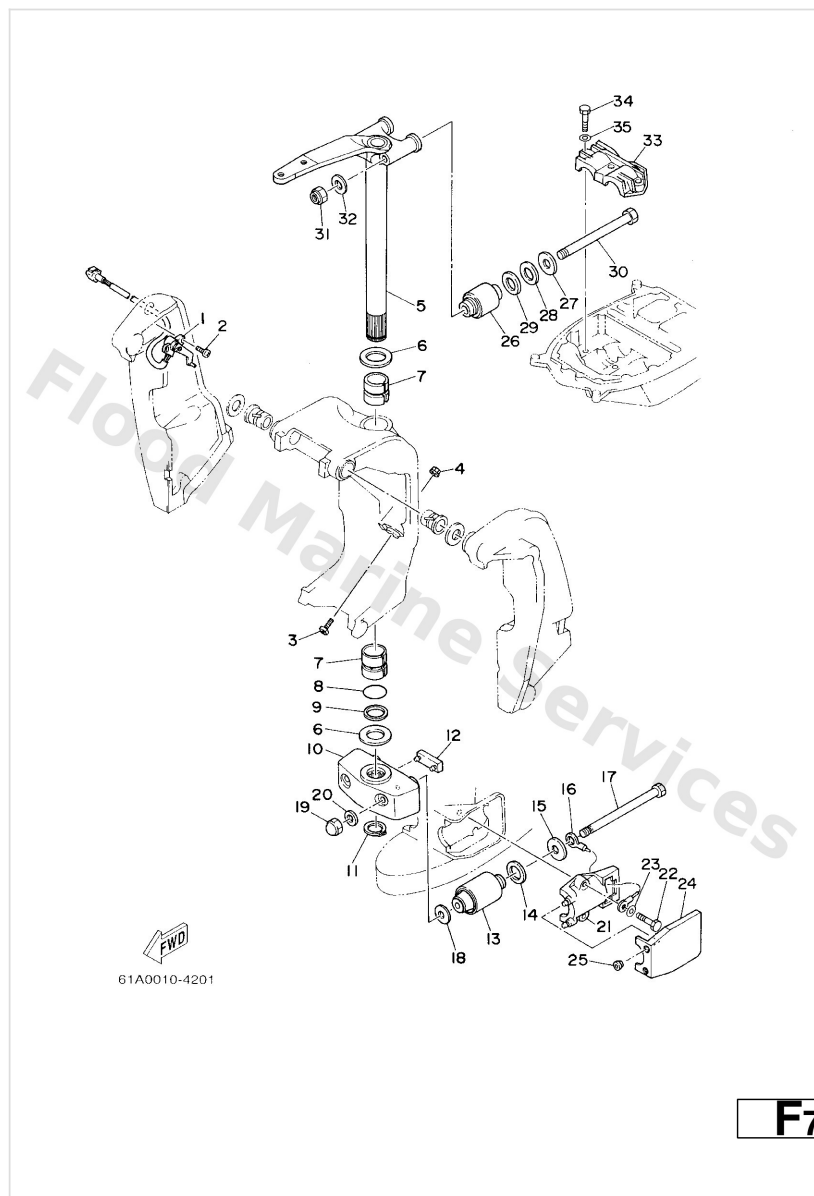 


| Ref | Part                                                           |                         |
|-----|----------------------------------------------------------------|-------------------------|
| 15  | <a href="#">90201-16M55</a><br>Washer, plate (6e5)             | <a href="#">Buy now</a> |
| 16  | <a href="#">6E5-82149-00</a><br>Wire, lead 3                   | <a href="#">Buy now</a> |
| 17  | <a href="#">90109-14M48</a><br>Bolt                            | <a href="#">Buy now</a> |
| 18  | <a href="#">90201-15M58</a><br>Washer, plate (6e5)             | <a href="#">Buy now</a> |
| 19  | <a href="#">95380-14800</a><br>Nut, crown (6e5)                | <a href="#">Buy now</a> |
| 20  | <a href="#">92995-14600</a><br>Washer (6e5)                    | <a href="#">Buy now</a> |
| 21  | <a href="#">61A-44552-01-94</a><br>Housing, lower mount rubber | <a href="#">Buy now</a> |
| 22  | <a href="#">97095-10045</a><br>Bolt(64d)                       | <a href="#">Buy now</a> |
| 23  | <a href="#">92995-10600</a><br>Washer, plate                   | <a href="#">Buy now</a> |
| 24  | <a href="#">61A-44553-00-8D</a><br>Cover, lower mount          | <a href="#">Buy now</a> |
| 25  | <a href="#">6A0-15789-00</a><br>Damper                         | <a href="#">Buy now</a> |
| 26  | <a href="#">61A-44514-00-94</a><br>Mount Damper, Upper Side    | <a href="#">Buy now</a> |
| 27  | <a href="#">90201-16M01</a><br>Washer, plate(61a)              | <a href="#">Buy now</a> |
| 28  | <a href="#">90202-28M46</a><br>Washer, plate(61a)              | <a href="#">Buy now</a> |
| 29  | <a href="#">90201-28M01</a><br>Washer, plate(61a)              | <a href="#">Buy now</a> |

## Bracket 2

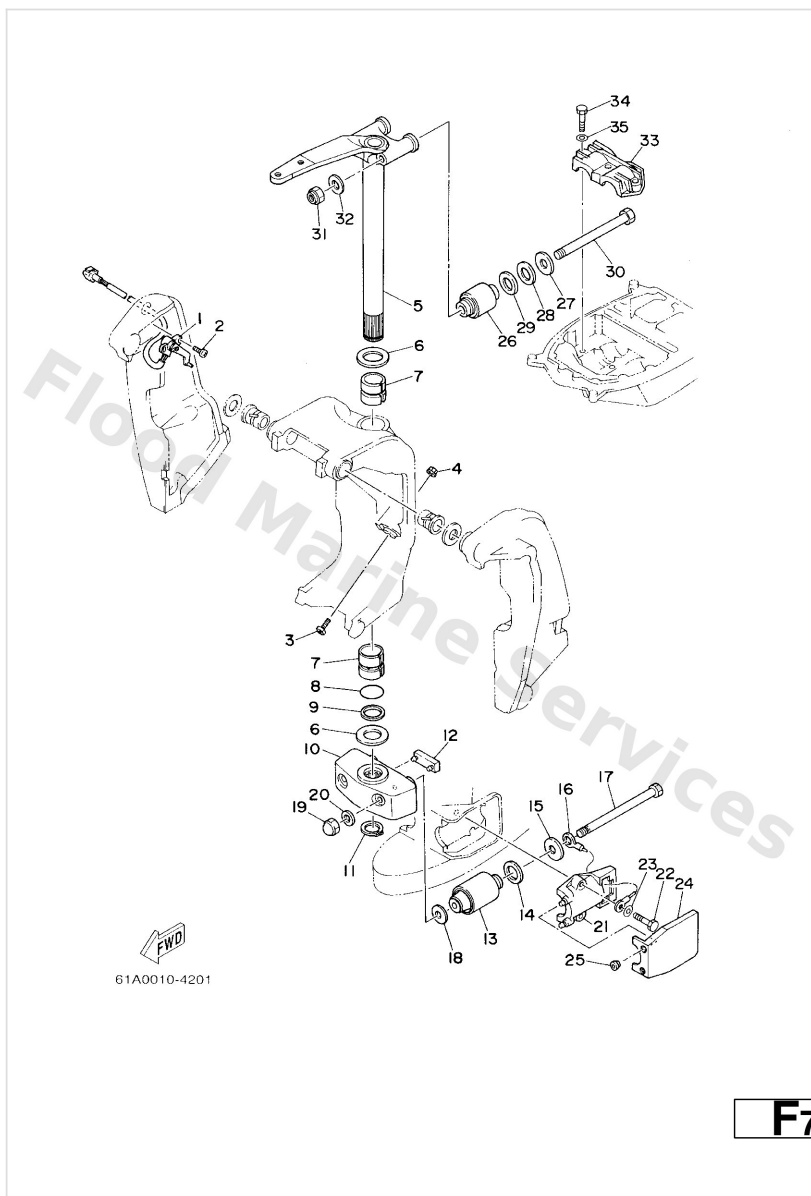 


| Ref | Part                                                  |                         |
|-----|-------------------------------------------------------|-------------------------|
| 30  | <a href="#">90109-14M10</a><br>Bolt                   | <a href="#">Buy now</a> |
| 31  | <a href="#">90185-14M00</a><br>Nut, self-locking(61a) | <a href="#">Buy now</a> |
| 33  | <a href="#">61A-44511-00-94</a><br>Cover, upper mount | <a href="#">Buy now</a> |

# Control

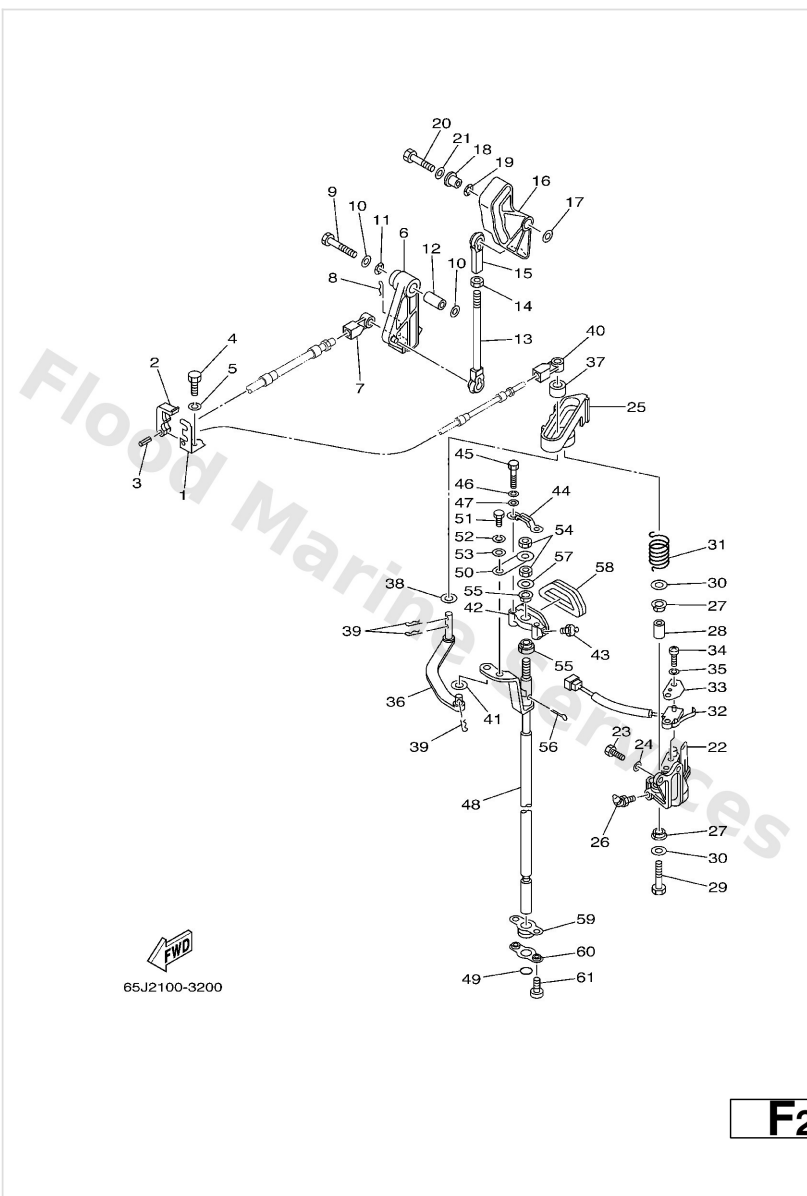 


| Ref | Part                                                      |                         |
|-----|-----------------------------------------------------------|-------------------------|
| 1   | <a href="#">65L-48531-00</a><br>Bracket Remote Control 1  | <a href="#">Buy now</a> |
| 2   | <a href="#">663-48538-00</a><br>Clamp, cable 1            | <a href="#">Buy now</a> |
| 3   | <a href="#">91690-30010</a><br>Pin, spring (663)          | <a href="#">Buy now</a> |
| 4   | <a href="#">97095-08020</a><br>Bolt, hexagon              | <a href="#">Buy now</a> |
| 5   | <a href="#">92995-08100</a><br>Ybs67-8 washer, spring     | <a href="#">Buy now</a> |
| 6   | <a href="#">65L-41632-01</a><br>Lever, magneto control    | <a href="#">Buy now</a> |
| 7   | <a href="#">6E5-48344-00</a><br>Cable end, remote control | <a href="#">Buy now</a> |
| 8   | <a href="#">90468-18008</a><br>Clip 620436610000          | <a href="#">Buy now</a> |
| 9   | <a href="#">97013-08045</a><br>Bolt                       | <a href="#">Buy now</a> |
| 10  | <a href="#">92990-08200</a><br>Ybs66-8 washer, plain      | <a href="#">Buy now</a> |
| 11  | <a href="#">90206-12M00</a><br>Washer, wave (676)         | <a href="#">Buy now</a> |
| 12  | <a href="#">90387-08M16</a><br>Collar                     | <a href="#">Buy now</a> |
| 13  | <a href="#">61A-41237-00</a><br>Joint, link               | <a href="#">Buy now</a> |
| 14  | <a href="#">95380-05600</a><br>Nut, hexagon (663)         | <a href="#">Buy now</a> |
| 15  | <a href="#">682-41237-00</a><br>Joint, link 2             | <a href="#">Buy now</a> |

# Control

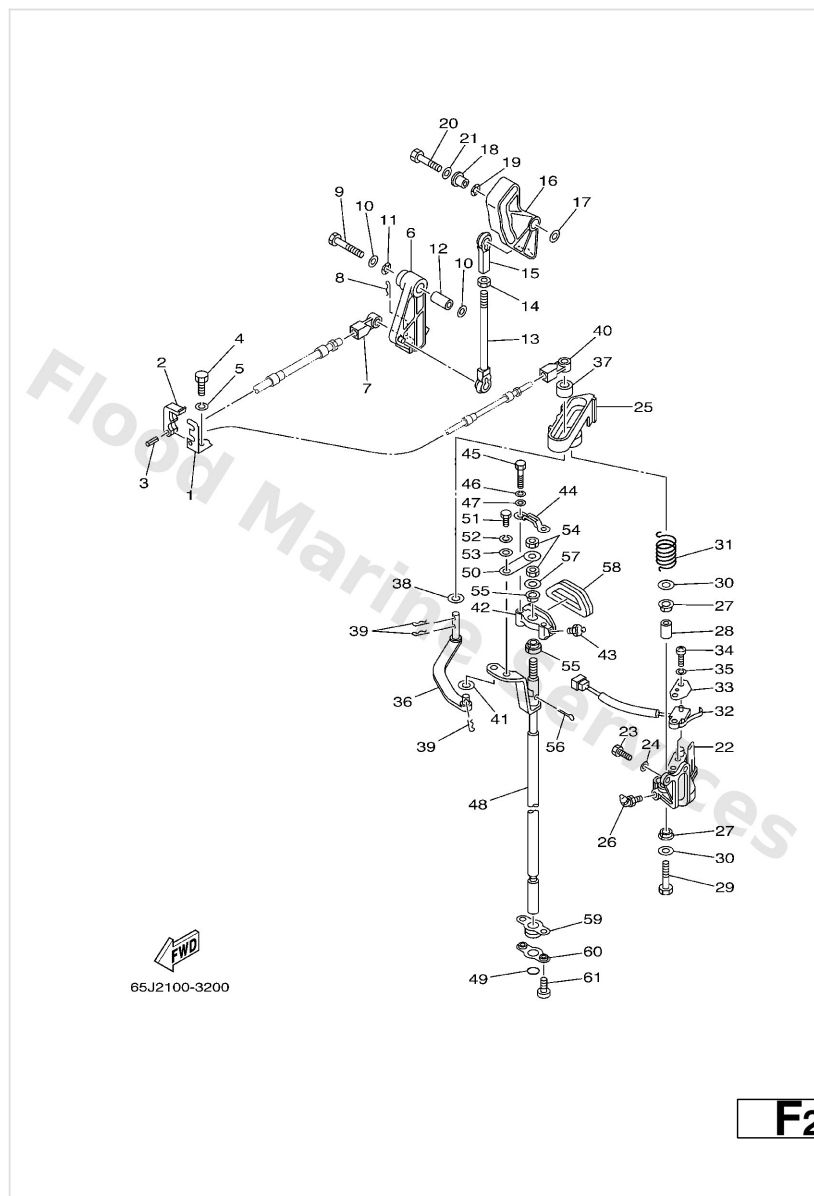 


| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 16  | <a href="#">65L-41213-00</a><br>Cam, Accel               | <a href="#">Buy now</a> |
| 17  | <a href="#">90201-06M31</a><br>Washer (6a0)              | <a href="#">Buy now</a> |
| 18  | <a href="#">90387-06M29</a><br>Collar (6a0)              | <a href="#">Buy now</a> |
| 19  | <a href="#">90206-10M04</a><br>Washer, wave (676)        | <a href="#">Buy now</a> |
| 20  | <a href="#">97013-06030</a><br>Bolt                      | <a href="#">Buy now</a> |
| 21  | <a href="#">92903-06600</a><br>Washer, plain (646)       | <a href="#">Buy now</a> |
| 22  | <a href="#">61A-44117-01-1S</a><br>Bracket               | <a href="#">Buy now</a> |
| 23  | <a href="#">97095-06016</a><br>Bolt, hexagon deep recess | <a href="#">Buy now</a> |
| 24  | <a href="#">92995-06600</a><br>Washer, plain (646)       | <a href="#">Buy now</a> |
| 25  | <a href="#">61A-44176-00-1S</a><br>Bracket               | <a href="#">Buy now</a> |
| 26  | <a href="#">93700-06M01</a><br>Nipple, grease(61a)       | <a href="#">Buy now</a> |
| 27  | <a href="#">90386-12069</a><br>Bush(666)                 | <a href="#">Buy now</a> |
| 28  | <a href="#">90387-08M09</a><br>Collar(61a)               | <a href="#">Buy now</a> |
| 29  | <a href="#">97095-08035</a><br>Bolt(70w)                 | <a href="#">Buy now</a> |
| 30  | <a href="#">92995-08200</a><br>Ybs66-8 washer, plain     | <a href="#">Buy now</a> |

# Control

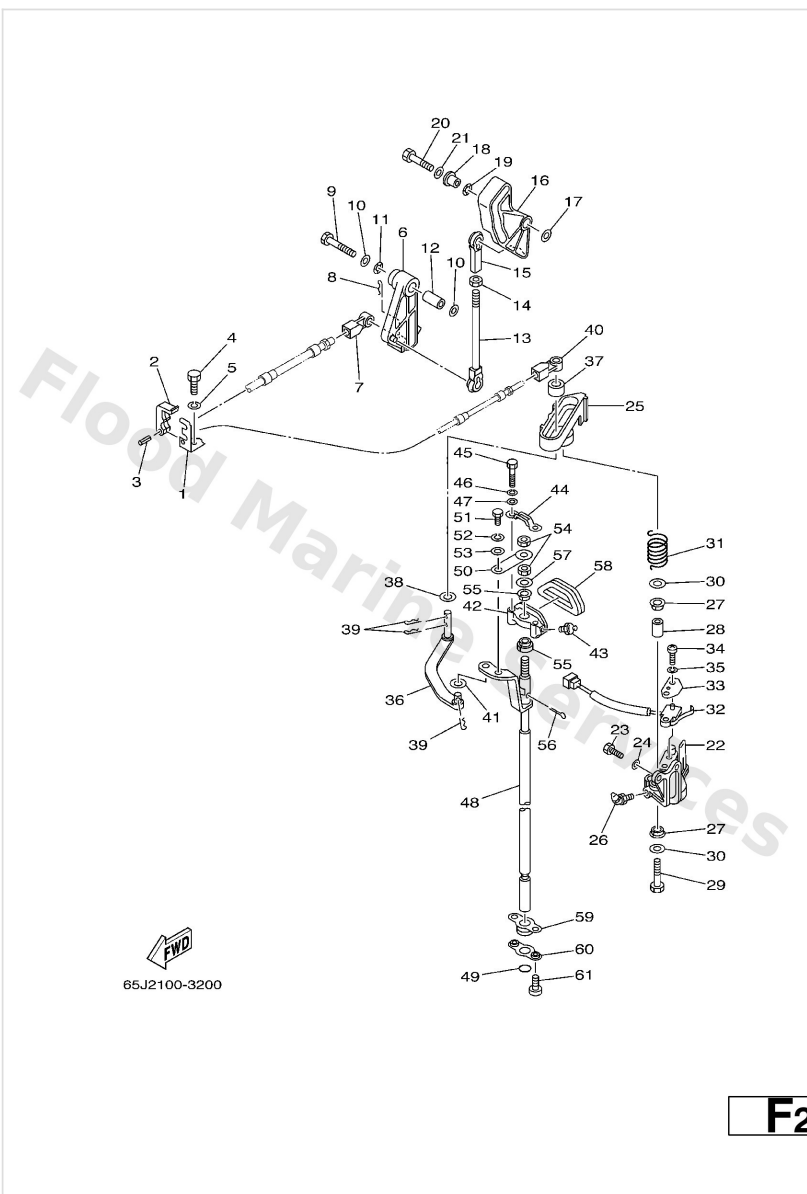 

| Ref | Part                                                            |                         |
|-----|-----------------------------------------------------------------|-------------------------|
| 31  | <a href="#">90508-20M31</a><br>Spring, torsion(61a)             | <a href="#">Buy now</a> |
| 32  | <a href="#">61A-8259F-00</a><br>Switch assembly                 | <a href="#">Buy now</a> |
| 33  | <a href="#">61A-82588-01</a><br>Plate                           | <a href="#">Buy now</a> |
| 34  | <a href="#">97885-04016</a><br>Screw, panhead (796)             | <a href="#">Buy now</a> |
| 35  | <a href="#">92995-04100</a><br>Ybs67-4 washer, spring           | <a href="#">Buy now</a> |
| 36  | <a href="#">61A-44121-00</a><br>Lever, shift rod                | <a href="#">Buy now</a> |
| 37  | <a href="#">6E5-44122-00</a><br>Bushing, shift rod lever        | <a href="#">Buy now</a> |
| 38  | <a href="#">90202-08M20</a><br>Washer, plate (6e5)              | <a href="#">Buy now</a> |
| 41  | <a href="#">90202-06007</a><br>Washer plate 626441880000        | <a href="#">Buy now</a> |
| 42  | <a href="#">61A-44118-00-8D</a><br>Bracket                      | <a href="#">Buy now</a> |
| 43  | <a href="#">93700-06M03</a><br>Nipple, grease(6a1)              | <a href="#">Buy now</a> |
| 44  | <a href="#">61A-44116-00</a><br>Spring                          | <a href="#">Buy now</a> |
| 45  | <a href="#">97095-06030</a><br>Bolt(jf7)                        | <a href="#">Buy now</a> |
| 46  | <a href="#">92995-06100</a><br>Washer(6a1)                      | <a href="#">Buy now</a> |
| 48  | <a href="#">61A-44120-22</a><br>Handle gear shift assembly<br>X | <a href="#">Buy now</a> |


# Control

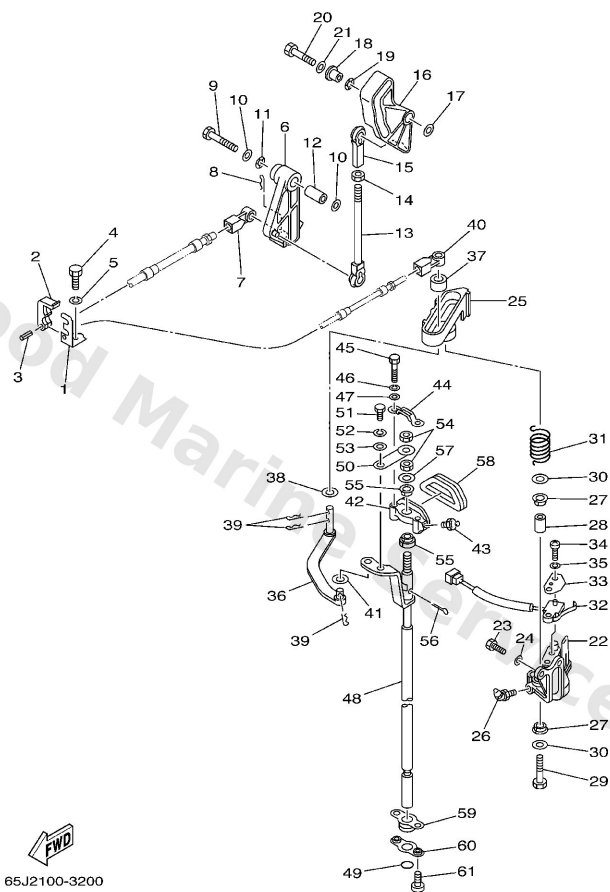 

**F2**

| Ref | Part                                                            |                         |
|-----|-----------------------------------------------------------------|-------------------------|
| 48  | <a href="#">61A-44120-32</a><br>Handle gear shift assembly<br>U | <a href="#">Buy now</a> |
| 49  | <a href="#">93210-09165</a><br>O-ring                           | <a href="#">Buy now</a> |
| 50  | <a href="#">61A-44112-00</a><br>Stay, handle gear shift         | <a href="#">Buy now</a> |
| 51  | <a href="#">97013-06012</a><br>Bolt(gh1)                        | <a href="#">Buy now</a> |
| 52  | <a href="#">92903-06100</a><br>Washer(6a1)                      | <a href="#">Buy now</a> |
| 54  | <a href="#">95313-08600</a><br>Nut(6I2)                         | <a href="#">Buy now</a> |
| 55  | <a href="#">90386-90M90</a><br>Bush(61a)                        | <a href="#">Buy now</a> |
| 56  | <a href="#">91490-20012</a><br>Pin, cotter (648)                | <a href="#">Buy now</a> |
| 57  | <a href="#">90201-09M02</a><br>Washer, plate(61a)               | <a href="#">Buy now</a> |
| 58  | <a href="#">61A-15315-00</a><br>Seal, crankcase                 | <a href="#">Buy now</a> |
| 59  | <a href="#">61A-42724-00</a><br>Grommet                         | <a href="#">Buy now</a> |
| 60  | <a href="#">61A-44138-00</a><br>Washer                          | <a href="#">Buy now</a> |
| 61  | <a href="#">97885-06008</a><br>Screw, pan head(6a3)             | <a href="#">Buy now</a> |

 
## Crankshaft. Piston

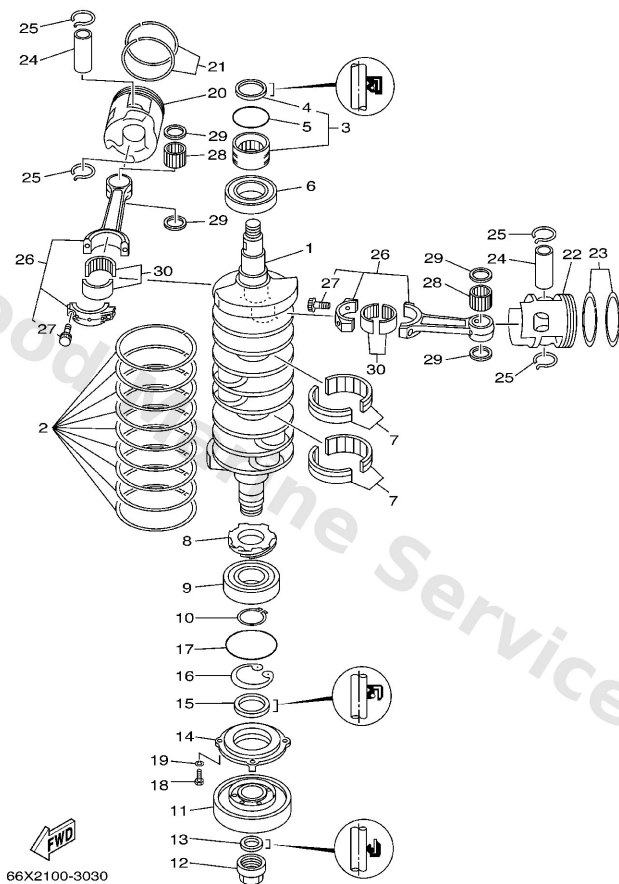

**B1**


| Ref | Part                                                       |                         |
|-----|------------------------------------------------------------|-------------------------|
| 1   | <a href="#">61A-11411-00</a><br>Crankshaft                 | <a href="#">Buy now</a> |
| 2   | <a href="#">61A-11447-00</a><br>Seal, crank                | <a href="#">Buy now</a> |
| 3   | <a href="#">93311-940V0</a><br>Bearing, cylindrical(61a)   | <a href="#">Buy now</a> |
| 4   | <a href="#">93102-40M38</a><br>Oil seal(61a)               | <a href="#">Buy now</a> |
| 5   | <a href="#">93210-54M54</a><br>O-ring (6g1)                | <a href="#">Buy now</a> |
| 6   | <a href="#">93306-209U1</a><br>Bearing(61a)                | <a href="#">Buy now</a> |
| 7   | <a href="#">93310-959U0</a><br>Bearing, cylindrical(61a)   | <a href="#">Buy now</a> |
| 8   | <a href="#">61A-11536-00</a><br>Gear, drive                | <a href="#">Buy now</a> |
| 9   | <a href="#">93306-308U0</a><br>Bearing(61a)                | <a href="#">Buy now</a> |
| 10  | <a href="#">93410-40M03</a><br>Circlip(n02)                | <a href="#">Buy now</a> |
| 11  | <a href="#">61A-11586-01</a><br>Pulley, crankshaft balance | <a href="#">Buy now</a> |
| 12  | <a href="#">61A-11555-01</a><br>Nut, crankshaft 1          | <a href="#">Buy now</a> |
| 13  | <a href="#">93104-22M07</a><br>Oil seal(61a)               | <a href="#">Buy now</a> |
| 14  | <a href="#">61A-15359-00-94</a><br>Housing, oil seal       | <a href="#">Buy now</a> |
| 15  | <a href="#">93102-40M36</a><br>Oil seal                    | <a href="#">Buy now</a> |
 
# Crankshaft. Piston

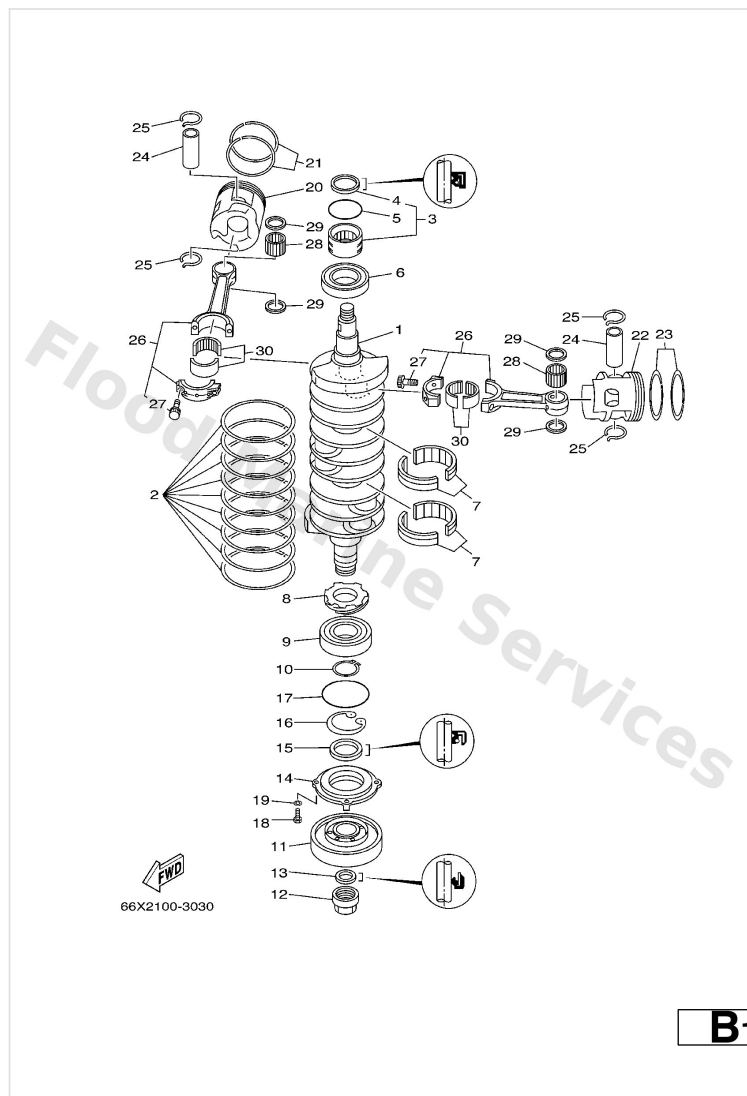

| Ref | Part                                                               |                         |
|-----|--------------------------------------------------------------------|-------------------------|
| 16  | <a href="#">93420-61M07</a><br>Circlip(61a)                        | <a href="#">Buy now</a> |
| 17  | <a href="#">93210-81MA6</a><br>O-ring(61a)                         | <a href="#">Buy now</a> |
| 18  | <a href="#">97095-06020</a><br>Bolt(7u8)                           | <a href="#">Buy now</a> |
| 19  | <a href="#">92995-06100</a><br>Washer(6a1)                         | <a href="#">Buy now</a> |
| 20  | <a href="#">69L-11631-00-85</a><br>Piston (std)                    | <a href="#">Buy now</a> |
| 20  | <a href="#">69L-11635-00</a><br>Piston (0.25mm o/s)<br>AP          | <a href="#">Buy now</a> |
| 20  | <a href="#">69L-11636-00</a><br>Piston (0.50mm o/s)<br>AP          | <a href="#">Buy now</a> |
| 21  | <a href="#">64D-11603-01</a><br>Piston ring set (std)              | <a href="#">Buy now</a> |
| 21  | <a href="#">64D-11604-01</a><br>Piston ring set (0.25mm o/s)<br>AP | <a href="#">Buy now</a> |
| 21  | <a href="#">64D-11605-01</a><br>Piston ring set (0.50mm o/s)<br>AP | <a href="#">Buy now</a> |
| 22  | <a href="#">69L-11642-00-85</a><br>Piston 2 (std)                  | <a href="#">Buy now</a> |
| 22  | <a href="#">69L-11645-00</a><br>Piston 2 (0.25mm o/s)<br>AP        | <a href="#">Buy now</a> |
| 22  | <a href="#">69L-11646-00</a><br>Piston 2 (0.50mm o/s)<br>AP        | <a href="#">Buy now</a> |
| 24  | <a href="#">61A-11633-02</a><br>Pin, piston                        | <a href="#">Buy now</a> |
| 25  | <a href="#">61A-11634-00</a><br>Clip, piston pin                   | <a href="#">Buy now</a> |


# Crankshaft. Piston

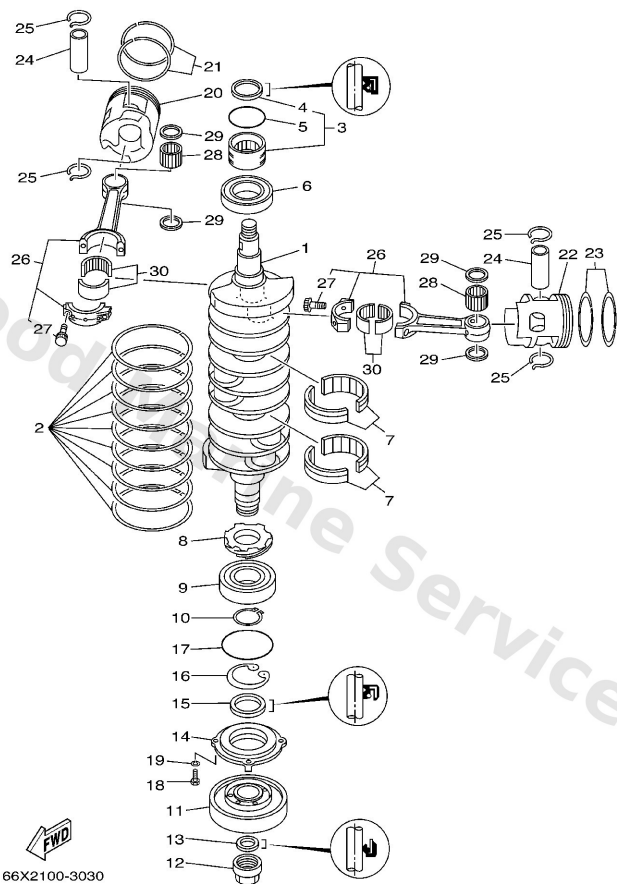 

**B1**


| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 26  | <a href="#">61A-11650-10</a><br>Connecting Rod assembly  | <a href="#">Buy now</a> |
| 27  | <a href="#">90109-09001</a><br>Bolt                      | <a href="#">Buy now</a> |
| 28  | <a href="#">93310-326V4</a><br>Bearing, cylindrical(61a) | <a href="#">Buy now</a> |
| 29  | <a href="#">90201-26M03</a><br>Washer, plate(61a)        | <a href="#">Buy now</a> |
| 30  | <a href="#">93310-840V8</a><br>Bearing                   | <a href="#">Buy now</a> |
 
# Cylinder. Crankcase 1

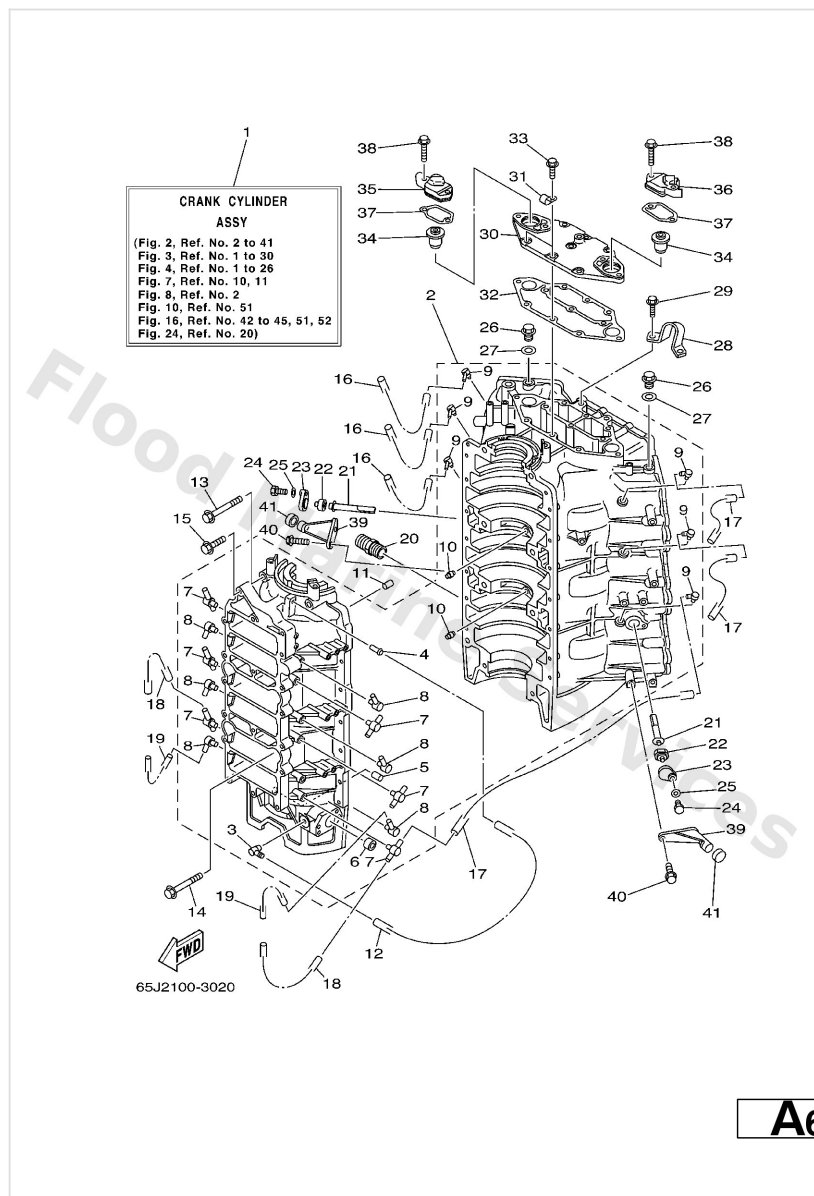


| Ref | Part                                                       |                         |
|-----|------------------------------------------------------------|-------------------------|
| 1   | <a href="#">65J-W0090-13-1S</a><br>Crank cylinder assembly | <a href="#">Buy now</a> |
| 2   | <a href="#">65J-15100-02-1S</a><br>Crankcase assembly      | <a href="#">Buy now</a> |
| 2   | <a href="#">65L-15100-02-1S</a><br>Crankcase assembly      | <a href="#">Buy now</a> |
| 3   | <a href="#">6E5-11372-01</a><br>Nipple, hose               | <a href="#">Buy now</a> |
| 4   | <a href="#">624-14485-00</a><br>Pipe, joint                | <a href="#">Buy now</a> |
| 5   | <a href="#">90384-06M07</a><br>Bush, bimetal formed(6r3)   | <a href="#">Buy now</a> |
| 6   | <a href="#">90383-16M01</a><br>Bush, formed(61a)           | <a href="#">Buy now</a> |
| 7   | <a href="#">6F6-11372-00</a><br>Nipple, hose               | <a href="#">Buy now</a> |
| 8   | <a href="#">650-11372-00</a><br>Nipple, hose               | <a href="#">Buy now</a> |
| 10  | <a href="#">663-11518-01</a><br>Lock, bearing              | <a href="#">Buy now</a> |
| 11  | <a href="#">93608-12063</a><br>Pin, dowel (626)            | <a href="#">Buy now</a> |
| 12  | <a href="#">90445-07M11</a><br>Hose (I770)                 | <a href="#">Buy now</a> |
| 13  | <a href="#">90105-10M62</a><br>Bolt, washer based(61a)     | <a href="#">Buy now</a> |
| 14  | <a href="#">90105-10M75</a><br>Bolt, washer based(65j)     | <a href="#">Buy now</a> |
| 15  | <a href="#">90119-06M13</a><br>Bolt, with washer (682)     | <a href="#">Buy now</a> |

# Cylinder. Crankcase 1

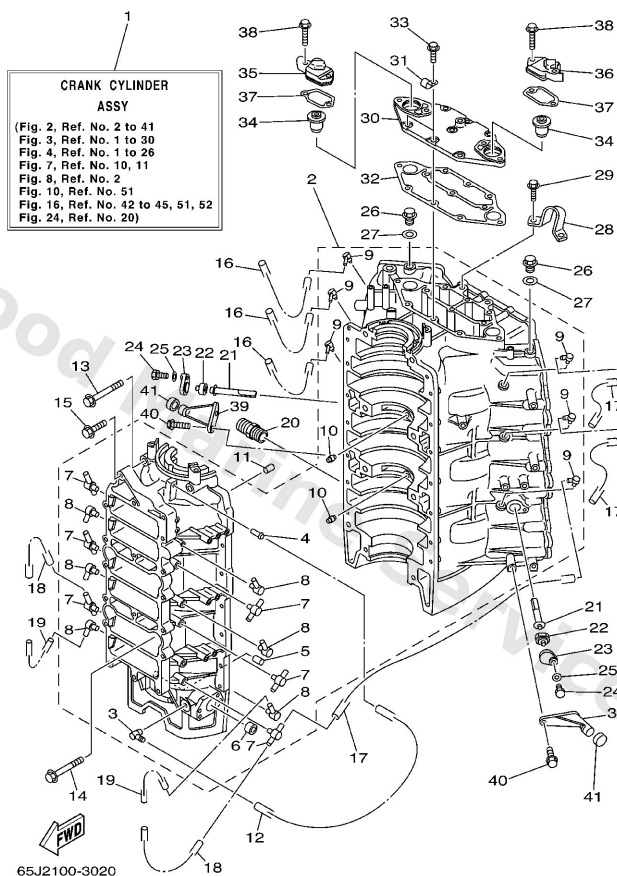 

| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 16  | <a href="#">90445-07M44</a><br>Hose (I390)               | <a href="#">Buy now</a> |
| 17  | <a href="#">90445-07M40</a><br>Hose (I390)               | <a href="#">Buy now</a> |
| 18  | <a href="#">90445-07MA6</a><br>Hose (I200)               | <a href="#">Buy now</a> |
| 20  | <a href="#">6G5-12581-00</a><br>Joint, hose              | <a href="#">Buy now</a> |
| 21  | <a href="#">61A-11325-00</a><br>Anode                    | <a href="#">Buy now</a> |
| 22  | <a href="#">6H3-11328-00</a><br>Grommet, anode           | <a href="#">Buy now</a> |
| 23  | <a href="#">6H3-11327-00-1S</a><br>Cover, anode          | <a href="#">Buy now</a> |
| 24  | <a href="#">97013-06016</a><br>Bolt, hexagon deep recess | <a href="#">Buy now</a> |
| 25  | <a href="#">92903-06600</a><br>Washer, plain (646)       | <a href="#">Buy now</a> |
| 26  | <a href="#">90340-14M00</a><br>Plug, straight screw(62y) | <a href="#">Buy now</a> |
| 27  | <a href="#">90430-14115</a><br>Gasket (663)              | <a href="#">Buy now</a> |
| 28  | <a href="#">6E5-11119-01</a><br>Hanger, engine           | <a href="#">Buy now</a> |
| 29  | <a href="#">90119-08MA3</a><br>Bolt, with washer         | <a href="#">Buy now</a> |
| 30  | <a href="#">61A-11371-00-1S</a><br>Cover                 | <a href="#">Buy now</a> |
| 31  | <a href="#">90465-06M86</a><br>Clamp                     | <a href="#">Buy now</a> |


# Cylinder. Crankcase 1

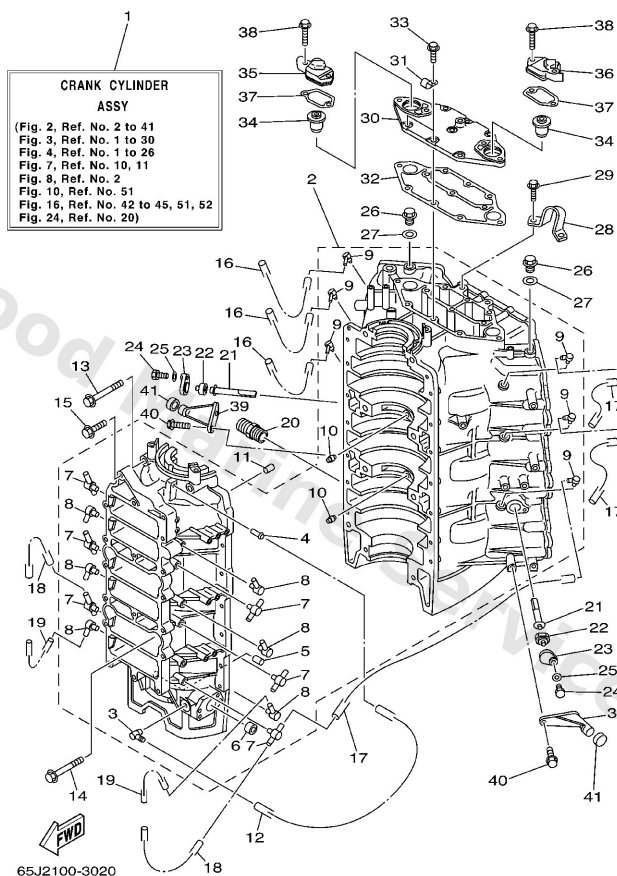 

A6

| Ref | Part                                                       |                         |
|-----|------------------------------------------------------------|-------------------------|
| 32  | <a href="#">61A-11381-A0</a><br>Gasket 1                   | <a href="#">Buy now</a> |
| 33  | <a href="#">90119-06MA2</a><br>Bolt, with washer           | <a href="#">Buy now</a> |
| 34  | <a href="#">6E5-12411-30</a><br>Thermostat                 | <a href="#">Buy now</a> |
| 35  | <a href="#">61A-12413-00-1S</a><br>Cover, thermostat       | <a href="#">Buy now</a> |
| 36  | <a href="#">61A-12413-10-1S</a><br>Cover, thermostat       | <a href="#">Buy now</a> |
| 37  | <a href="#">61A-12414-A0</a><br>Gasket, cover              | <a href="#">Buy now</a> |
| 38  | <a href="#">90119-06MA5</a><br>Bolt, with washer           | <a href="#">Buy now</a> |
| 39  | <a href="#">6E5-42761-00-1S</a><br>Stopper                 | <a href="#">Buy now</a> |
| 41  | <a href="#">68F-44533-00</a><br>Damper, upper mount rubber | <a href="#">Buy now</a> |


## Cylinder. Crankcase 2

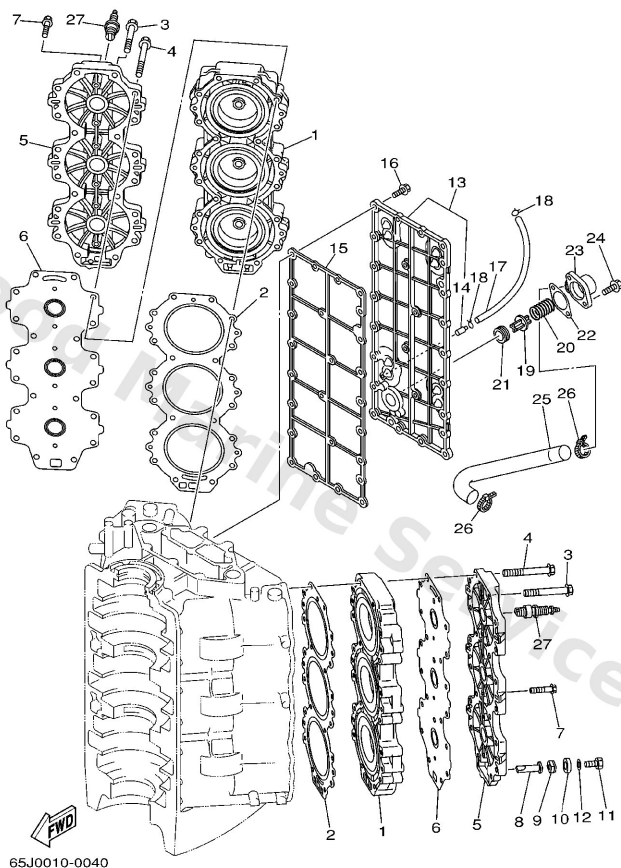 

B3

| Ref | Part                                                        |                         |
|-----|-------------------------------------------------------------|-------------------------|
| 1   | <a href="#">62J-11111-01-1S</a><br>Head, cylinder 1         | <a href="#">Buy now</a> |
| 2   | <a href="#">69L-11181-00</a><br>Gasket, cylinder head 1     | <a href="#">Buy now</a> |
| 3   | <a href="#">90119-08MA5</a><br>Bolt, with washer            | <a href="#">Buy now</a> |
| 4   | <a href="#">90119-08M99</a><br>Bolt, with washer            | <a href="#">Buy now</a> |
| 5   | <a href="#">61A-11191-00-1S</a><br>Cover, cylinder head 1   | <a href="#">Buy now</a> |
| 6   | <a href="#">61A-11193-A1</a><br>Gasket, head cover 1        | <a href="#">Buy now</a> |
| 7   | <a href="#">90119-06MA5</a><br>Bolt, with washer            | <a href="#">Buy now</a> |
| 8   | <a href="#">6J8-11325-00</a><br>Anode                       | <a href="#">Buy now</a> |
| 9   | <a href="#">6H3-11328-00</a><br>Grommet, anode              | <a href="#">Buy now</a> |
| 10  | <a href="#">6H3-11327-00-1S</a><br>Cover, anode             | <a href="#">Buy now</a> |
| 11  | <a href="#">97013-06016</a><br>Bolt, hexagon deep recess    | <a href="#">Buy now</a> |
| 12  | <a href="#">92903-06600</a><br>Washer, plain (646)          | <a href="#">Buy now</a> |
| 13  | <a href="#">61A-41113-00-1S</a><br>Outer cover, exhaust     | <a href="#">Buy now</a> |
| 14  | <a href="#">650-24378-00</a><br>Pipe, joint 2               | <a href="#">Buy now</a> |
| 15  | <a href="#">61A-41112-A0</a><br>Gasket, exhaust inner cover | <a href="#">Buy now</a> |


## Cylinder. Crankcase 2

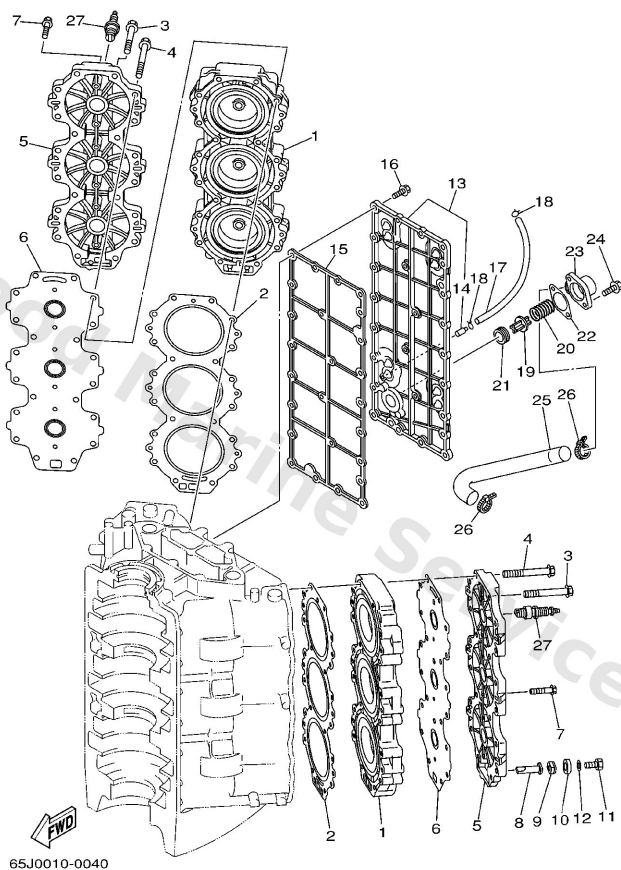 

B3


| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 16  | <a href="#">90119-06MA3</a><br>Bolt, with washer         | <a href="#">Buy now</a> |
| 17  | <a href="#">90445-09M25</a><br>Hose (I1500)              | <a href="#">Buy now</a> |
| 18  | <a href="#">90467-08004</a><br>Clip, pipe 6162435600     | <a href="#">Buy now</a> |
| 19  | <a href="#">6G5-12416-00</a><br>Valve, pressure control  | <a href="#">Buy now</a> |
| 20  | <a href="#">90501-16M11</a><br>Spring, compression (688) | <a href="#">Buy now</a> |
| 21  | <a href="#">90480-20M05</a><br>Grommet (688)             | <a href="#">Buy now</a> |
| 22  | <a href="#">6G5-11382-A1</a><br>Gasket 2                 | <a href="#">Buy now</a> |
| 23  | <a href="#">6G5-11372-00-1S</a><br>Cover, bypass 2       | <a href="#">Buy now</a> |
| 24  | <a href="#">90119-06MA2</a><br>Bolt, with washer         | <a href="#">Buy now</a> |
| 25  | <a href="#">61A-12576-00</a><br>Hose 1                   | <a href="#">Buy now</a> |
| 26  | <a href="#">90465-13M18</a><br>Clamp                     | <a href="#">Buy now</a> |
| 27  | <a href="#">94702-00309</a><br>Plug, spark (br9hs-10)    | <a href="#">Buy now</a> |

# Electrical 1

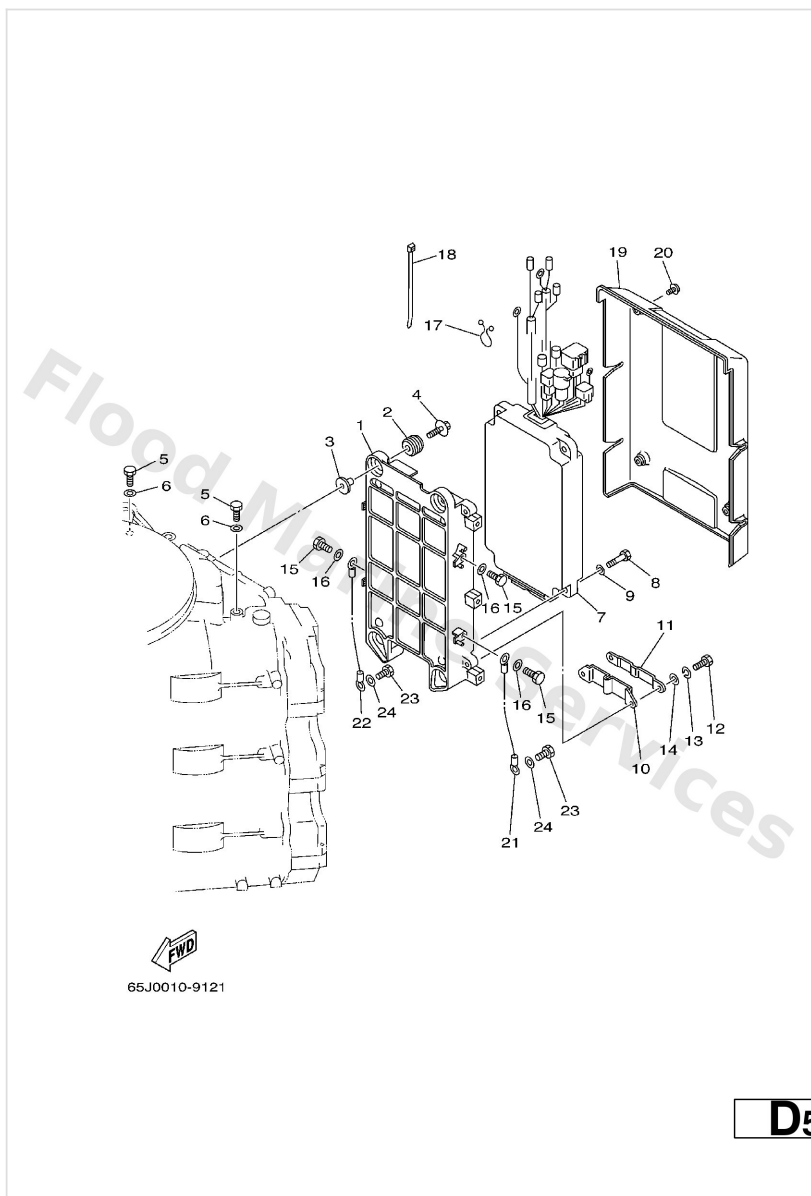 


| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 1   | <a href="#">61A-85542-01-94</a><br>Bracket               | <a href="#">Buy now</a> |
| 2   | <a href="#">90480-09M12</a><br>Grommet (6a0)             | <a href="#">Buy now</a> |
| 3   | <a href="#">90387-06M03</a><br>Collar (676)              | <a href="#">Buy now</a> |
| 4   | <a href="#">90119-06M28</a><br>Bolt, With Washer         | <a href="#">Buy now</a> |
| 5   | <a href="#">97013-06016</a><br>Bolt, hexagon deep recess | <a href="#">Buy now</a> |
| 6   | <a href="#">92903-06600</a><br>Washer, plain (646)       | <a href="#">Buy now</a> |
| 7   | <a href="#">65J-85540-02</a><br>C.d.i. unit assembly     | <a href="#">Buy now</a> |
| 7   | <a href="#">65L-85540-02</a><br>C.d.i. unit assembly     | <a href="#">Buy now</a> |
| 8   | <a href="#">97013-06025</a><br>Bolt(62y)                 | <a href="#">Buy now</a> |
| 10  | <a href="#">61A-85548-00</a><br>Holder                   | <a href="#">Buy now</a> |
| 11  | <a href="#">61A-85525-00</a><br>Cover                    | <a href="#">Buy now</a> |
| 12  | <a href="#">97095-06016</a><br>Bolt, hexagon deep recess | <a href="#">Buy now</a> |
| 13  | <a href="#">92995-06100</a><br>Washer(6a1)               | <a href="#">Buy now</a> |
| 14  | <a href="#">92995-06600</a><br>Washer, plain (646)       | <a href="#">Buy now</a> |
| 15  | <a href="#">97013-06014</a><br>Bolt(gj3)                 | <a href="#">Buy now</a> |

# Electrical 1

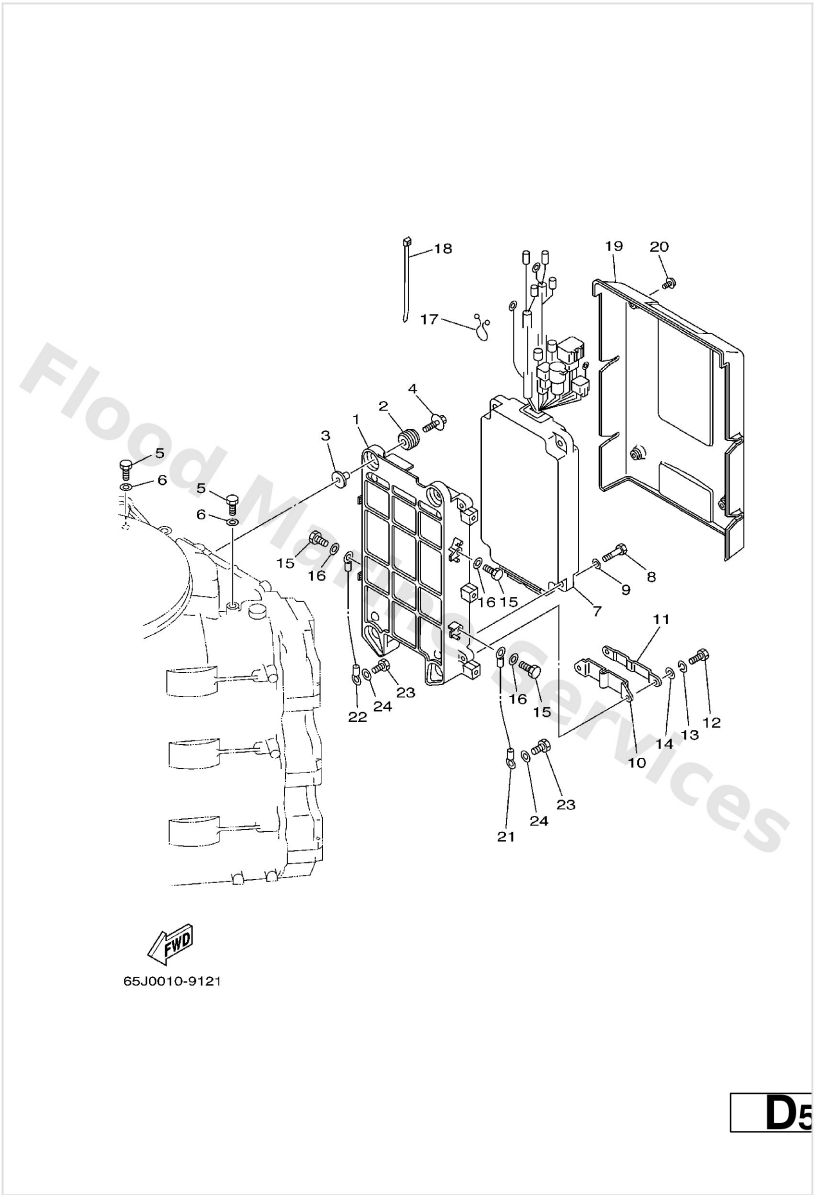 


| Ref | Part                                             |                         |
|-----|--------------------------------------------------|-------------------------|
| 17  | <a href="#">90464-15M11</a><br>Clamp (3y2)       | <a href="#">Buy now</a> |
| 18  | <a href="#">90465-11M52</a><br>Clamp(6e7)        | <a href="#">Buy now</a> |
| 19  | <a href="#">61A-85537-00</a><br>Cover            | <a href="#">Buy now</a> |
| 20  | <a href="#">90159-06M03</a><br>Screw (6g5)       | <a href="#">Buy now</a> |
| 21  | <a href="#">61A-82519-00</a><br>Wire, Earth Lead | <a href="#">Buy now</a> |
| 22  | <a href="#">6G0-82519-00</a><br>Wire, earth lead | <a href="#">Buy now</a> |
| 23  | <a href="#">97095-06012</a><br>Bolt(gh1)         | <a href="#">Buy now</a> |

## Electrical 2

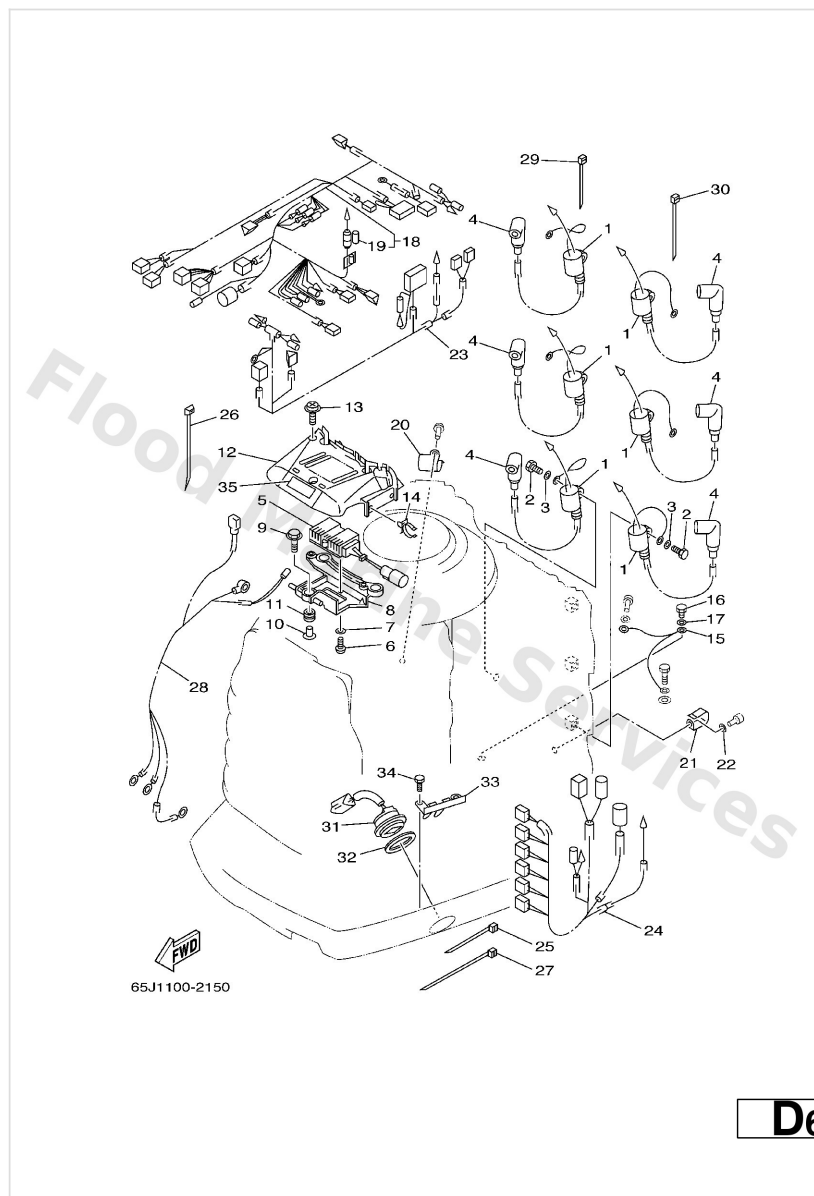 


| Ref | Part                                                        |                         |
|-----|-------------------------------------------------------------|-------------------------|
| 1   | <a href="#">61A-85570-00</a><br>Ignition coil assembly      | <a href="#">Buy now</a> |
| 2   | <a href="#">97013-06020</a><br>Bolt(62y)                    | <a href="#">Buy now</a> |
| 3   | <a href="#">92903-06600</a><br>Washer, plain (646)          | <a href="#">Buy now</a> |
| 4   | <a href="#">6E3-82370-21</a><br>Plug cap assembly           | <a href="#">Buy now</a> |
| 5   | <a href="#">65L-85370-00</a><br>Resistor assembly           | <a href="#">Buy now</a> |
| 6   | <a href="#">97885-05010</a><br>Screw, pan head(62x)         | <a href="#">Buy now</a> |
| 7   | <a href="#">92995-05600</a><br>Washer, plain (646)          | <a href="#">Buy now</a> |
| 8   | <a href="#">65L-81915-00-94</a><br>Plate, Regulator Fitting | <a href="#">Buy now</a> |
| 9   | <a href="#">90119-06M65</a><br>Bolt, with washer            | <a href="#">Buy now</a> |
| 10  | <a href="#">90387-06M60</a><br>Collar (6h3)                 | <a href="#">Buy now</a> |
| 11  | <a href="#">90480-10M23</a><br>Grommet(6k7)                 | <a href="#">Buy now</a> |
| 12  | <a href="#">65L-81916-00</a><br>Cover, Terminal             | <a href="#">Buy now</a> |
| 13  | <a href="#">90159-06M03</a><br>Screw (6g5)                  | <a href="#">Buy now</a> |
| 14  | <a href="#">90464-19M45</a><br>Clamp(65j)                   | <a href="#">Buy now</a> |
| 15  | <a href="#">61A-82531-00</a><br>Wire, lead                  | <a href="#">Buy now</a> |

## Electrical 2

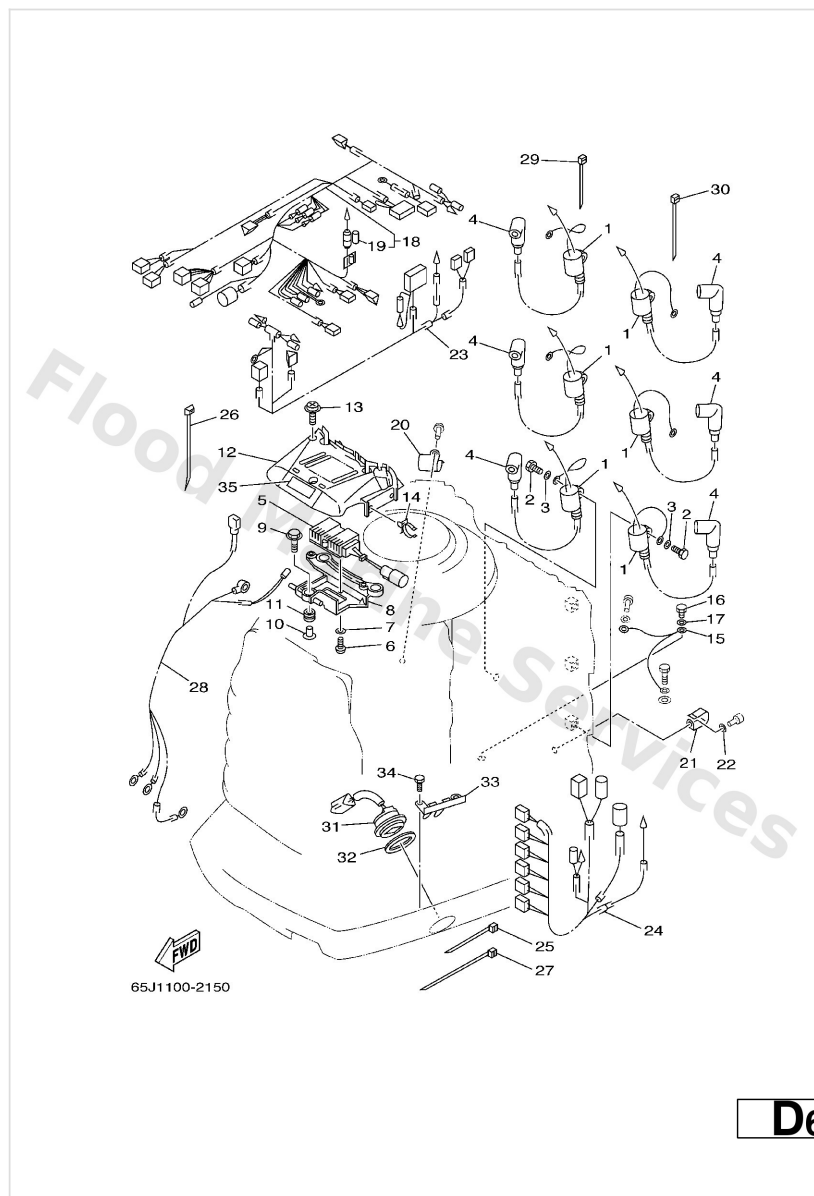 


| Ref | Part                                                        |                         |
|-----|-------------------------------------------------------------|-------------------------|
| 16  | <a href="#">97095-06012</a><br>Bolt(gh1)                    | <a href="#">Buy now</a> |
| 17  | <a href="#">92995-06600</a><br>Washer, plain (646)          | <a href="#">Buy now</a> |
| 18  | <a href="#">65L-82590-10</a><br>Wire Harness assembly       | <a href="#">Buy now</a> |
| 19  | <a href="#">705-82151-00</a><br>Fuse (30a)                  | <a href="#">Buy now</a> |
| 20  | <a href="#">90465-08M89</a><br>Clamp                        | <a href="#">Buy now</a> |
| 21  | <a href="#">90465-05M87</a><br>Clamp                        | <a href="#">Buy now</a> |
| 23  | <a href="#">65L-8259M-00</a><br>Wire Harness assembly 2     | <a href="#">Buy now</a> |
| 24  | <a href="#">65L-8259N-01</a><br>Wire Harness assembly 3     | <a href="#">Buy now</a> |
| 25  | <a href="#">90465-11M10</a><br>Clamp                        | <a href="#">Buy now</a> |
| 26  | <a href="#">90465-11M52</a><br>Clamp(6e7)                   | <a href="#">Buy now</a> |
| 27  | <a href="#">90465-13M18</a><br>Clamp                        | <a href="#">Buy now</a> |
| 28  | <a href="#">61A-82105-00</a><br>Battery cable               | <a href="#">Buy now</a> |
| 31  | <a href="#">61A-82563-00</a><br>Trim & tilt switch assembly | <a href="#">Buy now</a> |
| 32  | <a href="#">6E5-82587-00</a><br>Gasket                      | <a href="#">Buy now</a> |
| 33  | <a href="#">61A-83614-00</a><br>Bracket                     | <a href="#">Buy now</a> |

# Electrical 2

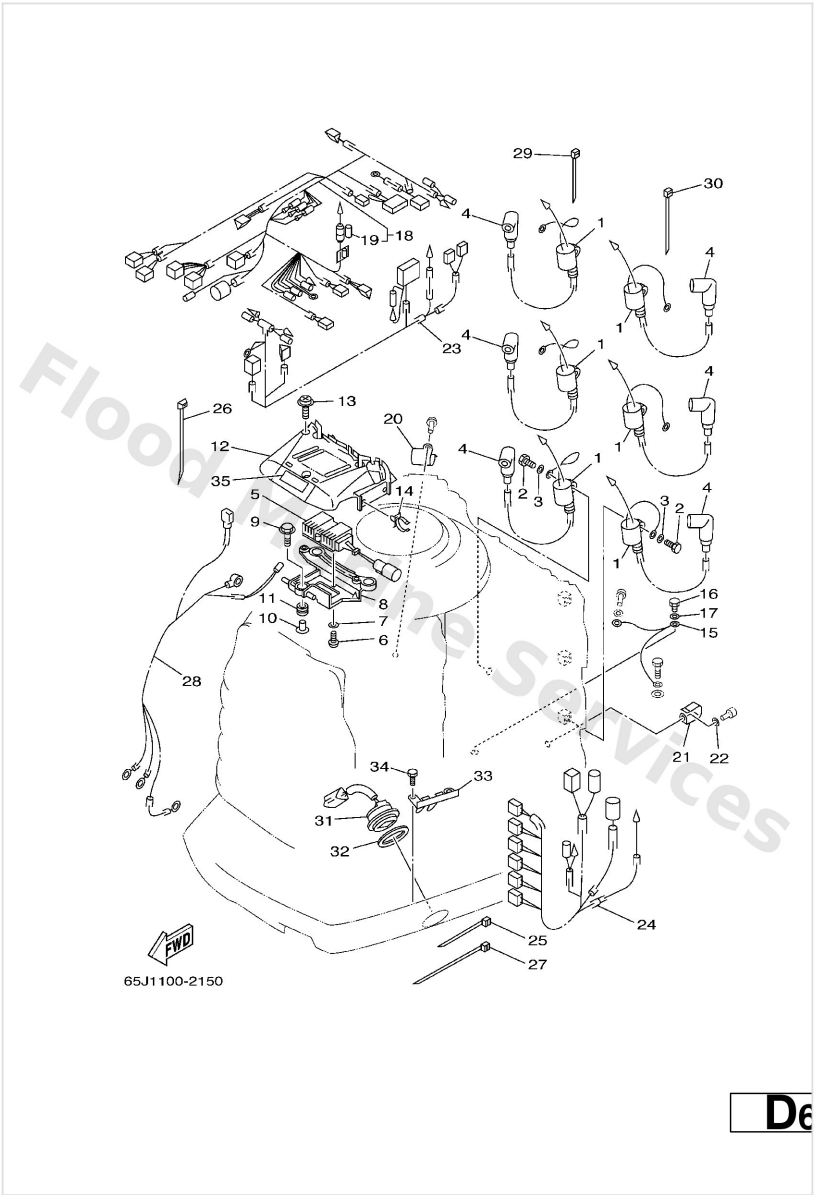 

| Ref | Part                                                      |                         |
|-----|-----------------------------------------------------------|-------------------------|
| 35  | <a href="#">65L-83625-40</a><br>15 –<br>EXCEPT FOR CANADA | <a href="#">Buy now</a> |
| 35  | <a href="#">65L-83625-50</a><br>Mark 5<br>FOR CANADA      | <a href="#">Buy now</a> |

## Electrical 3

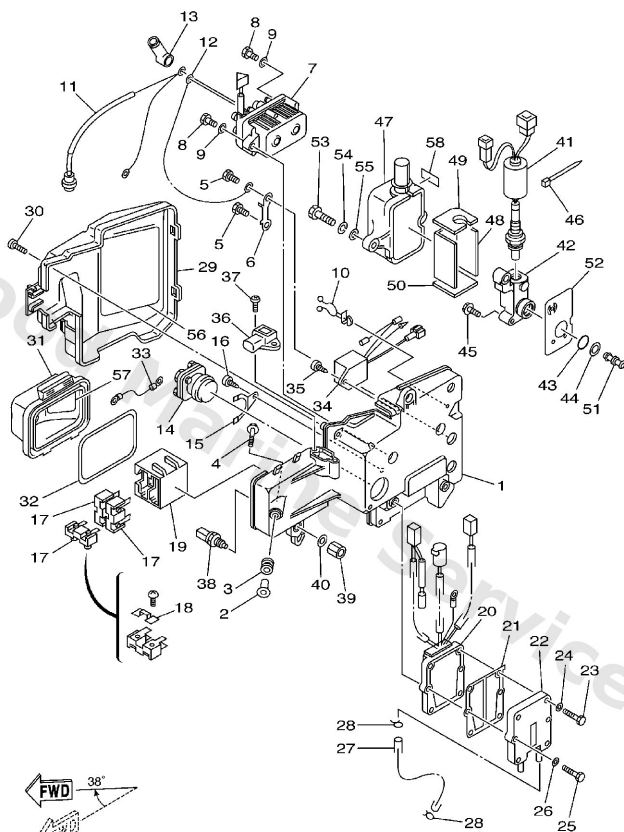 


65J2100-3160

**E1**
 
| Ref | Part                                                   |                         |
|-----|--------------------------------------------------------|-------------------------|
| 1   | <a href="#">65L-81948-00</a><br>Bracket                | <a href="#">Buy now</a> |
| 2   | <a href="#">624-42542-00</a><br>Collar                 | <a href="#">Buy now</a> |
| 3   | <a href="#">6A0-82317-00</a><br>Damper, ignition coil  | <a href="#">Buy now</a> |
| 4   | <a href="#">90119-06M65</a><br>Bolt, with washer       | <a href="#">Buy now</a> |
| 5   | <a href="#">97013-06014</a><br>Bolt(gj3)               | <a href="#">Buy now</a> |
| 6   | <a href="#">61A-87149-00</a><br>Connector              | <a href="#">Buy now</a> |
| 7   | <a href="#">61A-81950-00</a><br>Relay assembly         | <a href="#">Buy now</a> |
| 8   | <a href="#">97013-06030</a><br>Bolt                    | <a href="#">Buy now</a> |
| 9   | <a href="#">92903-06600</a><br>Washer, plain (646)     | <a href="#">Buy now</a> |
| 10  | <a href="#">90464-18M46</a><br>Clamp(65j)              | <a href="#">Buy now</a> |
| 11  | <a href="#">61A-81949-10</a><br>Wire, lead             | <a href="#">Buy now</a> |
| 12  | <a href="#">61A-81949-00</a><br>Wire, lead             | <a href="#">Buy now</a> |
| 13  | <a href="#">6G5-82119-00</a><br>Cover, lead wire       | <a href="#">Buy now</a> |
| 14  | <a href="#">61A-81941-00</a><br>Starter relay assembly | <a href="#">Buy now</a> |
| 15  | <a href="#">61A-81952-00</a><br>Holder, relay          | <a href="#">Buy now</a> |

## Electrical 3

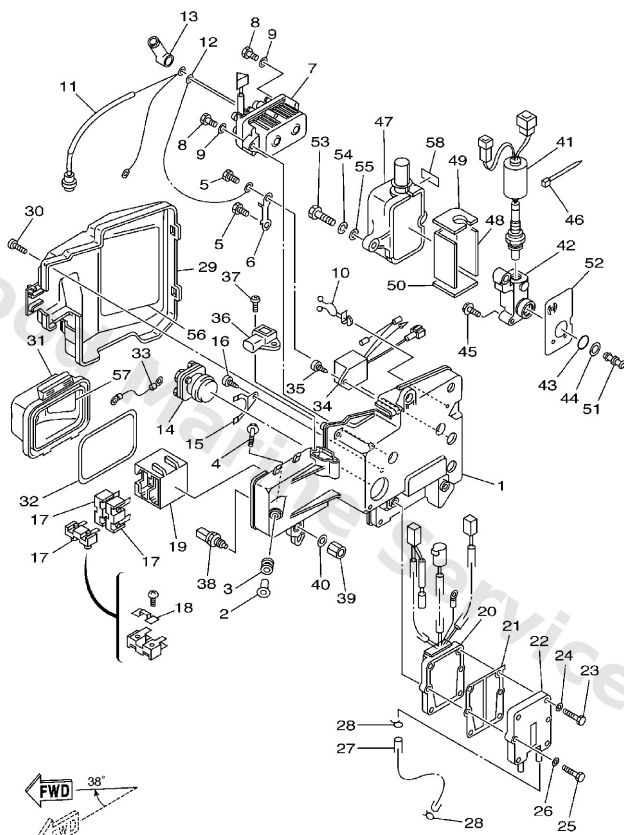


65J2100-3160

**E1**
 
| Ref | Part                                                           |                         |
|-----|----------------------------------------------------------------|-------------------------|
| 16  | <a href="#">97780-50612</a><br>Screw, tapping(61a)             | <a href="#">Buy now</a> |
| 17  | <a href="#">61A-82150-00</a><br>Fuse holder assembly           | <a href="#">Buy now</a> |
| 18  | <a href="#">61A-82151-00</a><br>Fuse(12v-80a)                  | <a href="#">Buy now</a> |
| 19  | <a href="#">61A-82153-00</a><br>Stay, fuse holder              | <a href="#">Buy now</a> |
| 20  | <a href="#">61A-81960-02</a><br>Rectifier & regulator assembly | <a href="#">Buy now</a> |
| 21  | <a href="#">69J-81975-A0</a><br>Plate, rectifier fitting       | <a href="#">Buy now</a> |
| 22  | <a href="#">69J-81972-01-1S</a><br>Cover, rectifier            | <a href="#">Buy now</a> |
| 23  | <a href="#">97013-06025</a><br>Bolt(62y)                       | <a href="#">Buy now</a> |
| 27  | <a href="#">90445-09224</a><br>Hose (I1500)                    | <a href="#">Buy now</a> |
| 28  | <a href="#">90467-08004</a><br>Clip, pipe 6162435600           | <a href="#">Buy now</a> |
| 29  | <a href="#">65L-81942-00</a><br>Cover                          | <a href="#">Buy now</a> |
| 30  | <a href="#">90169-05M00</a><br>Screw truss head tapping        | <a href="#">Buy now</a> |
| 31  | <a href="#">61A-82154-01</a><br>Case                           | <a href="#">Buy now</a> |
| 32  | <a href="#">61A-82176-00</a><br>Damper                         | <a href="#">Buy now</a> |
| 33  | <a href="#">61A-82117-00</a><br>Wire, lead                     | <a href="#">Buy now</a> |

## Electrical 3

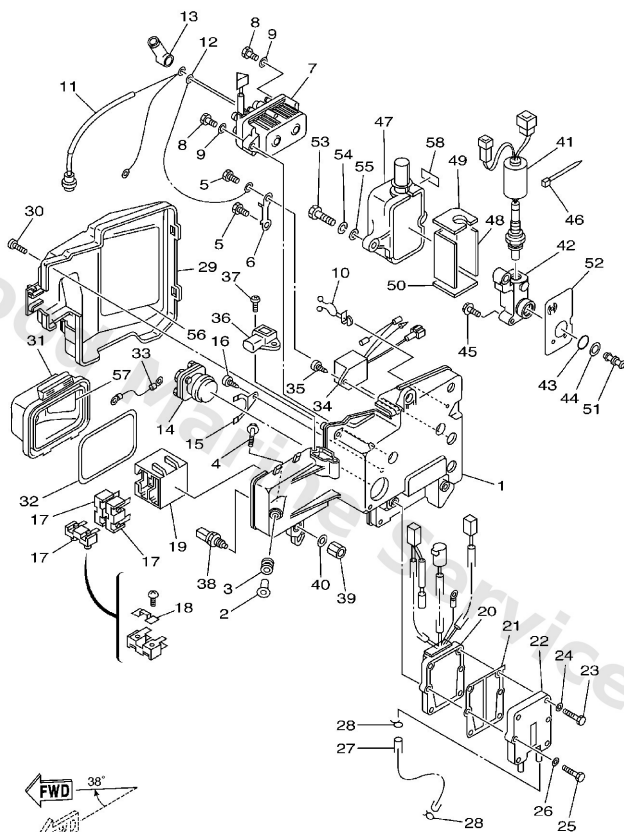


65J2100-3160

**E1**

 
| Ref | Part                                                  |                         |
|-----|-------------------------------------------------------|-------------------------|
| 34  | <a href="#">65L-81950-01</a><br>Relay assembly        | <a href="#">Buy now</a> |
| 35  | <a href="#">97780-60625</a><br>Screw, tapping(65j)    | <a href="#">Buy now</a> |
| 36  | <a href="#">67H-82380-00</a><br>Sensor, pressure      | <a href="#">Buy now</a> |
| 38  | <a href="#">65L-85886-00</a><br>Thermosensor          | <a href="#">Buy now</a> |
| 39  | <a href="#">90170-12M36</a><br>Nut                    | <a href="#">Buy now</a> |
| 40  | <a href="#">90201-12M34</a><br>Washer (692)           | <a href="#">Buy now</a> |
| 41  | <a href="#">65L-8592A-01</a><br>Sensor                | <a href="#">Buy now</a> |
| 42  | <a href="#">69L-11395-00</a><br>Holder                | <a href="#">Buy now</a> |
| 43  | <a href="#">93210-17003</a><br>O-ring                 | <a href="#">Buy now</a> |
| 44  | <a href="#">69L-11397-00</a><br>Gasket                | <a href="#">Buy now</a> |
| 45  | <a href="#">90119-06M74</a><br>Bolt, with washer(63m) | <a href="#">Buy now</a> |
| 46  | <a href="#">90465-13M18</a><br>Clamp                  | <a href="#">Buy now</a> |
| 47  | <a href="#">65L-85832-00</a><br>Case, under           | <a href="#">Buy now</a> |
| 48  | <a href="#">65L-11354-00</a><br>Gasket                | <a href="#">Buy now</a> |
| 49  | <a href="#">65L-1131N-00</a><br>Gasket, holder        | <a href="#">Buy now</a> |

# Electrical 3

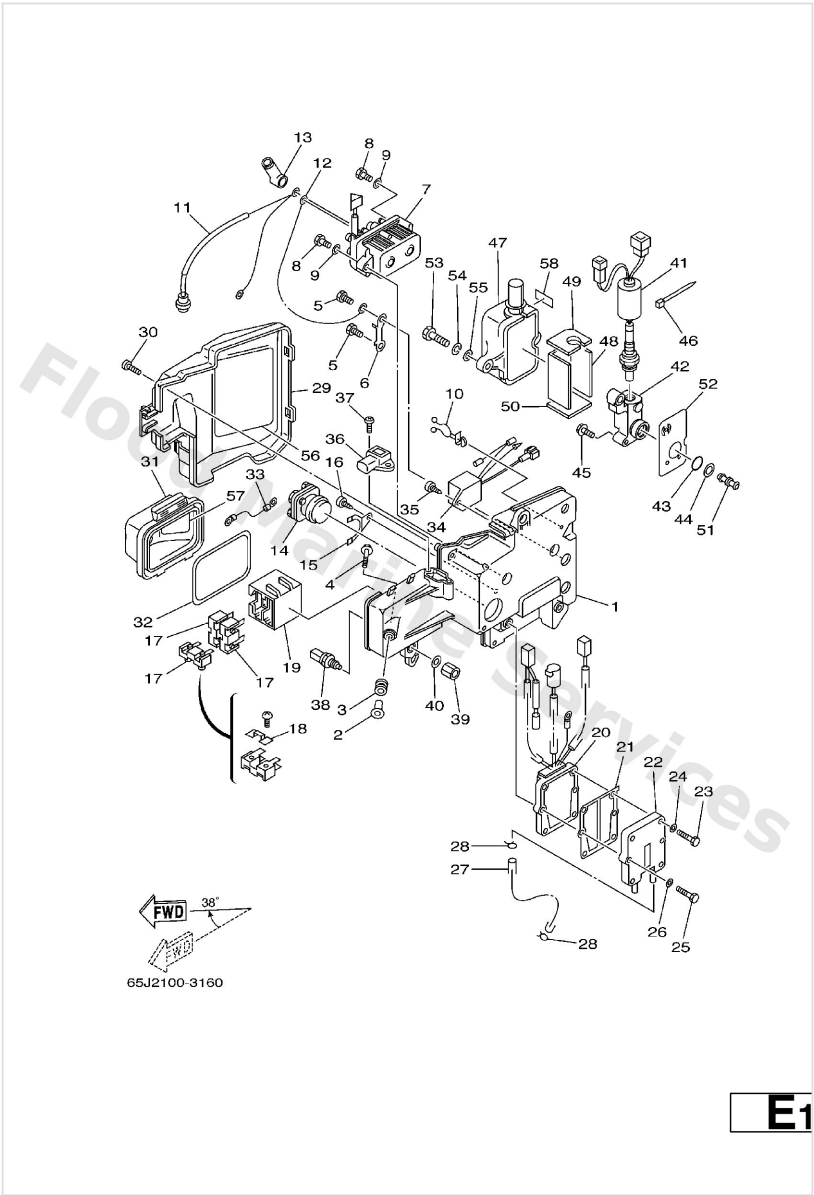

| Ref | Part                                                      |                         |
|-----|-----------------------------------------------------------|-------------------------|
| 50  | <a href="#">65L-11396-00</a><br>Gasket, holder            | <a href="#">Buy now</a> |
| 51  | <a href="#">65L-11353-11</a><br>Joint                     | <a href="#">Buy now</a> |
| 52  | <a href="#">69L-11357-00</a><br>Seal, cylinder 3          | <a href="#">Buy now</a> |
| 53  | <a href="#">97095-06030</a><br>Bolt(jf7)                  | <a href="#">Buy now</a> |
| 54  | <a href="#">92995-06100</a><br>Washer(6a1)                | <a href="#">Buy now</a> |
| 55  | <a href="#">92995-06600</a><br>Washer, plain (646)        | <a href="#">Buy now</a> |
| 56  | <a href="#">65L-81919-00</a><br>Graphic, Regulator        | <a href="#">Buy now</a> |
| 57  | <a href="#">61A-81919-00</a><br>Graphic Regulator         | <a href="#">Buy now</a> |
| 58  | <a href="#">65L-83625-40</a><br>15 –<br>EXCEPT FOR CANADA | <a href="#">Buy now</a> |
| 58  | <a href="#">65L-83625-50</a><br>Mark 5<br>FOR CANADA      | <a href="#">Buy now</a> |

## Electrical 4

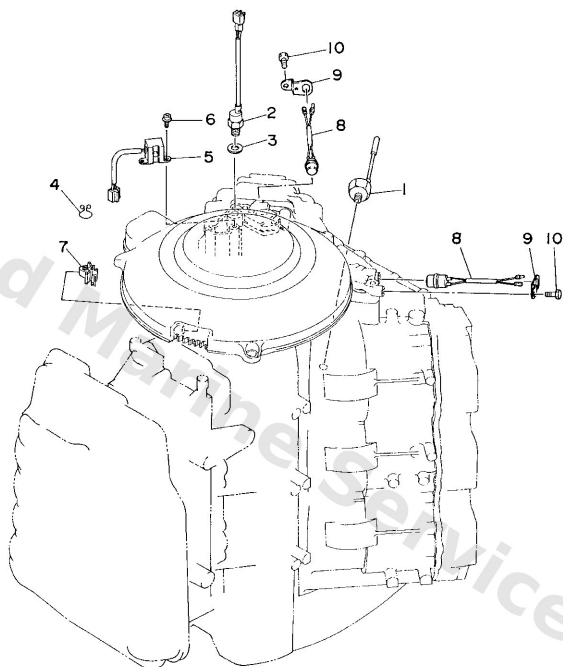 


65J0010-7150

**E4**

 
| Ref | Part                                                   |                         |
|-----|--------------------------------------------------------|-------------------------|
| 1   | <a href="#">61A-85780-00</a><br>Sensor, knock          | <a href="#">Buy now</a> |
| 2   | <a href="#">61A-85790-00</a><br>Thermosensor assembly  | <a href="#">Buy now</a> |
| 3   | <a href="#">92990-10600</a><br>Washer, plate           | <a href="#">Buy now</a> |
| 4   | <a href="#">90464-12M48</a><br>Clamp                   | <a href="#">Buy now</a> |
| 5   | <a href="#">61A-85895-00</a><br>Crank position sender  | <a href="#">Buy now</a> |
| 6   | <a href="#">97885-05012</a><br>Screw,pan head (646)    | <a href="#">Buy now</a> |
| 7   | <a href="#">90464-09M47</a><br>Clamp(65j)              | <a href="#">Buy now</a> |
| 8   | <a href="#">61A-82560-00</a><br>Thermo switch assembly | <a href="#">Buy now</a> |
| 9   | <a href="#">61A-8252U-00</a><br>Cover                  | <a href="#">Buy now</a> |
| 10  | <a href="#">97080-06012</a><br>Bolt(gh1)               | <a href="#">Buy now</a> |

# Fuel 1

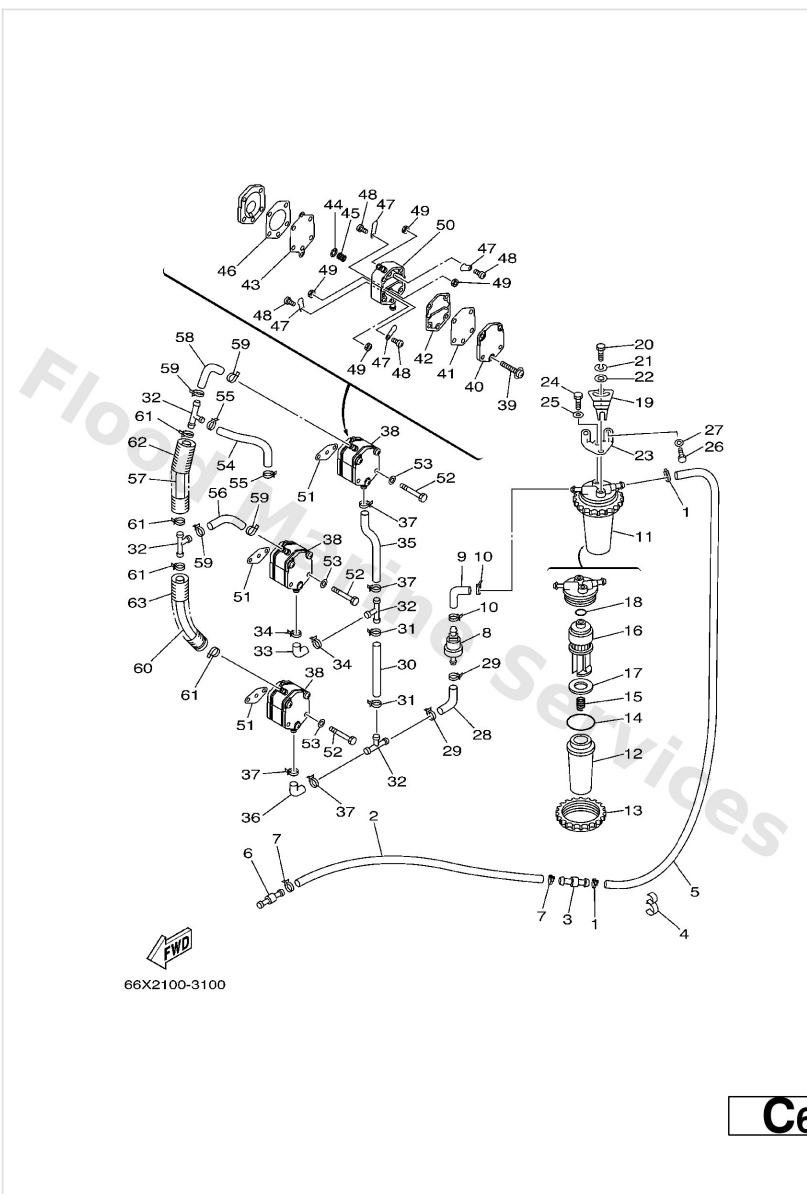

| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 1   | <a href="#">90465-11M10</a><br>Clamp                     | <a href="#">Buy now</a> |
| 2   | <a href="#">90445-13M17</a><br>Hose(I2700)               | <a href="#">Buy now</a> |
| 3   | <a href="#">6R3-24377-00</a><br>Pipe, joint 3            | <a href="#">Buy now</a> |
| 4   | <a href="#">90464-13M34</a><br>Clamp(6r3)                | <a href="#">Buy now</a> |
| 5   | <a href="#">61A-24313-00</a><br>Pipe 3                   | <a href="#">Buy now</a> |
| 6   | <a href="#">6R3-24377-10</a><br>Pipe, joint 3<br>FOR USA | <a href="#">Buy now</a> |
| 8   | <a href="#">6R5-24408-00</a><br>Fuel feed assembly       | <a href="#">Buy now</a> |
| 9   | <a href="#">61A-24311-00</a><br>Pipe, fuel 1             | <a href="#">Buy now</a> |
| 11  | <a href="#">65L-24560-00</a><br>Filter assembly          | <a href="#">Buy now</a> |
| 12  | <a href="#">61A-24521-00</a><br>Cup, filter              | <a href="#">Buy now</a> |
| 13  | <a href="#">65L-24531-01</a><br>Nut                      | <a href="#">Buy now</a> |
| 14  | <a href="#">61A-24564-00</a><br>O-ring                   | <a href="#">Buy now</a> |
| 15  | <a href="#">65L-24577-00</a><br>Spring                   | <a href="#">Buy now</a> |
| 16  | <a href="#">65L-24563-00</a><br>Element, filter          | <a href="#">Buy now</a> |
| 17  | <a href="#">61A-24469-00</a><br>Float, water level       | <a href="#">Buy now</a> |


# Fuel 1

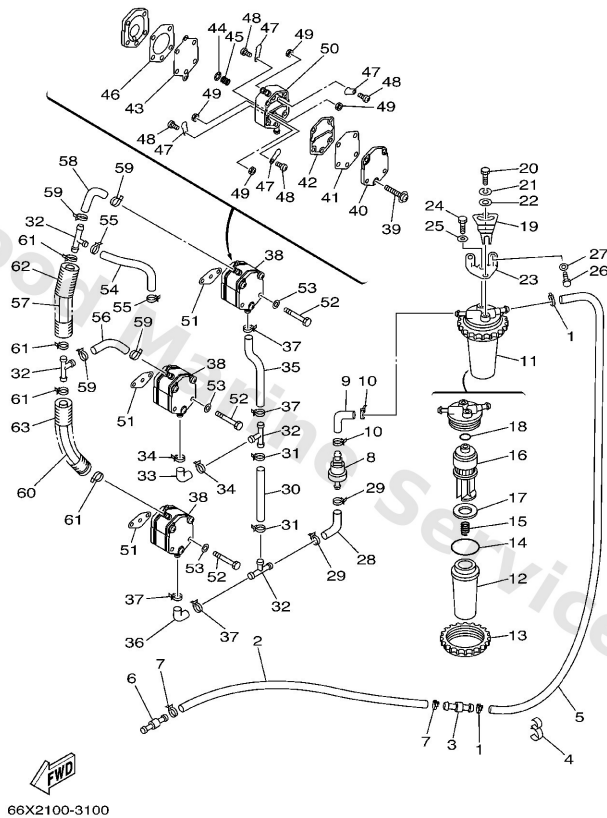 

C6


| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 18  | <a href="#">65L-24564-00</a><br>Gasket                   | <a href="#">Buy now</a> |
| 19  | <a href="#">65L-24558-00</a><br>Holder, filter           | <a href="#">Buy now</a> |
| 20  | <a href="#">97095-06016</a><br>Bolt, hexagon deep recess | <a href="#">Buy now</a> |
| 21  | <a href="#">92995-06100</a><br>Washer(6a1)               | <a href="#">Buy now</a> |
| 22  | <a href="#">90201-06068</a><br>Washer,plate (6k8)        | <a href="#">Buy now</a> |
| 23  | <a href="#">61A-24566-00</a><br>Bracket, filter          | <a href="#">Buy now</a> |
| 24  | <a href="#">97095-06014</a><br>Bolt(gj3)                 | <a href="#">Buy now</a> |
| 25  | <a href="#">92995-06600</a><br>Washer, plain (646)       | <a href="#">Buy now</a> |
| 30  | <a href="#">6G5-24317-01</a><br>Pipe 7                   | <a href="#">Buy now</a> |
| 32  | <a href="#">6E5-24378-00</a><br>Pipe, joint 3            | <a href="#">Buy now</a> |
| 33  | <a href="#">6E5-24315-00</a><br>Pipe 5                   | <a href="#">Buy now</a> |
| 35  | <a href="#">6G5-24315-00</a><br>Pipe 5                   | <a href="#">Buy now</a> |
| 38  | <a href="#">6E5-24410-03</a><br>Fuel pump assembly       | <a href="#">Buy now</a> |
| 39  | <a href="#">6E5-24444-00</a><br>Screw                    | <a href="#">Buy now</a> |
| 40  | <a href="#">6E5-24413-00</a><br>Body 2                   | <a href="#">Buy now</a> |

# Fuel 1

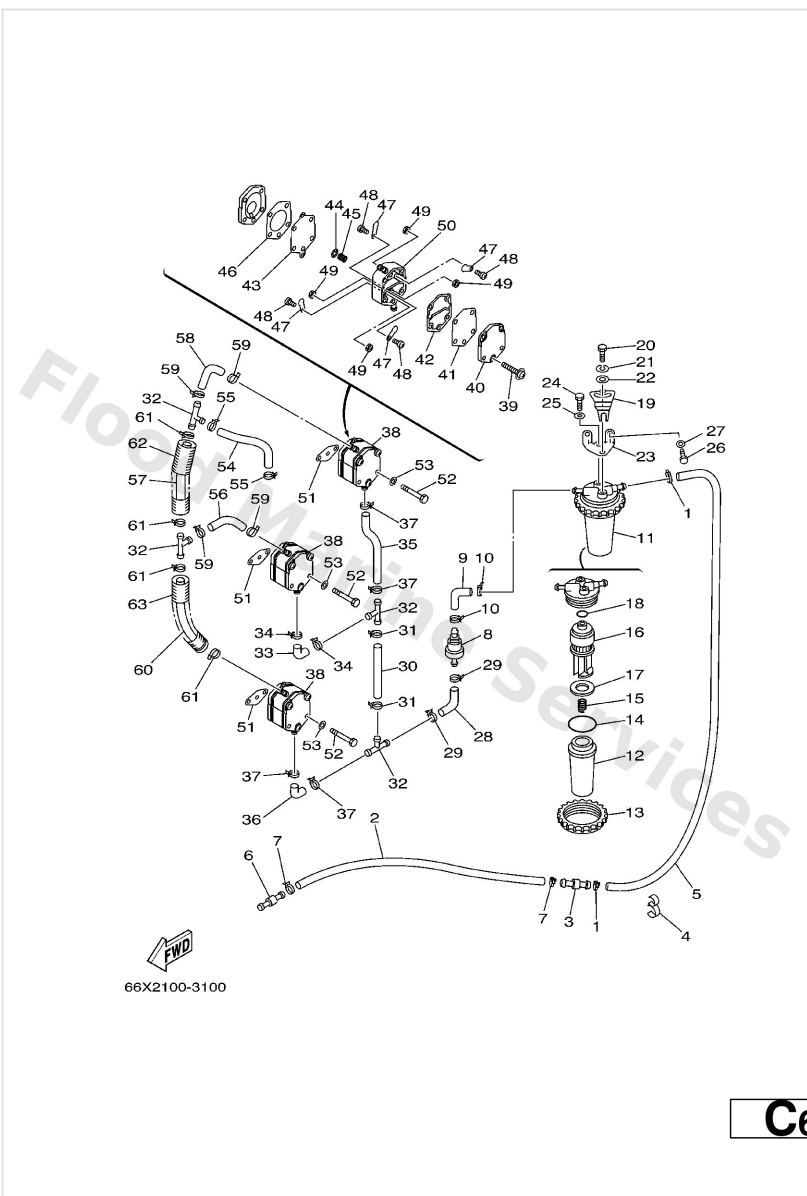 

| Ref | Part                                              |                         |
|-----|---------------------------------------------------|-------------------------|
| 41  | <a href="#">6E5-24471-00</a><br>Diaphragm         | <a href="#">Buy now</a> |
| 42  | <a href="#">6E5-24435-00</a><br>Gasket, body 2    | <a href="#">Buy now</a> |
| 43  | <a href="#">6E5-24411-00</a><br>Diaphragm         | <a href="#">Buy now</a> |
| 44  | <a href="#">648-24424-00</a><br>Seat, spring      | <a href="#">Buy now</a> |
| 45  | <a href="#">6E5-24423-00</a><br>Spring, diaphragm | <a href="#">Buy now</a> |
| 46  | <a href="#">6E5-24434-02</a><br>Gasket, body      | <a href="#">Buy now</a> |
| 47  | <a href="#">6A0-24421-01</a><br>Valve, check      | <a href="#">Buy now</a> |
| 48  | <a href="#">6A0-14325-00</a><br>Screw, pan head   | <a href="#">Buy now</a> |
| 49  | <a href="#">95380-03600</a><br>Nut (6g8)          | <a href="#">Buy now</a> |
| 50  | <a href="#">6E5-24412-10</a><br>Body 1            | <a href="#">Buy now</a> |
| 51  | <a href="#">650-24431-A0</a><br>Gasket, fuel pump | <a href="#">Buy now</a> |
| 52  | <a href="#">97095-06050</a><br>Bolt(jf7)          | <a href="#">Buy now</a> |
| 54  | <a href="#">65L-24311-00</a><br>Pipe, Fuel 1      | <a href="#">Buy now</a> |
| 56  | <a href="#">6G5-24316-10</a><br>Pipe 6            | <a href="#">Buy now</a> |
| 57  | <a href="#">90445-13M14</a><br>Hose (I90)         | <a href="#">Buy now</a> |

# Fuel 1

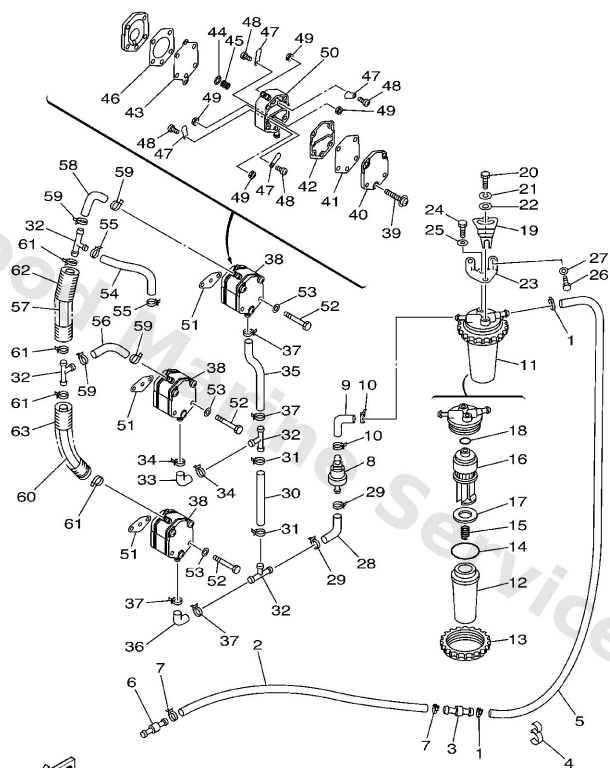 


66X2100-3100

C6

| Ref | Part                                   |                         |
|-----|----------------------------------------|-------------------------|
| 60  | <a href="#">6E5-24313-00</a><br>Pipe 3 | <a href="#">Buy now</a> |
| 62  | <a href="#">6E9-83557-70</a><br>Tube   | <a href="#">Buy now</a> |
| 63  | <a href="#">65L-83557-00</a><br>Tube   | <a href="#">Buy now</a> |

## Fuel 2

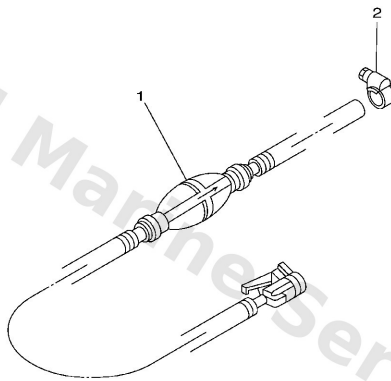 


68J1100-2140

**D2**


| Ref | Part                                                               |                         |
|-----|--------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6YK-24307-42</a><br>Fuel pipe comp. 2<br>AP FOR CANADA | <a href="#">Buy now</a> |
| 2   | <a href="#">90450-10M07</a><br>Hose, clamp<br>AP FOR CANADA        | <a href="#">Buy now</a> |

 Fuel 3

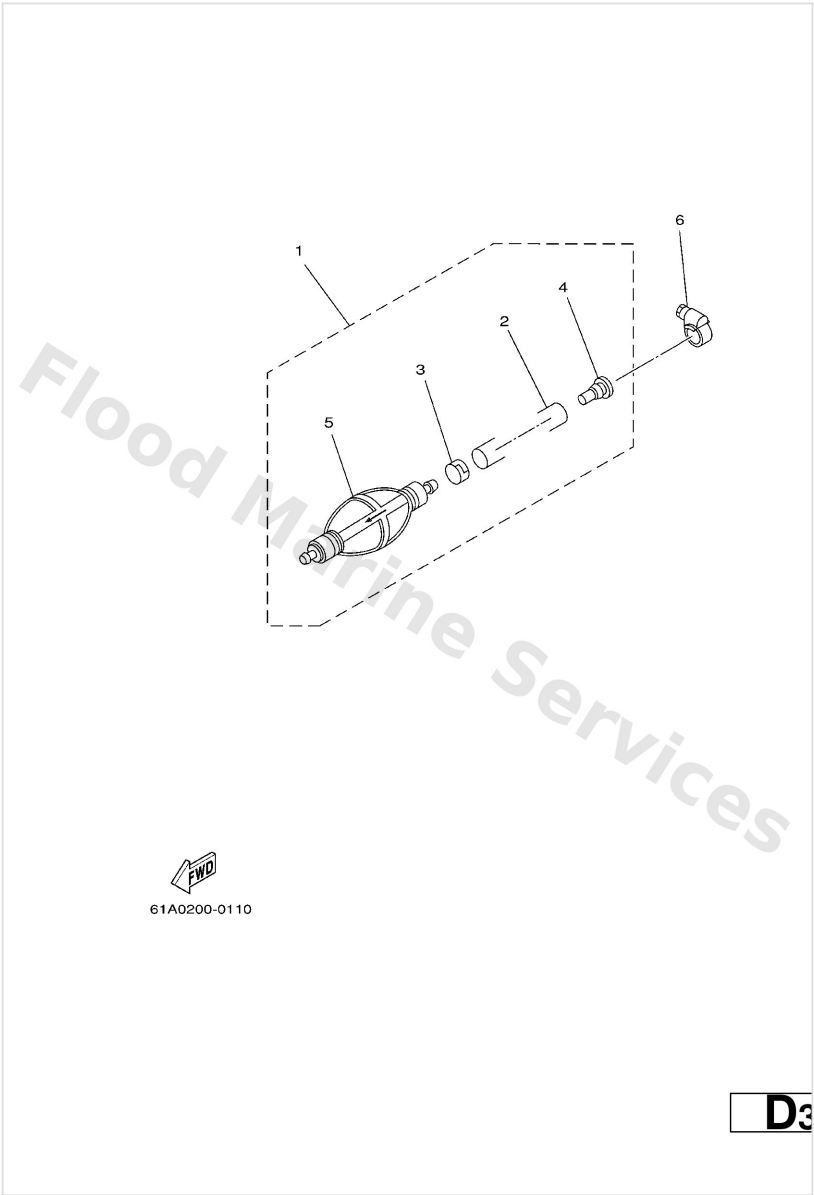

| Ref | Part                                                                 |                         |
|-----|----------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6Y2-24307-41</a><br>Fuel pipe comp. 2<br>AP "65J2,65L2"- | <a href="#">Buy now</a> |
| 2   | <a href="#">90445-13M01</a><br>Hose (I2050)                          | <a href="#">Buy now</a> |
| 3   | <a href="#">6E5-24351-51</a><br>Band 1                               | <a href="#">Buy now</a> |
| 4   | <a href="#">90480-06M19</a><br>Grommet (6e3)                         | <a href="#">Buy now</a> |
| 5   | <a href="#">6Y2-24360-52</a><br>Primer pump assembly                 | <a href="#">Buy now</a> |
| 6   | <a href="#">90450-10M07</a><br>Hose, clamp<br>AP "65J2,65L2"-        | <a href="#">Buy now</a> |


# Fuel Injection Nozzle

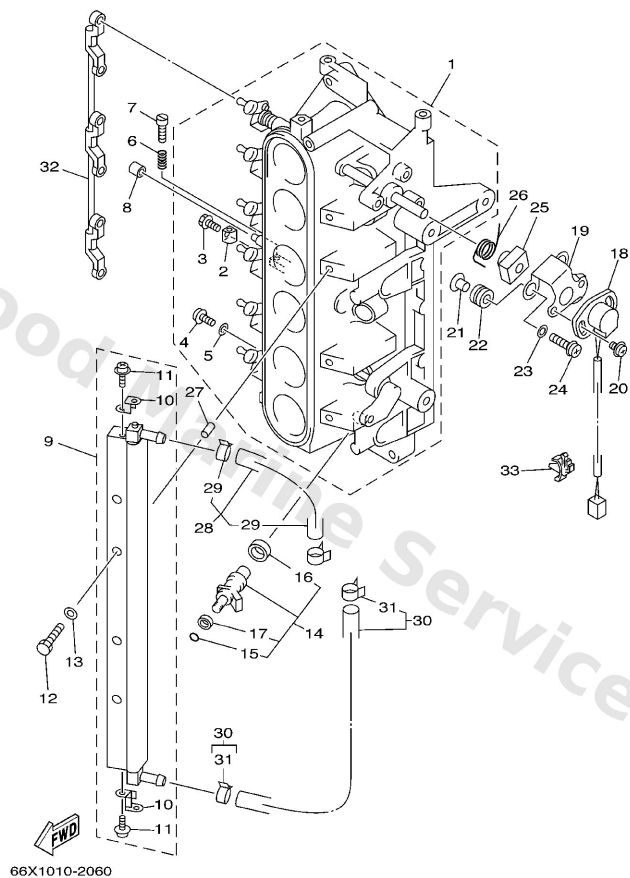 

**B7**


| Ref | Part                                                  |                         |
|-----|-------------------------------------------------------|-------------------------|
| 1   | <a href="#">67H-13751-00</a><br>Body, throttle 1      | <a href="#">Buy now</a> |
| 2   | <a href="#">65L-14527-00</a><br>Plate                 | <a href="#">Buy now</a> |
| 3   | <a href="#">65L-14565-00</a><br>Screw                 | <a href="#">Buy now</a> |
| 4   | <a href="#">6K5-14592-00</a><br>Screw                 | <a href="#">Buy now</a> |
| 5   | <a href="#">90201-05552</a><br>Washer, plate(65j)     | <a href="#">Buy now</a> |
| 6   | <a href="#">65L-14334-00</a><br>Spring, air adjusting | <a href="#">Buy now</a> |
| 7   | <a href="#">65L-14523-00</a><br>Screw, stop           | <a href="#">Buy now</a> |
| 8   | <a href="#">65L-14578-00</a><br>Collar                | <a href="#">Buy now</a> |
| 9   | <a href="#">67H-13938-00</a><br>Pipe                  | <a href="#">Buy now</a> |
| 10  | <a href="#">67H-13898-00</a><br>Holder                | <a href="#">Buy now</a> |
| 12  | <a href="#">65L-13573-00</a><br>Bolt 1                | <a href="#">Buy now</a> |
| 13  | <a href="#">65L-13995-00</a><br>Washer                | <a href="#">Buy now</a> |
| 14  | <a href="#">65L-13761-00</a><br>Injector assembly     | <a href="#">Buy now</a> |
| 15  | <a href="#">65L-13769-00</a><br>O-ring                | <a href="#">Buy now</a> |
| 16  | <a href="#">65L-13764-00</a><br>Gasket                | <a href="#">Buy now</a> |
 
# Fuel Injection Nozzle

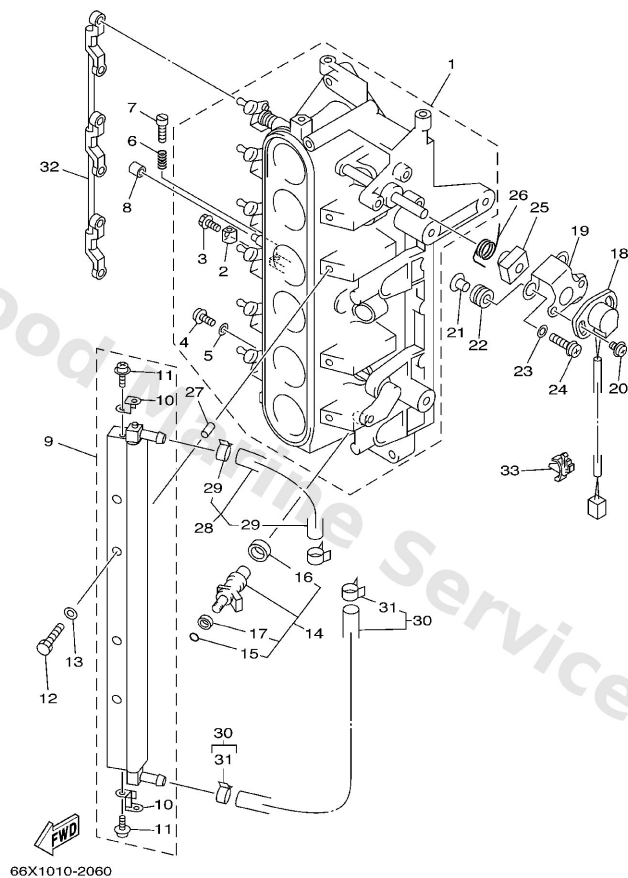


| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 17  | <a href="#">65L-13766-00</a><br>Rubber, injector         | <a href="#">Buy now</a> |
| 18  | <a href="#">61A-85885-00</a><br>Throttle sensor assembly | <a href="#">Buy now</a> |
| 19  | <a href="#">6K7-85886-00</a><br>Bracket                  | <a href="#">Buy now</a> |
| 20  | <a href="#">97985-05212</a><br>Screw, with washer(6g7)   | <a href="#">Buy now</a> |
| 21  | <a href="#">90387-05M00</a><br>Collar(6k7)               | <a href="#">Buy now</a> |
| 22  | <a href="#">90480-10M23</a><br>Grommet(6k7)              | <a href="#">Buy now</a> |
| 23  | <a href="#">65L-14596-00</a><br>Washer                   | <a href="#">Buy now</a> |
| 24  | <a href="#">97985-05330</a><br>Screw, with washer(61b)   | <a href="#">Buy now</a> |
| 25  | <a href="#">65L-14573-00</a><br>Lever                    | <a href="#">Buy now</a> |
| 26  | <a href="#">65L-14579-00</a><br>Spring                   | <a href="#">Buy now</a> |
| 27  | <a href="#">65L-13996-00</a><br>Insert                   | <a href="#">Buy now</a> |
| 28  | <a href="#">66K-13971-00</a><br>Pipe, fuel 1             | <a href="#">Buy now</a> |
| 29  | <a href="#">65L-24387-00</a><br>Clip                     | <a href="#">Buy now</a> |
| 30  | <a href="#">67H-13972-00</a><br>Pipe, fuel 2             | <a href="#">Buy now</a> |
| 32  | <a href="#">65L-41217-00</a><br>Rod, accel. lever        | <a href="#">Buy now</a> |

# Fuel Injection Nozzle

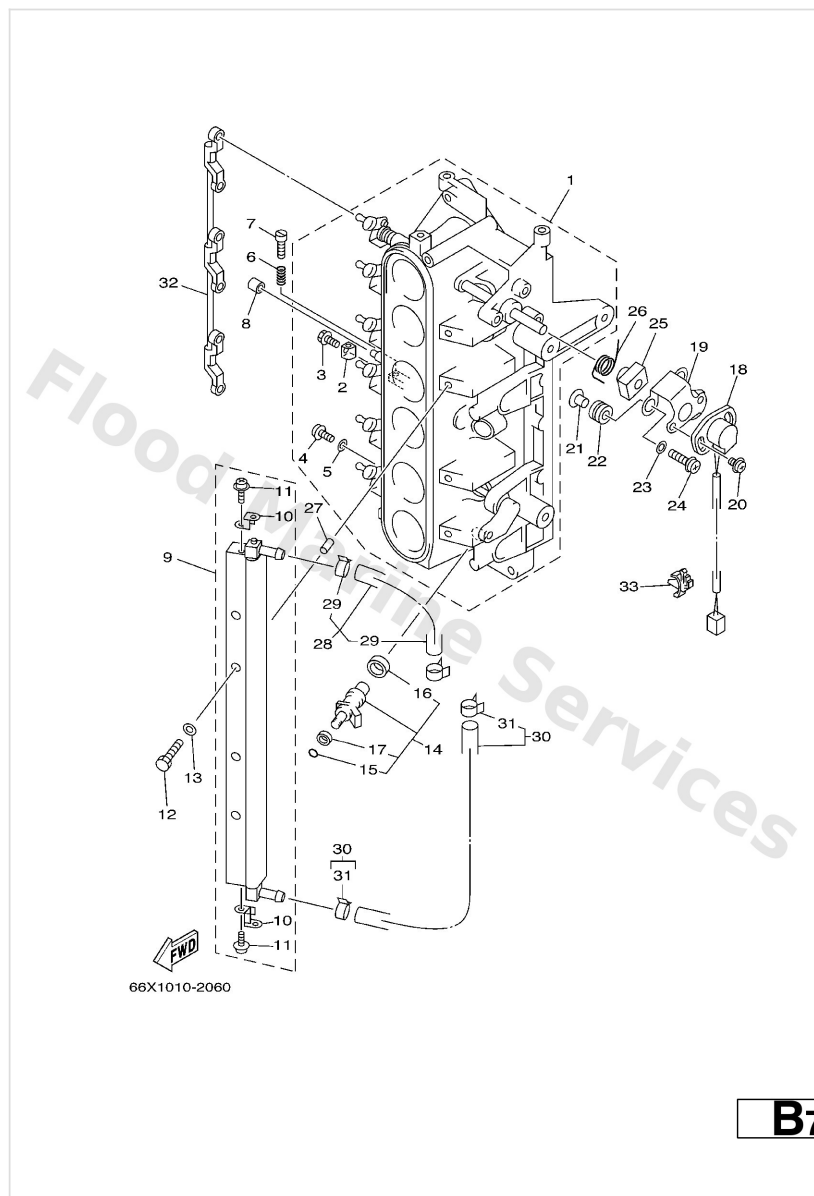 

| Ref | Part                                       |                         |
|-----|--------------------------------------------|-------------------------|
| 33  | <a href="#">90464-04M12</a><br>Clamp (6h3) | <a href="#">Buy now</a> |


# Fuel Injection Pump

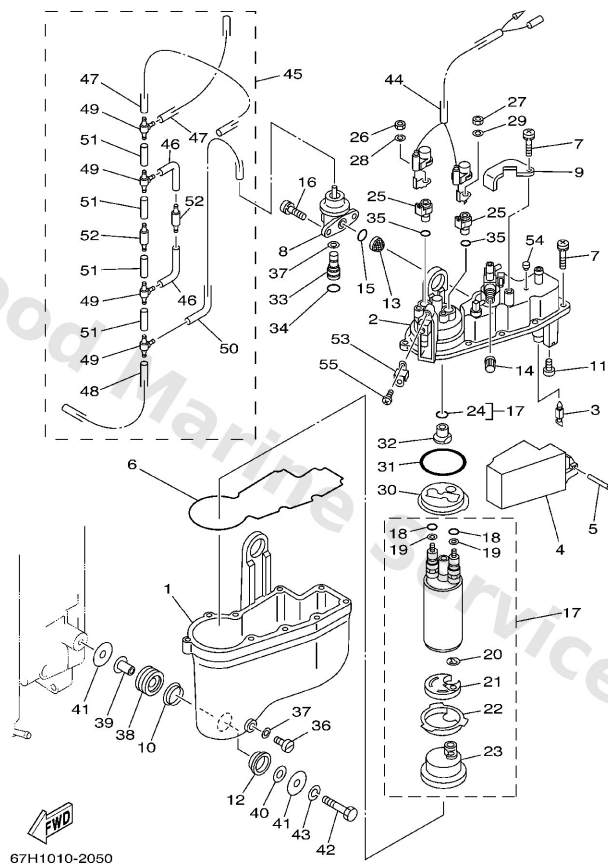 

**B4**

| Ref | Part                                                  |                         |
|-----|-------------------------------------------------------|-------------------------|
| 1   | <a href="#">66K-14980-00</a><br>Body, float chamber   | <a href="#">Buy now</a> |
| 2   | <a href="#">67H-14182-00</a><br>Cover, float chamber  | <a href="#">Buy now</a> |
| 3   | <a href="#">65L-14546-00</a><br>Valve, needle         | <a href="#">Buy now</a> |
| 4   | <a href="#">66K-14985-00</a><br>Float                 | <a href="#">Buy now</a> |
| 5   | <a href="#">66K-14548-01</a><br>Pin, float arm        | <a href="#">Buy now</a> |
| 6   | <a href="#">66K-14984-00</a><br>Gasket, float chamber | <a href="#">Buy now</a> |
| 7   | <a href="#">65L-14125-00</a><br>Screw                 | <a href="#">Buy now</a> |
| 8   | <a href="#">66K-13906-00</a><br>Regulator, pressure   | <a href="#">Buy now</a> |
| 9   | <a href="#">66K-14255-00</a><br>Plate                 | <a href="#">Buy now</a> |
| 10  | <a href="#">66K-14239-00</a><br>Seal                  | <a href="#">Buy now</a> |
| 11  | <a href="#">66K-14325-01</a><br>Screw, pan head       | <a href="#">Buy now</a> |
| 12  | <a href="#">66K-14163-00</a><br>Spacer                | <a href="#">Buy now</a> |
| 13  | <a href="#">65L-13905-00</a><br>Filter comp           | <a href="#">Buy now</a> |
| 14  | <a href="#">65L-14966-00</a><br>Cap                   | <a href="#">Buy now</a> |
| 15  | <a href="#">65L-24486-00</a><br>O-ring                | <a href="#">Buy now</a> |
 
# Fuel Injection Pump

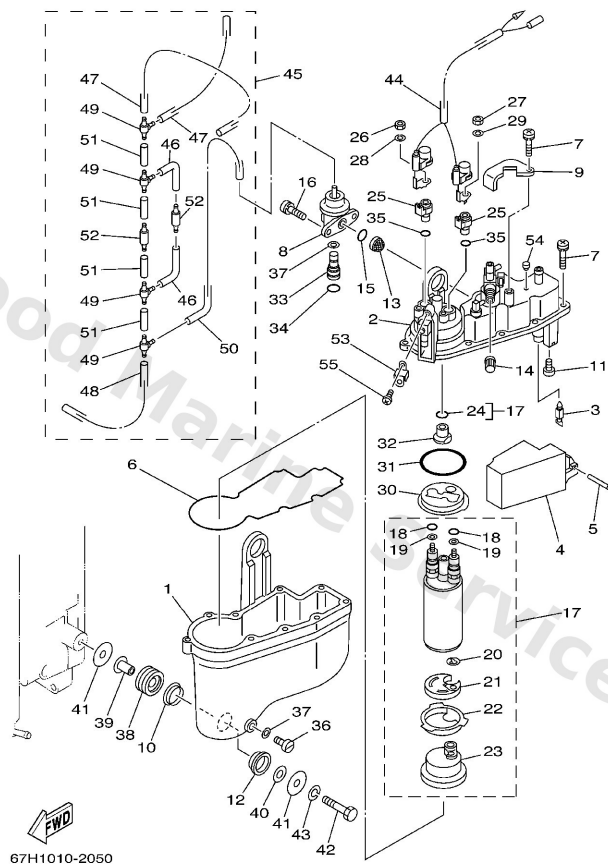


67H1010-2050

**B4**
 
| Ref | Part                                            |                         |
|-----|-------------------------------------------------|-------------------------|
| 16  | <a href="#">66K-14245-00</a><br>Screw, guide    | <a href="#">Buy now</a> |
| 17  | <a href="#">67H-13907-00</a><br>Fuel pump comp. | <a href="#">Buy now</a> |
| 18  | <a href="#">65L-14227-00</a><br>Washer          | <a href="#">Buy now</a> |
| 19  | <a href="#">65L-14194-00</a><br>Washer          | <a href="#">Buy now</a> |
| 20  | <a href="#">65L-14159-00</a><br>Clip            | <a href="#">Buy now</a> |
| 21  | <a href="#">66K-13781-00</a><br>Damper, pump    | <a href="#">Buy now</a> |
| 22  | <a href="#">66K-13844-00</a><br>Plate 2         | <a href="#">Buy now</a> |
| 23  | <a href="#">66K-13915-00</a><br>Filter          | <a href="#">Buy now</a> |
| 24  | <a href="#">65L-1416A-00</a><br>O-ring          | <a href="#">Buy now</a> |
| 25  | <a href="#">66K-14271-00</a><br>Insulator       | <a href="#">Buy now</a> |
| 26  | <a href="#">65L-8182A-00</a><br>Nut             | <a href="#">Buy now</a> |
| 27  | <a href="#">65L-8182K-00</a><br>Nut             | <a href="#">Buy now</a> |
| 28  | <a href="#">65L-8182E-00</a><br>Washer          | <a href="#">Buy now</a> |
| 29  | <a href="#">65L-8182F-00</a><br>Washer          | <a href="#">Buy now</a> |
| 30  | <a href="#">66K-13843-00</a><br>Plate 1         | <a href="#">Buy now</a> |


## Fuel Injection Pump

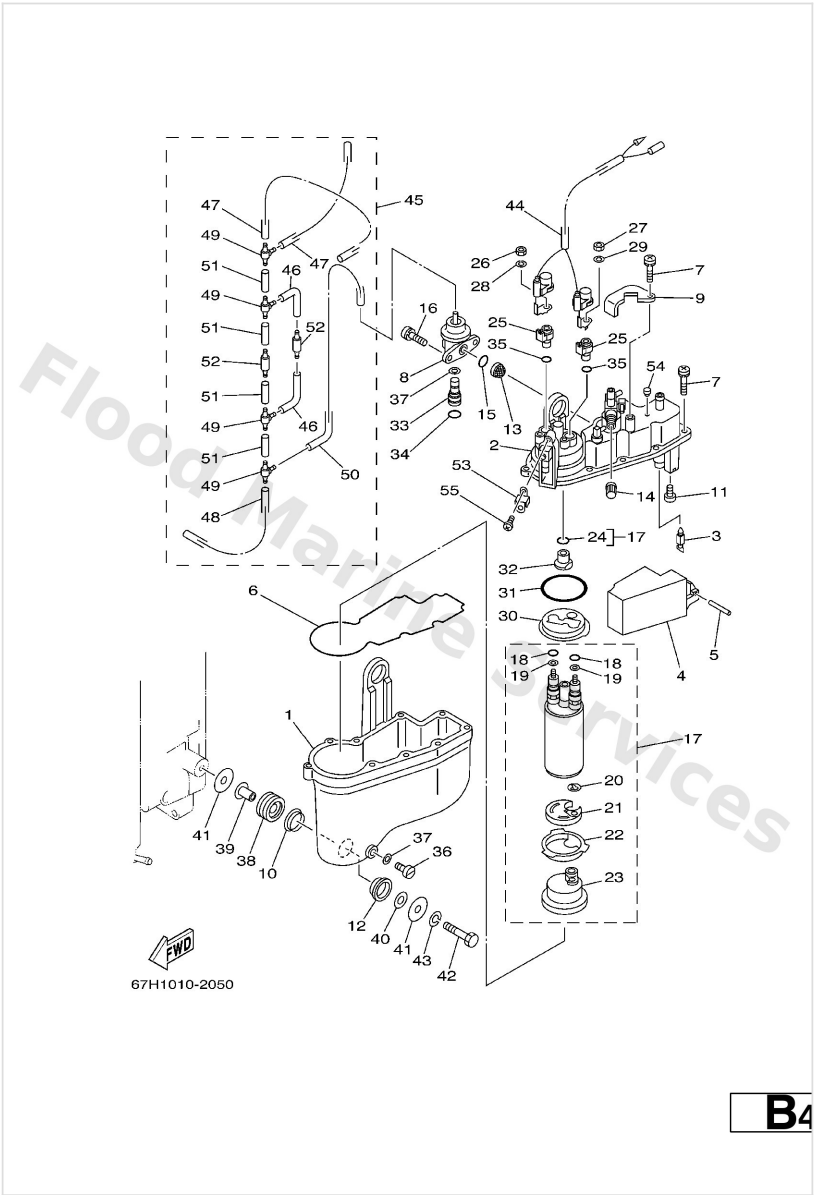

B4

| Ref | Part                                                  |                         |
|-----|-------------------------------------------------------|-------------------------|
| 31  | <a href="#">65L-14147-00</a><br>O-ring                | <a href="#">Buy now</a> |
| 32  | <a href="#">65L-14274-00</a><br>Connector             | <a href="#">Buy now</a> |
| 33  | <a href="#">66K-24376-00</a><br>Pipe, joint 1         | <a href="#">Buy now</a> |
| 34  | <a href="#">66K-24489-00</a><br>O-ring                | <a href="#">Buy now</a> |
| 35  | <a href="#">65L-14397-00</a><br>O-ring                | <a href="#">Buy now</a> |
| 36  | <a href="#">65L-14992-00</a><br>Screw, drain          | <a href="#">Buy now</a> |
| 37  | <a href="#">65L-14997-00</a><br>Seal                  | <a href="#">Buy now</a> |
| 38  | <a href="#">65L-24375-00</a><br>Grommet               | <a href="#">Buy now</a> |
| 39  | <a href="#">65L-24397-00</a><br>Collar                | <a href="#">Buy now</a> |
| 40  | <a href="#">65L-24576-00</a><br>Washer                | <a href="#">Buy now</a> |
| 41  | <a href="#">66K-24579-00</a><br>Washer 2              | <a href="#">Buy now</a> |
| 42  | <a href="#">65L-24592-00</a><br>Bolt                  | <a href="#">Buy now</a> |
| 43  | <a href="#">65L-24169-00</a><br>Washer, lock          | <a href="#">Buy now</a> |
| 44  | <a href="#">67H-82507-00</a><br>Wire, Lead            | <a href="#">Buy now</a> |
| 45  | <a href="#">67H-13490-00</a><br>Relief valve assembly | <a href="#">Buy now</a> |


# Fuel Injection Pump

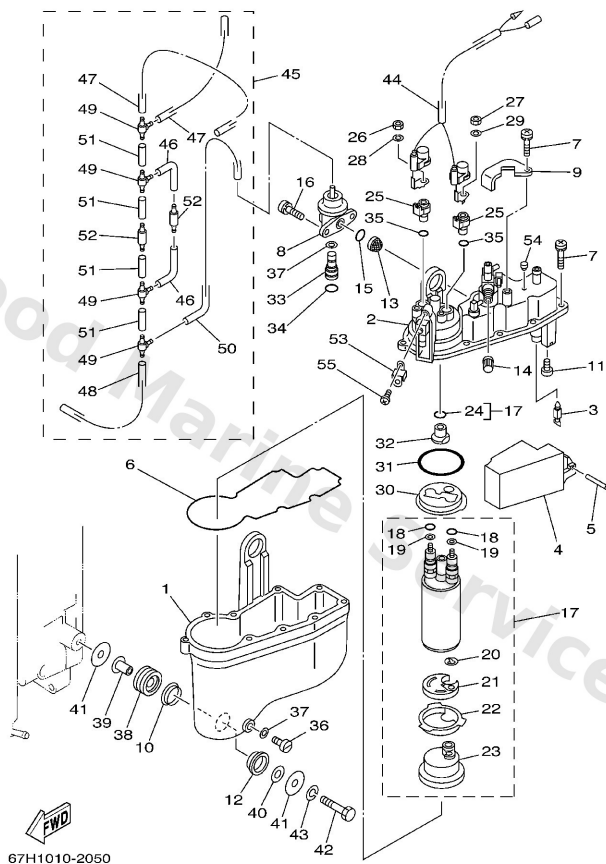 

**B4**

| Ref | Part                                                   |                         |
|-----|--------------------------------------------------------|-------------------------|
| 46  | <a href="#">66K-13542-00</a><br>Hose, vacuum sensing 1 | <a href="#">Buy now</a> |
| 47  | <a href="#">67H-13544-00</a><br>Hose, Vacuum Sensing 2 | <a href="#">Buy now</a> |
| 48  | <a href="#">67H-13532-00</a><br>Hose, Vacuum Sensing 3 | <a href="#">Buy now</a> |
| 49  | <a href="#">65L-24461-00</a><br>Pipe,joint 4           | <a href="#">Buy now</a> |
| 50  | <a href="#">67H-13533-00</a><br>Hose, Vacuum Sensing 4 | <a href="#">Buy now</a> |
| 51  | <a href="#">67H-13534-00</a><br>Hose, Vacuum Sensing 5 | <a href="#">Buy now</a> |
| 52  | <a href="#">67H-13183-00</a><br>Valve, Check           | <a href="#">Buy now</a> |
| 53  | <a href="#">66K-13898-00</a><br>Holder                 | <a href="#">Buy now</a> |
| 54  | <a href="#">67H-14225-00</a><br>Cap                    | <a href="#">Buy now</a> |
| 55  | <a href="#">65L-14565-00</a><br>Screw                  | <a href="#">Buy now</a> |

 
Fuel Tank

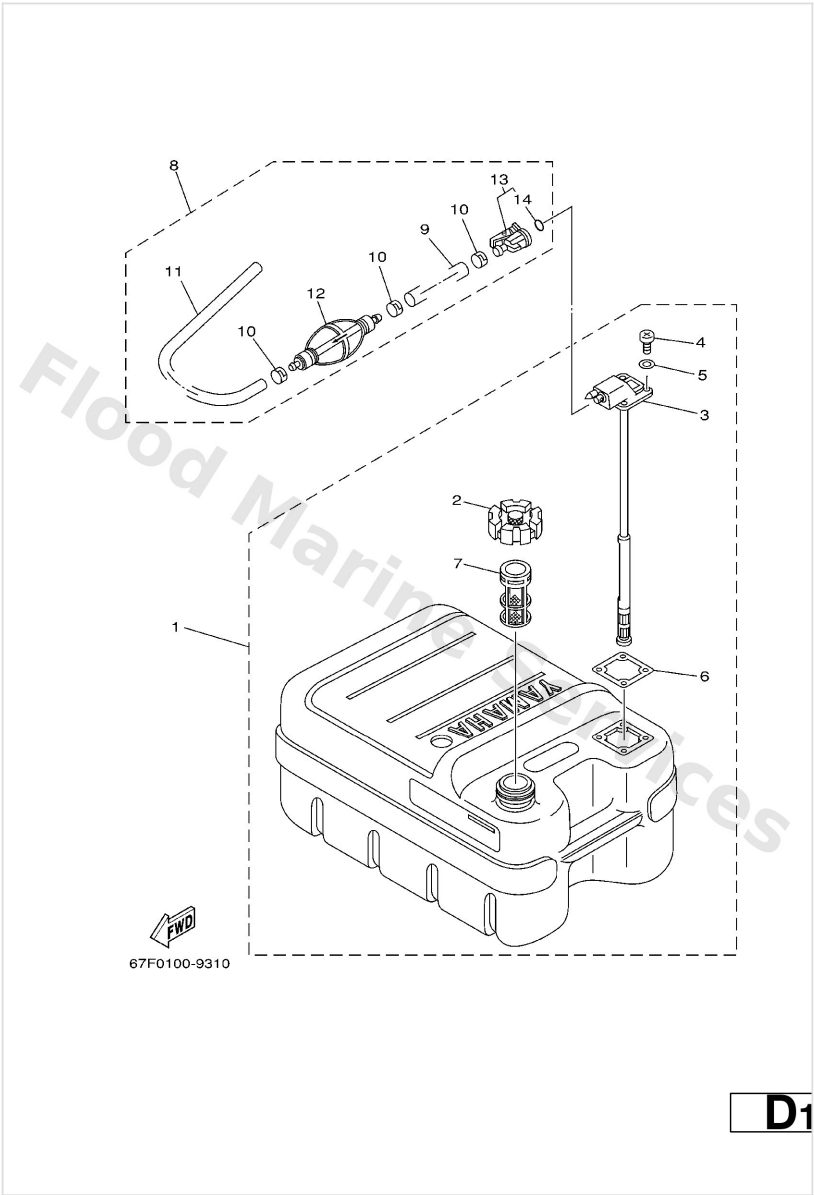

**D1**


| Ref | Part                                                                     |                         |
|-----|--------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6YJ-24201-10</a><br>Fuel Tank assembly (24L)<br>AP FOR CARIB | <a href="#">Buy now</a> |
| 2   | <a href="#">6YJ-24610-01</a><br>Cap assembly                             | <a href="#">Buy now</a> |
| 3   | <a href="#">6Y1-24260-12</a><br>Fuel meter assembly<br>WITH INDICATOR    | <a href="#">Buy now</a> |
| 4   | <a href="#">98586-05016</a><br>Screw, pan head                           | <a href="#">Buy now</a> |
| 5   | <a href="#">6Y1-24329-00</a><br>Seal                                     | <a href="#">Buy now</a> |
| 6   | <a href="#">6Y1-24268-00</a><br>Gasket, fuel meter                       | <a href="#">Buy now</a> |
| 7   | <a href="#">6YJ-24167-00</a><br>Strainer                                 | <a href="#">Buy now</a> |
| 8   | <a href="#">6Y2-24306-42</a><br>Fuel pipe comp. 1<br>AP FOR CARIB        | <a href="#">Buy now</a> |
| 9   | <a href="#">90445-13M01</a><br>Hose (I2050)                              | <a href="#">Buy now</a> |
| 10  | <a href="#">6E5-24351-51</a><br>Band 1                                   | <a href="#">Buy now</a> |
| 11  | <a href="#">90445-13M35</a><br>Hose (L250)                               | <a href="#">Buy now</a> |
| 12  | <a href="#">6Y2-24360-52</a><br>Primer pump assembly                     | <a href="#">Buy now</a> |
| 13  | <a href="#">6Y2-24305-04</a><br>Fuel pipe joint comp. 2                  | <a href="#">Buy now</a> |
| 14  | <a href="#">93210-08287</a><br>O-ring (655)                              | <a href="#">Buy now</a> |
 
# Generator

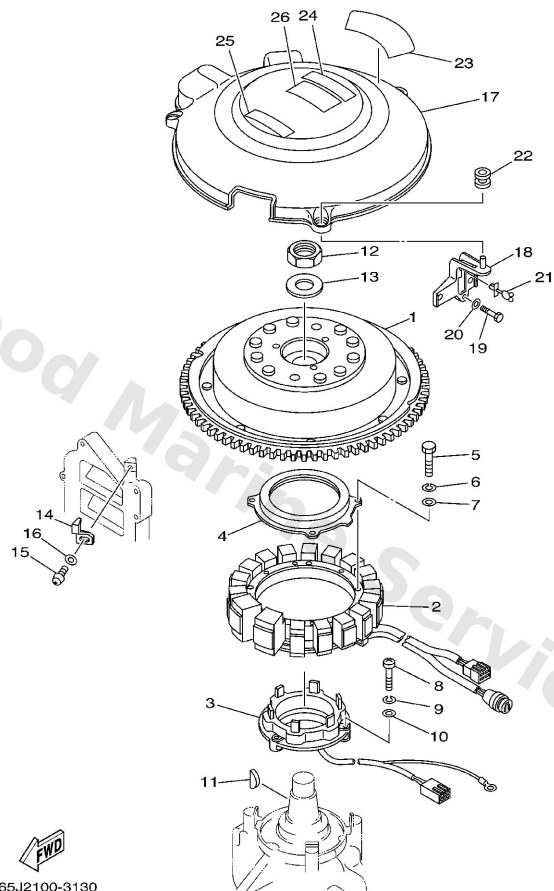


| Ref | Part                                                    |                         |
|-----|---------------------------------------------------------|-------------------------|
| 1   | <a href="#">61A-85550-01</a><br>Rotor assembly          | <a href="#">Buy now</a> |
| 2   | <a href="#">65L-85510-10</a><br>Stator assembly         | <a href="#">Buy now</a> |
| 3   | <a href="#">61A-85580-01</a><br>Coil, pulser            | <a href="#">Buy now</a> |
| 4   | <a href="#">61A-83721-00</a><br>Cover                   | <a href="#">Buy now</a> |
| 5   | <a href="#">97013-06035</a><br>Bolt(3rv)                | <a href="#">Buy now</a> |
| 6   | <a href="#">92903-06100</a><br>Washer(6a1)              | <a href="#">Buy now</a> |
| 7   | <a href="#">92903-06600</a><br>Washer, plain (646)      | <a href="#">Buy now</a> |
| 8   | <a href="#">97885-05030</a><br>Ybs86-530 screw, panhead | <a href="#">Buy now</a> |
| 9   | <a href="#">92995-05100</a><br>Ybs67-5 washer, spring   | <a href="#">Buy now</a> |
| 10  | <a href="#">92995-05600</a><br>Washer, plain (646)      | <a href="#">Buy now</a> |
| 11  | <a href="#">90280-05015</a><br>Key, woodruff            | <a href="#">Buy now</a> |
| 12  | <a href="#">90170-24M22</a><br>Nut(61a)                 | <a href="#">Buy now</a> |
| 13  | <a href="#">90201-25M02</a><br>Washer, plate(61a)       | <a href="#">Buy now</a> |
| 14  | <a href="#">6E5-81332-00</a><br>Plate, timing           | <a href="#">Buy now</a> |
| 15  | <a href="#">97885-06010</a><br>Screw pan head           | <a href="#">Buy now</a> |

# Generator

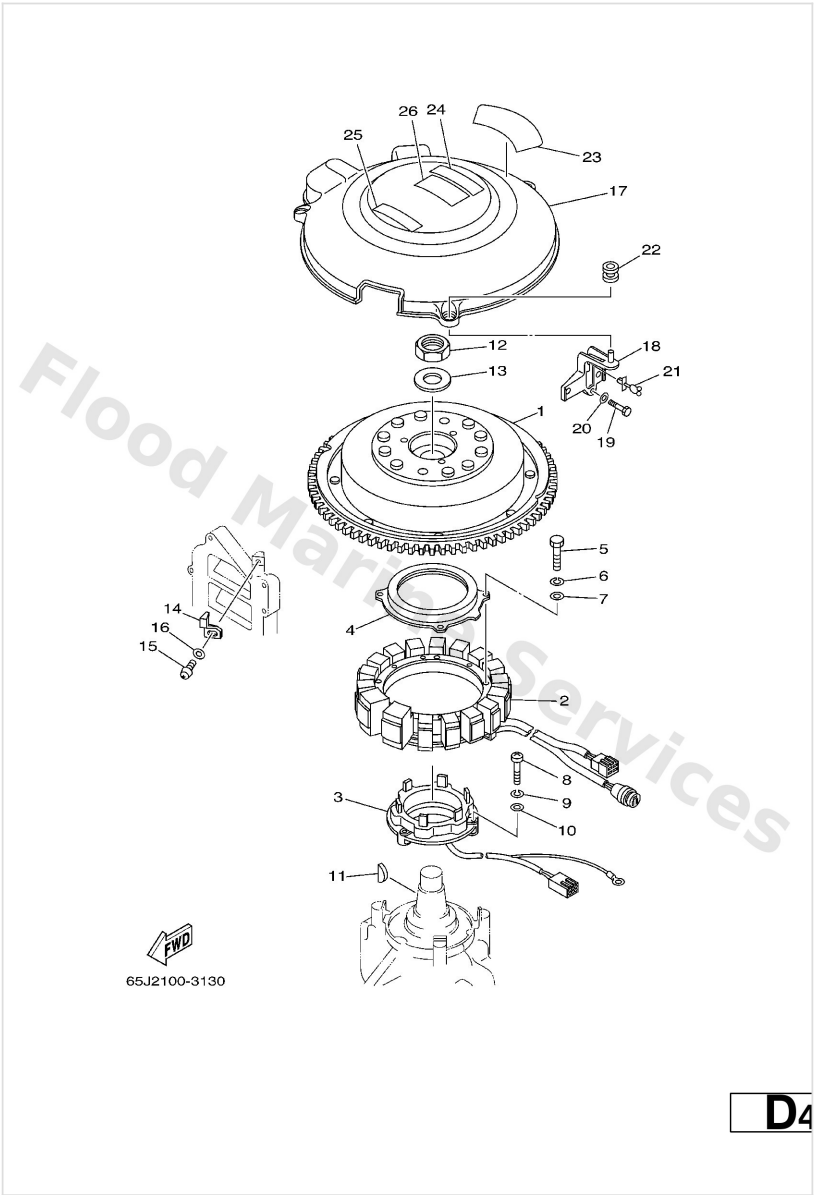 


| Ref | Part                                                  |                         |
|-----|-------------------------------------------------------|-------------------------|
| 16  | <a href="#">92995-06600</a><br>Washer, plain (646)    | <a href="#">Buy now</a> |
| 17  | <a href="#">61A-81337-01</a><br>Cover, flywheel       | <a href="#">Buy now</a> |
| 18  | <a href="#">65L-81338-00-1S</a><br>Clamp, Lead        | <a href="#">Buy now</a> |
| 19  | <a href="#">97013-06025</a><br>Bolt(62y)              | <a href="#">Buy now</a> |
| 21  | <a href="#">90464-18M46</a><br>Clamp(65j)             | <a href="#">Buy now</a> |
| 22  | <a href="#">663-82317-01</a><br>Damper, ignition coil | <a href="#">Buy now</a> |
| 23  | <a href="#">65L-14488-00</a><br>Label, Caution        | <a href="#">Buy now</a> |
| 24  | <a href="#">6A1-83625-41</a><br>Mark 5                | <a href="#">Buy now</a> |
| 25  | <a href="#">6K1-83623-41</a><br>Mark 3                | <a href="#">Buy now</a> |
| 26  | <a href="#">6A1-83625-51</a><br>Mark 5<br>FOR CANADA  | <a href="#">Buy now</a> |

# Intake

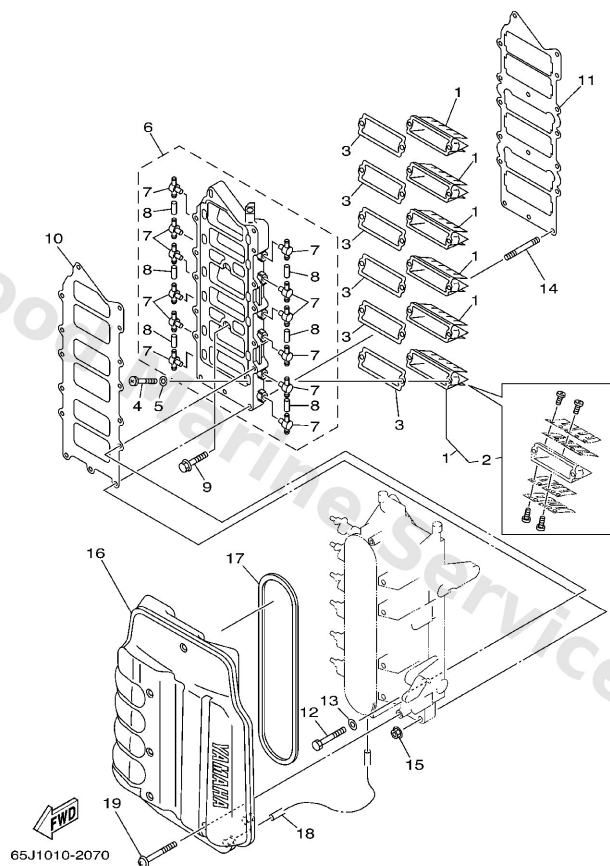 

| Ref | Part                                                 |                         |
|-----|------------------------------------------------------|-------------------------|
| 1   | <a href="#">65J-13610-01</a><br>Reed Valve assembly  | <a href="#">Buy now</a> |
| 1   | <a href="#">65L-13610-01</a><br>Reed valve assembly  | <a href="#">Buy now</a> |
| 2   | <a href="#">65J-W0004-01</a><br>Reed set             | <a href="#">Buy now</a> |
| 3   | <a href="#">61A-13621-A0</a><br>Gasket, valve seat   | <a href="#">Buy now</a> |
| 4   | <a href="#">97880-05016</a><br>Screw, pan head(6b0)  | <a href="#">Buy now</a> |
| 5   | <a href="#">92990-05600</a><br>Washer, plain (646)   | <a href="#">Buy now</a> |
| 6   | <a href="#">65L-13624-01-1S</a><br>Plate, Reed Valve | <a href="#">Buy now</a> |
| 7   | <a href="#">6F6-11372-00</a><br>Nipple, hose         | <a href="#">Buy now</a> |
| 8   | <a href="#">90445-07M03</a><br>Hose (I200)           | <a href="#">Buy now</a> |
| 9   | <a href="#">90105-06028</a><br>Bolt, washer based    | <a href="#">Buy now</a> |
| 10  | <a href="#">65L-13646-00</a><br>Gasket, manifold 2   | <a href="#">Buy now</a> |
| 11  | <a href="#">65L-13645-00</a><br>Gasket, manifold 1   | <a href="#">Buy now</a> |
| 12  | <a href="#">97013-06060</a><br>Bolt, hexagon         | <a href="#">Buy now</a> |
| 13  | <a href="#">92903-06600</a><br>Washer, plain (646)   | <a href="#">Buy now</a> |
| 14  | <a href="#">95670-06655</a><br>Bolt, Stud            | <a href="#">Buy now</a> |


# Intake

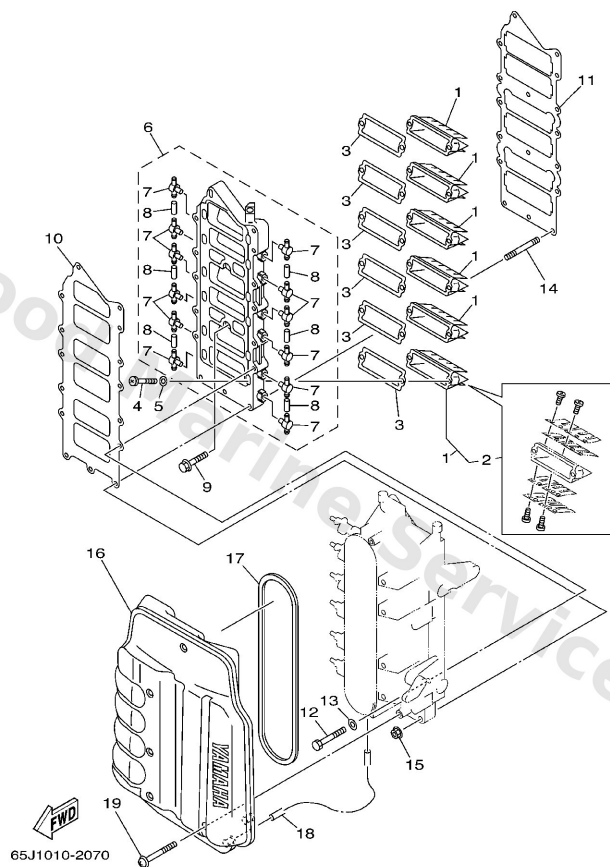 

C2


| Ref | Part                                                      |                         |
|-----|-----------------------------------------------------------|-------------------------|
| 15  | <a href="#">90179-06M24</a><br>Nut(6j8)                   | <a href="#">Buy now</a> |
| 16  | <a href="#">65L-14440-00</a><br>Silencer assembly, intake | <a href="#">Buy now</a> |
| 17  | <a href="#">65L-14483-00</a><br>Gasket                    | <a href="#">Buy now</a> |
| 18  | <a href="#">90445-07M44</a><br>Hose (I390)                | <a href="#">Buy now</a> |
| 19  | <a href="#">90159-06M16</a><br>Screw, with washer(61a)    | <a href="#">Buy now</a> |

## Lower Casing. Drive 1

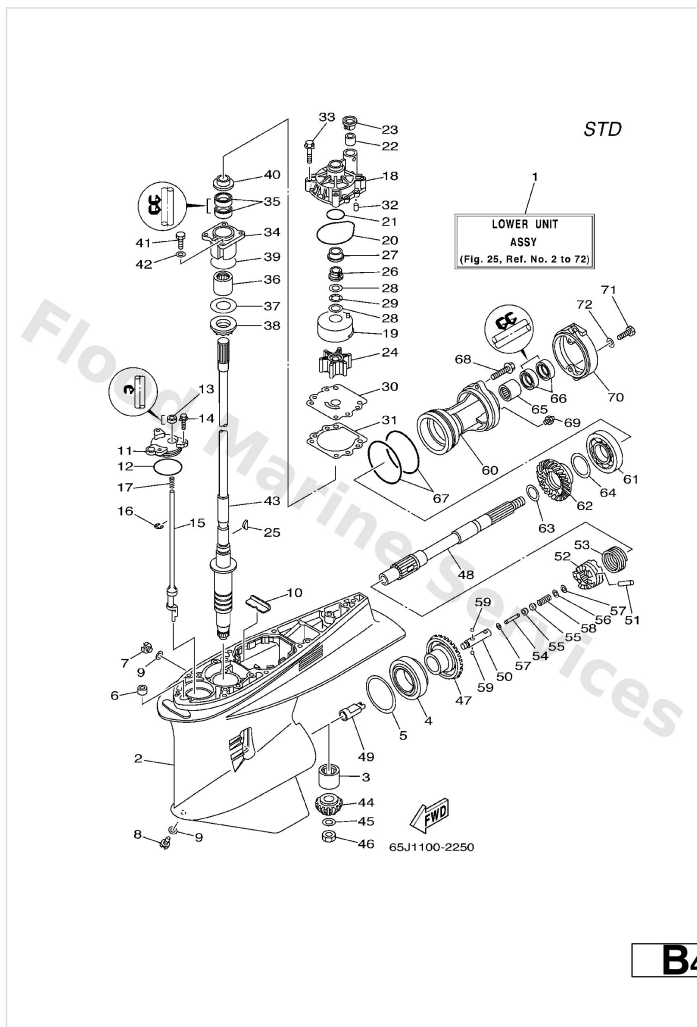 


| Ref | Part                                                        |                         |
|-----|-------------------------------------------------------------|-------------------------|
| 1   | <a href="#">65J-45300-21-8D</a><br>Lower unit assembly<br>X | <a href="#">Buy now</a> |
| 1   | <a href="#">65J-45300-31-8D</a><br>Lower Unit assembly<br>U | <a href="#">Buy now</a> |
| 2   | <a href="#">61A-45301-10-8D</a><br>Casing, lower            | <a href="#">Buy now</a> |
| 3   | <a href="#">93311-832V2</a><br>Ball bearing                 | <a href="#">Buy now</a> |
| 4   | <a href="#">93332-000W1</a><br>Bearing(61a)                 | <a href="#">Buy now</a> |
| 5   | <a href="#">61A-45567-00-10</a><br>Shim (t:0.10mm)<br>UR    | <a href="#">Buy now</a> |
| 5   | <a href="#">61A-45567-00-12</a><br>Shim (t:0.12mm)<br>UR    | <a href="#">Buy now</a> |
| 5   | <a href="#">61A-45567-00-15</a><br>Shim (t:0.15mm)<br>UR    | <a href="#">Buy now</a> |
| 5   | <a href="#">61A-45567-00-18</a><br>Shim (t:0.18mm)<br>UR    | <a href="#">Buy now</a> |
| 5   | <a href="#">61A-45567-00-30</a><br>Shim (t:0.30mm)<br>UR    | <a href="#">Buy now</a> |
| 5   | <a href="#">61A-45567-00-40</a><br>Shim (t:0.40mm)<br>UR    | <a href="#">Buy now</a> |
| 5   | <a href="#">61A-45567-00-50</a><br>Shim (t:0.50mm)<br>UR    | <a href="#">Buy now</a> |
| 6   | <a href="#">663-44366-00</a><br>Damper, water seal 2        | <a href="#">Buy now</a> |
| 7   | <a href="#">90340-08002</a><br>Plug, straight screw         | <a href="#">Buy now</a> |
| 8   | <a href="#">688-45341-10</a><br>Plug, drain                 | <a href="#">Buy now</a> |

## Lower Casing. Drive 1

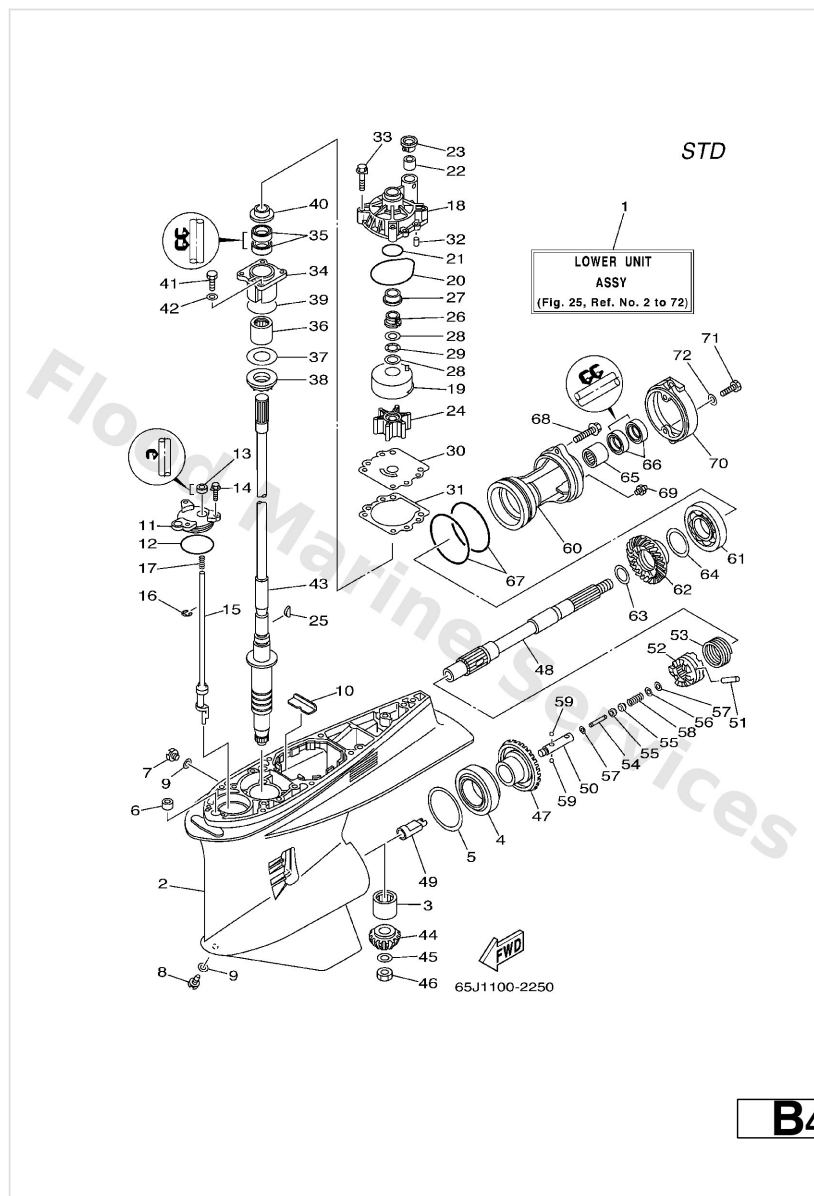 

| Ref | Part                                                      |                         |
|-----|-----------------------------------------------------------|-------------------------|
| 9   | <a href="#">90430-08020</a><br>Gasket                     | <a href="#">Buy now</a> |
| 10  | <a href="#">61A-45376-00-94</a><br>Guide, seal damper     | <a href="#">Buy now</a> |
| 11  | <a href="#">61A-45321-01</a><br>Plate                     | <a href="#">Buy now</a> |
| 12  | <a href="#">93210-64488</a><br>93210-64488                | <a href="#">Buy now</a> |
| 13  | <a href="#">93106-09014</a><br>Oil seal                   | <a href="#">Buy now</a> |
| 14  | <a href="#">90119-06M10</a><br>Bolt, with washer          | <a href="#">Buy now</a> |
| 15  | <a href="#">60V-44150-00</a><br>Shift cam assembly        | <a href="#">Buy now</a> |
| 16  | <a href="#">99001-08600</a><br>Circlip(2r6)               | <a href="#">Buy now</a> |
| 17  | <a href="#">90501-11M10</a><br>Spring, compression (663)  | <a href="#">Buy now</a> |
| 18  | <a href="#">61A-44311-01</a><br>Housing, water pump       | <a href="#">Buy now</a> |
| 19  | <a href="#">61A-44322-02</a><br>Insert, cartridge         | <a href="#">Buy now</a> |
| 20  | <a href="#">93210-86M38</a><br>O-ring (6e5)               | <a href="#">Buy now</a> |
| 21  | <a href="#">93210-37160</a><br>O-ring (6g8)               | <a href="#">Buy now</a> |
| 22  | <a href="#">6E5-44365-00</a><br>Damper, water seal 1      | <a href="#">Buy now</a> |
| 23  | <a href="#">6E5-44312-00</a><br>Cover, water pump housing | <a href="#">Buy now</a> |


## Lower Casing. Drive 1

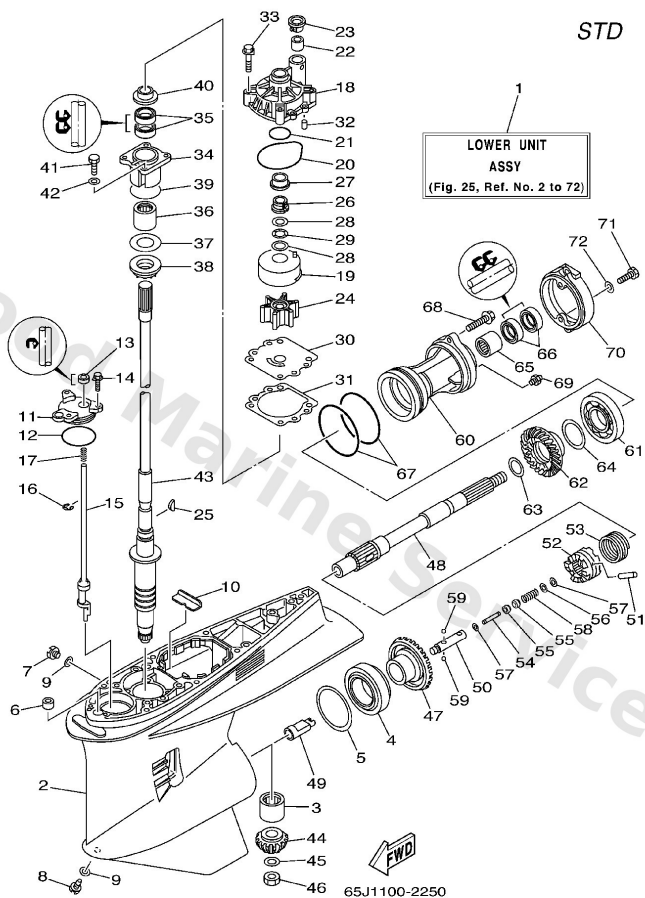 

B4


| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 24  | <a href="#">6E5-44352-01</a><br>Impeller                 | <a href="#">Buy now</a> |
| 25  | <a href="#">90280-04M05</a><br>Key, woodruff (6e5)       | <a href="#">Buy now</a> |
| 26  | <a href="#">61A-45538-00</a><br>Spacer, 1                | <a href="#">Buy now</a> |
| 27  | <a href="#">61A-45527-00</a><br>Collar, drive shaft      | <a href="#">Buy now</a> |
| 28  | <a href="#">90201-22M01</a><br>Washer, plate(61a)        | <a href="#">Buy now</a> |
| 29  | <a href="#">90206-22M19</a><br>Washer, wave(61a)         | <a href="#">Buy now</a> |
| 30  | <a href="#">6G5-44323-00</a><br>Outer plate, cartridge   | <a href="#">Buy now</a> |
| 31  | <a href="#">6E5-44315-A0</a><br>Gasket,water pump        | <a href="#">Buy now</a> |
| 32  | <a href="#">93606-12019</a><br>Pin, dowel (614)          | <a href="#">Buy now</a> |
| 33  | <a href="#">90119-08M14</a><br>Bolt, with washer         | <a href="#">Buy now</a> |
| 34  | <a href="#">61A-45331-00-94</a><br>Housing, bearing      | <a href="#">Buy now</a> |
| 35  | <a href="#">93101-28M16</a><br>Oil seal (6e5)            | <a href="#">Buy now</a> |
| 36  | <a href="#">93317-330U2</a><br>Bearing, cylindrical(6k0) | <a href="#">Buy now</a> |
| 37  | <a href="#">61A-45587-00-10</a><br>Shim (t:0.10mm)<br>UR | <a href="#">Buy now</a> |
| 37  | <a href="#">61A-45587-00-12</a><br>Shim (t:0.12mm)<br>UR | <a href="#">Buy now</a> |

## Lower Casing. Drive 1

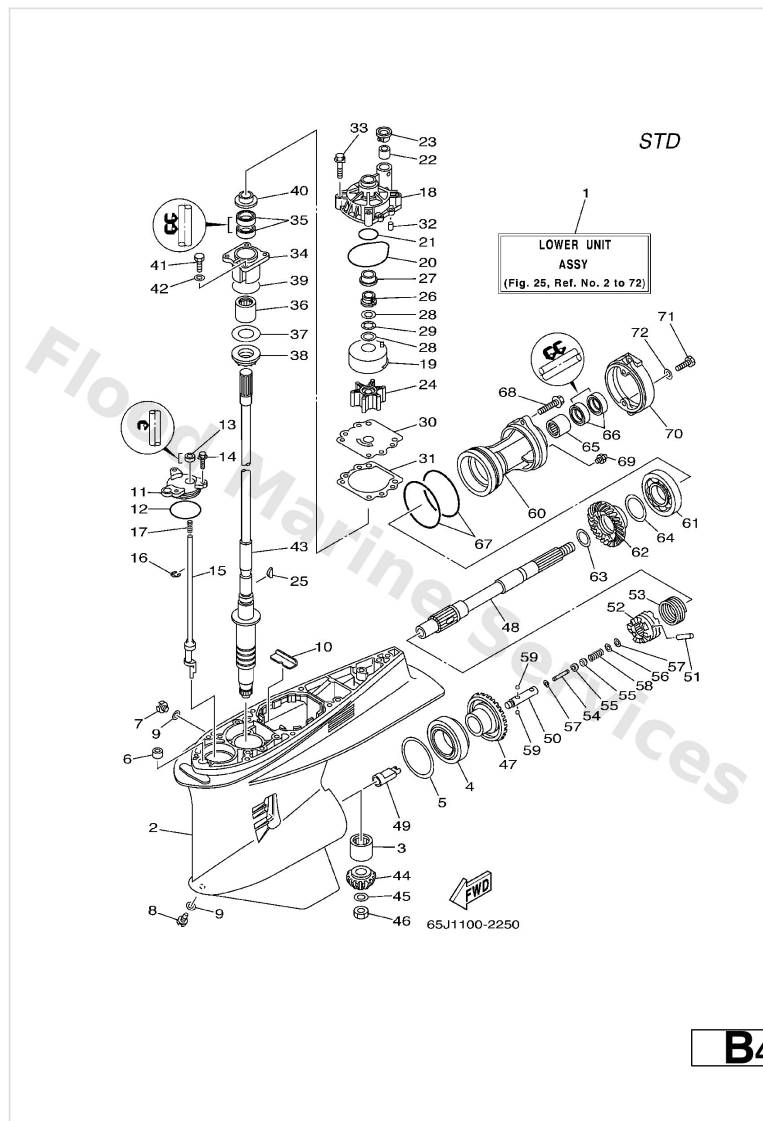 


| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 37  | <a href="#">61A-45587-00-15</a><br>Shim (t:0.15mm)<br>UR | <a href="#">Buy now</a> |
| 37  | <a href="#">61A-45587-00-18</a><br>Shim (t:0.18mm)<br>UR | <a href="#">Buy now</a> |
| 37  | <a href="#">61A-45587-00-30</a><br>Shim (t:0.30mm)<br>UR | <a href="#">Buy now</a> |
| 37  | <a href="#">61A-45587-00-40</a><br>Shim (t:0.40mm)<br>UR | <a href="#">Buy now</a> |
| 37  | <a href="#">61A-45587-00-50</a><br>Shim (t:0.50mm)<br>UR | <a href="#">Buy now</a> |
| 38  | <a href="#">93341-930U9</a><br>Bearing                   | <a href="#">Buy now</a> |
| 39  | <a href="#">93210-55M14</a><br>O-ring (70e)              | <a href="#">Buy now</a> |
| 40  | <a href="#">6E5-45344-00</a><br>Cover, oil seal          | <a href="#">Buy now</a> |
| 41  | <a href="#">97095-08025</a><br>Bolt (62g)                | <a href="#">Buy now</a> |
| 42  | <a href="#">92995-08600</a><br>Washer, plain (663)       | <a href="#">Buy now</a> |
| 43  | <a href="#">61A-45501-20</a><br>Drive shaft comp.<br>X   | <a href="#">Buy now</a> |
| 43  | <a href="#">61A-45501-30</a><br>Drive shaft comp.<br>U   | <a href="#">Buy now</a> |
| 44  | <a href="#">61A-45551-03</a><br>Pinion                   | <a href="#">Buy now</a> |
| 45  | <a href="#">90201-16M00</a><br>Washer, plate(6t5)        | <a href="#">Buy now</a> |
| 46  | <a href="#">90170-16M19</a><br>Nut(6t5)                  | <a href="#">Buy now</a> |

## Lower Casing. Drive 1

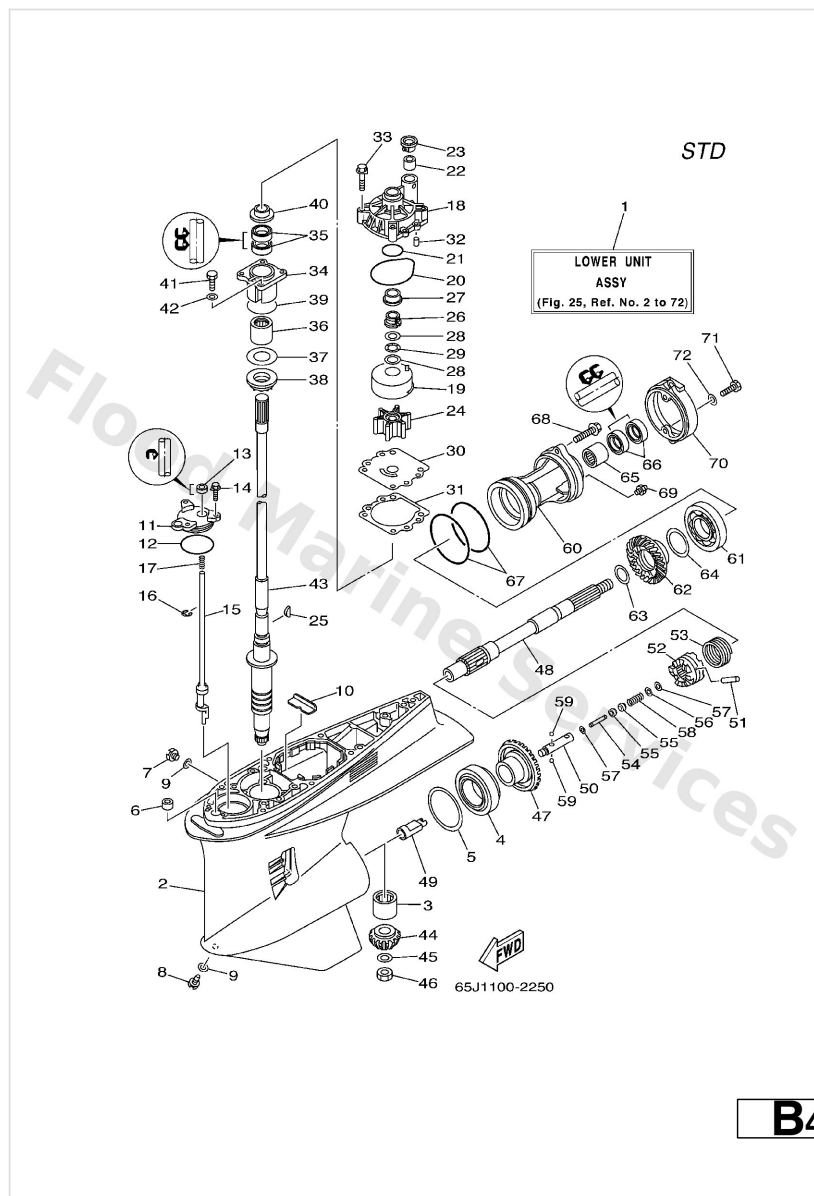 


| Ref | Part                                                    |                         |
|-----|---------------------------------------------------------|-------------------------|
| 47  | <a href="#">61A-45560-03</a><br>Gear                    | <a href="#">Buy now</a> |
| 48  | <a href="#">69J-45611-00</a><br>Shaft, propeller        | <a href="#">Buy now</a> |
| 49  | <a href="#">61A-45641-02</a><br>Shifter                 | <a href="#">Buy now</a> |
| 50  | <a href="#">61A-45634-01</a><br>Slide, shift            | <a href="#">Buy now</a> |
| 51  | <a href="#">61A-45632-00</a><br>Pin, cross              | <a href="#">Buy now</a> |
| 52  | <a href="#">61A-45631-03</a><br>Clutch, dog             | <a href="#">Buy now</a> |
| 53  | <a href="#">61A-45633-00</a><br>Ring, cross pin         | <a href="#">Buy now</a> |
| 54  | <a href="#">6H1-45668-00</a><br>Shaft, free 1           | <a href="#">Buy now</a> |
| 55  | <a href="#">61A-45635-00</a><br>Plunger, shift          | <a href="#">Buy now</a> |
| 56  | <a href="#">90201-02M00</a><br>Washer, plate(61a)       | <a href="#">Buy now</a> |
| 57  | <a href="#">90183-02M03</a><br>Nut, spring (6h1)        | <a href="#">Buy now</a> |
| 58  | <a href="#">90501-10M77</a><br>Spring, compression(61a) | <a href="#">Buy now</a> |
| 59  | <a href="#">93501-04011</a><br>Ball                     | <a href="#">Buy now</a> |
| 60  | <a href="#">61A-45332-02-94</a><br>Housing, bearing     | <a href="#">Buy now</a> |
| 61  | <a href="#">93306-210U0</a><br>Bearing(61a)             | <a href="#">Buy now</a> |

# Lower Casing. Drive 1

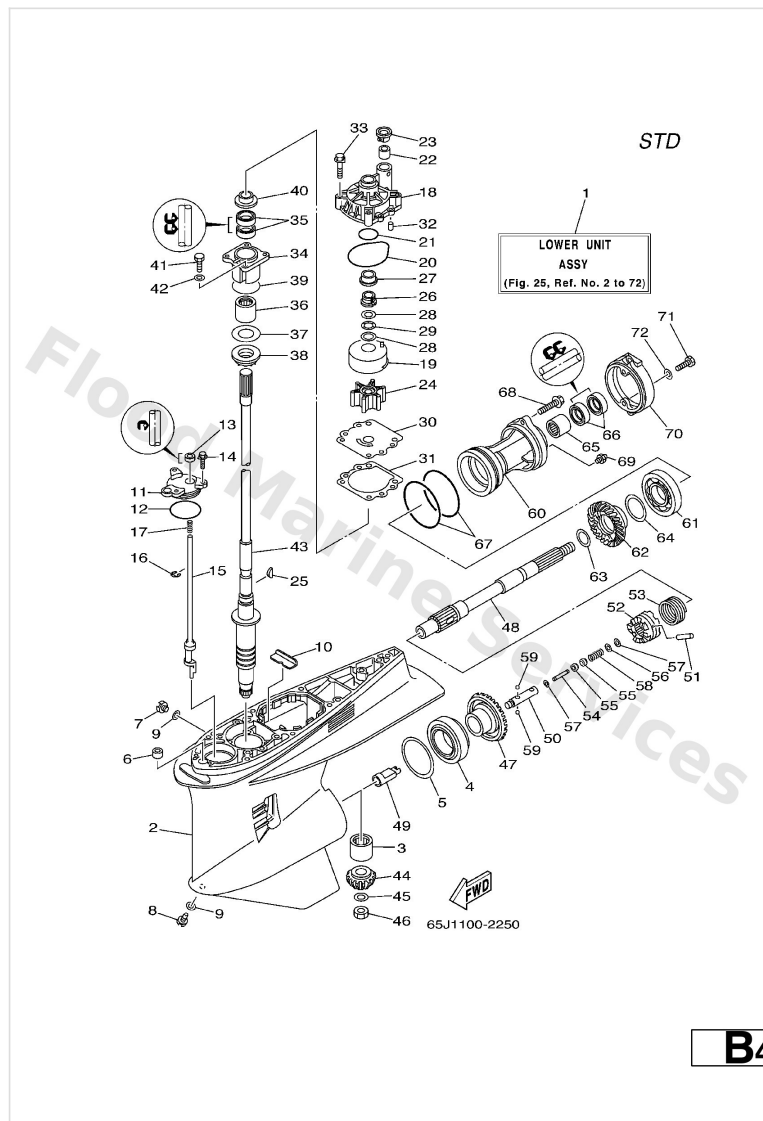 

| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 62  | <a href="#">61A-45571-00</a><br>Gear                     | <a href="#">Buy now</a> |
| 63  | <a href="#">90201-31M00</a><br>Washer, plate(61a)        | <a href="#">Buy now</a> |
| 64  | <a href="#">61A-45577-00-10</a><br>Shim (t:0.10mm)<br>UR | <a href="#">Buy now</a> |
| 64  | <a href="#">61A-45577-00-12</a><br>Shim (t:0.12mm)<br>UR | <a href="#">Buy now</a> |
| 64  | <a href="#">61A-45577-00-15</a><br>Shim (t:0.15mm)<br>UR | <a href="#">Buy now</a> |
| 64  | <a href="#">61A-45577-00-18</a><br>Shim (t:0.18mm)<br>UR | <a href="#">Buy now</a> |
| 64  | <a href="#">61A-45577-00-30</a><br>Shim (t:0.30mm)<br>UR | <a href="#">Buy now</a> |
| 64  | <a href="#">61A-45577-00-40</a><br>Shim (t:0.40mm)<br>UR | <a href="#">Buy now</a> |
| 64  | <a href="#">61A-45577-00-50</a><br>Shim (t:0.50mm)<br>UR | <a href="#">Buy now</a> |
| 65  | <a href="#">93317-330U5</a><br>Bearing                   | <a href="#">Buy now</a> |
| 66  | <a href="#">93101-30M17</a><br>Oil seal (6e5)            | <a href="#">Buy now</a> |
| 67  | <a href="#">93211-04384</a><br>O-ring (705)              | <a href="#">Buy now</a> |
| 68  | <a href="#">90105-08M48</a><br>Bolt, Flange              | <a href="#">Buy now</a> |
| 69  | <a href="#">93700-09M00</a><br>Nipple, grease(6t4)       | <a href="#">Buy now</a> |
| 70  | <a href="#">61A-45361-01-5B</a><br>Cap, lower casing     | <a href="#">Buy now</a> |


# Lower Casing. Drive 1

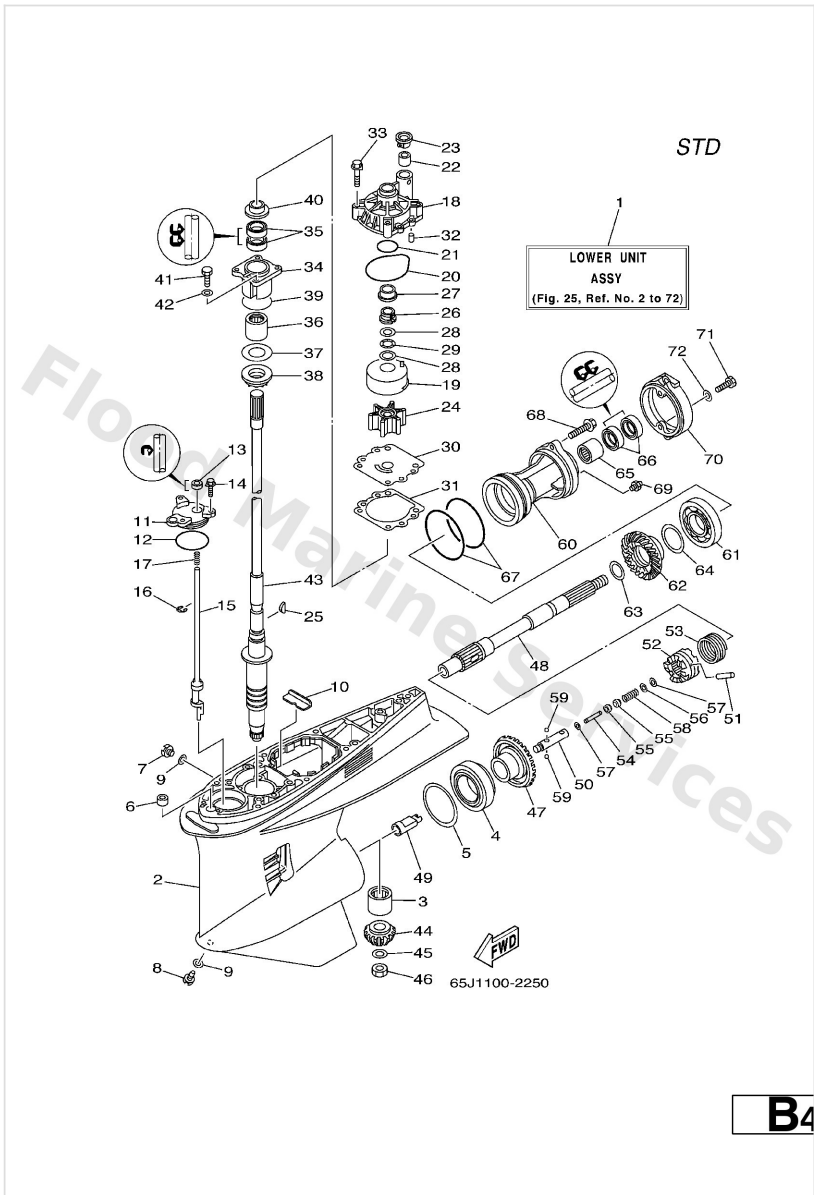 

| Ref | Part                                         |                         |
|-----|----------------------------------------------|-------------------------|
| 71  | <a href="#">97095-08020</a><br>Bolt, hexagon | <a href="#">Buy now</a> |

## Lower Casing. Drive 2

 STD

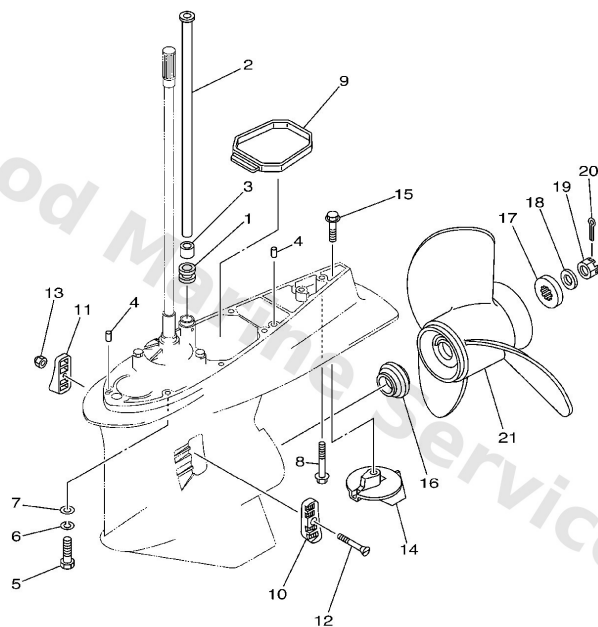


65J2100-3260

C1

| Ref | Part                                                   |                         |
|-----|--------------------------------------------------------|-------------------------|
| 1   | <a href="#">6E5-44366-00</a><br>Damper, water seal 2   | <a href="#">Buy now</a> |
| 2   | <a href="#">61A-44361-20</a><br>Tube, water<br>X       | <a href="#">Buy now</a> |
| 2   | <a href="#">61A-44361-30</a><br>Tube, water<br>U       | <a href="#">Buy now</a> |
| 3   | <a href="#">6E5-44365-00</a><br>Damper, water seal 1   | <a href="#">Buy now</a> |
| 4   | <a href="#">93608-12M05</a><br>Pin, dowel b (6e5)      | <a href="#">Buy now</a> |
| 5   | <a href="#">97095-10045</a><br>Bolt(64d)               | <a href="#">Buy now</a> |
| 6   | <a href="#">92995-10100</a><br>Ybs67-10 washer, spring | <a href="#">Buy now</a> |
| 7   | <a href="#">92995-10600</a><br>Washer, plate           | <a href="#">Buy now</a> |
| 8   | <a href="#">90119-10MA2</a><br>Bolt, with washer       | <a href="#">Buy now</a> |
| 9   | <a href="#">61A-45375-00</a><br>Damper, seal           | <a href="#">Buy now</a> |
| 10  | <a href="#">61A-45214-10</a><br>Cover, water inlet 1   | <a href="#">Buy now</a> |
| 11  | <a href="#">61A-45215-10</a><br>Cover, water inlet 2   | <a href="#">Buy now</a> |
| 12  | <a href="#">90152-05003</a><br>Screw, countersunk      | <a href="#">Buy now</a> |
| 13  | <a href="#">90185-05002</a><br>Nut nylon (sus)(ex4)    | <a href="#">Buy now</a> |
| 14  | <a href="#">61A-45371-00</a><br>Anode                  | <a href="#">Buy now</a> |

## Lower Casing. Drive 2

 STD

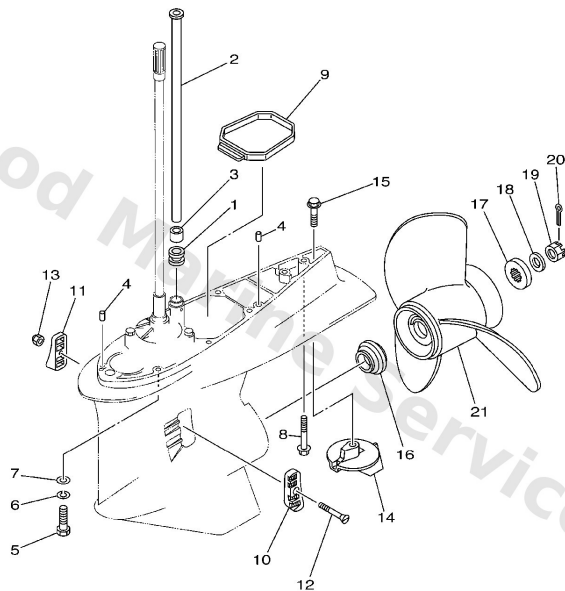


65J2100-3260

C1


| Ref | Part                                                                  |                         |
|-----|-----------------------------------------------------------------------|-------------------------|
| 15  | <a href="#">90105-10M00</a><br>Bolt, hexagon (663)                    | <a href="#">Buy now</a> |
| 16  | <a href="#">6E5-45987-01</a><br>Spacer 1                              | <a href="#">Buy now</a> |
| 17  | <a href="#">688-45997-01</a><br>Spacer 2                              | <a href="#">Buy now</a> |
| 18  | <a href="#">92990-18200</a><br>Washer (6e5)                           | <a href="#">Buy now</a> |
| 19  | <a href="#">90171-18M04</a><br>Nut, castle (6e5)                      | <a href="#">Buy now</a> |
| 20  | <a href="#">91490-40030</a><br>Pin, cotter (663)                      | <a href="#">Buy now</a> |
| 21  | <a href="#">61A-45972-00-98</a><br>Propeller (3x14-1/2"x21"-t)<br>UR  | <a href="#">Buy now</a> |
| 21  | <a href="#">61A-45974-00-98</a><br>Propeller (3x14-1/2"x19"-t)<br>UR  | <a href="#">Buy now</a> |
| 21  | <a href="#">6G5-45970-02-98</a><br>Propeller (3x15-1/4 x15 -m)<br>UR  | <a href="#">Buy now</a> |
| 21  | <a href="#">6G5-45972-02-98</a><br>Propeller (3x13-3/4 x21 -m)<br>UR  | <a href="#">Buy now</a> |
| 21  | <a href="#">6G5-45974-03-98</a><br>Propeller (3x13-3/4"x19"-m2)<br>UR | <a href="#">Buy now</a> |
| 21  | <a href="#">6G5-45978-03-98</a><br>Propeller (3x13-3/4"x17"-m2)<br>UR | <a href="#">Buy now</a> |
| 21  | <a href="#">61A-45978-00-98</a><br>Propeller (3x15"x17"-t)<br>UR      | <a href="#">Buy now</a> |
| 21  | <a href="#">66K-45972-B0</a><br>Prop (3X14-1/2"X25"-M2)<br>UR         | <a href="#">Buy now</a> |

## Lower Casing. Drive 3

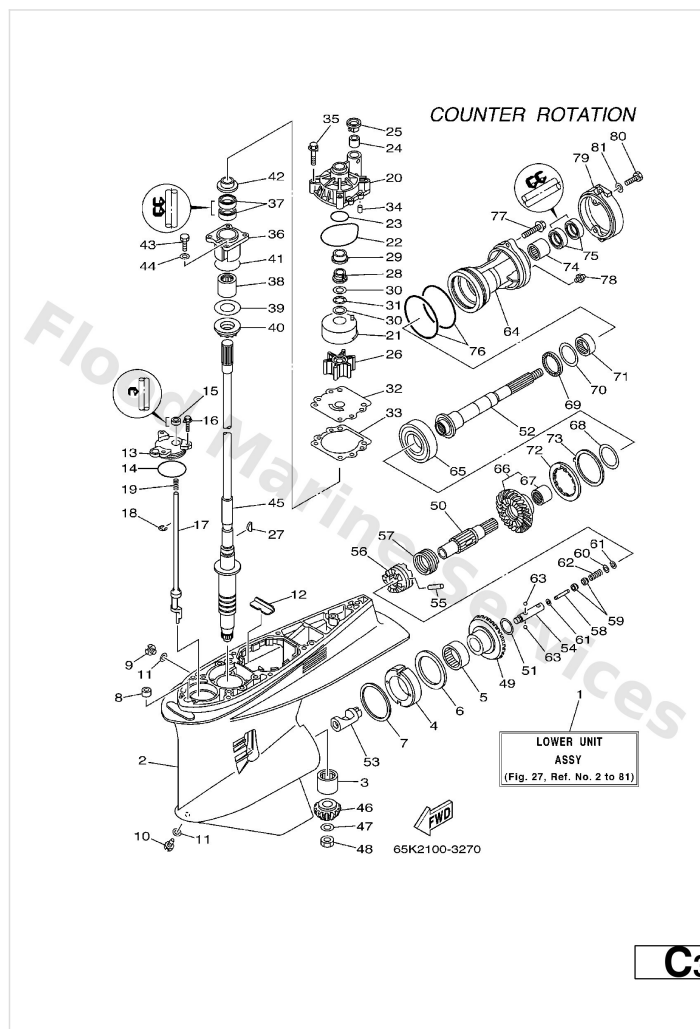 


| Ref | Part                                                        |                         |
|-----|-------------------------------------------------------------|-------------------------|
| 1   | <a href="#">65K-45300-21-8D</a><br>Lower unit assembly<br>X | <a href="#">Buy now</a> |
| 1   | <a href="#">65K-45300-31-8D</a><br>Lower Unit assembly<br>U | <a href="#">Buy now</a> |
| 2   | <a href="#">61A-45301-10-8D</a><br>Casing, lower            | <a href="#">Buy now</a> |
| 3   | <a href="#">93311-832V2</a><br>Ball bearing                 | <a href="#">Buy now</a> |
| 4   | <a href="#">61B-45538-01</a><br>Spacer 1                    | <a href="#">Buy now</a> |
| 5   | <a href="#">93315-660W3</a><br>Bearing, cylindrical(61b)    | <a href="#">Buy now</a> |
| 6   | <a href="#">93341-670V0</a><br>Bearing, thrust (61b)        | <a href="#">Buy now</a> |
| 7   | <a href="#">61A-45567-00-10</a><br>Shim (t:0.10mm)<br>UR    | <a href="#">Buy now</a> |
| 7   | <a href="#">61A-45567-00-12</a><br>Shim (t:0.12mm)<br>UR    | <a href="#">Buy now</a> |
| 7   | <a href="#">61A-45567-00-15</a><br>Shim (t:0.15mm)<br>UR    | <a href="#">Buy now</a> |
| 7   | <a href="#">61A-45567-00-18</a><br>Shim (t:0.18mm)<br>UR    | <a href="#">Buy now</a> |
| 7   | <a href="#">61A-45567-00-30</a><br>Shim (t:0.30mm)<br>UR    | <a href="#">Buy now</a> |
| 7   | <a href="#">61A-45567-00-40</a><br>Shim (t:0.40mm)<br>UR    | <a href="#">Buy now</a> |
| 7   | <a href="#">61A-45567-00-50</a><br>Shim (t:0.50mm)<br>UR    | <a href="#">Buy now</a> |
| 8   | <a href="#">663-44366-00</a><br>Damper, water seal 2        | <a href="#">Buy now</a> |

## Lower Casing. Drive 3

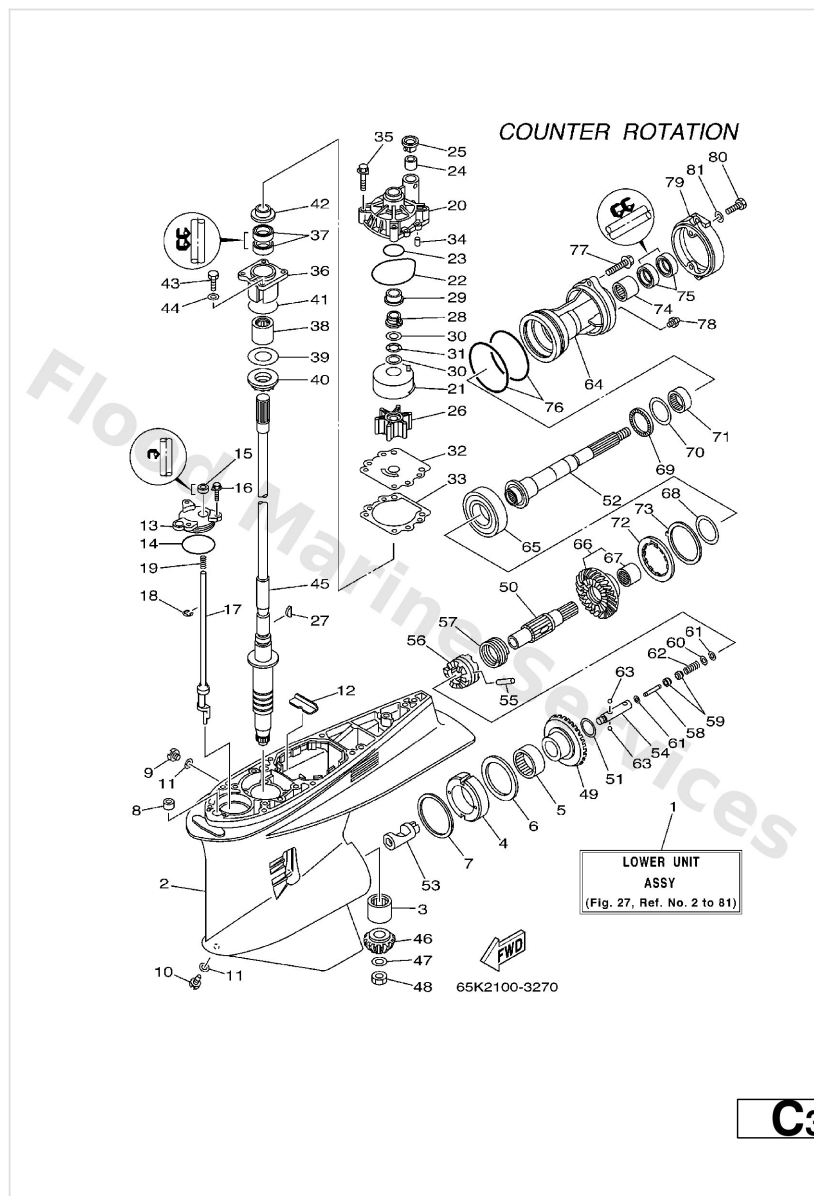 


| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 9   | <a href="#">90340-08002</a><br>Plug, straight screw      | <a href="#">Buy now</a> |
| 10  | <a href="#">688-45341-10</a><br>Plug, drain              | <a href="#">Buy now</a> |
| 11  | <a href="#">90430-08020</a><br>Gasket                    | <a href="#">Buy now</a> |
| 12  | <a href="#">61A-45376-00-94</a><br>Guide, seal damper    | <a href="#">Buy now</a> |
| 13  | <a href="#">61A-45321-01</a><br>Plate                    | <a href="#">Buy now</a> |
| 14  | <a href="#">93210-64488</a><br>93210-64488               | <a href="#">Buy now</a> |
| 15  | <a href="#">93106-09014</a><br>Oil seal                  | <a href="#">Buy now</a> |
| 16  | <a href="#">90119-06M10</a><br>Bolt, with washer         | <a href="#">Buy now</a> |
| 17  | <a href="#">60W-44150-00</a><br>Shift cam assembly       | <a href="#">Buy now</a> |
| 18  | <a href="#">99001-08600</a><br>Circlip(2r6)              | <a href="#">Buy now</a> |
| 19  | <a href="#">90501-11M10</a><br>Spring, compression (663) | <a href="#">Buy now</a> |
| 20  | <a href="#">61A-44311-01</a><br>Housing, water pump      | <a href="#">Buy now</a> |
| 21  | <a href="#">61A-44322-02</a><br>Insert, cartridge        | <a href="#">Buy now</a> |
| 22  | <a href="#">93210-86M38</a><br>O-ring (6e5)              | <a href="#">Buy now</a> |
| 23  | <a href="#">93210-37160</a><br>O-ring (6g8)              | <a href="#">Buy now</a> |

## Lower Casing. Drive 3

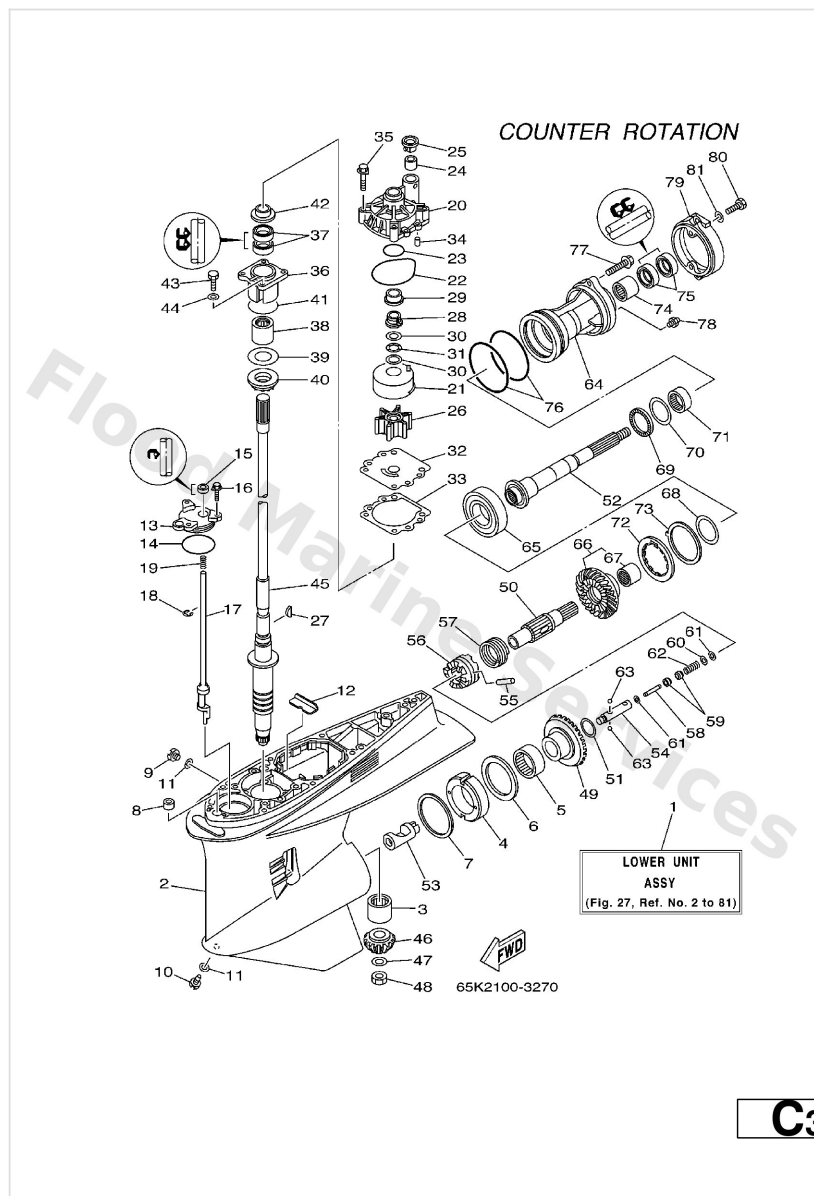 


| Ref | Part                                                      |                         |
|-----|-----------------------------------------------------------|-------------------------|
| 24  | <a href="#">6E5-44365-00</a><br>Damper, water seal 1      | <a href="#">Buy now</a> |
| 25  | <a href="#">6E5-44312-00</a><br>Cover, water pump housing | <a href="#">Buy now</a> |
| 26  | <a href="#">6E5-44352-01</a><br>Impeller                  | <a href="#">Buy now</a> |
| 27  | <a href="#">90280-04M05</a><br>Key, woodruff (6e5)        | <a href="#">Buy now</a> |
| 28  | <a href="#">61A-45538-00</a><br>Spacer, 1                 | <a href="#">Buy now</a> |
| 29  | <a href="#">61A-45527-00</a><br>Collar, drive shaft       | <a href="#">Buy now</a> |
| 30  | <a href="#">90201-22M01</a><br>Washer, plate(61a)         | <a href="#">Buy now</a> |
| 31  | <a href="#">90206-22M19</a><br>Washer, wave(61a)          | <a href="#">Buy now</a> |
| 32  | <a href="#">6G5-44323-00</a><br>Outer plate, cartridge    | <a href="#">Buy now</a> |
| 33  | <a href="#">6E5-44315-A0</a><br>Gasket,water pump         | <a href="#">Buy now</a> |
| 34  | <a href="#">93606-12019</a><br>Pin, dowel (614)           | <a href="#">Buy now</a> |
| 35  | <a href="#">90119-08M14</a><br>Bolt, with washer          | <a href="#">Buy now</a> |
| 36  | <a href="#">61A-45331-00-94</a><br>Housing, bearing       | <a href="#">Buy now</a> |
| 37  | <a href="#">93101-28M16</a><br>Oil seal (6e5)             | <a href="#">Buy now</a> |
| 38  | <a href="#">93317-330U2</a><br>Bearing, cylindrical(6k0)  | <a href="#">Buy now</a> |

## Lower Casing. Drive 3

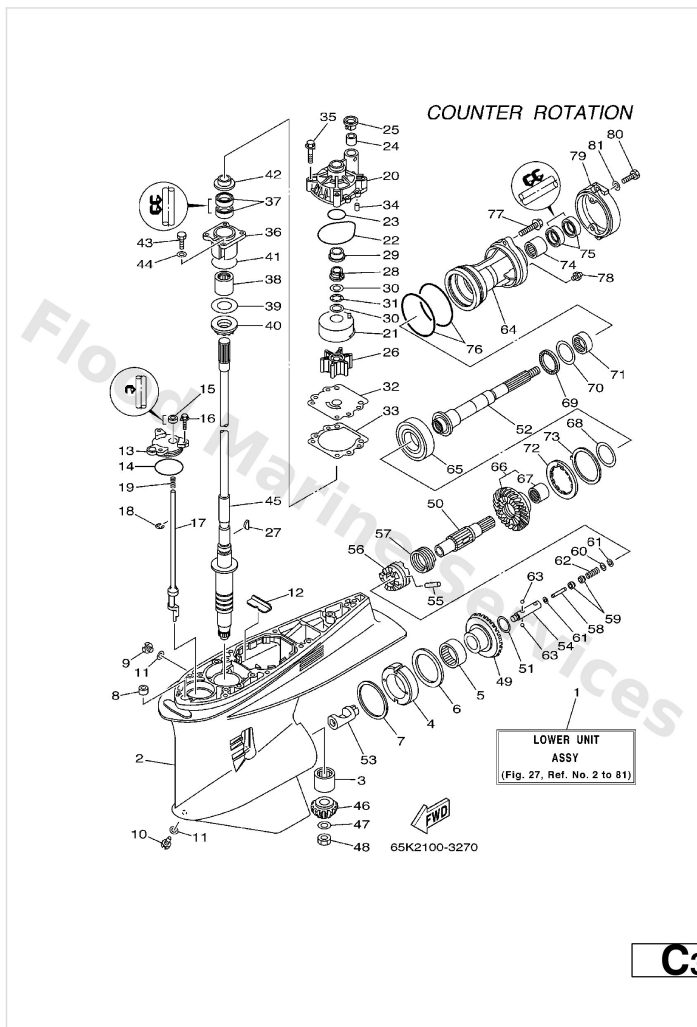 


| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 39  | <a href="#">61A-45587-00-10</a><br>Shim (t:0.10mm)<br>UR | <a href="#">Buy now</a> |
| 39  | <a href="#">61A-45587-00-12</a><br>Shim (t:0.12mm)<br>UR | <a href="#">Buy now</a> |
| 39  | <a href="#">61A-45587-00-15</a><br>Shim (t:0.15mm)<br>UR | <a href="#">Buy now</a> |
| 39  | <a href="#">61A-45587-00-18</a><br>Shim (t:0.18mm)<br>UR | <a href="#">Buy now</a> |
| 39  | <a href="#">61A-45587-00-30</a><br>Shim (t:0.30mm)<br>UR | <a href="#">Buy now</a> |
| 39  | <a href="#">61A-45587-00-40</a><br>Shim (t:0.40mm)<br>UR | <a href="#">Buy now</a> |
| 39  | <a href="#">61A-45587-00-50</a><br>Shim (t:0.50mm)<br>UR | <a href="#">Buy now</a> |
| 40  | <a href="#">93341-930U9</a><br>Bearing                   | <a href="#">Buy now</a> |
| 41  | <a href="#">93210-55M14</a><br>O-ring (70e)              | <a href="#">Buy now</a> |
| 42  | <a href="#">6E5-45344-00</a><br>Cover, oil seal          | <a href="#">Buy now</a> |
| 43  | <a href="#">97095-08025</a><br>Bolt (62g)                | <a href="#">Buy now</a> |
| 44  | <a href="#">92995-08600</a><br>Washer, plain (663)       | <a href="#">Buy now</a> |
| 45  | <a href="#">61A-45501-20</a><br>Drive shaft comp.<br>X   | <a href="#">Buy now</a> |
| 45  | <a href="#">61A-45501-30</a><br>Drive shaft comp.<br>U   | <a href="#">Buy now</a> |
| 46  | <a href="#">61A-45551-03</a><br>Pinion                   | <a href="#">Buy now</a> |

## Lower Casing. Drive 3

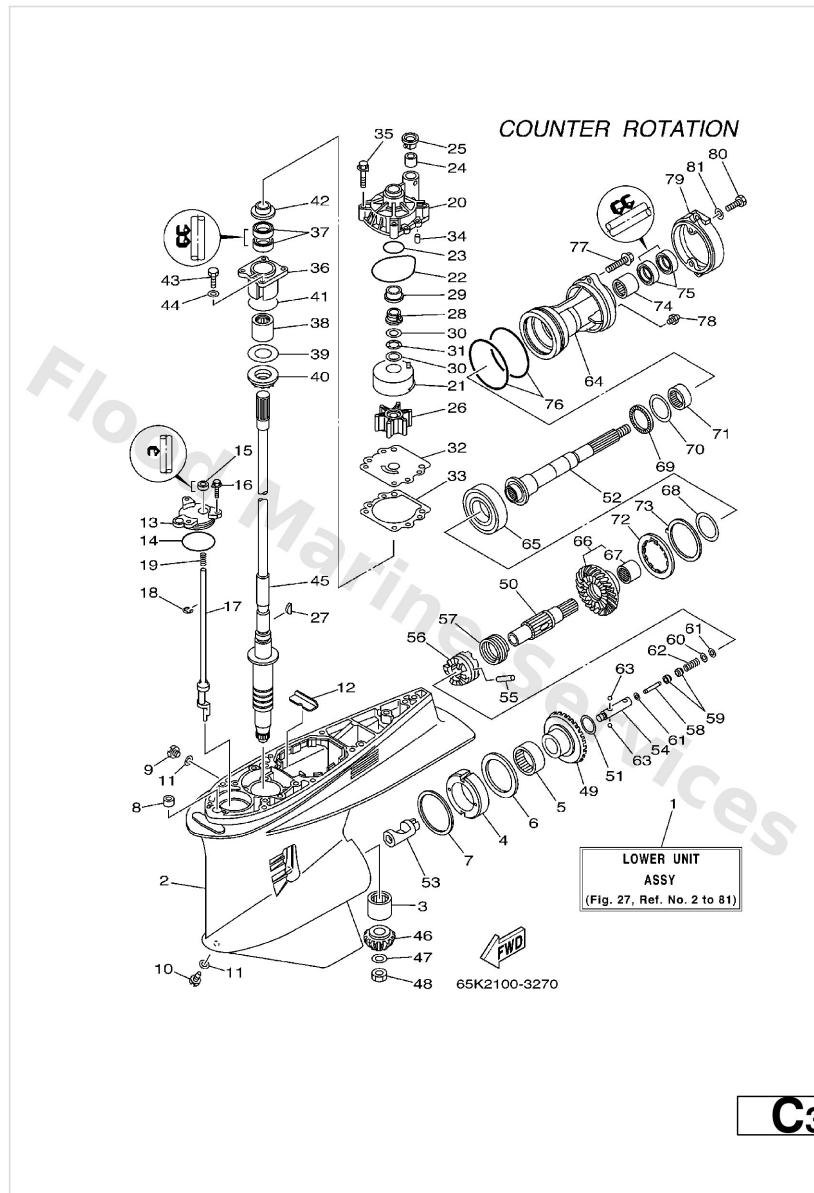 


| Ref | Part                                              |                         |
|-----|---------------------------------------------------|-------------------------|
| 47  | <a href="#">90201-16M00</a><br>Washer, plate(6t5) | <a href="#">Buy now</a> |
| 48  | <a href="#">90170-16M19</a><br>Nut(6t5)           | <a href="#">Buy now</a> |
| 49  | <a href="#">61B-45560-01</a><br>Gear              | <a href="#">Buy now</a> |
| 50  | <a href="#">61B-45611-01</a><br>Shaft, propeller  | <a href="#">Buy now</a> |
| 51  | <a href="#">90201-29M01</a><br>Washer, plate(61b) | <a href="#">Buy now</a> |
| 52  | <a href="#">61B-45611-20</a><br>Shaft, propeller  | <a href="#">Buy now</a> |
| 53  | <a href="#">61B-45641-01</a><br>Shifter           | <a href="#">Buy now</a> |
| 54  | <a href="#">61A-45634-01</a><br>Slide, shift      | <a href="#">Buy now</a> |
| 55  | <a href="#">61A-45632-00</a><br>Pin, cross        | <a href="#">Buy now</a> |
| 56  | <a href="#">61A-45631-03</a><br>Clutch, dog       | <a href="#">Buy now</a> |
| 57  | <a href="#">61A-45633-00</a><br>Ring, cross pin   | <a href="#">Buy now</a> |
| 58  | <a href="#">6H1-45668-00</a><br>Shaft, free 1     | <a href="#">Buy now</a> |
| 59  | <a href="#">61A-45635-00</a><br>Plunger, shift    | <a href="#">Buy now</a> |
| 60  | <a href="#">90201-02M00</a><br>Washer, plate(61a) | <a href="#">Buy now</a> |
| 61  | <a href="#">90183-02M03</a><br>Nut, spring (6h1)  | <a href="#">Buy now</a> |

## Lower Casing. Drive 3

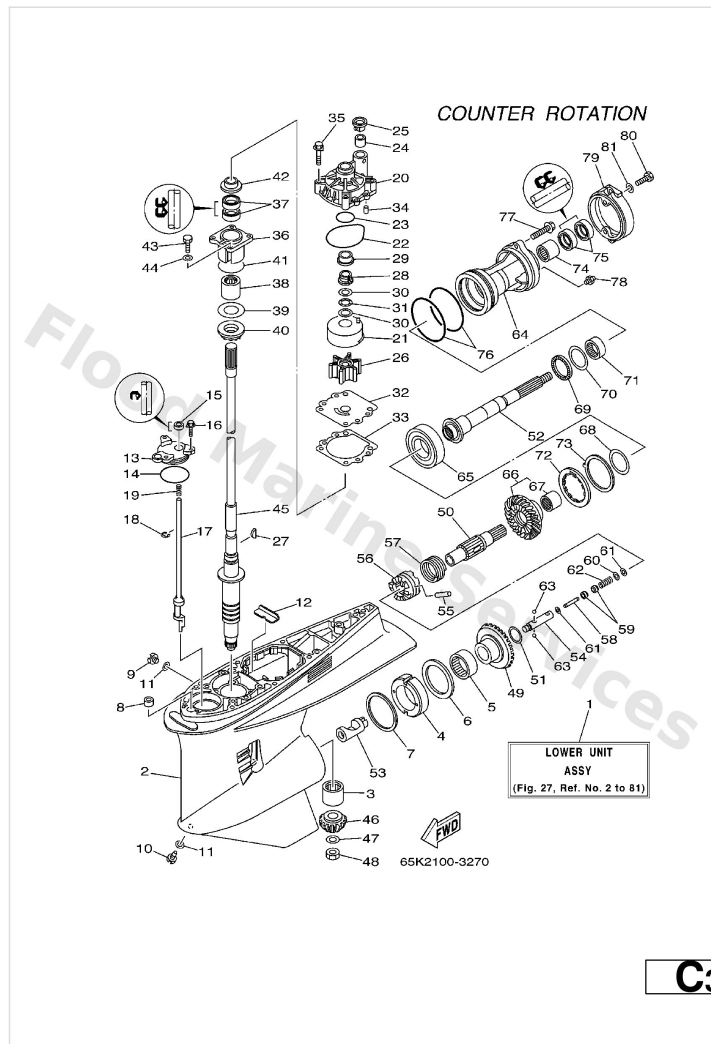 


| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 62  | <a href="#">90501-10M77</a><br>Spring, compression(61a)  | <a href="#">Buy now</a> |
| 63  | <a href="#">93501-04011</a><br>Ball                      | <a href="#">Buy now</a> |
| 64  | <a href="#">61B-45332-01-94</a><br>Housing, bearing      | <a href="#">Buy now</a> |
| 65  | <a href="#">93332-000W2</a><br>Bearing(61b)              | <a href="#">Buy now</a> |
| 66  | <a href="#">61B-45570-03</a><br>Gear                     | <a href="#">Buy now</a> |
| 67  | <a href="#">93315-430U8</a><br>Bearing                   | <a href="#">Buy now</a> |
| 68  | <a href="#">61A-45577-00-10</a><br>Shim (t:0.10mm)<br>UR | <a href="#">Buy now</a> |
| 68  | <a href="#">61A-45577-00-12</a><br>Shim (t:0.12mm)<br>UR | <a href="#">Buy now</a> |
| 68  | <a href="#">61A-45577-00-15</a><br>Shim (t:0.15mm)<br>UR | <a href="#">Buy now</a> |
| 68  | <a href="#">61A-45577-00-18</a><br>Shim (t:0.18mm)<br>UR | <a href="#">Buy now</a> |
| 68  | <a href="#">61A-45577-00-30</a><br>Shim (t:0.30mm)<br>UR | <a href="#">Buy now</a> |
| 68  | <a href="#">61A-45577-00-40</a><br>Shim (t:0.40mm)<br>UR | <a href="#">Buy now</a> |
| 68  | <a href="#">61A-45577-00-50</a><br>Shim (t:0.50mm)<br>UR | <a href="#">Buy now</a> |
| 69  | <a href="#">93341-440U5</a><br>Bearing, thrust (6k0)     | <a href="#">Buy now</a> |
| 70  | <a href="#">6K1-45578-01-10</a><br>Shim (t:0.10mm)<br>UR | <a href="#">Buy now</a> |

## Lower Casing. Drive 3

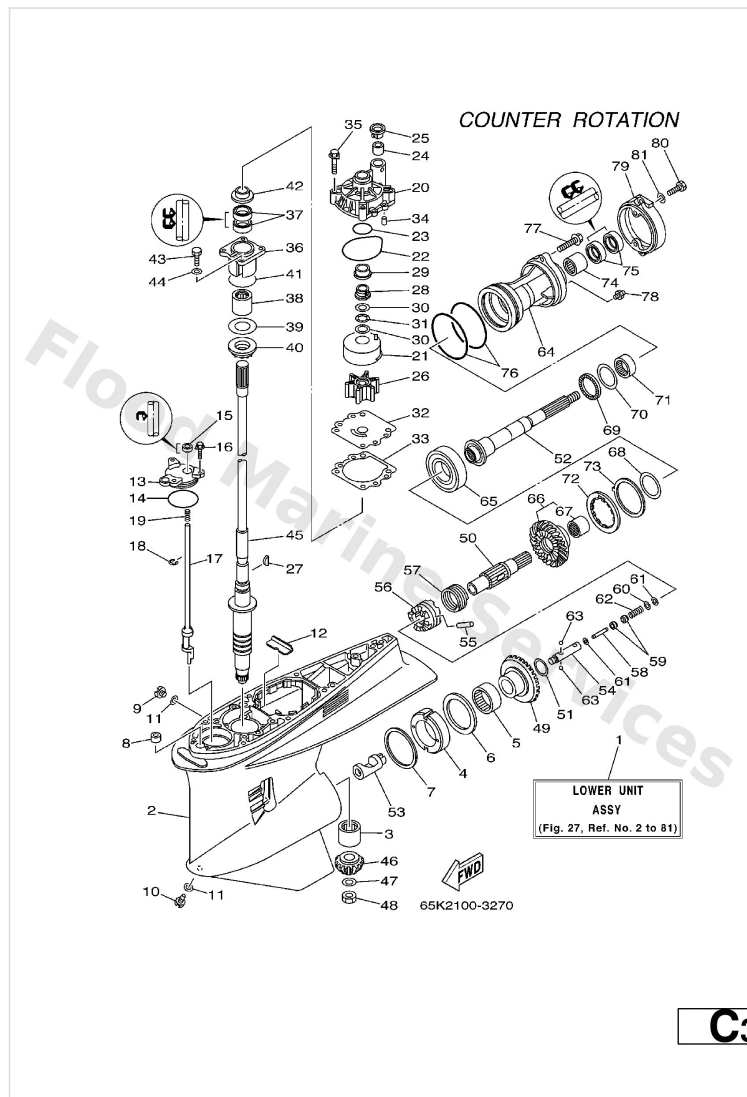 

| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 70  | <a href="#">6K1-45578-01-12</a><br>Shim (t:0.12mm)<br>UR | <a href="#">Buy now</a> |
| 70  | <a href="#">6K1-45578-01-15</a><br>Shim (t:0.15mm)<br>UR | <a href="#">Buy now</a> |
| 70  | <a href="#">6K1-45578-01-18</a><br>Shim (t:0.18mm)<br>UR | <a href="#">Buy now</a> |
| 70  | <a href="#">6K1-45578-01-30</a><br>Shim (t:0.30mm)<br>UR | <a href="#">Buy now</a> |
| 70  | <a href="#">6K1-45578-01-40</a><br>Shim (t:0.40mm)<br>UR | <a href="#">Buy now</a> |
| 70  | <a href="#">6K1-45578-01-50</a><br>Shim (t:0.50mm)<br>UR | <a href="#">Buy now</a> |
| 71  | <a href="#">93315-440V6</a><br>Bearing, cylindrical(6k0) | <a href="#">Buy now</a> |
| 72  | <a href="#">61B-45384-00</a><br>Nut                      | <a href="#">Buy now</a> |
| 73  | <a href="#">61B-45383-00</a><br>Washer, claw             | <a href="#">Buy now</a> |
| 74  | <a href="#">93317-330U5</a><br>Bearing                   | <a href="#">Buy now</a> |
| 75  | <a href="#">93101-30M17</a><br>Oil seal (6e5)            | <a href="#">Buy now</a> |
| 76  | <a href="#">93211-04384</a><br>O-ring (705)              | <a href="#">Buy now</a> |
| 77  | <a href="#">90105-08M48</a><br>Bolt, Flange              | <a href="#">Buy now</a> |
| 78  | <a href="#">93700-09M00</a><br>Nipple, grease(6t4)       | <a href="#">Buy now</a> |
| 79  | <a href="#">61A-45361-01-5B</a><br>Cap, lower casing     | <a href="#">Buy now</a> |

 
Lower Casing. Drive 3

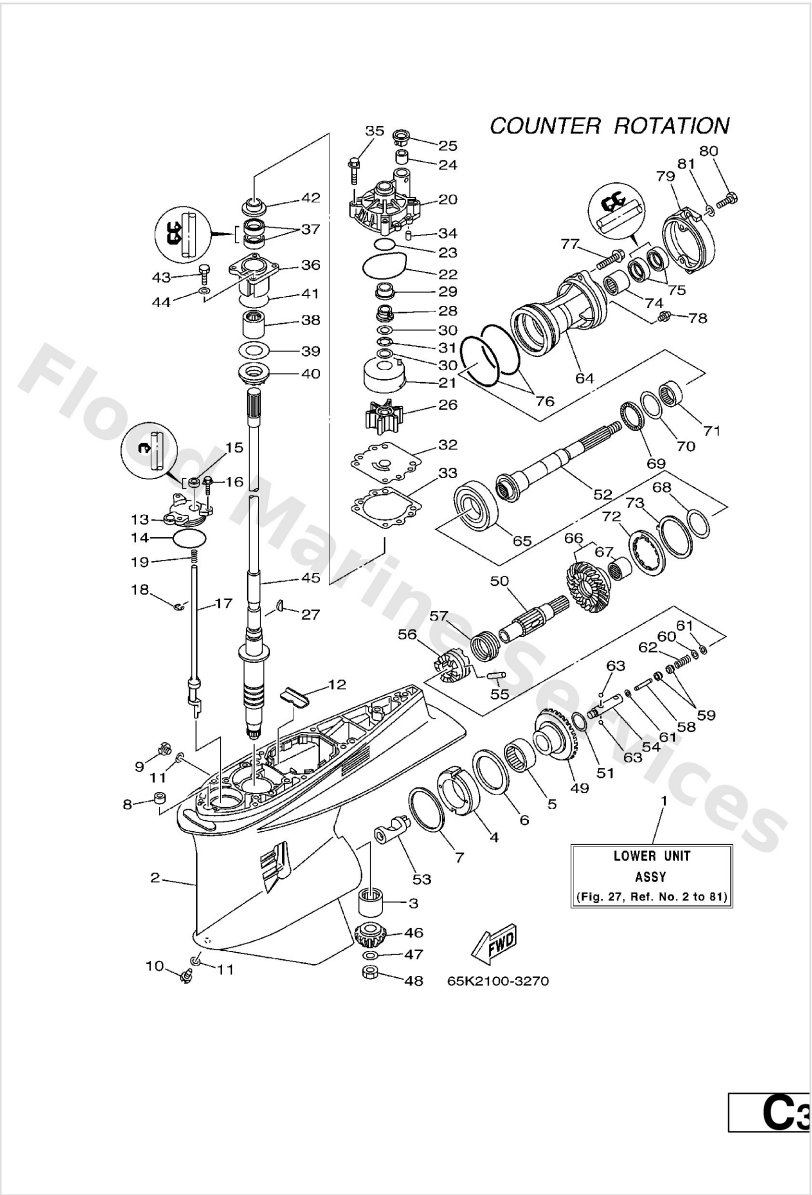

| Ref | Part                                         |                         |
|-----|----------------------------------------------|-------------------------|
| 80  | <a href="#">97095-08020</a><br>Bolt, hexagon | <a href="#">Buy now</a> |

## Lower Casing. Drive 4

 COUNTER ROTATION

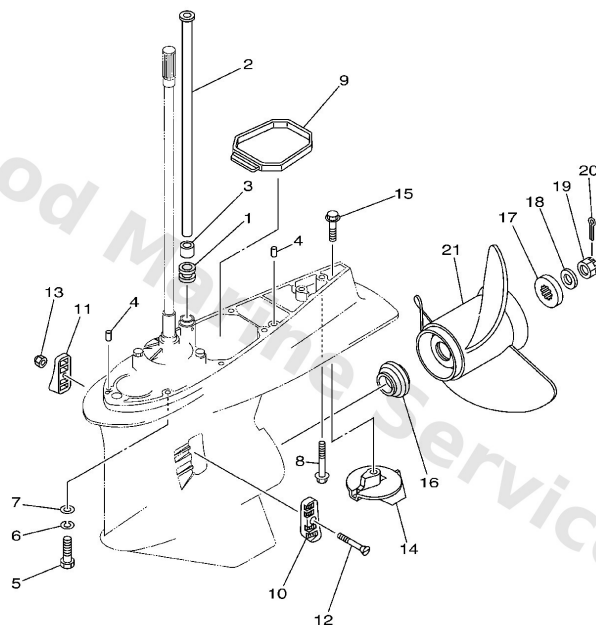


65K2100-3280

C7

| Ref | Part                                                   |                         |
|-----|--------------------------------------------------------|-------------------------|
| 1   | <a href="#">6E5-44366-00</a><br>Damper, water seal 2   | <a href="#">Buy now</a> |
| 2   | <a href="#">61A-44361-20</a><br>Tube, water<br>X       | <a href="#">Buy now</a> |
| 2   | <a href="#">61A-44361-30</a><br>Tube, water<br>U       | <a href="#">Buy now</a> |
| 3   | <a href="#">6E5-44365-00</a><br>Damper, water seal 1   | <a href="#">Buy now</a> |
| 4   | <a href="#">93608-12M05</a><br>Pin, dowel b (6e5)      | <a href="#">Buy now</a> |
| 5   | <a href="#">97095-10045</a><br>Bolt(64d)               | <a href="#">Buy now</a> |
| 6   | <a href="#">92995-10100</a><br>Ybs67-10 washer, spring | <a href="#">Buy now</a> |
| 7   | <a href="#">92995-10600</a><br>Washer, plate           | <a href="#">Buy now</a> |
| 8   | <a href="#">90119-10MA2</a><br>Bolt, with washer       | <a href="#">Buy now</a> |
| 9   | <a href="#">61A-45375-00</a><br>Damper, seal           | <a href="#">Buy now</a> |
| 10  | <a href="#">61A-45214-10</a><br>Cover, water inlet 1   | <a href="#">Buy now</a> |
| 11  | <a href="#">61A-45215-10</a><br>Cover, water inlet 2   | <a href="#">Buy now</a> |
| 12  | <a href="#">90152-05003</a><br>Screw, countersunk      | <a href="#">Buy now</a> |
| 13  | <a href="#">90185-05002</a><br>Nut nylon (sus)(ex4)    | <a href="#">Buy now</a> |
| 14  | <a href="#">61A-45371-00</a><br>Anode                  | <a href="#">Buy now</a> |

## Lower Casing. Drive 4

 COUNTER ROTATION

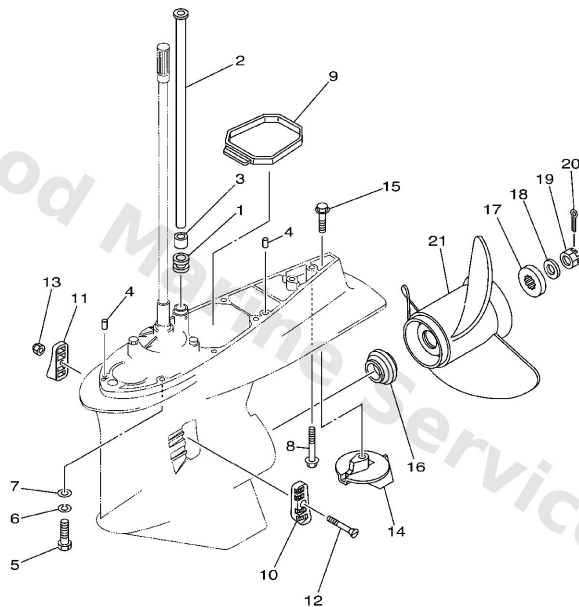


65K2100-3280

C7


| Ref | Part                                                                   |                         |
|-----|------------------------------------------------------------------------|-------------------------|
| 15  | <a href="#">90105-10M00</a><br>Bolt, hexagon (663)                     | <a href="#">Buy now</a> |
| 16  | <a href="#">6E5-45987-01</a><br>Spacer 1                               | <a href="#">Buy now</a> |
| 17  | <a href="#">688-45997-01</a><br>Spacer 2                               | <a href="#">Buy now</a> |
| 18  | <a href="#">92990-18200</a><br>Washer (6e5)                            | <a href="#">Buy now</a> |
| 19  | <a href="#">90171-18M04</a><br>Nut, castle (6e5)                       | <a href="#">Buy now</a> |
| 20  | <a href="#">91490-40030</a><br>Pin, cotter (663)                       | <a href="#">Buy now</a> |
| 21  | <a href="#">61B-45974-00-98</a><br>Propeller (3x14-1/2"x19"-tl)<br>UR  | <a href="#">Buy now</a> |
| 21  | <a href="#">61B-45978-00-98</a><br>Propeller (3x5"x17"-tl)<br>UR       | <a href="#">Buy now</a> |
| 21  | <a href="#">6K1-45970-01-98</a><br>Propeller (3x15-1/4"x15"-ml)<br>UR  | <a href="#">Buy now</a> |
| 21  | <a href="#">6K1-45972-01-98</a><br>Propeller (3x13-3/4"x21"-ml)<br>UR  | <a href="#">Buy now</a> |
| 21  | <a href="#">6K1-45974-02-98</a><br>Propeller (3x13-3/4"x19"-ml1)<br>UR | <a href="#">Buy now</a> |
| 21  | <a href="#">6K1-45978-02-98</a><br>Propeller (3x13-3/4"x17"-ml1)<br>UR | <a href="#">Buy now</a> |

# Meter

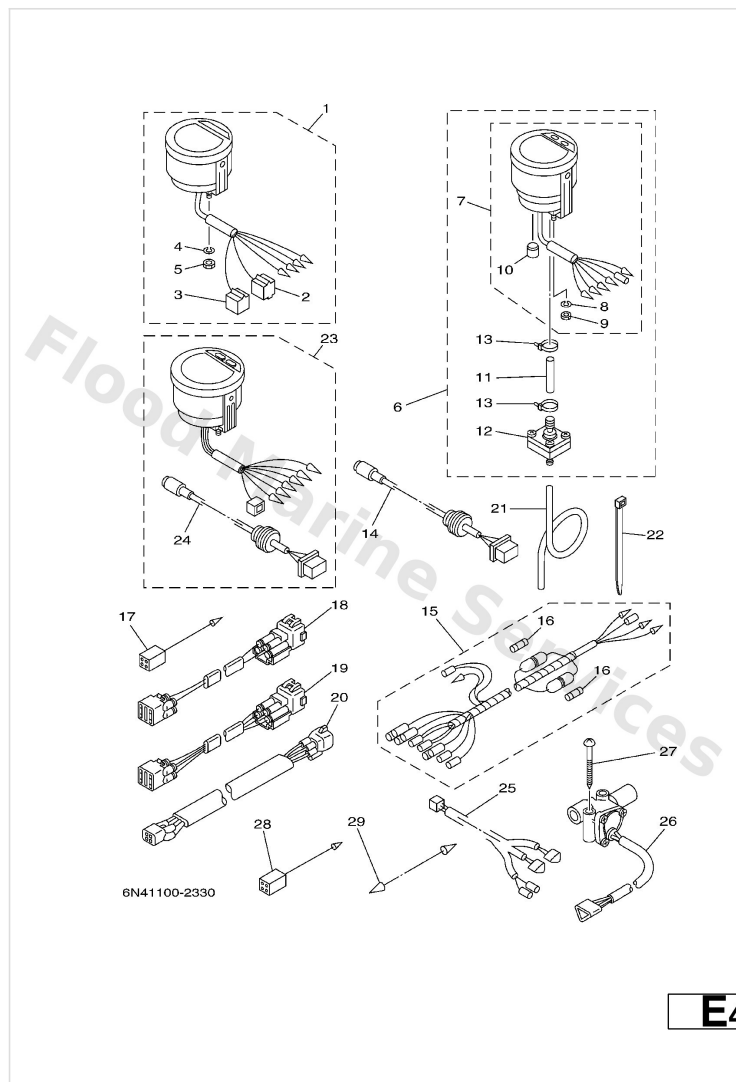 


| Ref | Part                                                               |                         |
|-----|--------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6Y5-8350T-01</a><br>Digital tachometer assembly<br>AP  | <a href="#">Buy now</a> |
| 2   | <a href="#">9E450-04433</a><br>Housing, connector (m-4-w)<br>M-4-W | <a href="#">Buy now</a> |
| 3   | <a href="#">9E450-04533</a><br>Housing, f-4-w(5pcs)<br>F-4-W       | <a href="#">Buy now</a> |
| 4   | <a href="#">92990-04100</a><br>Ybs67-4 washer, spring              | <a href="#">Buy now</a> |
| 5   | <a href="#">95380-04600</a><br>Nut,hex                             | <a href="#">Buy now</a> |
| 6   | <a href="#">6Y5-83500-S5</a><br>Meter assembly<br>AP               | <a href="#">Buy now</a> |
| 7   | <a href="#">6Y5-83570-S5</a><br>Speedometer assembly               | <a href="#">Buy now</a> |
| 10  | <a href="#">6Y5-83533-T2</a><br>Grommet                            | <a href="#">Buy now</a> |
| 11  | <a href="#">6Y5-83557-31</a><br>Tube                               | <a href="#">Buy now</a> |
| 12  | <a href="#">6Y5-83728-00</a><br>Connector assembly                 | <a href="#">Buy now</a> |
| 22  | <a href="#">90465-11M10</a><br>Clamp<br>AP                         | <a href="#">Buy now</a> |
| 14  | <a href="#">6Y5-87122-S0</a><br>Cord assembly 1<br>AP              | <a href="#">Buy now</a> |
| 15  | <a href="#">6Y5-83553-00</a><br>Wire, lead (l=2.5m)<br>AP          | <a href="#">Buy now</a> |
| 15  | <a href="#">6Y5-83553-M0</a><br>Wire, lead (l=2.5m)<br>AP          | <a href="#">Buy now</a> |
| 16  | <a href="#">1E6-82151-00</a><br>Fuse (10a)<br>FOR 6Y5-83553-M0     | <a href="#">Buy now</a> |

## Meter

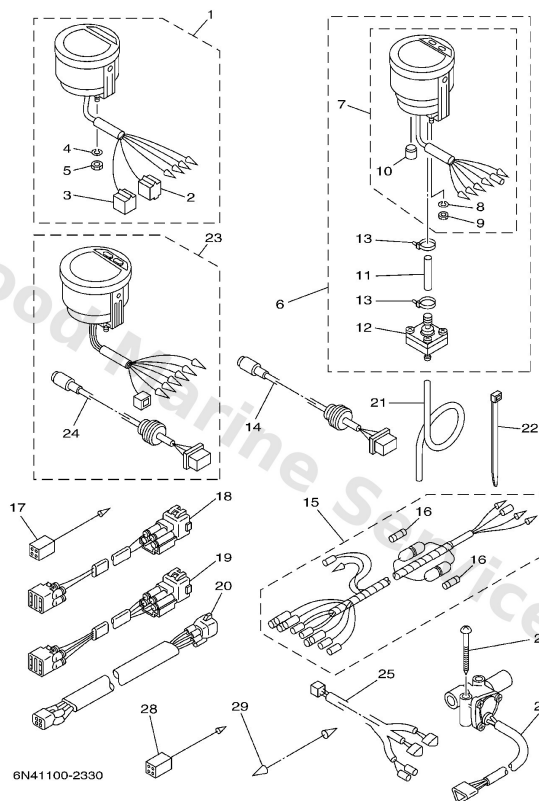 

| Ref | Part                                                                                 |                         |
|-----|--------------------------------------------------------------------------------------|-------------------------|
| 17  | <a href="#">6Y5-82117-00</a><br>Wire, lead<br>AP                                     | <a href="#">Buy now</a> |
| 18  | <a href="#">6R3-82521-70</a><br>Wire, lead (for tacho., 7m)<br>AP FOR CARIB 7M       | <a href="#">Buy now</a> |
| 18  | <a href="#">6R3-82521-80</a><br>Wire, lead (for tacho., 8m)<br>AP FOR CARIB 8M       | <a href="#">Buy now</a> |
| 19  | <a href="#">68F-82553-80</a><br>Extension, wire lead (8m)<br>AP FOR CANADA,          | <a href="#">Buy now</a> |
| 19  | <a href="#">68F-82553-90</a><br>Extension, wire lead (9m)<br>AP FOR OCEANIA          | <a href="#">Buy now</a> |
| 19  | <a href="#">6R3-82553-70</a><br>Extension, wire lead (for trim<br>AP FOR CARIB 4P,7M | <a href="#">Buy now</a> |
| 19  | <a href="#">6R3-82553-80</a><br>Wire, lead<br>AP FOR CARIB 4P,8M                     | <a href="#">Buy now</a> |
| 20  | <a href="#">6R3-82553-30</a><br>Wire, lead<br>AP FOR CARIB                           | <a href="#">Buy now</a> |
| 21  | <a href="#">6Y5-83557-00</a><br>Tube (8m)<br>AP FOR CARIB                            | <a href="#">Buy now</a> |
| 21  | <a href="#">6Y5-83557-10</a><br>Tube (8m)<br>AP FOR CANADA,                          | <a href="#">Buy now</a> |
| 23  | <a href="#">6Y5-8350F-00</a><br>Fuel meter movement assembly<br>AP FOR OCEANIA       | <a href="#">Buy now</a> |
| 25  | <a href="#">6Y5-83553-F1</a><br>Wire, lead<br>AP FOR OCEANIA                         | <a href="#">Buy now</a> |
| 26  | <a href="#">6Y5-85752-01</a><br>Sender unit assembly, fuel meter<br>AP FOR OCEANIA   | <a href="#">Buy now</a> |
| 27  | <a href="#">90158-06002</a><br>33 –<br>AP FOR OCEANIA                                | <a href="#">Buy now</a> |
| 29  | <a href="#">703-82531-00</a><br>Wire, lead<br>AP FOR OCEANIA                         | <a href="#">Buy now</a> |

# Oil Pump

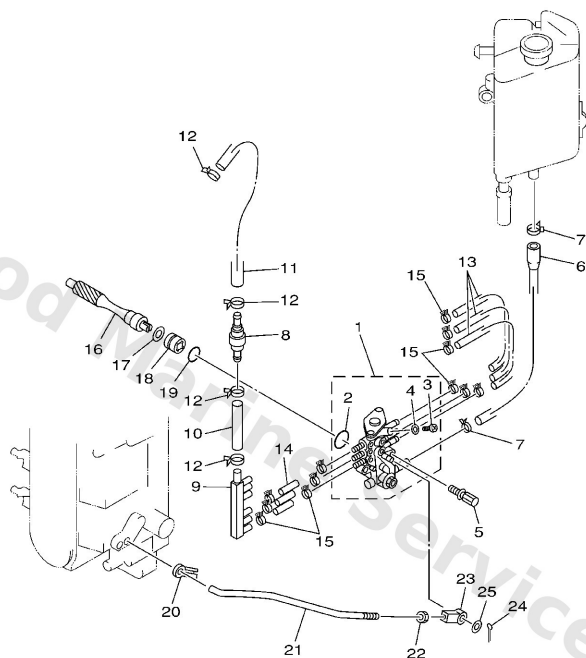 


65J0010-7080

C3

| Ref | Part                                                        |                         |
|-----|-------------------------------------------------------------|-------------------------|
| 1   | <a href="#">65L-13200-00</a><br>Oil injection pump assembly | <a href="#">Buy now</a> |
| 2   | <a href="#">93210-19M82</a><br>O-ring(6j8)                  | <a href="#">Buy now</a> |
| 3   | <a href="#">6R3-13471-00</a><br>Screw                       | <a href="#">Buy now</a> |
| 4   | <a href="#">6L2-13475-00</a><br>Gasket, breather bolt       | <a href="#">Buy now</a> |
| 5   | <a href="#">90109-06M40</a><br>Bolt(6h0)                    | <a href="#">Buy now</a> |
| 6   | <a href="#">61A-13416-00</a><br>Pipe Oil 1                  | <a href="#">Buy now</a> |
| 7   | <a href="#">90465-11M10</a><br>Clamp                        | <a href="#">Buy now</a> |
| 8   | <a href="#">65L-13183-00</a><br>Valve, check                | <a href="#">Buy now</a> |
| 9   | <a href="#">65L-24378-00</a><br>Pipe, joint 4               | <a href="#">Buy now</a> |
| 10  | <a href="#">90445-09220</a><br>Hose (I1500)                 | <a href="#">Buy now</a> |
| 11  | <a href="#">90446-09M69</a><br>Hose(65j)                    | <a href="#">Buy now</a> |
| 13  | <a href="#">90445-07M02</a><br>Hose (I200)                  | <a href="#">Buy now</a> |
| 14  | <a href="#">90445-07M03</a><br>Hose (I200)                  | <a href="#">Buy now</a> |
| 15  | <a href="#">90468-07M02</a><br>Clip (6e5)                   | <a href="#">Buy now</a> |
| 16  | <a href="#">61A-11537-00</a><br>Gear, driven                | <a href="#">Buy now</a> |

# Oil Pump

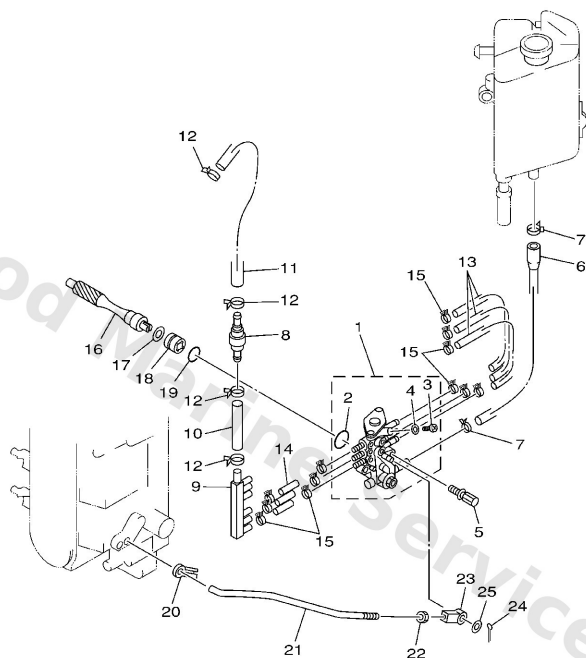 


65J0010-7080

C3

| Ref | Part                                               |                         |
|-----|----------------------------------------------------|-------------------------|
| 17  | <a href="#">90201-09M01</a><br>Washer, plate(61b)  | <a href="#">Buy now</a> |
| 18  | <a href="#">61A-13117-00</a><br>Collar, distance   | <a href="#">Buy now</a> |
| 19  | <a href="#">93210-18MA9</a><br>O-ring(61a)         | <a href="#">Buy now</a> |
| 20  | <a href="#">6R5-41237-00</a><br>Joint, link        | <a href="#">Buy now</a> |
| 21  | <a href="#">65L-41241-00</a><br>Rod, Link          | <a href="#">Buy now</a> |
| 22  | <a href="#">95380-05600</a><br>Nut, hexagon (663)  | <a href="#">Buy now</a> |
| 23  | <a href="#">6H1-41237-00</a><br>Joint, link        | <a href="#">Buy now</a> |
| 24  | <a href="#">91490-12012</a><br>Pin, cotter (6g8)   | <a href="#">Buy now</a> |
| 25  | <a href="#">90202-05088</a><br>Washer, plate (666) | <a href="#">Buy now</a> |


# Oil Tank

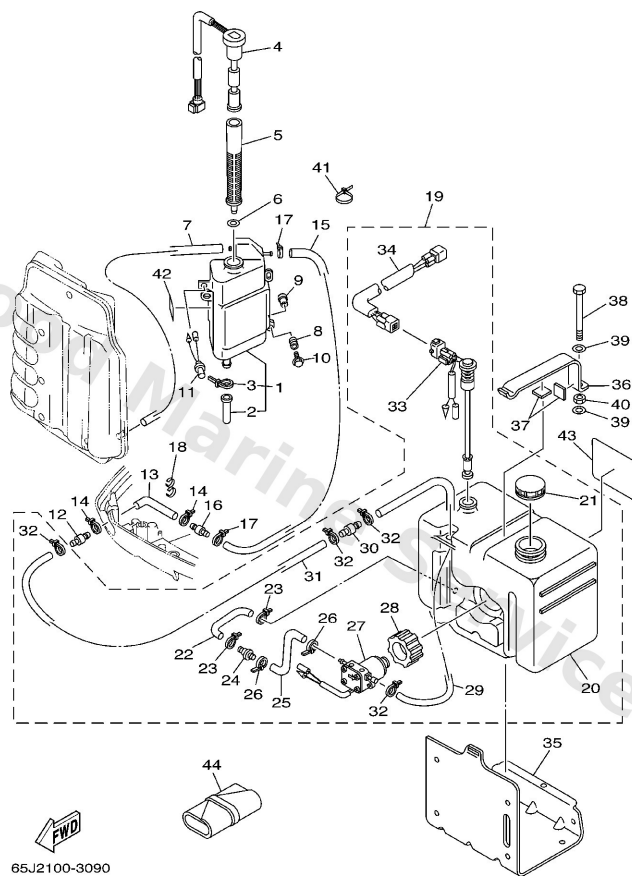 

C4

| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 1   | <a href="#">61A-21750-00</a><br>Oil tank assembly        | <a href="#">Buy now</a> |
| 2   | <a href="#">6E5-13448-00</a><br>Cap, oil tank            | <a href="#">Buy now</a> |
| 3   | <a href="#">90465-13M11</a><br>Clamp (6e5)               | <a href="#">Buy now</a> |
| 4   | <a href="#">61A-85730-01</a><br>Oil level gauge assembly | <a href="#">Buy now</a> |
| 5   | <a href="#">61A-13411-00</a><br>Strainer, oil            | <a href="#">Buy now</a> |
| 6   | <a href="#">6E5-13414-00</a><br>Gasket, strainer cover   | <a href="#">Buy now</a> |
| 7   | <a href="#">90445-05M07</a><br>Hose (I700)               | <a href="#">Buy now</a> |
| 8   | <a href="#">6A0-82317-00</a><br>Damper, ignition coil    | <a href="#">Buy now</a> |
| 9   | <a href="#">624-42542-00</a><br>Collar                   | <a href="#">Buy now</a> |
| 10  | <a href="#">90119-06M65</a><br>Bolt, with washer         | <a href="#">Buy now</a> |
| 11  | <a href="#">6R3-8259E-00</a><br>Switch assembly          | <a href="#">Buy now</a> |
| 12  | <a href="#">6E5-24379-00</a><br>Pipe, joint 4            | <a href="#">Buy now</a> |
| 13  | <a href="#">90445-12M04</a><br>Hose (I3000)              | <a href="#">Buy now</a> |
| 14  | <a href="#">90465-11M10</a><br>Clamp                     | <a href="#">Buy now</a> |
| 15  | <a href="#">6E5-24323-00</a><br>Pipe 12                  | <a href="#">Buy now</a> |


# Oil Tank

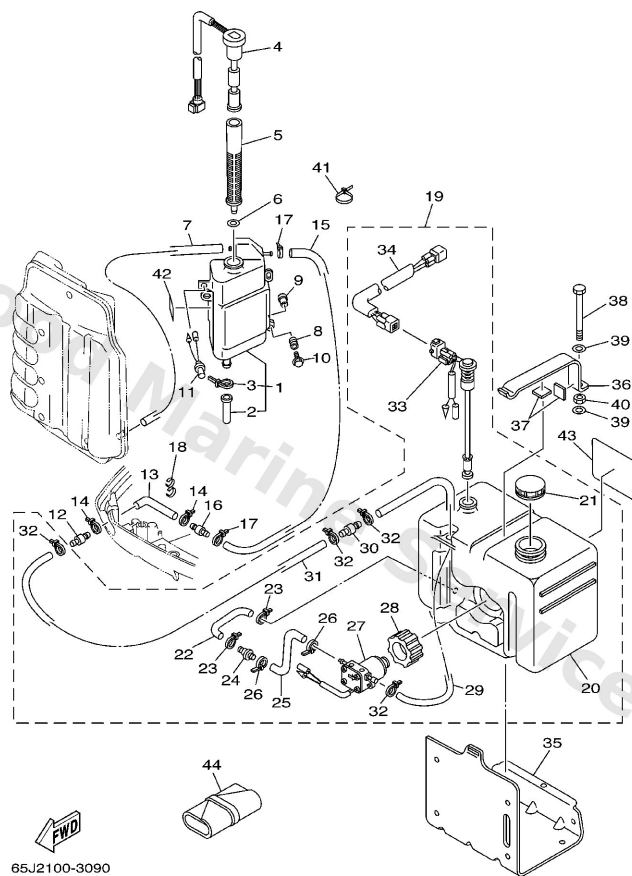 

**C4**


| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 18  | <a href="#">90464-13M34</a><br>Clamp(6r3)                | <a href="#">Buy now</a> |
| 19  | <a href="#">61A-21708-20</a><br>Sub oil tank assembly.   | <a href="#">Buy now</a> |
| 20  | <a href="#">6E5-21733-20</a><br>Sub tank, oil (10.5l)    | <a href="#">Buy now</a> |
| 21  | <a href="#">6E5-21770-03</a><br>Oil tank cap assembly    | <a href="#">Buy now</a> |
| 22  | <a href="#">6E5-24322-00</a><br>Pipe 11                  | <a href="#">Buy now</a> |
| 24  | <a href="#">646-24251-02</a><br>Strainer 1               | <a href="#">Buy now</a> |
| 25  | <a href="#">6E5-24319-01</a><br>Pipe, oil                | <a href="#">Buy now</a> |
| 27  | <a href="#">6E5-81900-01</a><br>Oil feed pump assembly   | <a href="#">Buy now</a> |
| 28  | <a href="#">6E5-81922-00</a><br>Grommet                  | <a href="#">Buy now</a> |
| 29  | <a href="#">6E5-24321-01</a><br>Pipe 10                  | <a href="#">Buy now</a> |
| 31  | <a href="#">90445-11M26</a><br>Hose (l8000)              | <a href="#">Buy now</a> |
| 33  | <a href="#">6E5-85720-04</a><br>Oil level gauge assembly | <a href="#">Buy now</a> |
| 34  | <a href="#">6R3-85721-80</a><br>Wire, lead               | <a href="#">Buy now</a> |
| 35  | <a href="#">6E5-21734-01-33</a><br>Holder, oil sub tank  | <a href="#">Buy now</a> |
| 36  | <a href="#">6E5-21798-01-33</a><br>Bracket, damper       | <a href="#">Buy now</a> |
 
# Oil Tank

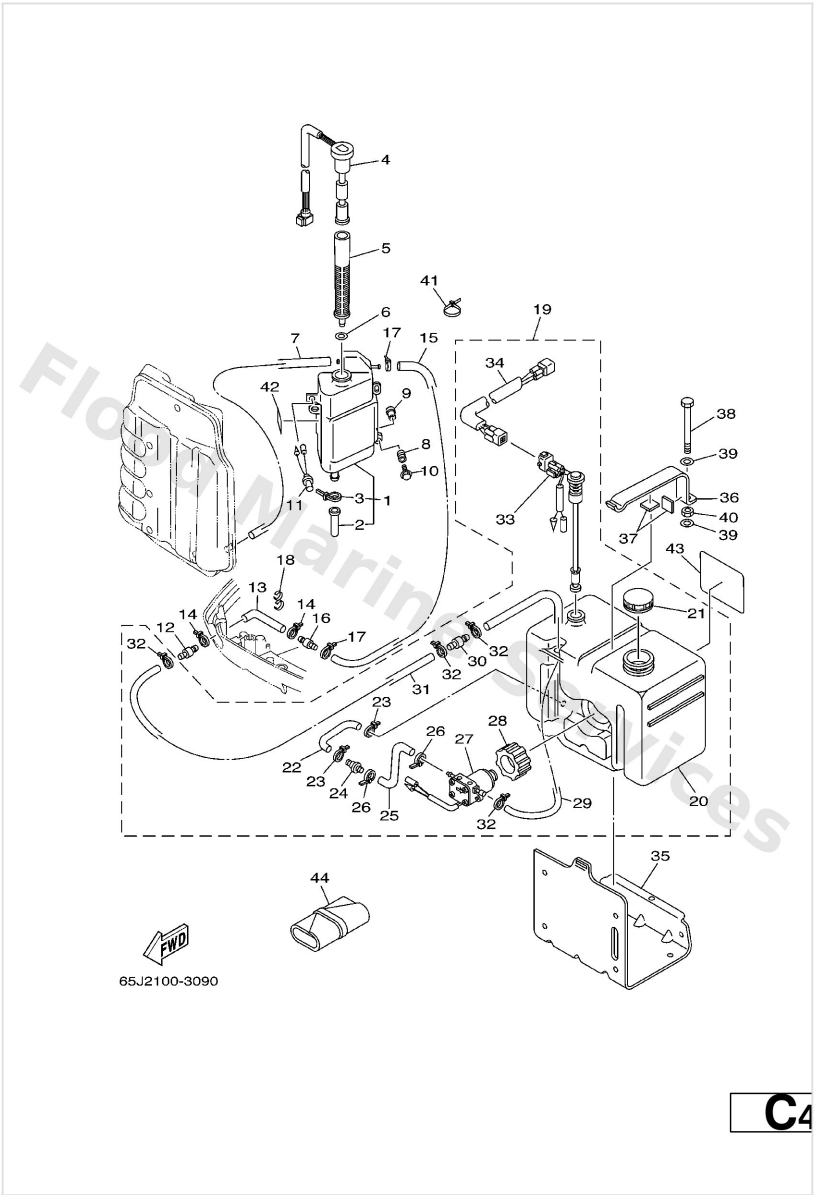

| Ref | Part                                                             |                         |
|-----|------------------------------------------------------------------|-------------------------|
| 37  | <a href="#">6E5-21746-00</a><br>Damper                           | <a href="#">Buy now</a> |
| 38  | <a href="#">97080-06100</a><br>Bolt, hexagon                     | <a href="#">Buy now</a> |
| 39  | <a href="#">92990-06600</a><br>Washer, plain (646)               | <a href="#">Buy now</a> |
| 40  | <a href="#">95380-06600</a><br>Nut(661)                          | <a href="#">Buy now</a> |
| 42  | <a href="#">6E5-85711-40</a><br>9-<br>EXCEPT FOR CANADA          | <a href="#">Buy now</a> |
| 42  | <a href="#">6E5-85711-50</a><br>Mark, Caution<br>FOR CANADA      | <a href="#">Buy now</a> |
| 43  | <a href="#">6E5-13437-43</a><br>Mark, Caution<br>FOR USA,OCEANIA | <a href="#">Buy now</a> |
| 43  | <a href="#">6E5-13437-62</a><br>Mark Caution<br>FOR CANADA,CARIB | <a href="#">Buy now</a> |
| 44  | <a href="#">656-W2810-02</a><br>Tool kit<br>FOR CARIB            | <a href="#">Buy now</a> |


## Power Trim & Tilt Assy

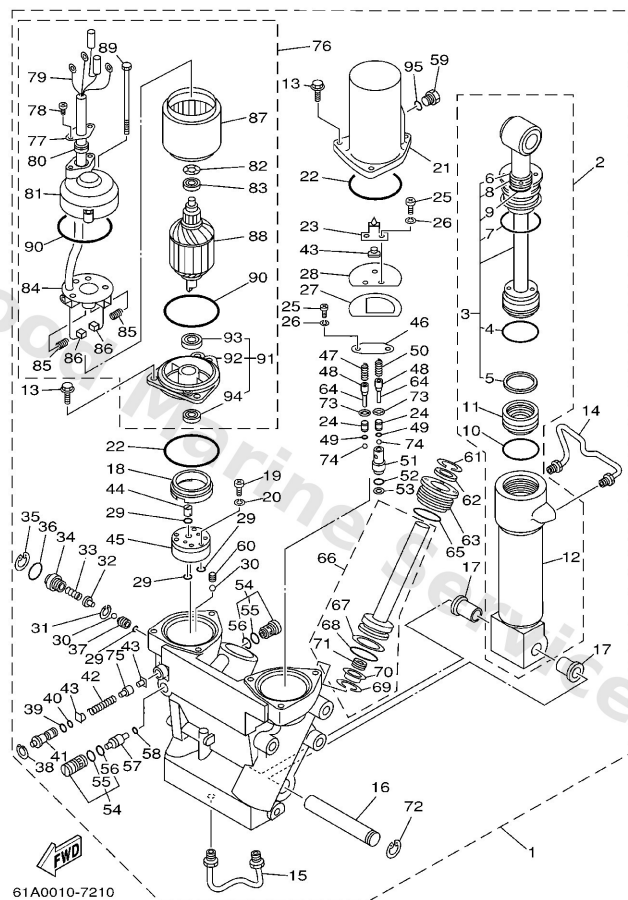 

A5

| Ref | Part                                                          |                         |
|-----|---------------------------------------------------------------|-------------------------|
| 1   | <a href="#">61A-43800-25-4D</a><br>Power trim & tilt assembly | <a href="#">Buy now</a> |
| 2   | <a href="#">61A-43840-01</a><br>Power tilt assembly           | <a href="#">Buy now</a> |
| 3   | <a href="#">61A-43810-00</a><br>Tilt piston sub assembly      | <a href="#">Buy now</a> |
| 4   | <a href="#">61A-43861-00</a><br>O-ring                        | <a href="#">Buy now</a> |
| 5   | <a href="#">61A-43871-00</a><br>Ring, back up                 | <a href="#">Buy now</a> |
| 6   | <a href="#">93106-19N50</a><br>Oil seal                       | <a href="#">Buy now</a> |
| 7   | <a href="#">6H1-43861-00</a><br>O-ring                        | <a href="#">Buy now</a> |
| 8   | <a href="#">6H1-43872-00</a><br>Ring, back up                 | <a href="#">Buy now</a> |
| 9   | <a href="#">61A-4389H-00</a><br>O-ring                        | <a href="#">Buy now</a> |
| 11  | <a href="#">6H1-43814-00</a><br>Piston, free                  | <a href="#">Buy now</a> |
| 12  | <a href="#">61A-43813-01</a><br>Cylinder, tilt                | <a href="#">Buy now</a> |
| 13  | <a href="#">97595-06420</a><br>Bolt(7u8)                      | <a href="#">Buy now</a> |
| 14  | <a href="#">61A-43835-01</a><br>Pipe                          | <a href="#">Buy now</a> |
| 15  | <a href="#">61A-43833-01</a><br>Pipe                          | <a href="#">Buy now</a> |
| 16  | <a href="#">61A-43818-00</a><br>Pin, lower shock mount        | <a href="#">Buy now</a> |


## Power Trim & Tilt Assy

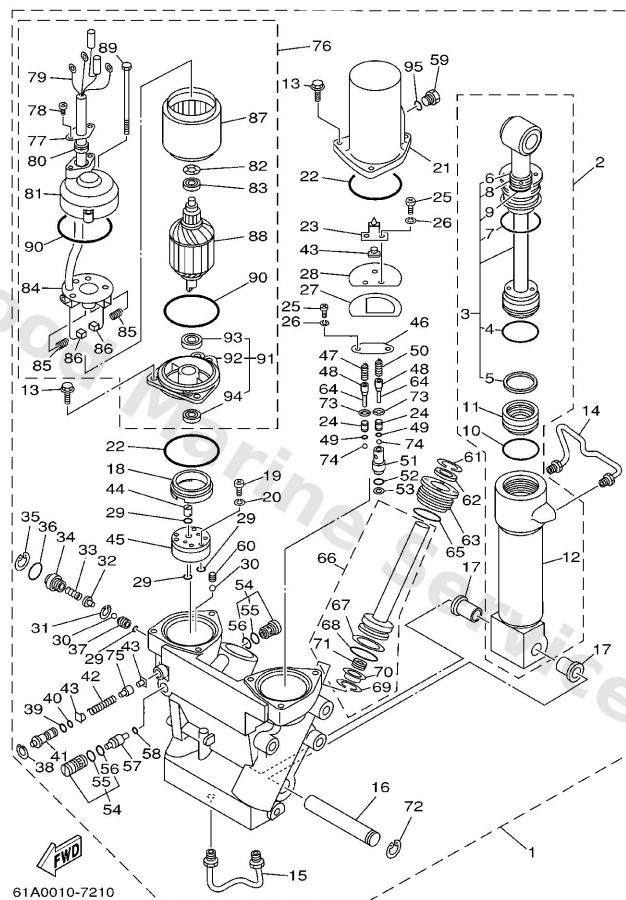 

A5


| Ref | Part                                                  |                         |
|-----|-------------------------------------------------------|-------------------------|
| 17  | <a href="#">90386-18M14</a><br>Bushing (6e5)          | <a href="#">Buy now</a> |
| 18  | <a href="#">6H1-43817-00</a><br>Filter 2              | <a href="#">Buy now</a> |
| 19  | <a href="#">98501-04030</a><br>Screw, Pan Head        | <a href="#">Buy now</a> |
| 20  | <a href="#">92901-04100</a><br>Ybs67-4 washer, spring | <a href="#">Buy now</a> |
| 21  | <a href="#">61A-43828-00</a><br>Body, reservoir       | <a href="#">Buy now</a> |
| 22  | <a href="#">6H1-43869-00</a><br>O-ring                | <a href="#">Buy now</a> |
| 23  | <a href="#">61A-4384L-00</a><br>Spring Trim Down      | <a href="#">Buy now</a> |
| 24  | <a href="#">6T4-43851-00</a><br>Seat, relief valve    | <a href="#">Buy now</a> |
| 25  | <a href="#">98501-05010</a><br>Screw, pan head(62x)   | <a href="#">Buy now</a> |
| 26  | <a href="#">92901-05100</a><br>Ybs67-5 washer, spring | <a href="#">Buy now</a> |
| 27  | <a href="#">61A-4384K-00</a><br>Plate, trim down      | <a href="#">Buy now</a> |
| 28  | <a href="#">61A-4384J-00</a><br>Seal, trim down       | <a href="#">Buy now</a> |
| 29  | <a href="#">93210-064A5</a><br>O-ring(61a)            | <a href="#">Buy now</a> |
| 30  | <a href="#">93505-32038</a><br>Ball(7fk)              | <a href="#">Buy now</a> |
| 31  | <a href="#">61A-43875-00</a><br>Ring, snap            | <a href="#">Buy now</a> |

## Power Trim & Tilt Assy

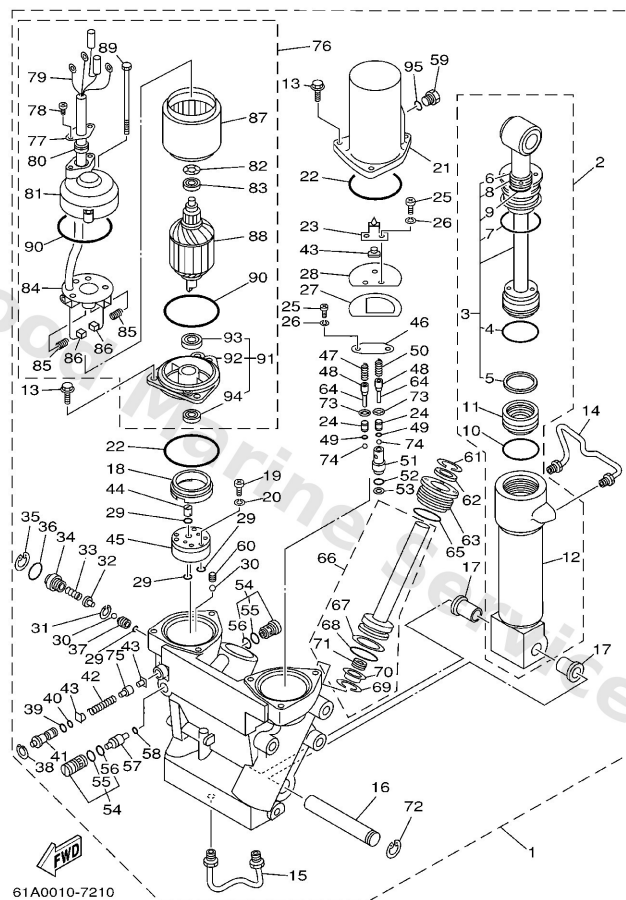 

| Ref | Part                                                   |                         |
|-----|--------------------------------------------------------|-------------------------|
| 32  | <a href="#">61A-43848-00</a><br>Rod, manual release    | <a href="#">Buy now</a> |
| 33  | <a href="#">61A-43854-00</a><br>Spring, manual release | <a href="#">Buy now</a> |
| 34  | <a href="#">61A-43845-00</a><br>Screw, manual release  | <a href="#">Buy now</a> |
| 35  | <a href="#">6H1-43875-00</a><br>Ring, snap             | <a href="#">Buy now</a> |
| 36  | <a href="#">93210-18397</a><br>O-ring (6g5)            | <a href="#">Buy now</a> |
| 37  | <a href="#">61A-43847-00</a><br>Seat, manual valve     | <a href="#">Buy now</a> |
| 38  | <a href="#">6T4-43876-00</a><br>Ring, snap             | <a href="#">Buy now</a> |
| 39  | <a href="#">93210-07003</a><br>O-ring (11m)            | <a href="#">Buy now</a> |
| 40  | <a href="#">93210-06001</a><br>O-ring (26h)            | <a href="#">Buy now</a> |
| 41  | <a href="#">6T4-43849-00</a><br>Pin, valve support     | <a href="#">Buy now</a> |
| 42  | <a href="#">61A-4385H-00</a><br>Spring, seal           | <a href="#">Buy now</a> |
| 43  | <a href="#">6H1-4384F-00</a><br>Seal, main valve       | <a href="#">Buy now</a> |
| 44  | <a href="#">6H1-43831-00</a><br>Connector, shaft       | <a href="#">Buy now</a> |
| 45  | <a href="#">6T4-43830-00</a><br>Gear pump assembly     | <a href="#">Buy now</a> |
| 46  | <a href="#">61A-4382K-00</a><br>Cap, relief valve      | <a href="#">Buy now</a> |


## Power Trim & Tilt Assy

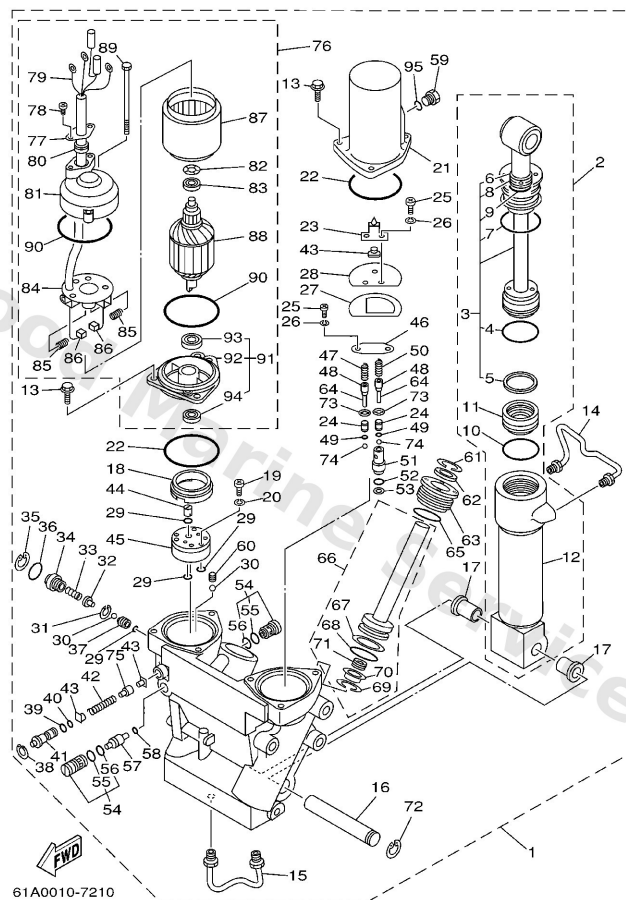 

A5

| Ref | Part                                                |                         |
|-----|-----------------------------------------------------|-------------------------|
| 47  | <a href="#">6H1-43856-10</a><br>Spring, down relief | <a href="#">Buy now</a> |
| 48  | <a href="#">6T4-43844-00</a><br>Pin, valve support  | <a href="#">Buy now</a> |
| 49  | <a href="#">6T4-4384G-00</a><br>Seal, relief valve  | <a href="#">Buy now</a> |
| 50  | <a href="#">6T4-43855-00</a><br>Spring, up relief   | <a href="#">Buy now</a> |
| 51  | <a href="#">6T4-43895-00</a><br>Seat, relief valve  | <a href="#">Buy now</a> |
| 52  | <a href="#">93210-10M74</a><br>O-ring               | <a href="#">Buy now</a> |
| 53  | <a href="#">6H1-43816-00</a><br>Filter 1            | <a href="#">Buy now</a> |
| 54  | <a href="#">6T4-43802-03</a><br>Valve sub assembly  | <a href="#">Buy now</a> |
| 55  | <a href="#">6H1-43866-00</a><br>O-ring              | <a href="#">Buy now</a> |
| 56  | <a href="#">6H1-43867-00</a><br>O-ring              | <a href="#">Buy now</a> |
| 57  | <a href="#">6T4-43841-00</a><br>Piston, shuttle     | <a href="#">Buy now</a> |
| 58  | <a href="#">93210-09165</a><br>O-ring               | <a href="#">Buy now</a> |
| 59  | <a href="#">6H1-43829-00</a><br>Plug, reservoir     | <a href="#">Buy now</a> |
| 60  | <a href="#">61A-43878-00</a><br>Bolt, socket        | <a href="#">Buy now</a> |
| 61  | <a href="#">6T4-43875-00</a><br>Ring, snap          | <a href="#">Buy now</a> |


## Power Trim & Tilt Assy

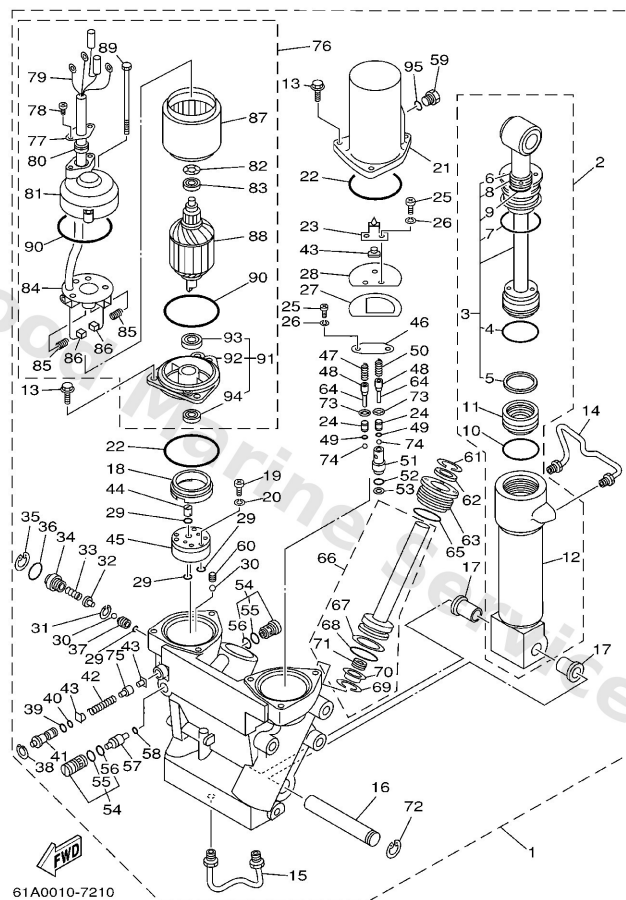 

A5

| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 62  | <a href="#">61A-43822-00</a><br>Seal, trim dust          | <a href="#">Buy now</a> |
| 63  | <a href="#">61A-43821-00</a><br>Screw, trim cylinder end | <a href="#">Buy now</a> |
| 64  | <a href="#">91609-10014</a><br>Pin, spring(61a)          | <a href="#">Buy now</a> |
| 66  | <a href="#">61A-43820-10</a><br>Trim piston sub assembly | <a href="#">Buy now</a> |
| 67  | <a href="#">61A-43874-00</a><br>Ring, back up            | <a href="#">Buy now</a> |
| 68  | <a href="#">61A-43864-00</a><br>O-ring                   | <a href="#">Buy now</a> |
| 69  | <a href="#">61A-43875-10</a><br>Ring, snap               | <a href="#">Buy now</a> |
| 70  | <a href="#">61A-4383H-11</a><br>Hose, oil 5              | <a href="#">Buy now</a> |
| 71  | <a href="#">61A-4384H-10</a><br>Spring                   | <a href="#">Buy now</a> |
| 72  | <a href="#">61A-43876-00</a><br>Ring, snap               | <a href="#">Buy now</a> |
| 73  | <a href="#">6T4-43893-00</a><br>Washer                   | <a href="#">Buy now</a> |
| 74  | <a href="#">93501-08001</a><br>Ball                      | <a href="#">Buy now</a> |
| 75  | <a href="#">61A-4382A-00</a><br>Adaptor 1                | <a href="#">Buy now</a> |
| 76  | <a href="#">61A-43880-02</a><br>Motor assembly           | <a href="#">Buy now</a> |
| 77  | <a href="#">6T4-4386J-00</a><br>Washer, special          | <a href="#">Buy now</a> |


## Power Trim & Tilt Assy

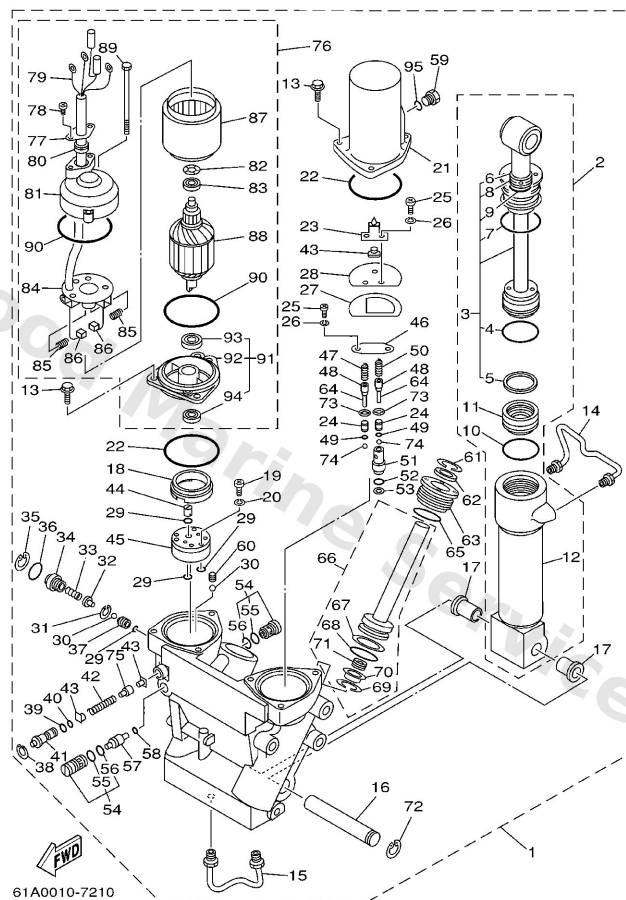 

A5

| Ref | Part                                                  |                         |
|-----|-------------------------------------------------------|-------------------------|
| 78  | <a href="#">90157-05107</a><br>Screw, pan head(61a)   | <a href="#">Buy now</a> |
| 79  | <a href="#">61A-43807-00</a><br>Wire sub assembly     | <a href="#">Buy now</a> |
| 80  | <a href="#">6T4-43885-00</a><br>Grommet               | <a href="#">Buy now</a> |
| 81  | <a href="#">61A-43884-01</a><br>Frame, commutator end | <a href="#">Buy now</a> |
| 82  | <a href="#">90206-14086</a><br>Washer, wave(6t4)      | <a href="#">Buy now</a> |
| 83  | <a href="#">93300-60820</a><br>Bearing(6t4)           | <a href="#">Buy now</a> |
| 84  | <a href="#">61A-43806-00</a><br>Brush holder assembly | <a href="#">Buy now</a> |
| 85  | <a href="#">61A-4386K-00</a><br>Spring, brush         | <a href="#">Buy now</a> |
| 86  | <a href="#">61A-43891-00</a><br>Brush                 | <a href="#">Buy now</a> |
| 87  | <a href="#">61A-43804-01</a><br>Stator assembly       | <a href="#">Buy now</a> |
| 88  | <a href="#">61A-43805-01</a><br>Armature assembly     | <a href="#">Buy now</a> |
| 89  | <a href="#">61A-43887-00</a><br>Bolt, through         | <a href="#">Buy now</a> |
| 90  | <a href="#">93210-72789</a><br>O-ring(61a)            | <a href="#">Buy now</a> |
| 91  | <a href="#">61A-43881-01</a><br>Frame, end            | <a href="#">Buy now</a> |
| 92  | <a href="#">61A-43881-11</a><br>Frame, End            | <a href="#">Buy now</a> |


# Power Trim & Tilt Assy

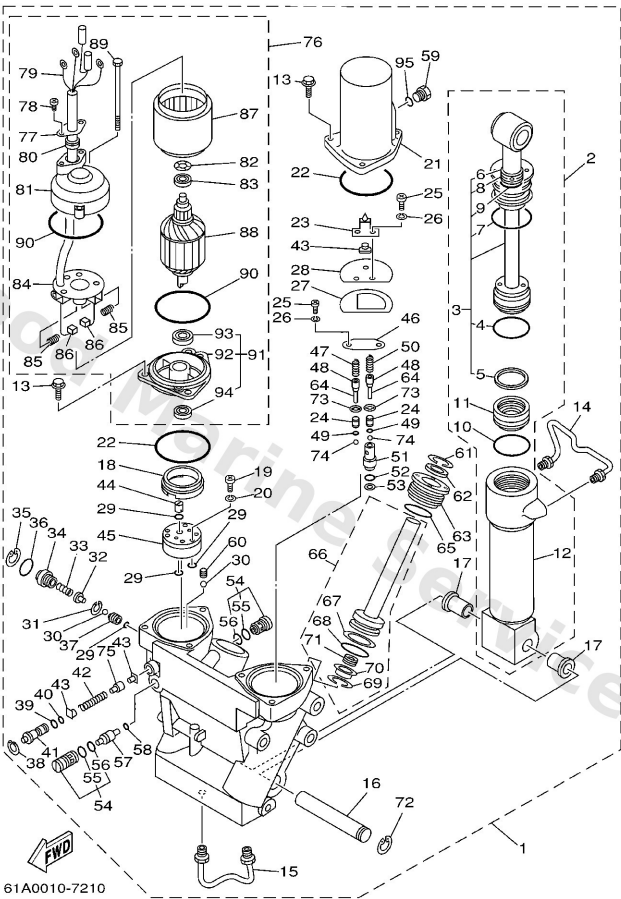 

A5

| Ref | Part                                         |                         |
|-----|----------------------------------------------|-------------------------|
| 94  | <a href="#">93102-08414</a><br>Oil seal(61a) | <a href="#">Buy now</a> |


# Remote Control Assy 1

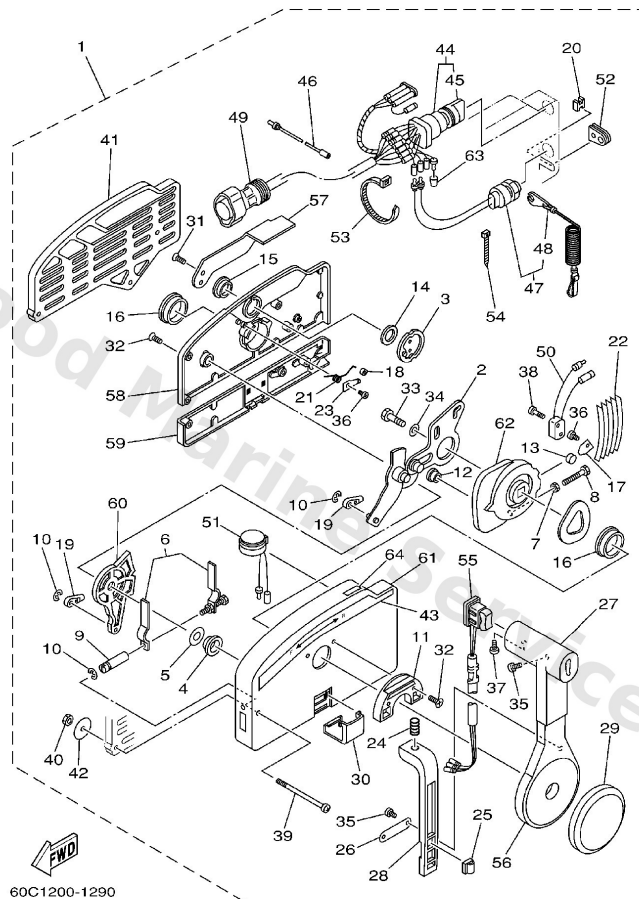 

D5

| Ref | Part                                                                                   |                         |
|-----|----------------------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">703-48205-17</a><br>Remote control assembly (10p, ptt)<br>AP WITH PT/T SW. | <a href="#">Buy now</a> |
| 1   | <a href="#">703-48205-A4</a><br>Remote control assembly (10p, ptt)<br>AP FOR CARIB     | <a href="#">Buy now</a> |
| 2   | <a href="#">703-48261-01</a><br>Arm, throttle                                          | <a href="#">Buy now</a> |
| 3   | <a href="#">703-48153-00</a><br>Shaft, free accel.                                     | <a href="#">Buy now</a> |
| 4   | <a href="#">703-48235-00</a><br>Bushing                                                | <a href="#">Buy now</a> |
| 5   | <a href="#">703-48268-00</a><br>Spacer 3                                               | <a href="#">Buy now</a> |
| 6   | <a href="#">703-48264-00</a><br>Throttle, friction                                     | <a href="#">Buy now</a> |
| 7   | <a href="#">95380-05600</a><br>Nut, hexagon (663)                                      | <a href="#">Buy now</a> |
| 8   | <a href="#">97380-05025</a><br>Bolt                                                    | <a href="#">Buy now</a> |
| 9   | <a href="#">703-48265-00</a><br>Shaft Friction                                         | <a href="#">Buy now</a> |
| 10  | <a href="#">93430-06024</a><br>Circlip (701)                                           | <a href="#">Buy now</a> |
| 11  | <a href="#">703-48245-00</a><br>Plate, lock                                            | <a href="#">Buy now</a> |
| 12  | <a href="#">703-48252-00</a><br>Roller, cam                                            | <a href="#">Buy now</a> |
| 13  | <a href="#">701-48248-00</a><br>Roller, free accel                                     | <a href="#">Buy now</a> |
| 14  | <a href="#">703-48198-00</a><br>Washer, wave 3                                         | <a href="#">Buy now</a> |


# Remote Control Assy 1

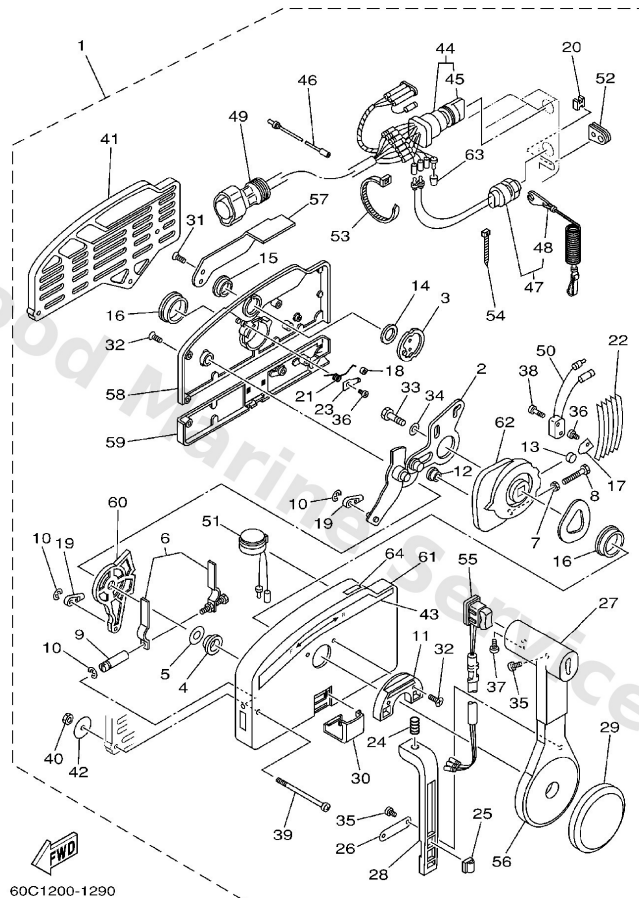 

D5

| Ref | Part                                                          |                         |
|-----|---------------------------------------------------------------|-------------------------|
| 15  | <a href="#">703-48243-00</a><br>Bushing 3                     | <a href="#">Buy now</a> |
| 16  | <a href="#">703-48236-00</a><br>Bushing                       | <a href="#">Buy now</a> |
| 17  | <a href="#">703-48189-00</a><br>Retainer                      | <a href="#">Buy now</a> |
| 18  | <a href="#">703-48234-00</a><br>Roller, detent                | <a href="#">Buy now</a> |
| 19  | <a href="#">703-48345-01</a><br>Cable end, remote control 2   | <a href="#">Buy now</a> |
| 20  | <a href="#">703-48358-00</a><br>Anchor, cable                 | <a href="#">Buy now</a> |
| 21  | <a href="#">703-48244-00</a><br>Spring, free accel.           | <a href="#">Buy now</a> |
| 22  | <a href="#">703-48238-00</a><br>Spring, detent                | <a href="#">Buy now</a> |
| 23  | <a href="#">703-48246-00</a><br>Spacer 1                      | <a href="#">Buy now</a> |
| 24  | <a href="#">703-48227-00</a><br>Spring, neutral lock          | <a href="#">Buy now</a> |
| 25  | <a href="#">703-82594-00</a><br>Clamp<br>WITH PT/T SW.        | <a href="#">Buy now</a> |
| 26  | <a href="#">703-48226-00</a><br>Plate, stopper                | <a href="#">Buy now</a> |
| 27  | <a href="#">703-48222-00</a><br>Grip, control lever<br>SINGLE | <a href="#">Buy now</a> |
| 28  | <a href="#">703-48223-00</a><br>Lock, neutral                 | <a href="#">Buy now</a> |
| 29  | <a href="#">703-48225-00</a><br>Cover                         | <a href="#">Buy now</a> |


# Remote Control Assy 1

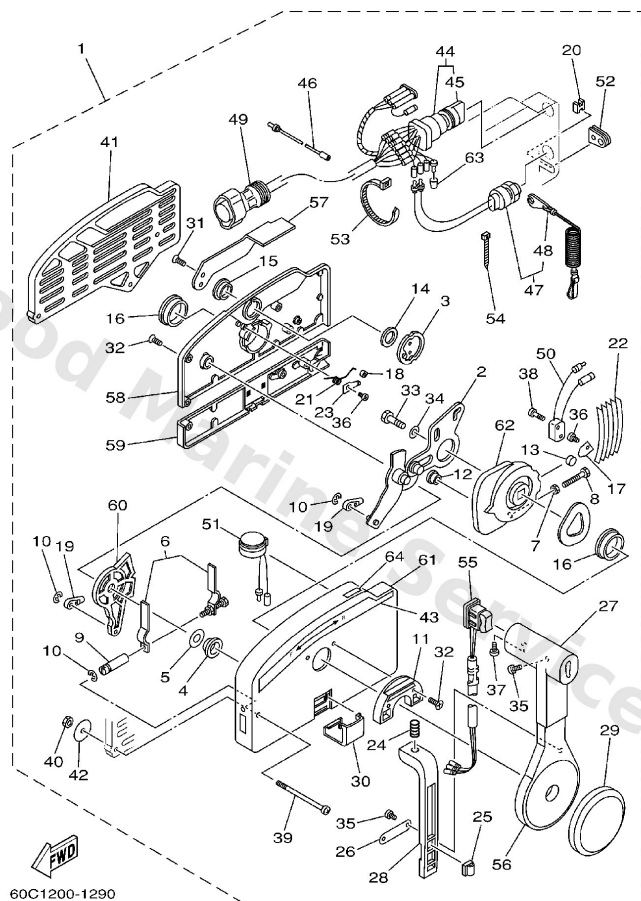 

D5

| Ref | Part                                                                     |                         |
|-----|--------------------------------------------------------------------------|-------------------------|
| 30  | <a href="#">703-48219-00</a><br>Cover, lead                              | <a href="#">Buy now</a> |
| 31  | <a href="#">703-48281-00</a><br>Screw, flat head                         | <a href="#">Buy now</a> |
| 32  | <a href="#">703-48282-00</a><br>Screw                                    | <a href="#">Buy now</a> |
| 33  | <a href="#">97380-08030</a><br>Bolt, hexagon (fj1)                       | <a href="#">Buy now</a> |
| 34  | <a href="#">92990-08600</a><br>Washer, plain (663)                       | <a href="#">Buy now</a> |
| 35  | <a href="#">98580-04010</a><br>Screw, pan head (e56)                     | <a href="#">Buy now</a> |
| 36  | <a href="#">98580-04006</a><br>Screw, pan head (7h3)                     | <a href="#">Buy now</a> |
| 37  | <a href="#">98580-05010</a><br>Screw, pan head(62x)                      | <a href="#">Buy now</a> |
| 38  | <a href="#">98580-03015</a><br>Screw, pan head (n151)                    | <a href="#">Buy now</a> |
| 39  | <a href="#">703-48291-10</a><br>Screw                                    | <a href="#">Buy now</a> |
| 40  | <a href="#">95380-06600</a><br>Nut(661)                                  | <a href="#">Buy now</a> |
| 41  | <a href="#">703-48293-10</a><br>Spacer, remote control<br>SINGLE         | <a href="#">Buy now</a> |
| 42  | <a href="#">701-48287-00</a><br>Washer 1                                 | <a href="#">Buy now</a> |
| 43  | <a href="#">703-48215-00</a><br>Graphic                                  | <a href="#">Buy now</a> |
| 44  | <a href="#">703-82510-12</a><br>Main switch assembly<br>FOR 703-48205-A4 | <a href="#">Buy now</a> |


# Remote Control Assy 1

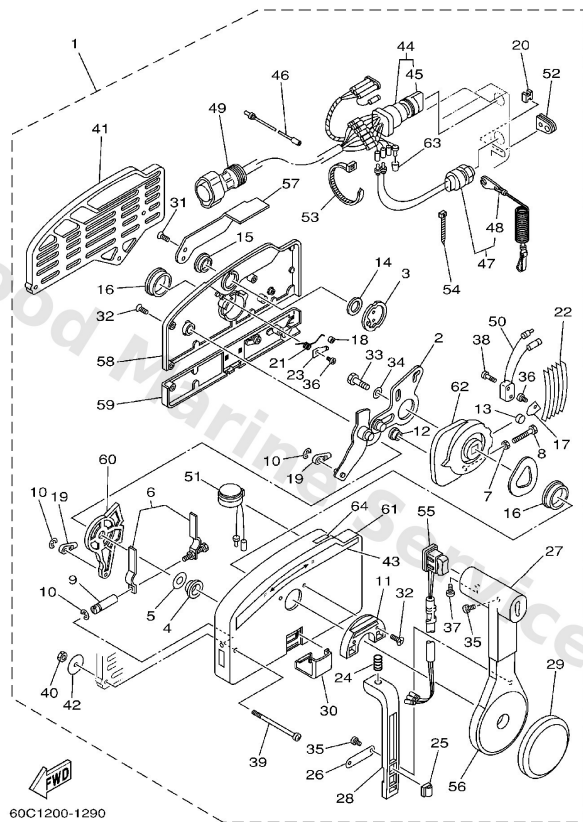 

D5

| Ref | Part                                                                         |                         |
|-----|------------------------------------------------------------------------------|-------------------------|
| 44  | <a href="#">703-82510-43</a><br>Main switch assembly<br>FOR 703-48205-17     | <a href="#">Buy now</a> |
| 45  | <a href="#">676-82577-00</a><br>Cap, key<br>FOR 703-82510-12                 | <a href="#">Buy now</a> |
| 45  | <a href="#">703-82577-00</a><br>Cap, key<br>FOR 703-82510-43                 | <a href="#">Buy now</a> |
| 46  | <a href="#">703-82531-00</a><br>Wire, lead                                   | <a href="#">Buy now</a> |
| 47  | <a href="#">688-82575-01</a><br>Engine stop switch assembly                  | <a href="#">Buy now</a> |
| 48  | <a href="#">682-82556-00</a><br>Lanyard, stop switch                         | <a href="#">Buy now</a> |
| 49  | <a href="#">688-8258A-20</a><br>10p main harness mec 2m (6ft)<br>LJ5M (10P)  | <a href="#">Buy now</a> |
| 50  | <a href="#">703-82540-00</a><br>Neutral switch assembly                      | <a href="#">Buy now</a> |
| 51  | <a href="#">703-83383-A0</a><br>Buzzer<br>FOR 703-48205-A4                   | <a href="#">Buy now</a> |
| 51  | <a href="#">703-83383-02</a><br>Buzzer<br>FOR 703-48205-17                   | <a href="#">Buy now</a> |
| 52  | <a href="#">703-48284-00</a><br>Grommet                                      | <a href="#">Buy now</a> |
| 53  | <a href="#">703-82591-00</a><br>Band                                         | <a href="#">Buy now</a> |
| 54  | <a href="#">703-82592-00</a><br>Band                                         | <a href="#">Buy now</a> |
| 55  | <a href="#">703-82563-02</a><br>Trim & tilt switch assembly<br>WITH PT/T SW. | <a href="#">Buy now</a> |
| 56  | <a href="#">703-48221-00</a><br>Grip                                         | <a href="#">Buy now</a> |


# Remote Control Assy 1

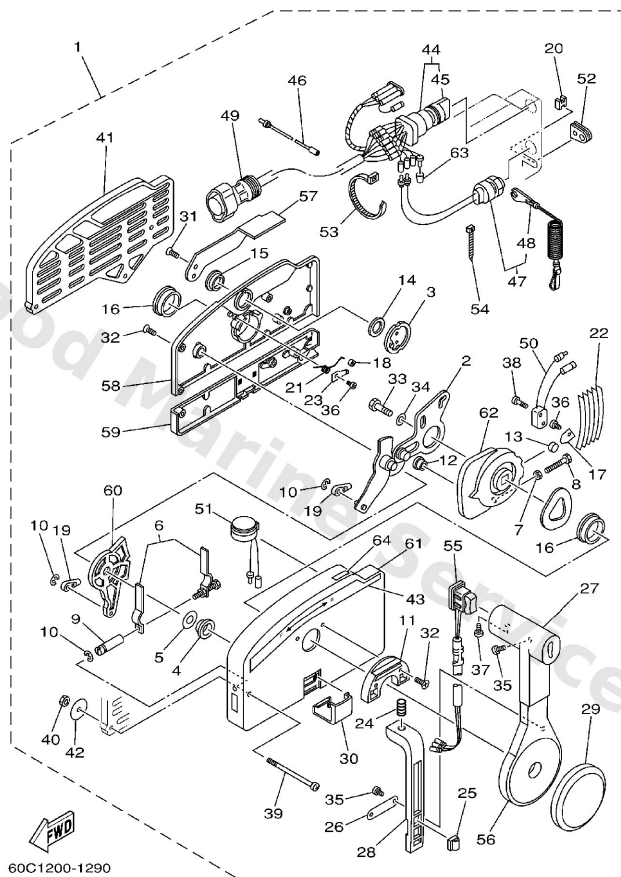 

D5

| Ref | Part                                                        |                         |
|-----|-------------------------------------------------------------|-------------------------|
| 57  | <a href="#">703-48152-00</a><br>Knob, free accel            | <a href="#">Buy now</a> |
| 58  | <a href="#">703-48212-00</a><br>Rear housing                | <a href="#">Buy now</a> |
| 59  | <a href="#">703-48213-00</a><br>Back, panel                 | <a href="#">Buy now</a> |
| 60  | <a href="#">703-48271-00</a><br>Arm, shift                  | <a href="#">Buy now</a> |
| 61  | <a href="#">703-48211-01</a><br>Housing,1                   | <a href="#">Buy now</a> |
| 62  | <a href="#">703-48232-00</a><br>Drive gear                  | <a href="#">Buy now</a> |
| 63  | <a href="#">703-82542-00</a><br>Cap<br>FOR 703-48205-A4     | <a href="#">Buy now</a> |
| 64  | <a href="#">703-48218-00</a><br>Graphic<br>FOR 703-48205-A4 | <a href="#">Buy now</a> |


## Remote Control Assy 2

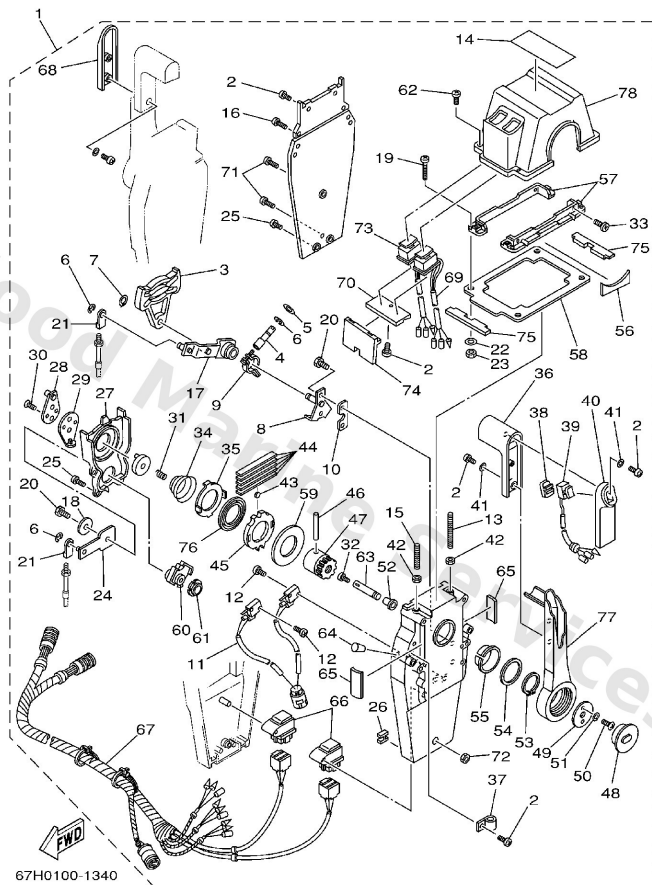 

E1

| Ref | Part                                                                        |                         |
|-----|-----------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">704-48207-23</a><br>Remote Control assembly<br>AP WITH PT/T SW. | <a href="#">Buy now</a> |
| 2   | <a href="#">97890-05016</a><br>Screw, pan head(6b0)                         | <a href="#">Buy now</a> |
| 3   | <a href="#">EL8-48251-00</a><br>Plate, cam                                  | <a href="#">Buy now</a> |
| 4   | <a href="#">704-48265-00</a><br>Shaft, friction                             | <a href="#">Buy now</a> |
| 5   | <a href="#">701-48246-00</a><br>Spacer                                      | <a href="#">Buy now</a> |
| 6   | <a href="#">93430-06024</a><br>Circlip (701)                                | <a href="#">Buy now</a> |
| 7   | <a href="#">EL8-48259-00</a><br>Circlip 1                                   | <a href="#">Buy now</a> |
| 8   | <a href="#">704-48262-00</a><br>Shaft, throttle                             | <a href="#">Buy now</a> |
| 9   | <a href="#">704-48264-00</a><br>Friction, throttle                          | <a href="#">Buy now</a> |
| 10  | <a href="#">704-48266-00</a><br>Spacer 2                                    | <a href="#">Buy now</a> |
| 11  | <a href="#">704-82540-10</a><br>Neutral switch assembly                     | <a href="#">Buy now</a> |
| 12  | <a href="#">6A5-48129-10</a><br>Screw, pan head (n151)                      | <a href="#">Buy now</a> |
| 13  | <a href="#">EL8-48281-00</a><br>Screw 1                                     | <a href="#">Buy now</a> |
| 14  | <a href="#">704-48215-10</a><br>Graphic 1                                   | <a href="#">Buy now</a> |
| 15  | <a href="#">704-48281-00</a><br>Screw1                                      | <a href="#">Buy now</a> |


## Remote Control Assy 2

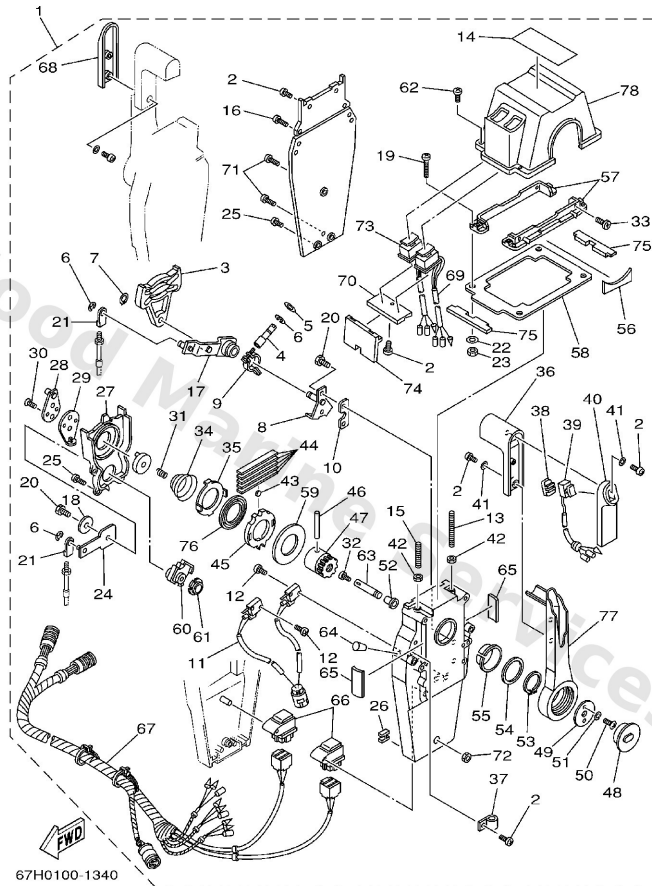 

**E1**

| Ref | Part                                                        |                         |
|-----|-------------------------------------------------------------|-------------------------|
| 16  | <a href="#">97890-05025</a><br>Screw, panhead (a93)         | <a href="#">Buy now</a> |
| 17  | <a href="#">704-48261-00</a><br>Arm, throttle               | <a href="#">Buy now</a> |
| 18  | <a href="#">EL8-48191-00</a><br>Washer 1                    | <a href="#">Buy now</a> |
| 19  | <a href="#">704-48283-00</a><br>Screw, panhead (eg9)        | <a href="#">Buy now</a> |
| 20  | <a href="#">97380-06018</a><br>Bolt (fj0)                   | <a href="#">Buy now</a> |
| 21  | <a href="#">703-48345-01</a><br>Cable end, remote control 2 | <a href="#">Buy now</a> |
| 22  | <a href="#">704-48287-00</a><br>Washer 1                    | <a href="#">Buy now</a> |
| 23  | <a href="#">95380-05600</a><br>Nut, hexagon (663)           | <a href="#">Buy now</a> |
| 24  | <a href="#">EL8-48271-00</a><br>Arm, shift                  | <a href="#">Buy now</a> |
| 25  | <a href="#">EL8-48127-00</a><br>Screw 1                     | <a href="#">Buy now</a> |
| 26  | <a href="#">703-48358-00</a><br>Anchor, cable               | <a href="#">Buy now</a> |
| 27  | <a href="#">EL8-48231-00</a><br>Housing, gear               | <a href="#">Buy now</a> |
| 28  | <a href="#">EL8-48241-00</a><br>Arm, drive                  | <a href="#">Buy now</a> |
| 29  | <a href="#">EL8-48254-00</a><br>Stopper Throttle Adjusting  | <a href="#">Buy now</a> |
| 30  | <a href="#">92780-06020</a><br>Screw flat head              | <a href="#">Buy now</a> |

 
## Remote Control Assy 2

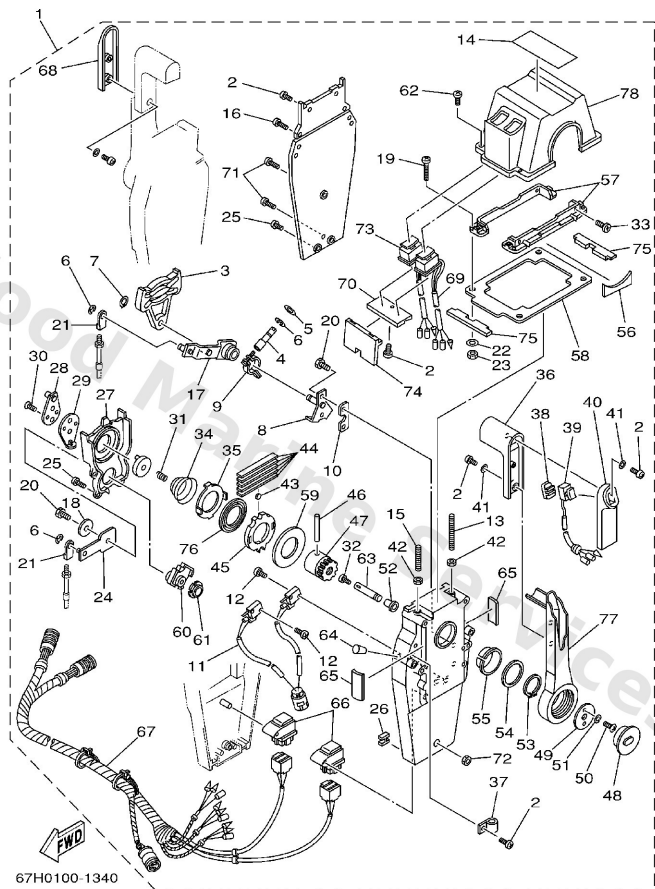

**E1**


| Ref | Part                                                        |                         |
|-----|-------------------------------------------------------------|-------------------------|
| 31  | <a href="#">EL8-48158-00</a><br>Spring 1                    | <a href="#">Buy now</a> |
| 32  | <a href="#">98580-04006</a><br>Screw, pan head (7h3)        | <a href="#">Buy now</a> |
| 33  | <a href="#">98780-05018</a><br>Screw (704)                  | <a href="#">Buy now</a> |
| 34  | <a href="#">EL8-48244-00</a><br>Spring, free accel.         | <a href="#">Buy now</a> |
| 35  | <a href="#">EL8-48245-00</a><br>Plate, lock                 | <a href="#">Buy now</a> |
| 36  | <a href="#">704-48222-00</a><br>Grip, control lever         | <a href="#">Buy now</a> |
| 37  | <a href="#">704-82594-00</a><br>Clamp                       | <a href="#">Buy now</a> |
| 38  | <a href="#">704-48228-00</a><br>Holder, switch              | <a href="#">Buy now</a> |
| 39  | <a href="#">704-82563-31</a><br>Trim & tilt switch assembly | <a href="#">Buy now</a> |
| 40  | <a href="#">704-48229-00</a><br>Grip, control lever 2       | <a href="#">Buy now</a> |
| 41  | <a href="#">92990-05300</a><br>Washer, tooth                | <a href="#">Buy now</a> |
| 42  | <a href="#">95380-06600</a><br>Nut(661)                     | <a href="#">Buy now</a> |
| 43  | <a href="#">701-48248-00</a><br>Roller, free accel          | <a href="#">Buy now</a> |
| 44  | <a href="#">703-48238-00</a><br>Spring, detent              | <a href="#">Buy now</a> |
| 45  | <a href="#">EL8-48232-00</a><br>Gear 1                      | <a href="#">Buy now</a> |
 
## Remote Control Assy 2

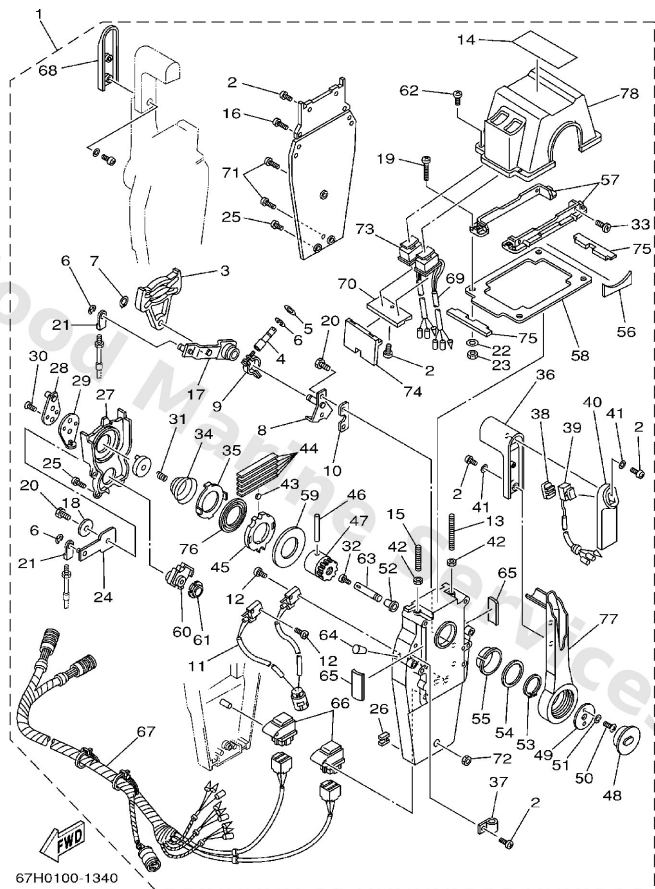


| Ref | Part                                                |                         |
|-----|-----------------------------------------------------|-------------------------|
| 46  | <a href="#">EL8-48164-00</a><br>Pin 2               | <a href="#">Buy now</a> |
| 47  | <a href="#">704-48242-00</a><br>Shaft, drive        | <a href="#">Buy now</a> |
| 48  | <a href="#">704-48225-00</a><br>Cover               | <a href="#">Buy now</a> |
| 49  | <a href="#">704-48192-00</a><br>Washer 2            | <a href="#">Buy now</a> |
| 50  | <a href="#">97890-06018</a><br>Screw, pan head(6e5) | <a href="#">Buy now</a> |
| 51  | <a href="#">92990-06300</a><br>Washer, tooth        | <a href="#">Buy now</a> |
| 52  | <a href="#">702-48263-00</a><br>Bushing 4           | <a href="#">Buy now</a> |
| 53  | <a href="#">EL8-48279-00</a><br>Circlip 2           | <a href="#">Buy now</a> |
| 54  | <a href="#">704-48193-00</a><br>Washer 3            | <a href="#">Buy now</a> |
| 55  | <a href="#">EL8-48234-00</a><br>Bushing 1           | <a href="#">Buy now</a> |
| 56  | <a href="#">704-48219-00</a><br>Cover, lead         | <a href="#">Buy now</a> |
| 57  | <a href="#">704-48144-00</a><br>Plate, stopper 2    | <a href="#">Buy now</a> |
| 58  | <a href="#">704-48176-10</a><br>Grommet             | <a href="#">Buy now</a> |
| 59  | <a href="#">703-48192-00</a><br>Washer 2            | <a href="#">Buy now</a> |
| 60  | <a href="#">EL8-48233-00</a><br>Gear 2              | <a href="#">Buy now</a> |

## Remote Control Assy 2

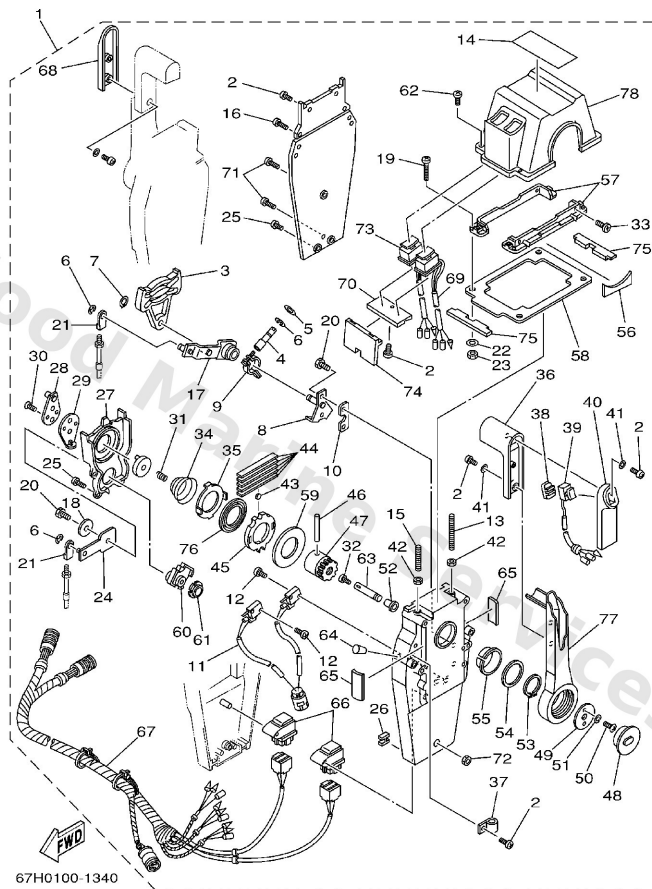 

| Ref | Part                                                        |                         |
|-----|-------------------------------------------------------------|-------------------------|
| 61  | <a href="#">703-48235-00</a><br>Bushing                     | <a href="#">Buy now</a> |
| 62  | <a href="#">704-48282-00</a><br>Screw 2                     | <a href="#">Buy now</a> |
| 63  | <a href="#">EL8-48153-10</a><br>Shaft, free accel.          | <a href="#">Buy now</a> |
| 64  | <a href="#">704-48166-00</a><br>Plug                        | <a href="#">Buy now</a> |
| 65  | <a href="#">704-48284-00</a><br>Grommet                     | <a href="#">Buy now</a> |
| 66  | <a href="#">704-81950-00</a><br>Relay assembly              | <a href="#">Buy now</a> |
| 67  | <a href="#">704-82590-10</a><br>Wireharness assembly        | <a href="#">Buy now</a> |
| 68  | <a href="#">704-48229-10</a><br>Grip, control lever 2       | <a href="#">Buy now</a> |
| 69  | <a href="#">704-82563-E0</a><br>Trim & tilt switch assembly | <a href="#">Buy now</a> |
| 70  | <a href="#">704-48228-10</a><br>Holder, switch              | <a href="#">Buy now</a> |
| 71  | <a href="#">704-48128-00</a><br>Screw, pan head             | <a href="#">Buy now</a> |
| 72  | <a href="#">704-48156-00</a><br>Nut 1                       | <a href="#">Buy now</a> |
| 73  | <a href="#">704-82563-F0</a><br>Trim & tilt switch assembly | <a href="#">Buy now</a> |
| 74  | <a href="#">704-48285-00</a><br>Grommet 2                   | <a href="#">Buy now</a> |
| 75  | <a href="#">704-48286-00</a><br>Grommet 3                   | <a href="#">Buy now</a> |


## Remote Control Assy 2

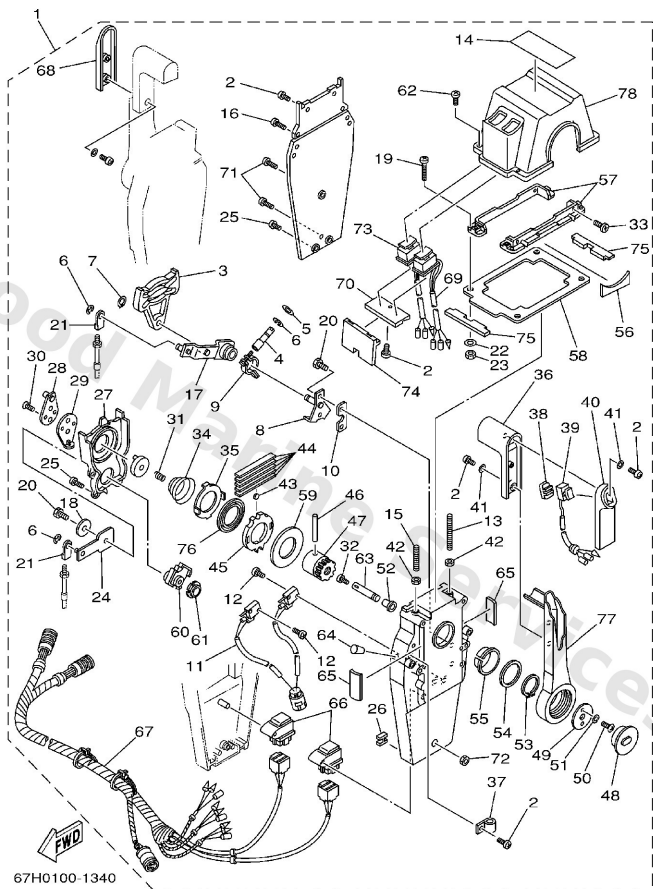 

**E1**

| Ref | Part                                          |                         |
|-----|-----------------------------------------------|-------------------------|
| 76  | <a href="#">704-48178-00</a><br>Plate, shift  | <a href="#">Buy now</a> |
| 77  | <a href="#">704-48221-00</a><br>Lever control | <a href="#">Buy now</a> |
| 78  | <a href="#">704-48119-20</a><br>Cover         | <a href="#">Buy now</a> |
 
## Remote Control Box

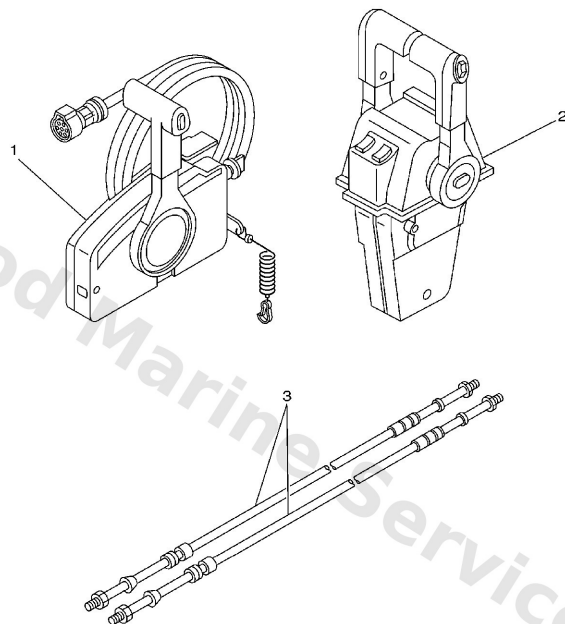


67H0100-9310

D4


| Ref | Part                                                                                   |                         |
|-----|----------------------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">703-48205-17</a><br>Remote control assembly (10p, ptt)<br>AP WITH PT/T SW. | <a href="#">Buy now</a> |
| 1   | <a href="#">703-48205-A4</a><br>Remote control assembly (10p, ptt)<br>AP FOR CARIB     | <a href="#">Buy now</a> |
| 2   | <a href="#">704-48207-23</a><br>Remote Control assembly<br>AP WITH PT/T SW.            | <a href="#">Buy now</a> |
| 3   | <a href="#">701-48320-40</a><br>Cable, Remote Control L=19F<br>UR                      | <a href="#">Buy now</a> |
| 3   | <a href="#">701-48320-50</a><br>Cable, Remote Control L=15F<br>UR                      | <a href="#">Buy now</a> |
| 3   | <a href="#">701-48320-60</a><br>Cable, Remote Control L=16F<br>UR                      | <a href="#">Buy now</a> |
| 3   | <a href="#">701-48320-80</a><br>Cable, Remote Control L=17F<br>UR                      | <a href="#">Buy now</a> |
| 3   | <a href="#">701-48350-00</a><br>Cable, Remote Control L=21F<br>UR                      | <a href="#">Buy now</a> |
| 3   | <a href="#">701-48350-20</a><br>Cable, Remote Control L=23F<br>UR                      | <a href="#">Buy now</a> |

# Repair Kit 1

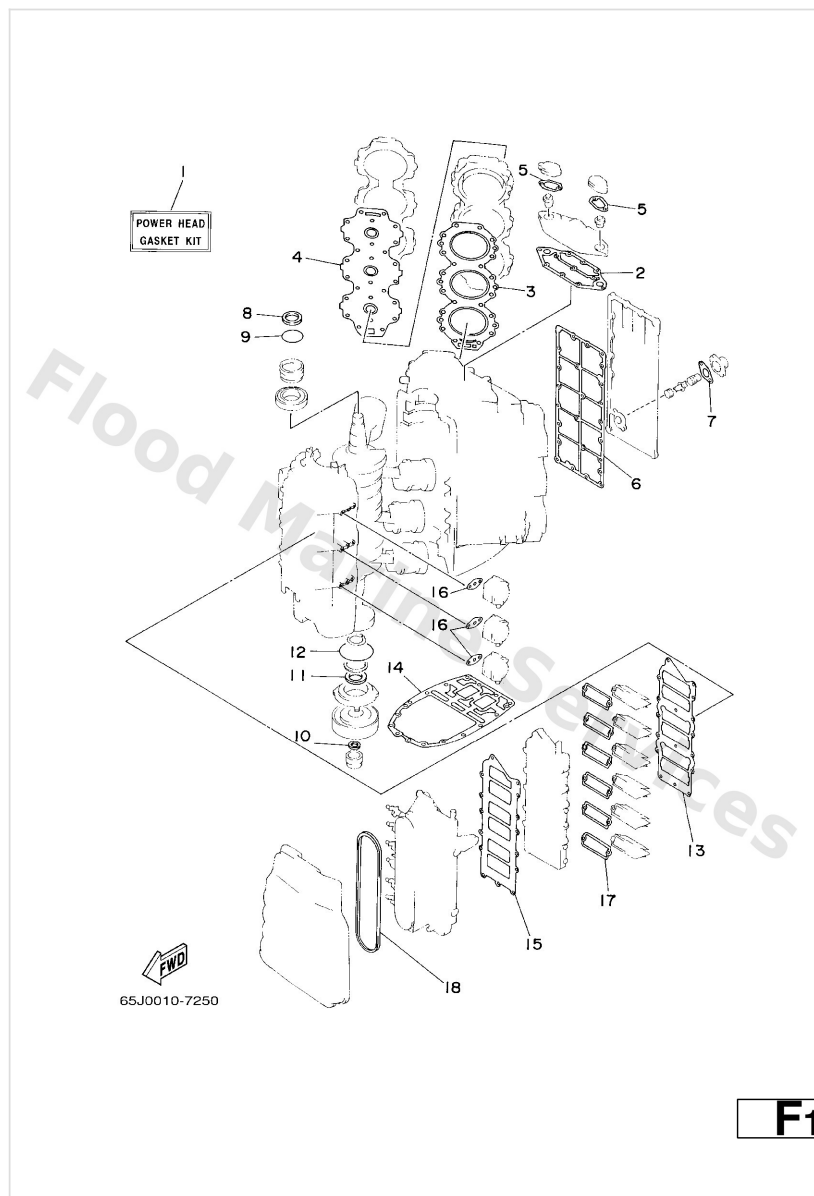 


| Ref | Part                                                        |                         |
|-----|-------------------------------------------------------------|-------------------------|
| 1   | <a href="#">65L-W0001-02</a><br>Power head gasket kit       | <a href="#">Buy now</a> |
| 2   | <a href="#">61A-11381-A0</a><br>Gasket 1                    | <a href="#">Buy now</a> |
| 3   | <a href="#">69L-11181-00</a><br>Gasket, cylinder head 1     | <a href="#">Buy now</a> |
| 4   | <a href="#">61A-11193-A1</a><br>Gasket, head cover 1        | <a href="#">Buy now</a> |
| 5   | <a href="#">61A-12414-A0</a><br>Gasket, cover               | <a href="#">Buy now</a> |
| 6   | <a href="#">61A-41112-A0</a><br>Gasket, exhaust inner cover | <a href="#">Buy now</a> |
| 7   | <a href="#">6G5-11382-A1</a><br>Gasket 2                    | <a href="#">Buy now</a> |
| 8   | <a href="#">93102-40M38</a><br>Oil seal(61a)                | <a href="#">Buy now</a> |
| 9   | <a href="#">93210-54M54</a><br>O-ring (6g1)                 | <a href="#">Buy now</a> |
| 10  | <a href="#">93104-22M07</a><br>Oil seal(61a)                | <a href="#">Buy now</a> |
| 11  | <a href="#">93102-40M36</a><br>Oil seal                     | <a href="#">Buy now</a> |
| 12  | <a href="#">93210-81MA6</a><br>O-ring(61a)                  | <a href="#">Buy now</a> |
| 13  | <a href="#">65L-13645-00</a><br>Gasket, manifold 1          | <a href="#">Buy now</a> |
| 14  | <a href="#">61A-45113-A0</a><br>Gasket, upper casing        | <a href="#">Buy now</a> |
| 15  | <a href="#">65L-13646-00</a><br>Gasket, manifold 2          | <a href="#">Buy now</a> |

# Repair Kit 1

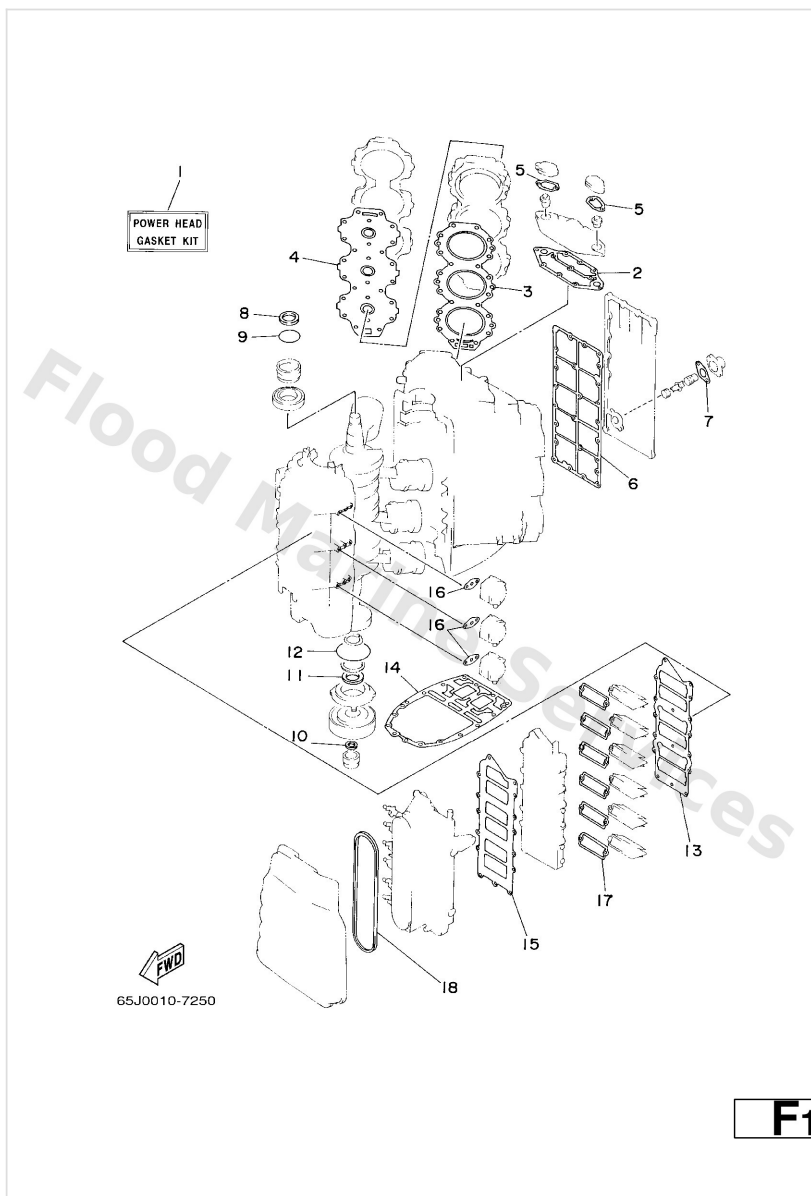 


| Ref | Part                                               |                         |
|-----|----------------------------------------------------|-------------------------|
| 16  | <a href="#">650-24431-A0</a><br>Gasket, fuel pump  | <a href="#">Buy now</a> |
| 17  | <a href="#">61A-13621-A0</a><br>Gasket, valve seat | <a href="#">Buy now</a> |
| 18  | <a href="#">65L-14483-00</a><br>Gasket             | <a href="#">Buy now</a> |

## Repair Kit 2

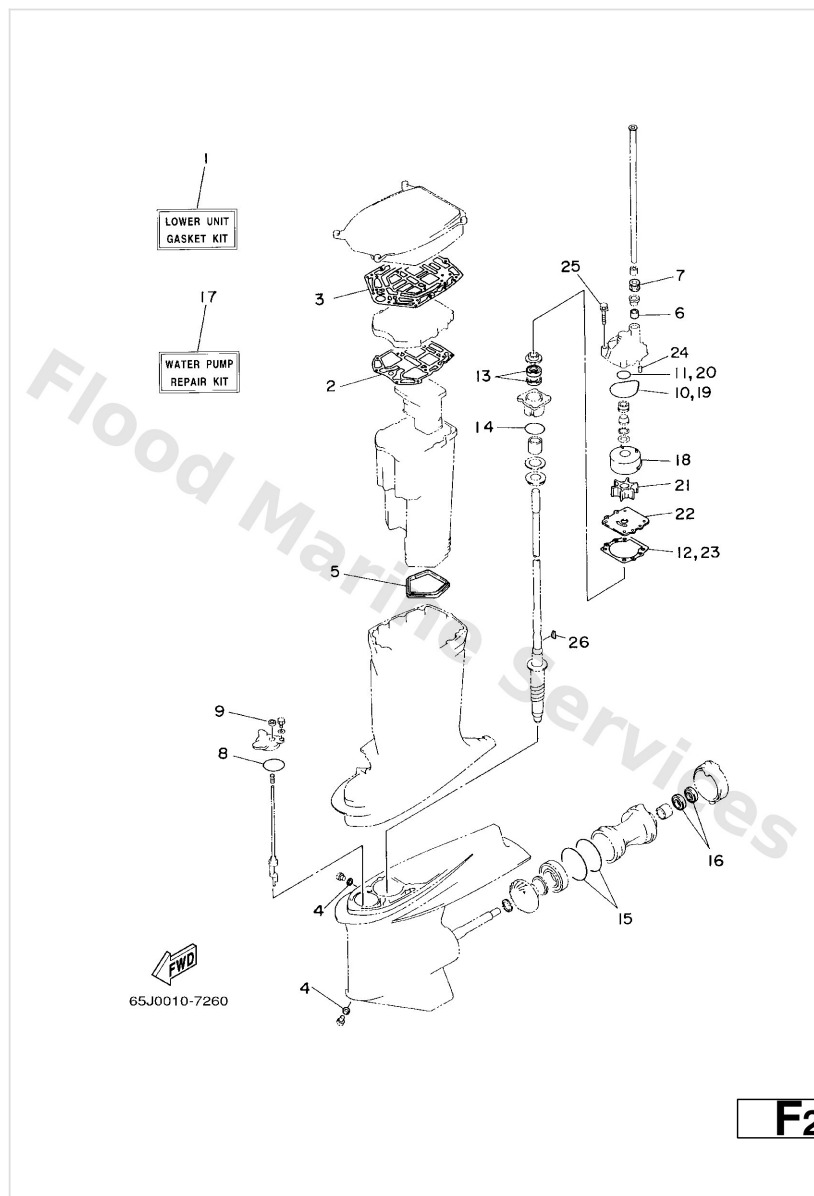 


| Ref | Part                                                     |                         |
|-----|----------------------------------------------------------|-------------------------|
| 1   | <a href="#">65L-W0001-C0</a><br>Gasket kit               | <a href="#">Buy now</a> |
| 2   | <a href="#">61A-41134-A0</a><br>Gasket, exhaust manifold | <a href="#">Buy now</a> |
| 3   | <a href="#">61A-45114-A0</a><br>Gasket, upper casing     | <a href="#">Buy now</a> |
| 4   | <a href="#">90430-08020</a><br>Gasket                    | <a href="#">Buy now</a> |
| 5   | <a href="#">61A-45123-01</a><br>Gasket, muffler          | <a href="#">Buy now</a> |
| 6   | <a href="#">6E5-44365-00</a><br>Damper, water seal 1     | <a href="#">Buy now</a> |
| 7   | <a href="#">6E5-44366-00</a><br>Damper, water seal 2     | <a href="#">Buy now</a> |
| 8   | <a href="#">93210-64488</a><br>93210-64488               | <a href="#">Buy now</a> |
| 9   | <a href="#">93106-09014</a><br>Oil seal                  | <a href="#">Buy now</a> |
| 10  | <a href="#">93210-86M38</a><br>O-ring (6e5)              | <a href="#">Buy now</a> |
| 11  | <a href="#">93210-37160</a><br>O-ring (6g8)              | <a href="#">Buy now</a> |
| 12  | <a href="#">6E5-44315-A0</a><br>Gasket, water pump       | <a href="#">Buy now</a> |
| 13  | <a href="#">93101-28M16</a><br>Oil seal (6e5)            | <a href="#">Buy now</a> |
| 14  | <a href="#">93210-55M14</a><br>O-ring (70e)              | <a href="#">Buy now</a> |
| 15  | <a href="#">93211-04384</a><br>O-ring (705)              | <a href="#">Buy now</a> |

## Repair Kit 2

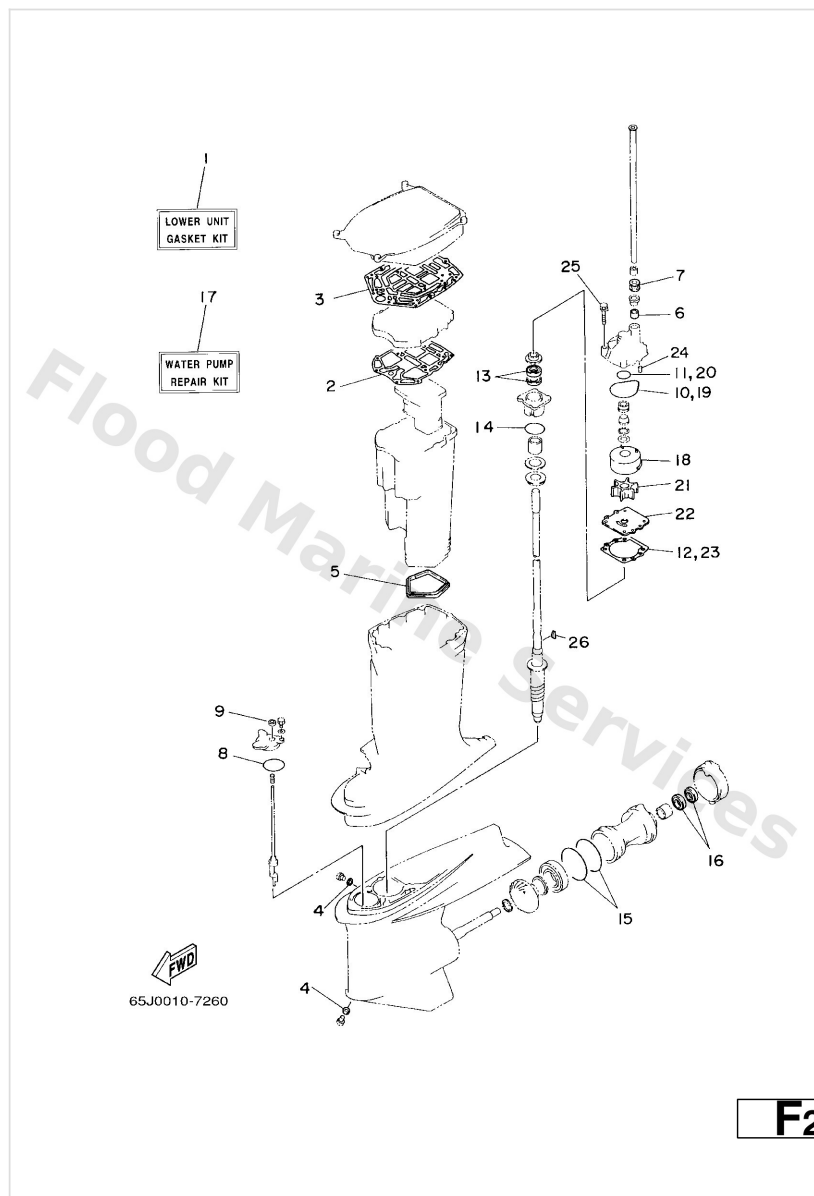 

| Ref | Part                                                   |                         |
|-----|--------------------------------------------------------|-------------------------|
| 16  | <a href="#">93101-30M17</a><br>Oil seal (6e5)          | <a href="#">Buy now</a> |
| 17  | <a href="#">61A-W0078-A3</a><br>Water pump repair kit  | <a href="#">Buy now</a> |
| 18  | <a href="#">61A-44322-02</a><br>Insert, cartridge      | <a href="#">Buy now</a> |
| 21  | <a href="#">6E5-44352-01</a><br>Impeller               | <a href="#">Buy now</a> |
| 22  | <a href="#">6G5-44323-00</a><br>Outer plate, cartridge | <a href="#">Buy now</a> |
| 24  | <a href="#">93606-12019</a><br>Pin, dowel (614)        | <a href="#">Buy now</a> |
| 25  | <a href="#">90119-08M14</a><br>Bolt, with washer       | <a href="#">Buy now</a> |
| 26  | <a href="#">90280-04M05</a><br>Key, woodruff (6e5)     | <a href="#">Buy now</a> |


# Starting Motor

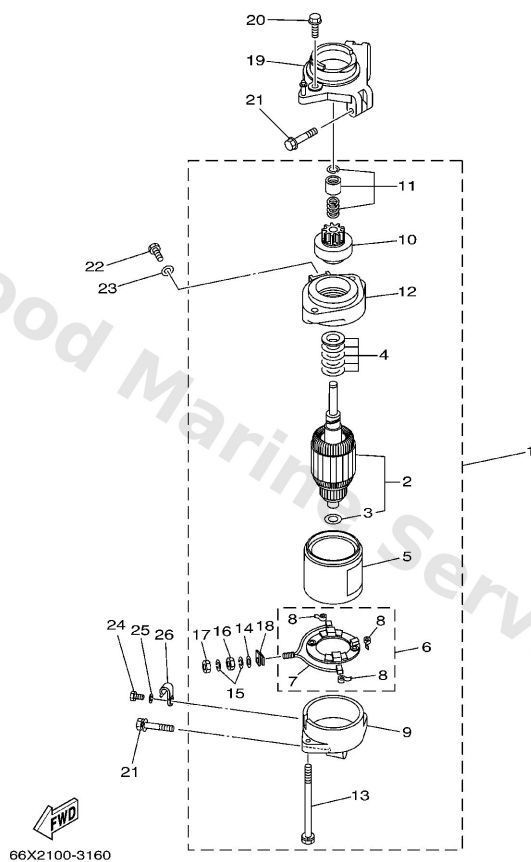 

**E5**

| Ref | Part                                                         |                         |
|-----|--------------------------------------------------------------|-------------------------|
| 1   | <a href="#">61A-81800-01</a><br>Starting motor assembly      | <a href="#">Buy now</a> |
| 2   | <a href="#">61A-81850-01</a><br>Armature assembly            | <a href="#">Buy now</a> |
| 3   | <a href="#">61A-81824-00</a><br>Washer 2                     | <a href="#">Buy now</a> |
| 4   | <a href="#">61A-81809-00</a><br>Washer kit                   | <a href="#">Buy now</a> |
| 5   | <a href="#">6K7-81810-00</a><br>Stator assembly              | <a href="#">Buy now</a> |
| 6   | <a href="#">61A-81840-00</a><br>Brush holder assembly        | <a href="#">Buy now</a> |
| 7   | <a href="#">6K7-81801-10</a><br>Brush Set                    | <a href="#">Buy now</a> |
| 8   | <a href="#">6E5-81813-10</a><br>Spring Brush                 | <a href="#">Buy now</a> |
| 9   | <a href="#">61A-81820-00</a><br>Rear Bracket assembly        | <a href="#">Buy now</a> |
| 10  | <a href="#">61A-81807-00</a><br>Gear assembly Starting Motor | <a href="#">Buy now</a> |
| 11  | <a href="#">61H-81857-00</a><br>Retainer                     | <a href="#">Buy now</a> |
| 12  | <a href="#">61A-81830-00</a><br>Front Bracket assembly       | <a href="#">Buy now</a> |
| 13  | <a href="#">6K7-81826-10</a><br>Bolt                         | <a href="#">Buy now</a> |
| 14  | <a href="#">6E5-8182E-10</a><br>Washer, spring               | <a href="#">Buy now</a> |
| 15  | <a href="#">6E5-8182F-10</a><br>Washer,plain                 | <a href="#">Buy now</a> |

 
# Starting Motor

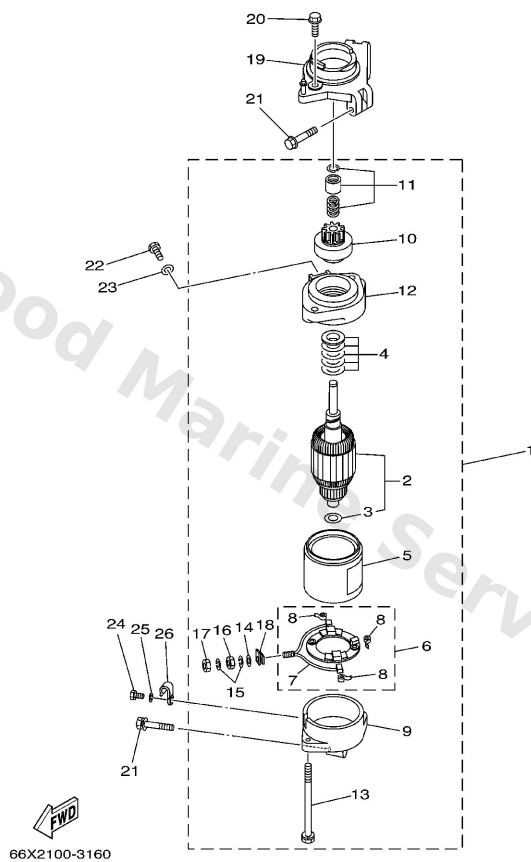

**E5**

| Ref | Part                                                       |                         |
|-----|------------------------------------------------------------|-------------------------|
| 16  | <a href="#">6E5-8182A-10</a><br>Nut                        | <a href="#">Buy now</a> |
| 17  | <a href="#">6E5-8182K-10</a><br>Nut                        | <a href="#">Buy now</a> |
| 18  | <a href="#">6K7-8182G-10</a><br>Bush, terminal             | <a href="#">Buy now</a> |
| 19  | <a href="#">61A-81822-00-94</a><br>Bracket, starting motor | <a href="#">Buy now</a> |
| 20  | <a href="#">90119-08M76</a><br>Bolt, with washer(6e5)      | <a href="#">Buy now</a> |
| 21  | <a href="#">90119-08M77</a><br>Bolt, with washer(6e5)      | <a href="#">Buy now</a> |
| 22  | <a href="#">97095-08016</a><br>Bolt, hexagon deep recess   | <a href="#">Buy now</a> |
| 23  | <a href="#">92995-08600</a><br>Washer, plain (663)         | <a href="#">Buy now</a> |
| 24  | <a href="#">97095-06012</a><br>Bolt(gh1)                   | <a href="#">Buy now</a> |
| 25  | <a href="#">92995-06600</a><br>Washer, plain (646)         | <a href="#">Buy now</a> |
| 26  | <a href="#">90465-06M86</a><br>Clamp                       | <a href="#">Buy now</a> |
 
# Steering Guide Attachment 1

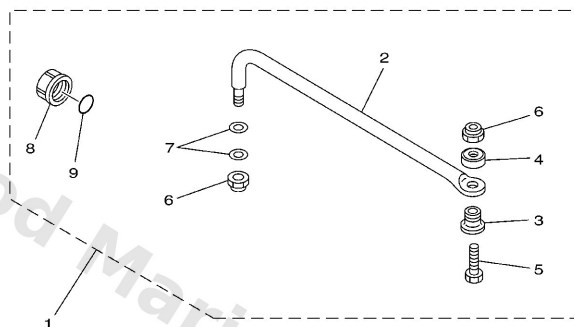


67H0100-9290

**D2**
 
| Ref | Part                                                                                 |                         |
|-----|--------------------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6E5-61350-02</a><br>Steering guide attachment kit<br>AP "65M2"—FOR CARIB | <a href="#">Buy now</a> |
| 2   | <a href="#">6E5-61351-01</a><br>Rod, steering link                                   | <a href="#">Buy now</a> |
| 3   | <a href="#">90387-10M61</a><br>Collar (6e5)                                          | <a href="#">Buy now</a> |
| 4   | <a href="#">90560-12M01</a><br>Spacer (6e5)                                          | <a href="#">Buy now</a> |
| 5   | <a href="#">6E5-61355-00</a><br>Bolt                                                 | <a href="#">Buy now</a> |
| 6   | <a href="#">90185-09M01</a><br>Nut, nylon (663)                                      | <a href="#">Buy now</a> |
| 7   | <a href="#">90201-10M20</a><br>Washer, plate (663)                                   | <a href="#">Buy now</a> |
| 8   | <a href="#">6E5-43145-01</a><br>Cap, clamp bracket                                   | <a href="#">Buy now</a> |
| 9   | <a href="#">93210-16275</a><br>O-ring                                                | <a href="#">Buy now</a> |

## Steering Guide Attachment 2

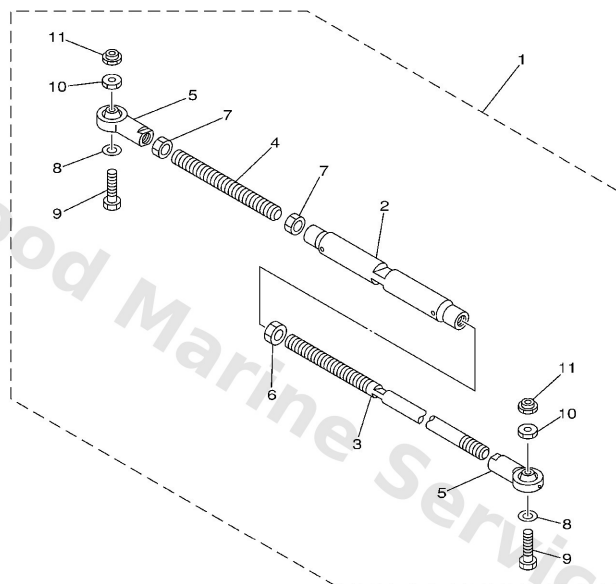


67H0100-0300

**D3**

 
| Ref | Part                                                                        |                         |
|-----|-----------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6E5-61301-01</a><br>Tie bar assembly (l:600-800mm)<br><b>AP</b> | <a href="#">Buy now</a> |
| 2   | <a href="#">6E5-61313-00</a><br>Adjuster                                    | <a href="#">Buy now</a> |
| 3   | <a href="#">6E5-61311-11</a><br>Tie bar                                     | <a href="#">Buy now</a> |
| 4   | <a href="#">6E5-61315-00</a><br>Tie bar, 2                                  | <a href="#">Buy now</a> |
| 5   | <a href="#">6E5-61303-00</a><br>Steering axle comp.                         | <a href="#">Buy now</a> |
| 6   | <a href="#">90170-14M06</a><br>Nut (6e5)                                    | <a href="#">Buy now</a> |
| 7   | <a href="#">95380-14700</a><br>Nut (6e5)                                    | <a href="#">Buy now</a> |
| 8   | <a href="#">90201-10M76</a><br>Washer, plate (6e5)                          | <a href="#">Buy now</a> |
| 9   | <a href="#">90101-09M70</a><br>Bolt (6e5)                                   | <a href="#">Buy now</a> |
| 10  | <a href="#">90170-09M05</a><br>Nut, hexagon (6e5)                           | <a href="#">Buy now</a> |
| 11  | <a href="#">90185-09M01</a><br>Nut, nylon (663)                             | <a href="#">Buy now</a> |

## Switch. Panel 1

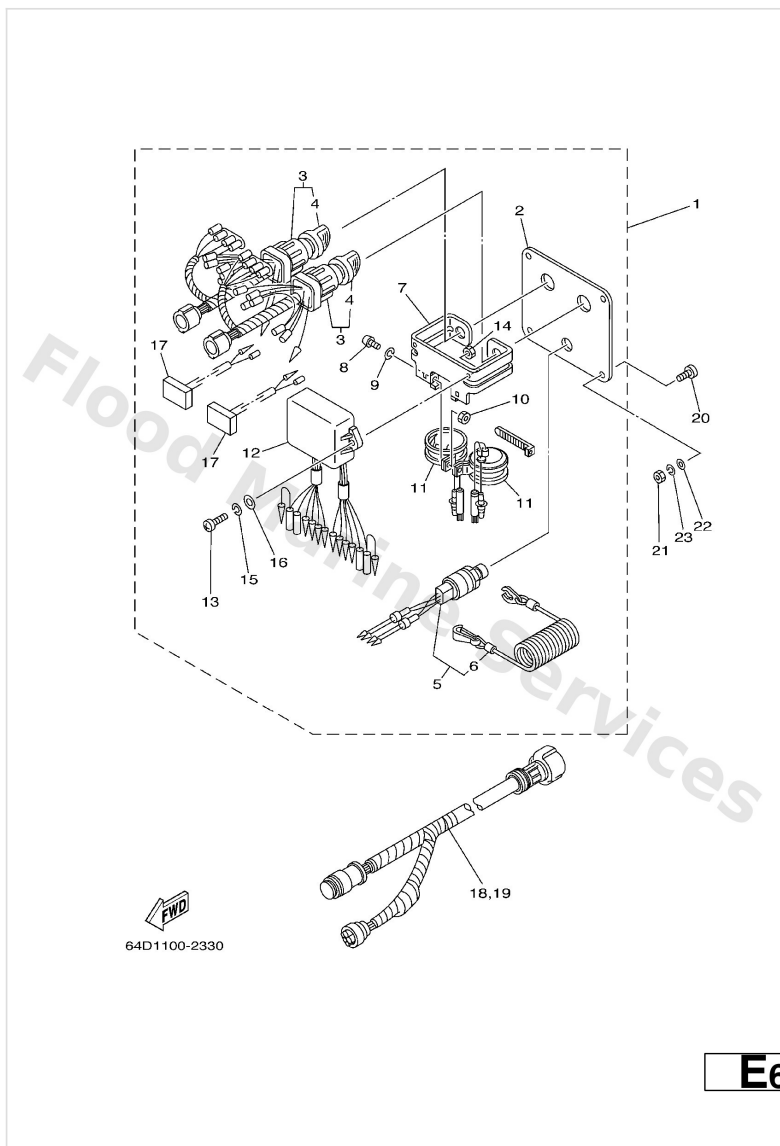


| Ref | Part                                                                    |                         |
|-----|-------------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">6K1-82570-07</a><br>Panel switch assembly<br>AP FOR OCEANIA | <a href="#">Buy now</a> |
| 2   | <a href="#">6K1-82571-01</a><br>Plate, panel switch                     | <a href="#">Buy now</a> |
| 3   | <a href="#">6K1-82510-06</a><br>Main switch assembly                    | <a href="#">Buy now</a> |
| 4   | <a href="#">703-82577-00</a><br>Cap, key                                | <a href="#">Buy now</a> |
| 5   | <a href="#">6K1-82575-00</a><br>Engine stop switch assembly             | <a href="#">Buy now</a> |
| 6   | <a href="#">682-82556-00</a><br>Lanyard, stop switch                    | <a href="#">Buy now</a> |
| 7   | <a href="#">6K1-83614-01</a><br>Bracket                                 | <a href="#">Buy now</a> |
| 8   | <a href="#">98980-05010</a><br>Screw, bind(6k1)                         | <a href="#">Buy now</a> |
| 23  | <a href="#">92990-05100</a><br>Ybs67-5 washer, spring<br>AP FOR OCEANIA | <a href="#">Buy now</a> |
| 21  | <a href="#">95380-05600</a><br>Nut, hexagon (663)<br>AP FOR OCEANIA     | <a href="#">Buy now</a> |
| 11  | <a href="#">688-83383-11</a><br>Buzzer                                  | <a href="#">Buy now</a> |
| 12  | <a href="#">6K1-85830-01</a><br>Control unit assembly                   | <a href="#">Buy now</a> |
| 13  | <a href="#">98980-06020</a><br>Screw, bind (j17)                        | <a href="#">Buy now</a> |
| 14  | <a href="#">95380-06600</a><br>Nut(661)                                 | <a href="#">Buy now</a> |
| 15  | <a href="#">92990-06100</a><br>Washer(6a1)                              | <a href="#">Buy now</a> |

# Switch. Panel 1

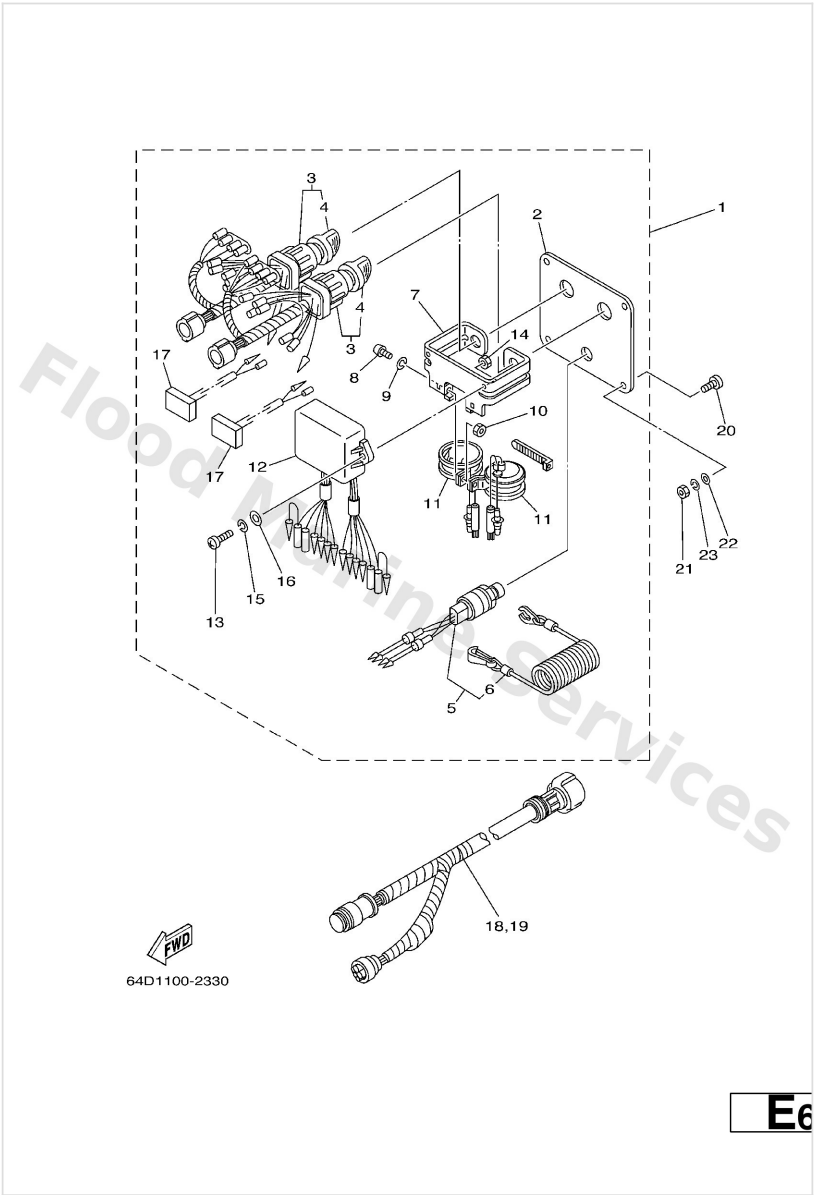 

| Ref | Part                                                                      |                         |
|-----|---------------------------------------------------------------------------|-------------------------|
| 16  | <a href="#">92990-06600</a><br>Washer, plain (646)                        | <a href="#">Buy now</a> |
| 17  | <a href="#">6K1-81980-00</a><br>Diode assembly                            | <a href="#">Buy now</a> |
| 18  | <a href="#">6K1-8258A-40</a><br>Extension, wire harness<br>AP FOR OCEANIA | <a href="#">Buy now</a> |
| 19  | <a href="#">61B-8258A-01</a><br>Extension, wire harness<br>AP FOR OCEANIA | <a href="#">Buy now</a> |
| 20  | <a href="#">90149-05M05</a><br>Screw(6k0)<br>AP FOR OCEANIA               | <a href="#">Buy now</a> |
| 22  | <a href="#">92990-05600</a><br>Washer, plain (646)<br>AP FOR OCEANIA      | <a href="#">Buy now</a> |

## Switch. Panel 2

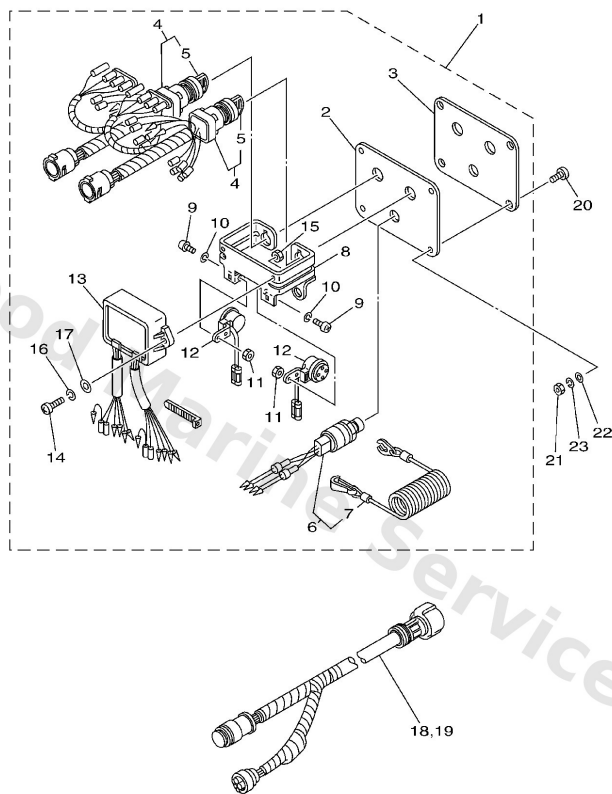 


67H1100-2360

**E7**
 
| Ref | Part                                                                  |                         |
|-----|-----------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">61B-82570-02</a><br>Panel switch assembly<br>AP FOR CARIB | <a href="#">Buy now</a> |
| 2   | <a href="#">61B-82588-01</a><br>Plate                                 | <a href="#">Buy now</a> |
| 3   | <a href="#">61B-82551-01</a><br>Stop Switch assembly                  | <a href="#">Buy now</a> |
| 4   | <a href="#">61B-82510-01</a><br>Main switch assembly                  | <a href="#">Buy now</a> |
| 5   | <a href="#">676-82577-00</a><br>Cap, key                              | <a href="#">Buy now</a> |
| 6   | <a href="#">6K1-82575-00</a><br>Engine stop switch assembly           | <a href="#">Buy now</a> |
| 7   | <a href="#">682-82556-00</a><br>Lanyard, stop switch                  | <a href="#">Buy now</a> |
| 8   | <a href="#">6K1-83614-01</a><br>Bracket                               | <a href="#">Buy now</a> |
| 9   | <a href="#">98980-05010</a><br>Screw, bind(6k1)                       | <a href="#">Buy now</a> |
| 23  | <a href="#">92990-05100</a><br>Ybs67-5 washer, spring<br>AP FOR CARIB | <a href="#">Buy now</a> |
| 21  | <a href="#">95380-05600</a><br>Nut, hexagon (663)<br>AP FOR CARIB     | <a href="#">Buy now</a> |
| 12  | <a href="#">6R5-83383-00</a><br>Buzzer                                | <a href="#">Buy now</a> |
| 13  | <a href="#">61B-85830-00</a><br>Control Unit assembly                 | <a href="#">Buy now</a> |
| 14  | <a href="#">98980-06020</a><br>Screw, bind (j17)                      | <a href="#">Buy now</a> |
| 15  | <a href="#">95380-06600</a><br>Nut(661)                               | <a href="#">Buy now</a> |

## Switch. Panel 2

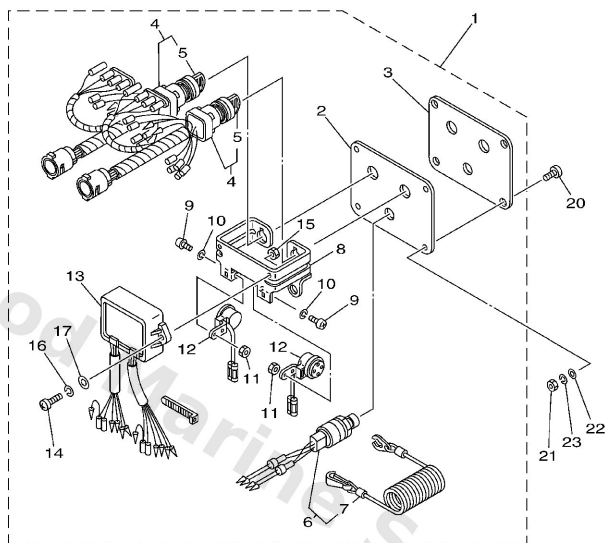


  
67H1100-2360

**E7**
 
| Ref | Part                                                                    |                         |
|-----|-------------------------------------------------------------------------|-------------------------|
| 16  | <a href="#">92990-06100</a><br>Washer(6a1)                              | <a href="#">Buy now</a> |
| 17  | <a href="#">92990-06600</a><br>Washer, plain (646)                      | <a href="#">Buy now</a> |
| 18  | <a href="#">6K1-8258A-40</a><br>Extension, wire harness<br>AP FOR CARIB | <a href="#">Buy now</a> |
| 19  | <a href="#">61B-8258A-01</a><br>Extension, wire harness<br>AP FOR CARIB | <a href="#">Buy now</a> |
| 20  | <a href="#">90149-05M05</a><br>Screw(6k0)<br>AP FOR CARIB               | <a href="#">Buy now</a> |
| 22  | <a href="#">92990-05600</a><br>Washer, plain (646)<br>AP FOR CARIB      | <a href="#">Buy now</a> |


# Top Cowling

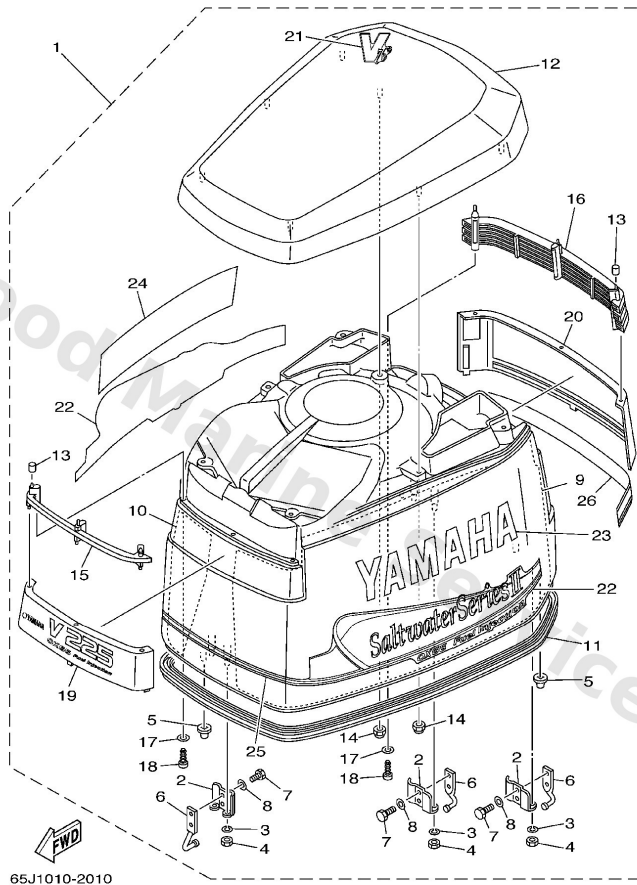

A4


| Ref | Part                                                               |                         |
|-----|--------------------------------------------------------------------|-------------------------|
| 1   | <a href="#">65J-42610-00-4D</a><br>Top Cowling assembly<br>FOR USA | <a href="#">Buy now</a> |
| 1   | <a href="#">65J-42610-T0-4D</a><br>Top Cowling assembly            | <a href="#">Buy now</a> |
| 1   | <a href="#">65L-42610-00-4D</a><br>Top Cowling assembly<br>FOR USA | <a href="#">Buy now</a> |
| 1   | <a href="#">65L-42610-T0-4D</a><br>Top Cowling assembly            | <a href="#">Buy now</a> |
| 2   | <a href="#">6R3-42647-00</a><br>Holder, clamp band                 | <a href="#">Buy now</a> |
| 3   | <a href="#">92990-06100</a><br>Washer(6a1)                         | <a href="#">Buy now</a> |
| 4   | <a href="#">95380-06600</a><br>Nut(661)                            | <a href="#">Buy now</a> |
| 5   | <a href="#">6R3-42662-00</a><br>Damper                             | <a href="#">Buy now</a> |
| 6   | <a href="#">6R3-42814-00</a><br>Hook, clamp                        | <a href="#">Buy now</a> |
| 7   | <a href="#">97095-06012</a><br>Bolt(gh1)                           | <a href="#">Buy now</a> |
| 8   | <a href="#">92995-06600</a><br>Washer, plain (646)                 | <a href="#">Buy now</a> |
| 9   | <a href="#">61A-42619-02</a><br>Damper, Form                       | <a href="#">Buy now</a> |
| 10  | <a href="#">61A-42627-02</a><br>Damper Form                        | <a href="#">Buy now</a> |
| 11  | <a href="#">61A-42615-01</a><br>Seal                               | <a href="#">Buy now</a> |
| 12  | <a href="#">61A-42613-01-4D</a><br>Molding Air Duct                | <a href="#">Buy now</a> |

# Top Cowling

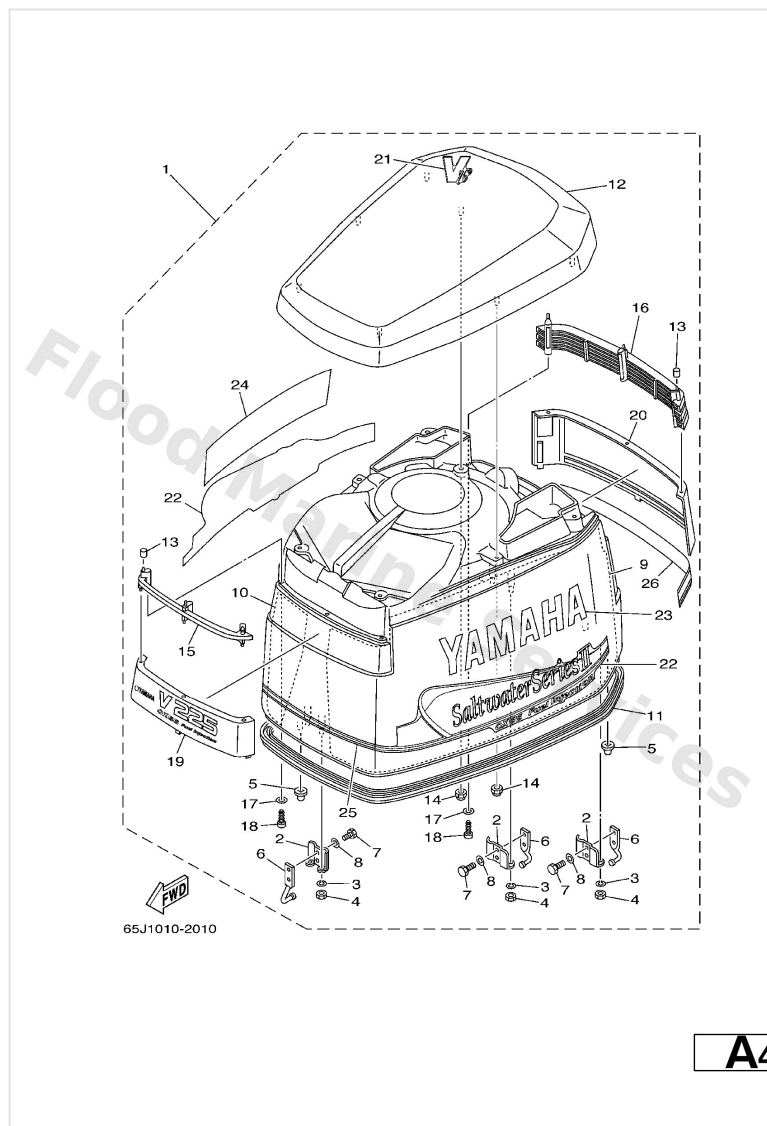 


| Ref | Part                                                        |                         |
|-----|-------------------------------------------------------------|-------------------------|
| 13  | <a href="#">90385-04M05</a><br>Bush(6r2)                    | <a href="#">Buy now</a> |
| 14  | <a href="#">90179-06M24</a><br>Nut(6j8)                     | <a href="#">Buy now</a> |
| 15  | <a href="#">61A-42626-00</a><br>Louver, 1                   | <a href="#">Buy now</a> |
| 16  | <a href="#">61A-42636-00</a><br>Louver, 2                   | <a href="#">Buy now</a> |
| 17  | <a href="#">92990-04600</a><br>Washer, plain (646)          | <a href="#">Buy now</a> |
| 18  | <a href="#">97780-40520</a><br>Ybs83-420 screw,panh,tapping | <a href="#">Buy now</a> |
| 19  | <a href="#">65J-42686-00</a><br>1-<br>FOR USA               | <a href="#">Buy now</a> |
| 19  | <a href="#">65J-42686-T0</a><br>1-                          | <a href="#">Buy now</a> |
| 19  | <a href="#">65L-42686-00</a><br>Emblem, Front<br>FOR USA    | <a href="#">Buy now</a> |
| 19  | <a href="#">65L-42686-T0</a><br>1-                          | <a href="#">Buy now</a> |
| 20  | <a href="#">65J-42687-S0</a><br>1-                          | <a href="#">Buy now</a> |
| 20  | <a href="#">65J-42687-V0</a><br>Emblem, Rear<br>FOR USA     | <a href="#">Buy now</a> |
| 20  | <a href="#">65L-42687-S0</a><br>Emblem, Rear                | <a href="#">Buy now</a> |
| 20  | <a href="#">65L-42687-V0</a><br>1-<br>FOR USA               | <a href="#">Buy now</a> |
| 21  | <a href="#">65J-42683-S0</a><br>Mark, Cowling               | <a href="#">Buy now</a> |

# Top Cowling

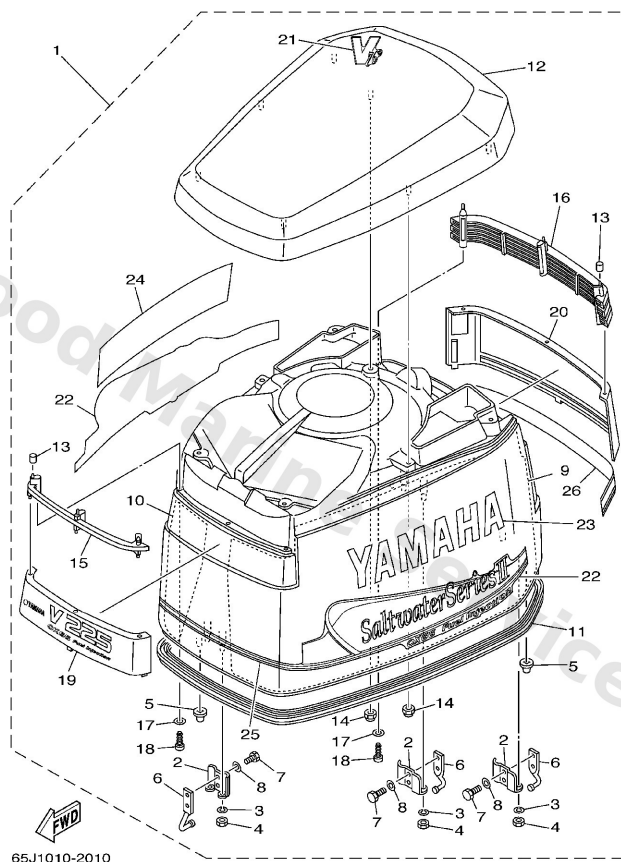 


| Ref | Part                                                   |                         |
|-----|--------------------------------------------------------|-------------------------|
| 21  | <a href="#">65L-42683-S0</a><br>Mark Cowling           | <a href="#">Buy now</a> |
| 22  | <a href="#">61A-W0070-S1</a><br>Graphic Set            | <a href="#">Buy now</a> |
| 22  | <a href="#">65L-W0070-V0</a><br>Graphic Set<br>FOR USA | <a href="#">Buy now</a> |
| 23  | <a href="#">61A-42681-S1</a><br>Mark, Cowling          | <a href="#">Buy now</a> |
| 23  | <a href="#">62J-42681-S1</a><br>Mark, Cowling          | <a href="#">Buy now</a> |
| 24  | <a href="#">61A-42682-S1</a><br>Mark, Cowling          | <a href="#">Buy now</a> |
| 24  | <a href="#">62J-42682-S1</a><br>Mark, Cowling          | <a href="#">Buy now</a> |
| 25  | <a href="#">61A-42677-S1</a><br>Graphic Front          | <a href="#">Buy now</a> |
| 26  | <a href="#">61A-4267A-S1</a><br>Graphic, Rear 2        | <a href="#">Buy now</a> |

# Upper Casing

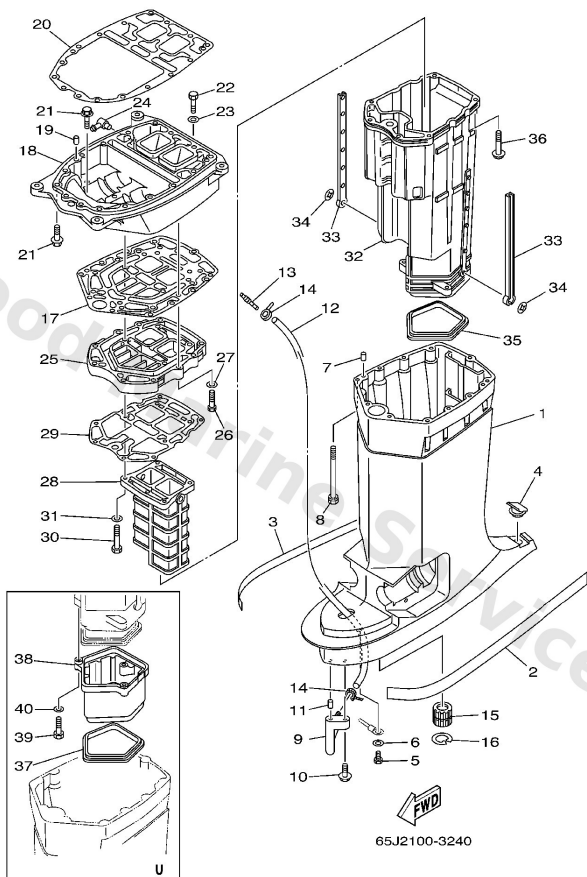 


| Ref | Part                                                    |                         |
|-----|---------------------------------------------------------|-------------------------|
| 1   | <a href="#">61A-45111-22-8D</a><br>Casing, upper<br>X   | <a href="#">Buy now</a> |
| 1   | <a href="#">61A-45111-32-8D</a><br>Casing, upper<br>U   | <a href="#">Buy now</a> |
| 2   | <a href="#">61A-42791-S0</a><br>Mark 1                  | <a href="#">Buy now</a> |
| 3   | <a href="#">61A-42792-S0</a><br>Mark                    | <a href="#">Buy now</a> |
| 4   | <a href="#">61A-45155-00</a><br>Cap                     | <a href="#">Buy now</a> |
| 5   | <a href="#">97095-06010</a><br>Bolt                     | <a href="#">Buy now</a> |
| 40  | <a href="#">92995-06600</a><br>Washer, plain (646)<br>U | <a href="#">Buy now</a> |
| 7   | <a href="#">93608-12M05</a><br>Pin, dowel b (6e5)       | <a href="#">Buy now</a> |
| 8   | <a href="#">90119-08M78</a><br>Bolt, with washer        | <a href="#">Buy now</a> |
| 9   | <a href="#">61A-45378-00</a><br>Nipple, hose            | <a href="#">Buy now</a> |
| 10  | <a href="#">90119-06M17</a><br>Bolt, with washer        | <a href="#">Buy now</a> |
| 11  | <a href="#">93606-12019</a><br>Pin, dowel (614)         | <a href="#">Buy now</a> |
| 12  | <a href="#">90445-07M21</a><br>Hose (l1160)<br>U        | <a href="#">Buy now</a> |
| 12  | <a href="#">90445-07MF0</a><br>Hose (l1160)<br>X        | <a href="#">Buy now</a> |
| 13  | <a href="#">6E5-83558-00</a><br>End, nipple             | <a href="#">Buy now</a> |

# Upper Casing

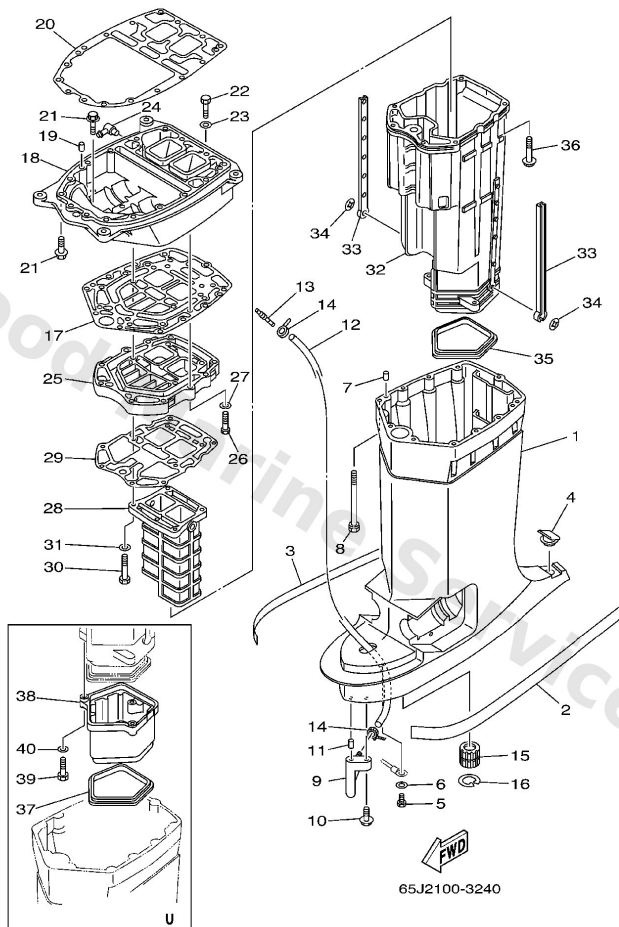 

| Ref | Part                                                                     |                         |
|-----|--------------------------------------------------------------------------|-------------------------|
| 14  | <a href="#">90465-11M10</a><br>Clamp                                     | <a href="#">Buy now</a> |
| 15  | <a href="#">6E5-45318-00</a><br>Bushing, drive shaft 3                   | <a href="#">Buy now</a> |
| 16  | <a href="#">93420-36M01</a><br>Circlip (6a0)                             | <a href="#">Buy now</a> |
| 17  | <a href="#">61A-45114-A0</a><br>Gasket, upper casing                     | <a href="#">Buy now</a> |
| 18  | <a href="#">61A-41137-13-94</a><br>Guide, exhaust<br><b>FLUSHING KIT</b> | <a href="#">Buy now</a> |
| 20  | <a href="#">61A-45113-A0</a><br>Gasket, upper casing                     | <a href="#">Buy now</a> |
| 21  | <a href="#">90119-08M79</a><br>Bolt, hexagon (fj1)                       | <a href="#">Buy now</a> |
| 22  | <a href="#">97095-08035</a><br>Bolt(70w)                                 | <a href="#">Buy now</a> |
| 23  | <a href="#">92995-08600</a><br>Washer, plain (663)                       | <a href="#">Buy now</a> |
| 24  | <a href="#">6H1-11372-00</a><br>Nipple, hose<br><b>FLUSHING KIT</b>      | <a href="#">Buy now</a> |
| 25  | <a href="#">61A-41131-00-5B</a><br>Manifold, ext. 1                      | <a href="#">Buy now</a> |
| 28  | <a href="#">61A-41132-01-5B</a><br>Manifold, exhaust                     | <a href="#">Buy now</a> |
| 29  | <a href="#">61A-41134-A0</a><br>Gasket, exhaust manifold                 | <a href="#">Buy now</a> |
| 30  | <a href="#">97095-08050</a><br>Bolt (62k)                                | <a href="#">Buy now</a> |
| 32  | <a href="#">61A-14711-22-5B</a><br>Muffler 1                             | <a href="#">Buy now</a> |

## Upper Casing

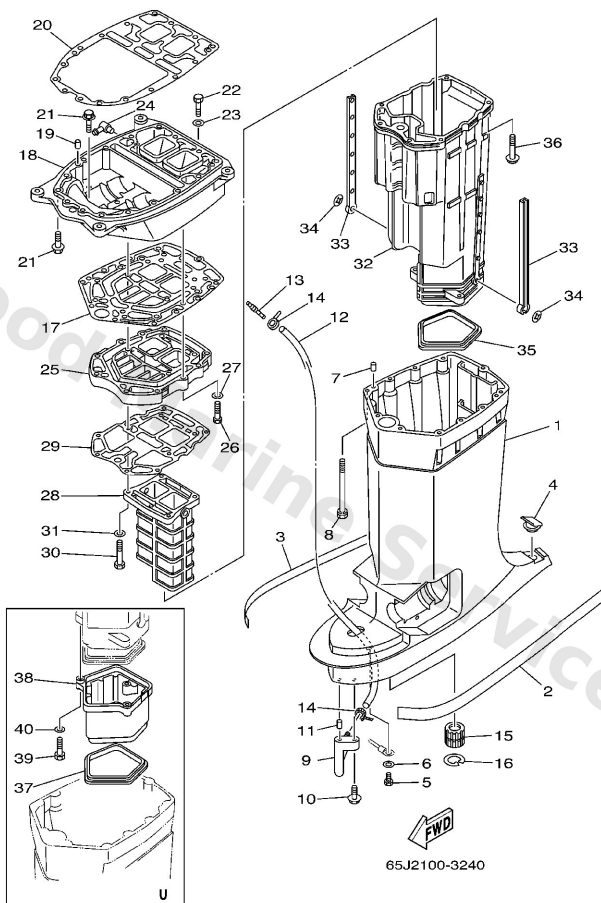 

**B2**

| Ref | Part                                                  |                         |
|-----|-------------------------------------------------------|-------------------------|
| 33  | <a href="#">6E5-14737-00</a><br>Damper, muffler       | <a href="#">Buy now</a> |
| 34  | <a href="#">90183-05M02</a><br>Nut, spring (6e5)      | <a href="#">Buy now</a> |
| 37  | <a href="#">61A-45123-01</a><br>Gasket, muffler<br>U  | <a href="#">Buy now</a> |
| 36  | <a href="#">90119-08M74</a><br>Bolt, with washer(61a) | <a href="#">Buy now</a> |
| 38  | <a href="#">61A-14721-30-5B</a><br>Muffler 2<br>U     | <a href="#">Buy now</a> |
| 39  | <a href="#">97095-06035</a><br>Bolt(j52)<br>U         | <a href="#">Buy now</a> |

# Disclaimer

This document is provided for convenience only. It is **not** an official Yamaha publication and is **not supplied, endorsed, or approved** by Yamaha Motor Co., Ltd.

Reasonable efforts are made to keep information accurate; however diagrams, part references, supersessions, descriptions, and applicability may contain errors or omissions. Specifications and part availability may change without notice.

You are responsible for confirming the correct parts for your engine (including model code, year, serial range, and any superseded part numbers) before ordering or fitting.